


Chevrolet Camaro 2010 fuse box diagram

Engine Compartment Fuse Block

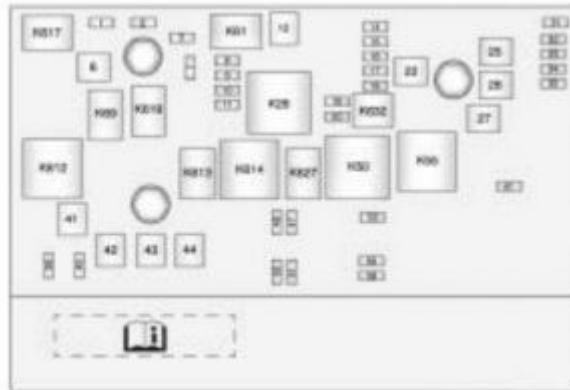

Chevrolet Camaro – fuse box – engine


compartment

J-Case Fuses	Usage
6	Wiper
12	Starter
22	Brake Vacuum Pump
25	Power Windows Rear
26	Power Windows Front
27	Rear Defog
41	Cooling Fan High
42	Front Heater, Ventilation and Air Conditioning
43	Antilock Brake System Pump
44	Cooling Fan Low
Mini Fuses	Usage
1	Air Conditioning Compressor Clutch
2	Transmission Control Module
5	Engine Control Module Main
7	Pre-Catalytic Converter Oxygen Sensor
8	Post-Catalytic Converter Oxygen Sensor
9	Fuel Injectors – Even
10	Fuel Injectors – Odd
11	Cooling Fan Relay
14	Manifold Air Flow/Chassis Control
15	Ignition
16	Run/Crank IP
17	Sensing Diagnostic Module/Ignition
18	Run/Crank Body

19	Transmission Control Module/Ignition
20	Engine Control Module/Ignition
31	Outside Rear View Mirror
32	Canister Vent Solenoid
33	Body Control Module #6
34	Sunroof
35	Front Heated Seats
38	Washer Pump Front
40	Antilock Brake System Valves
46	HID Headlamp – Left Front
47	HID Headlamp – Right Front
50	Fog Lamps
51	Horn
52	Spare
55	High Beam Headlamp – Right Front
56	High Beam Headlamp – Left Front
Mini Relays	
	Usage
K26	Powertrain
K50	Run / Crank
K55	Rear Defog
K612	Cooling Fan High
K614	Cooling Fan Control
Micro Relays	
	Usage
K61	Starter
K69	Wiper Control
K613	Cooling Fan Low
K617	Air Conditioning Compressor Clutch
K619	Wiper Speed
K627	High Intensity Discharge Headlamps
K632	Brake Vacuum Pump

Instrument Panel Fuse Block

The instrument panel fuse block is located on the end of the instrument panel, on the driver side of the vehicle.

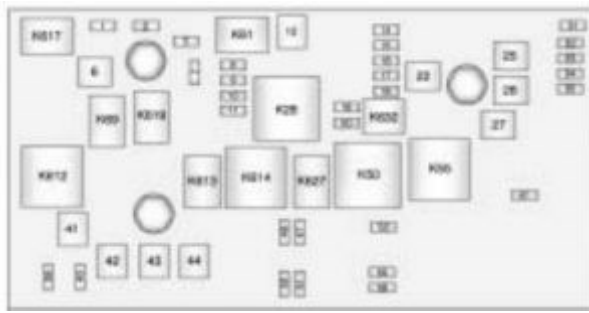

Chevrolet Camaro – fuse box – instrument panel


Fuses	Usage
F1	Discrete Logic Ignition Switch
F2	Diagnostic Link Connector
F3	Airbag
F4	Cluster
F5	Heating Ventilation Air Conditioning Controller
F6	Body Control Module
F7	Battery
F8	Spare
F9	Spare
F10	Spare
F11	Spare
F12	Spare
F13	Display
F14	OnStar® Universal Hands Free Phone
F15	Body Control Module 3
F16	Body Control Module 4
F17	Power Outlet 1
F18	Power Outlet 2
F19	Steering Wheel Controls Backlight
F20	Spare
F21	Spare
F22	Spare
F23	Trunk
F24	Automatic Occupant Sensing
F25	Body Control Module 1
F27	Body Control Module 8
F28	Spare
F29	Body Control Module 5
F30	Body Control Module 7
Circuit Breaker	Usage
CB7	Passenger Seat

CB26	Driver Seat
------	-------------

Relays	Usage
K10	Retained Accessory Power
K605	—
K609	Trunk

Rear Compartment Fuse Block

The rear compartment fuse block is located on the right side of the trunk behind a cover.

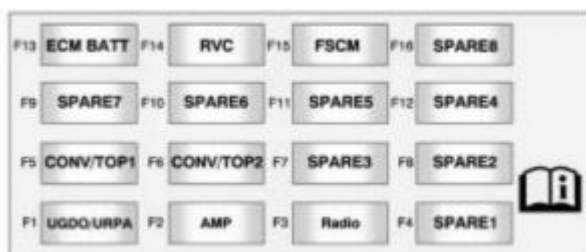

Chevrolet Camaro – fuse box – rear compartment

Fuses	Usage
F1	Universal Garage Door Opener/Ultrasonic Reverse Parking Aid
F2	Amplifier
F3	Radio
F4	Spare
F5	Convertible Top 1
F6	Convertible Top 2
F7	Spare
F8	Spare
F9	Spare
F10	Spare
F11	Spare
F12	Spare
F13	Engine Control Module/Battery
F14	Regulated Voltage Control
F15	Fuel System Control Module
F16	Spare