


Fiat Multipla 2004 – 2010 fuse box diagrams

Fuse box in passenger compartment

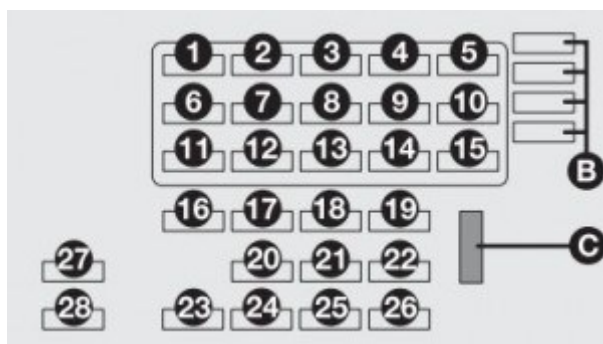

Fiat Multipla mk2 – fuse box – passenger


compartment

Description	Ampere rating [A]	Fuse
Right-hand main beam	10	1
Left-hand main beam	10	2
Main beam warning light	10	2
Rear fog lights	20	3
Rear fog lights warning light	20	3
Side/taillight power	20	3
Left-hand dipped beam	10	4
Car interior fan	30	5
Right-hand number plate light	10	6
Right-hand front sidelight	10	6
Cigar lighter light	10	6
Ashtray light	10	6
Side/taillight warning light	10	6
Sound system light	10	6
Left-hand taillight	10	6
Left-hand number plate light	10	7
Left-hand front sidelight	10	7
Right-hand taillight	10	7
Heating system lighting	10	7
Right-hand dipped beam	10	8
Brake fluid warning light	10	8
Headlight beam adjuster	10	8
Headlight washer relay coil	10	8
Cigar lighter	15	9
Conditioner compressor	15	9
Headlight washer	20	10
Windscreen wiper	20	10

Rear window wiper	20	10
Horn	20	11
+ 30 instrument panel	10	12
+ 30 front ceiling light	10	12
+ 30 EOBD Fiat tester	10	12
+ 30 rear ceiling light	10	12
+ 30 sound system	10	12
+ 30 connect-nav	10	12
+ 30 navigator	10	12
+ 30 clock	10	12
+ 30 sunroof	10	12
+ 30 webasto (additional heater)	10	12
+ 30 anti-theft control unit	10	12
Reversing light	15	13
Front direction indicators	15	13
Brake light	15	13
Third brake light	15	13
Rear direction indicators	15	13
Direction indicator warning light	15	13
Side direction indicators	15	13
Hazard light warning light	15	13
+ 15 cellular phone	15	13
+ 15 sound system	15	13
+ 15 connect-nav	15	13
+ 15 navigator	15	13
Anti-theft control unit	15	13
Hazard light power	10	14
Anti-theft led	10	14
Anti-theft control unit	10	14
Heated rear window	30	15
Electric mirror defrosting	30	15
Front fog lights	15	16
Electric mirror movement	7,5	17
Air recirculation	7,5	17
Cigar lighter relay coil	7,5	17
Windscreen wiper relay coil	7,5	17
Electric seat relay coil	7,5	17
Heater relay coil	7,5	17
Heated rear window relay coil	7,5	17

12V socket relay coil	7,5	17
Front power windows	30	18
Tunnel 12V outlet	30	19
Boot 12V outlet	25	19
Refrigerator presetting	25	20
Electric seat riser	25	20
Electric mirror defrosting	7,5	21
Airbag circuit	7,5	22
ASR ON button	7,5	23
ABI control unit (power windows/front door lock)	20	24
+ 15 phone presetting	7,5	25
+ 15 sound system	7,5	25
+ 15 sunroof relay coil	7,5	25
+ 15 navigator	7,5	25
+ 15 remote control receiver	7,5	25
+ 15 taxi-meter	7,5	25
+ 15 Airbag	7,5	25
+ 15 GSM box	7,5	25
+ 15 ABI control unit	7,5	25
+ 30 taxi-meter	7,5	26
+ 30 sunroof	25	27
Rear power windows	25	28

Fuses in engine compartment (next to battery, JTD versions only)

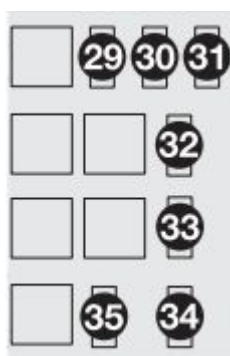


Fiat Multipla mk2 – fuse box engine compartment

Description	Ampere rating [A]	Fuse
Fiat code	7,5	29
Webasto boiler (additional heater)	20	30
Main relay	7,5	31
ABS	10	32
Diesel fuel filter heating	25	33
+ 15 CCM and Fiat code control unit	7,5	34

Headlight washer pump	30	35
-----------------------	----	----


Fuses in engine compartment (next to battery, petrol versions only)

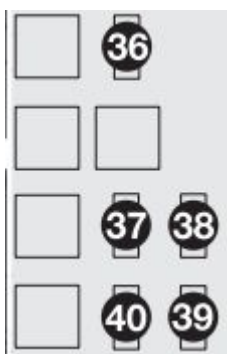

Fiat Multipla mk2 – fuse box – engine compartment

Description	Ampere rating [A]	Fuse
Lambda probe	15	36
+ 15 CCM and Fiat code control unit	7,5	37
+ 30 Fiat code control unit	7,5	38
+ 15 ABS	7,5	39
Headlight washer pump	20	40


Fuses in engine compartment (on passenger's compartment partition)

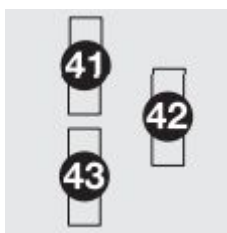

Fiat Multipla mk2 – fuse box – engine compartment

Description	Ampere rating [A]	Fuse
Engine cooling fan (with heater)	40	41
Engine cooling fan (with air conditioner)	50	41
Glow plugs	60	42
ABS	60	43

Fuses in engine compartment (next to battery, MAXI FUSE)

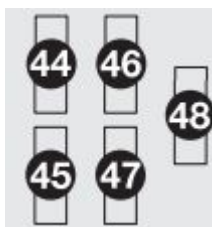

Fiat Multipla mk2 – fuse box – engine compartment

Description	Ampere rating [A]	Fuse
Ignition switch (EFI)	30	44
Electronic injection (IGN)	30	45
Secondary control unit protection	60	46
Passenger's compartment control unit protection	80	47

Radiotaxi	7,5	48
-----------	-----	----