



**INTERIOR FUSEBOX** (located under the glove box, its the panel with a hole in it and just pulls off)

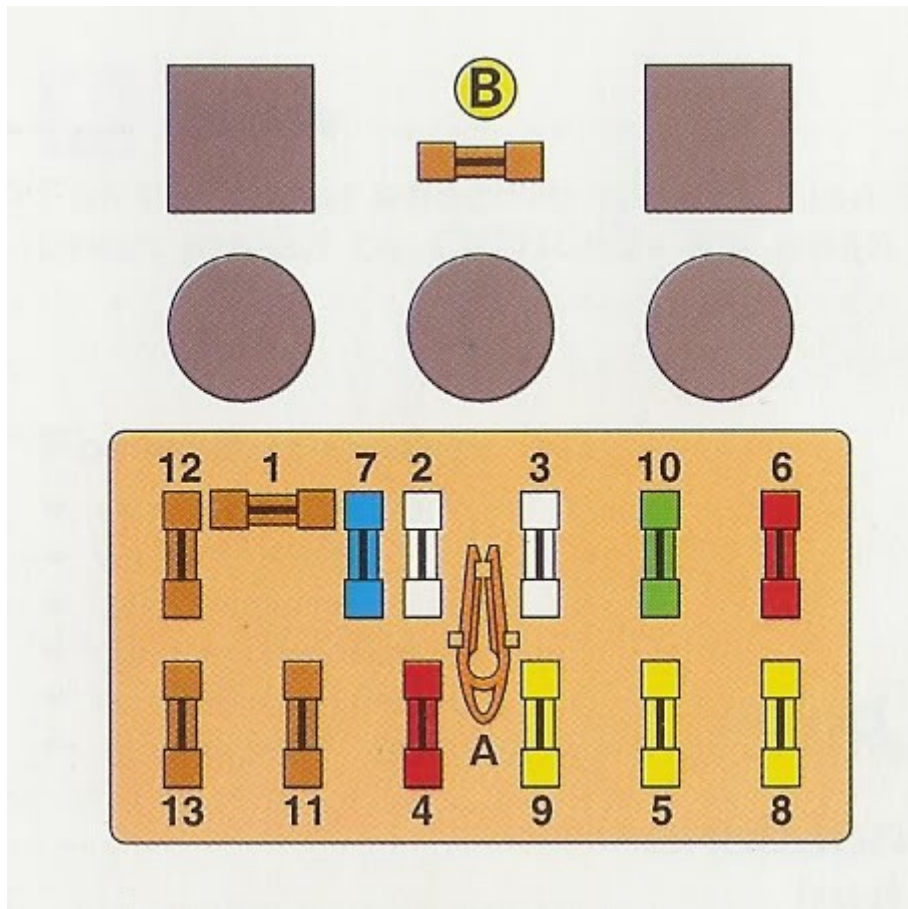

Fuse box : 13 fuses under the dashboard.

| Number          | Rating           | Functions                                                                                                                                                                                                                                      |
|-----------------|------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| F1              | 5 A<br>or 25 A*  | ABS (warning lamp) - Coolant temperature control unit - Tachometer - Diesel preheating - Diagnostic socket - Automatic gearbox (relay) - Air conditioning cut-off relay - Electric shut-off - Warning lamps and gauges                         |
| F2              | 25 A             | Rear view mirror demister control - Air conditioning blower - Heated rear screen - Power-assisted steering                                                                                                                                     |
| F3              | 25 A             | Unused                                                                                                                                                                                                                                         |
| F4              | 10 A             | Lights-on audible warning - Direction indicators - Electric window - Clock - Radio - Day-time lamps. - Electric rear view mirror - Charge warning lamp                                                                                         |
| F5              | 30 A             | Cigar lighter - Horn - Heated rear screen - Demisting rear view mirror                                                                                                                                                                         |
| F6              | 10 A             | Hazard warning lamps                                                                                                                                                                                                                           |
| F7              | 15 A             | Stop lamps switch - Reversing lamp - Automatic gearbox (ecu)                                                                                                                                                                                   |
| F8**            | 20 A             | Central locking - Boot lighting - Interior lighting - Clock memory - Radio memory - Remote control - Diagnostic socket - Coolant temperature control unit                                                                                      |
| F9              | 20 A<br>or 30 A* | Windscreen/rearscreen wipers - Windscreen washer - Windscreen wipe timer - Map reading lamp - Sun roof                                                                                                                                         |
| F10             | 30 A             | Electric window                                                                                                                                                                                                                                |
| F11             | 5 A              | Foglamp                                                                                                                                                                                                                                        |
| F12             | 5 A              | Audio system - Lights-on audible warning - Daytime lamps control - Façade lighting - Lighting with rheostat/without rheostat - Front right, front left, rear right sidelamps - Air conditioning switch - Sidelamp warning lamp - Cigar lighter |
| F13             | 5 A              | Number plate lighting - Rear left sidelamp                                                                                                                                                                                                     |
| Single Fuse (B) | 5 A              | Heated seats                                                                                                                                                                                                                                   |

**ENGINE FUSEBOX** (located at the far right of the engine bay and simply unclips and lifts)

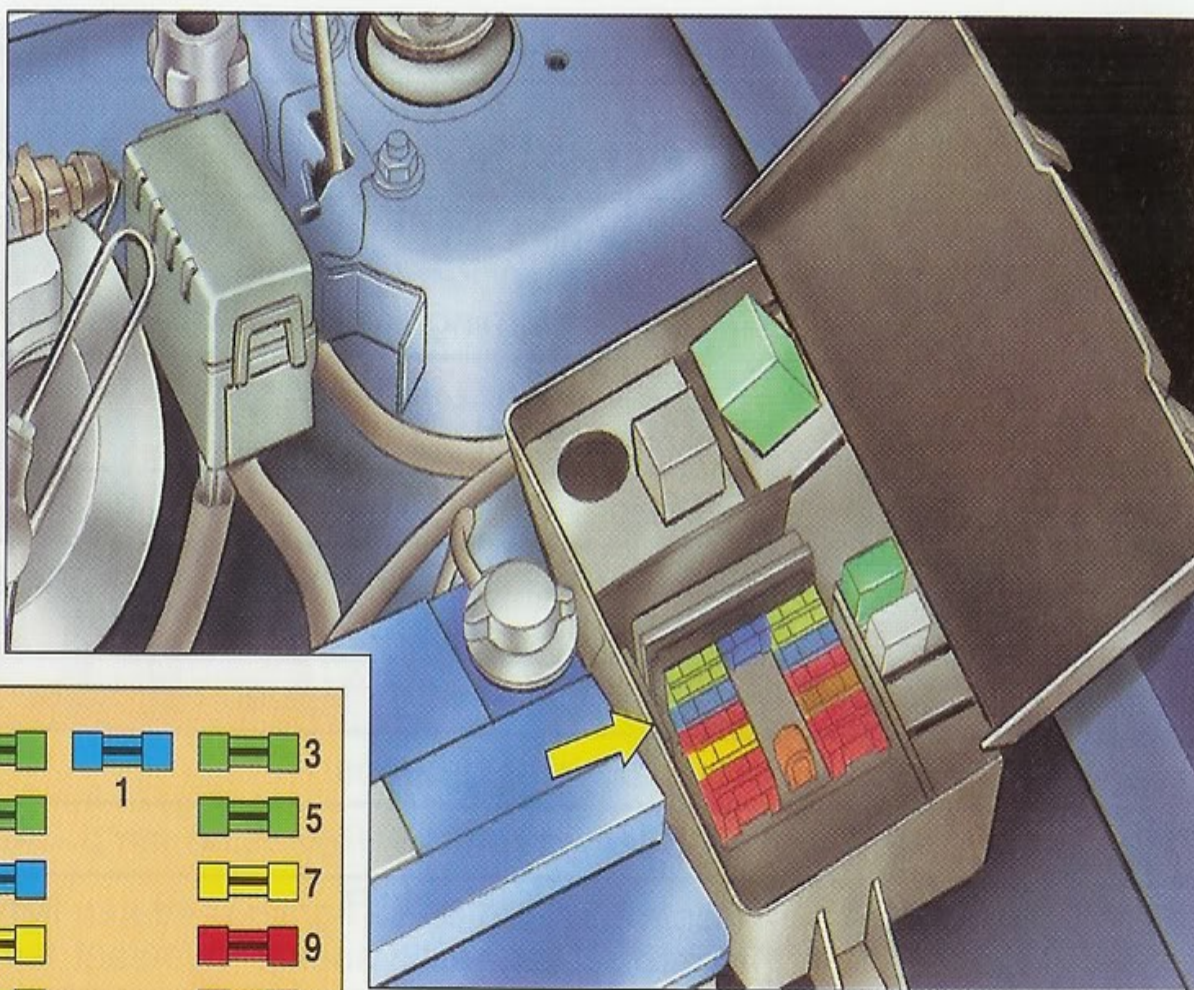

|    |  |    |    |
|----|--|----|----|
| 2  |  |    | 3  |
| 4  |  | 1  | 5  |
| 6  |  | 7  |    |
| 8  |  | 9  |    |
| 10 |  | 11 |    |
| 12 |  | 13 |    |
| 14 |  | A  | 15 |

| Number      | Rating | Functions                                                                                                             |
|-------------|--------|-----------------------------------------------------------------------------------------------------------------------|
| F1          | 15 A   | Injection ECU                                                                                                         |
| F2          | 30 A   | ABS                                                                                                                   |
| F3          | 30 A   | Cooling fan unit                                                                                                      |
| F4          | 30 A   | ABS                                                                                                                   |
| F5          | 30 A   | Cooling fan unit                                                                                                      |
| F6          | 15 A   | Foglamp                                                                                                               |
| F7          | 20 A   | Daytime lamps                                                                                                         |
| F8          | 20 A   | Headlamp washer                                                                                                       |
| F9          | 10 A   | Fuel pump                                                                                                             |
| F10         | 20 A   | Automatic gearbox - Pre-post heating - Double injection relay - ABS (warning lamp) - Coolant temperature control unit |
| F11         | 5 A    | Oxygen sensor (catalytic converter)                                                                                   |
| F12         | 10 A   | Left hand main beam                                                                                                   |
| F13         | 10 A   | Right hand main beam                                                                                                  |
| F14         | 10 A   | Left dipped beam - Headlamp wash timer                                                                                |
| F15         | 10 A   | Right dipped beam                                                                                                     |
| Single Fuse | 30 A   | Air pump (control)                                                                                                    |