

Chrysler 300C 2004 – 2010 fuse box diagram

Power Distribution Centers

Front Power Distribution Center

A power distribution center is located in the engine compartment. This center contains fuses and relays.

Cavity	Ampere rating [A]	Circuits
1	20 Amp Yellow	Left High Intensity Discharge Headlight – if equipped
2	20 Amp Yellow	Right High Intensity Discharge Headlight – if equipped
3	15 Amp Blue	Adjustable Pedals – if equipped
4	20 Amp Yellow	AC Clutch/Horn
5	20 Amp Yellow	Headlight Washer – If Equipped
6	15 Amp Blue	Front Control Module (FCM)
7	20 Amp Yellow	Fog Lights
8	15 Amp Blue	Lights – License, Park, Side Marker, Stop, Turn
9	15 Amp Blue	Front Control Module (FCM)
10	5 Amp Orange	Powertrain Control Module (PCM)/Starter
11	20 Amp Yellow	Auto Shutdown/Powertrain Control Module (PCM)

12	—	—
13	—	—
14	25 Amp Clear	Powertrain Control Module (PCM)
15	25 Amp Clear	Injectors, Ignition Coils
16	—	—
17	30 Amp Pink	Antilock Brakes System (ABS) Valves/Powertrain Control Module (PCM)
18	30 Amp Pink	Windshield Wiper/Washer
19	50 Amp Red	Radiator Fan
20	20 Amp Blue	Starter
21	50 Amp Red	Antilock Brakes System (ABS) Pump Motor
22	40 Amp Green	AC Clutch/Radiator Fan High — Low
23	50 Amp Red	High Intensity Lighting — if equipped
24	60 Amp Yellow	Radiator Fan — AWD
25	30 Amp Pink	Front Control Module (FCM)
26	20 Amp Blue	Transmission — RLE

27	30 Amp Pink	Front Control Module (FCM)
----	-------------	----------------------------

Rear Power Distribution Center

There is also a power distribution center located in the trunk under the spare tire access panel. This center contains fuses and relays.

Cavity	Ampere rating [A]	Circuits
1	60 Amp Yellow	Ignition Off Draw (IOD)
2	40 Amp Green	Battery
3	—	—
4	40 Amp Green	Battery
5	30 Amp Pink	Heated Seats – if equipped
6	20 Amp Yellow	Fuel Pump
7	—	—
8	15 Amp Blue	Ignition Switch/Occupant Classification Module (OCM)
9	20 Amp Yellow	Console Power Outlet

10	—	—
11	25 Amp C/BRKR	Cluster – without power memory seat/Driver Seat Switch – with power memory seat/Memory Module – if equipped
12	25 Amp C/BRKR	Passenger Seat Switch
13	25 Amp C/BRKR	Door Modules – except base/ Driver Door Lock Switch – base/Driver Express Power Window Switch – if equipped/ Passenger Door Lock Switch – base
14	10 Amp Red	AC Heater Control/Cluster/ Sentry Key Remote Keyless Entry
15	20 Amp Yellow	Trailer Tow Brake Module – if equipped
16	—	—
17	20 Amp Yellow	Cluster
18	20 Amp Yellow	Selectable Power Outlet
19	10 Amp Red	Stop Lights
20	—	—
21	—	—

22	—	—
23	—	—
24	—	—
25	—	—
26	—	—
27	10 Amp Red	Airbag/Occupant Classification Module
28	10 Amp Red	Curtain Airbag – if equipped
29	5 Amp Orange	Antilock Brakes Module/ Cluster/Front Control Module (FCM)/Powertrain Control Module (PCM)/Sentry Key Remote Keyless Entry/Stop Lights
30	10 Amp Red	Door Modules/Power Mirrors – if equipped/Steering Control Module
31	—	—
32	—	—
33	—	—
34	—	—

35	5 Amp Orange	Amplifier – if equipped/ Antenna/Ignition Delay/ Overhead Console – if equipped/Passenger Door Lock & Express Power Window Switch – if equipped/ Power Mirrors – if equipped/ Rain Sensor – if equipped/ Rear Defrost
36	20 Amp Yellow	Hands Free Phone – if equipped/Media System Monitor DVD – if equipped/ Radio/Satellite Receiver – if equipped
37	15 Amp Blue	Transmission – NAG1
38	5 Amp Orange	Analog Clock/Cargo Light/ Overhead Console – if equipped
39	10 Amp Red	Heated Mirrors – if equipped
40	5 Amp Orange	Heated Seats – if equipped/ Inside Rearview Mirror/ Manual Temperature Control (early build) – if equipped
41	10 Amp Red	AC Heater Control (except early build MTC)/Park Assist – if equipped/Tire Pressure Monitoring – if equipped
42	30 Amp Pink	Front Blower Motor
43	30 Amp Pink	Amplifier – if equipped/ Antenna/Rear Defrost
44	20 Amp Blue	Amplifier – if equipped/Front Control Module (FCM)/ Sunroof – if equipped