


Buick LeSabre 1996 – 1998 fuse box diagram

Driver’s Side Fuse Block

The driver’s side fuse block is to the left of the steering wheel, under the instrument panel.

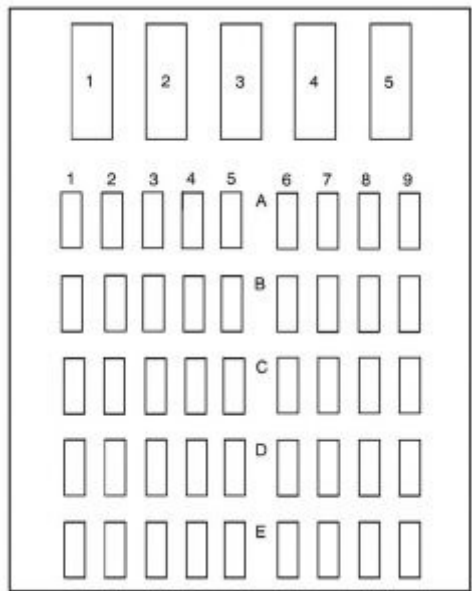


Buick LeSabre – fuse box – under wheel steering

Fuses	Usage
1	Not Used
2	Not Used
3	Power Seats Circuit Breaker
4	Not Used
5	Not Used
1A	PASS Key
2A	Spare
3A	Not Used
4A	Not Used
5A	Up-Level HVAC, ALM, Cruise Control, Cluster
6A	Courtesy Lamps, Power Mirrors
7A	Not Used
8A	Perimeter Lighting
9A	Not Used
1B	Turn Signal, Back-Up Lamps, BTSI
2B	Spare
3B	Not Used

4B	Not Used
5B	Anti-Lock Brake System, Computer Command Control
6B	Brake and Hazard Lamps
7B	Not Used
8B	Interior Lighting
9B	Cigarette Lighter
1C	Air Bag System
2C	Spare
3C	Not Used
4C	Not Used
5C	Cooling Fans, Transaxle
6C	Parking Lamps, Interior Lamps
7C	Not Used
8C	Parking Lamps
9C	Radio, Cluster
1D	Telltale, Chime, Cluster, RAC, LCM
2D	Spare
3D	Heated Mirrors
4D	Not Used
5D	Base NC
6D	Not Used
7D	TCC
8D	Radio
9D	Not Used
1E	Not Used
2E	Air Bag System, PASS-Key
3E	Not Used
4E	Not Used
5E	Rear Defog
6E	Not Used
7E	Miscellaneous Engine-Non OBD II
8E	Wipers, Washer
9E	Not Used

Passenger's Side Fuse Block

Additional fuses are located in the relay center, on the passenger's side, below the instrument panel.

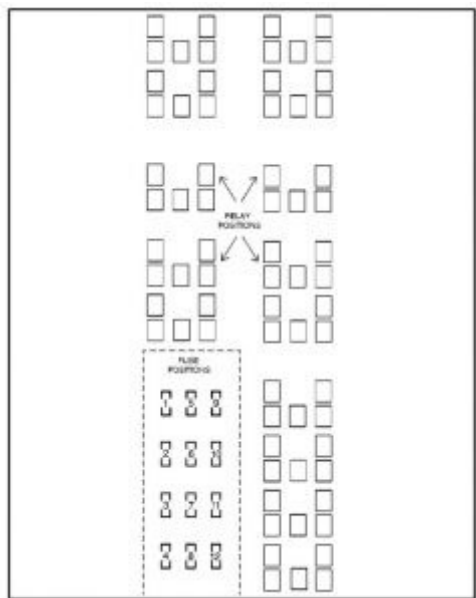

Buick LeSabre – fuse box – instrument pane (passengers

side)

Fuses	Usage
1	Door Locks
2	Trunk Release, RAC
3	Horns
4	Not Used
5	Miscellaneous Engine Controls
6	Fuel Pump
7	Injectors
8	Powertrain Control Module
9	Not Used
10	Not Used
11	A/C Programmer
12	Not Used