

7. Clear Memory Mode

A: OPERATION

1. ECM

- 1) On the «Main Menu», select {Each System Check}.
- 2) On the «System Selection Menu» display, select {Engine Control System}.
- 3) After engine type information is displayed, select [OK].
- 4) On the «Engine Diagnosis», select {Clear Memory}.
- 5) When “Done” is displayed on the display screen, end the Subaru Select Monitor and turn the ignition switch to OFF.

NOTE:

- After the memory has been cleared, the idle air control solenoid valve must be initialized. To execute this procedure, turn the ignition switch to ON. Wait for three seconds before starting the engine.
- For detailed operation procedure, refer to the “PC application help for Subaru Select Monitor”.

2. BODY INTEGRATED UNIT

- 1) On the «Main Menu», select {Each System Check}.
- 2) On the «System Selection Menu», select {Integ. Unit}.
- 3) After {Integ. Unit} is displayed, select [OK].
- 4) On the «Integ. unit mode», select {Clear Memory}.
- 5) When “Done” is displayed on the display screen, end the Subaru Select Monitor and turn the ignition switch to OFF.

NOTE:

For detailed operation procedure, refer to the “PC application help for Subaru Select Monitor”.