

8. System Operation Check Mode

A: OPERATION

1. COMMUNICATION LINE CHECK

- 1) On the «Main Menu» display, select {Each System Check}.
- 2) On the «System Selection Menu» display, select {Engine Control System}.
- 3) After engine type information is displayed, select [OK].
- 4) On the «Engine Diagnosis» display, select {System Operation Check Mode}.
- 5) On the «System Operation Check Mode» display, select the {Immobilizer System}.
- 6) Start the communication line check.
- 7) Is «OK» displayed on screen?
If displayed, go to step 9).
If not, go to step 10).
- 8) After diagnostic results, it is determined that the circuit is not shorted. Finish the communication line check.
- 9) If a problem is detected, repair the trouble cause. <Ref. to IM(diag)-20, DTC P1572 IMM CIRCUIT FAILURE (EXCEPT ANTENNA CIRCUIT), Diagnostic Procedure with Diagnostic Trouble Code (DTC).>

NOTE:

For detailed operation procedure, refer to the “PC application help for Subaru Select Monitor”.