

WIRING DIAGRAMS
Fig. 1: Engine Compartment & Headlights (Grid 1-3)
 1992 BMW 318 Series

COMPONENT LOCATOR:

A/C SYSTEM	A-E 16-19
ABS CTRL UNIT	A-B 20
ABS HYDRAULIC UNIT	A-B 23
ALTERNATOR	D-E 3
AUTO CHARGING FLASHLT	B 27
AUX FAN BLOWER RESISTOR	C 12
AUX FUSE BLOCK	D 12
BACK-UP LT SW	C 34
BATTERY	A 2
BATTERY JUNCTION BLOCK	A 2-3
BRAKE FLUID LEVEL SW	B 31
CHIME MODULE	E 19
CLG LTR	D 27
COMBINATION SW	C-D 24
CONN #100	D 10
CONN #114	C 9-10
COOLANT TEMP SENDER	B 31
DEFOG SW	A 27
DIAGNOSTIC CONN	E 5-6
DRIVERS DOOR JAMB SW	B 18
DUAL TEMP SW	C 15
FLASHER	E 25
FOG LT RELAY	B 14-15
FOG LT SW	C 24
FUEL PUMP	A 7
FUEL PUMP RELAY	B 7
FUEL TANK SENDER	C 27
FUSE BLOCK	A-E 8-15
GLOVE BOX LT & SW	D 28
HAZARD SW	E 24
HI SPEED RELAY	E 24
HIGH BEAM RELAY	D 10
HORN RELAY	D 9
HORN SWS	D 26-27
IGN KEY SW	C 18
IGNITION SW	E 12-15
INST CLSTR	A-E 20-30
INTERIOR LT TIMER CTRL	A 19
INTERIOR LTS	A 17
LIGHT SW	A-C 24
LOW BEAM RELAY	D 11
MAIN RELAY	C-D 7
MOTRONIC CTRL UNIT (MCU)	B-D 4
MULTI-FUNCTION CLOCK	D 19
NORM SPEED RELAY	D 9
OIL PRES SW	B 31
PARK BRAKE SW	B 30
POWER ANTENNA	E 27
POWER MIRROR SW	C-D 32
POWER WINDOW CB	A-B 32-33
POWER WINDOWS	A-B 32-33
SEAT BELT & SRS WARN MOD	D-E 22
SEAT BELT WARN TIMER	E 17
SRS SYSTEM (SUPPLEMENTAL RESTRAINT SYSTEM)	C-E 20-23
STARTER MOTOR	C 3
STOP LT SW	C 34
TRUNK LT	C 28
UNLOADER RELAYS	B 13-14
WASHER MOTOR	E 33
WIPER CTRL UNIT	E 32

