


Chevrolet Citation 1980 – 1985 fuse box diagram

Fuse box diagram

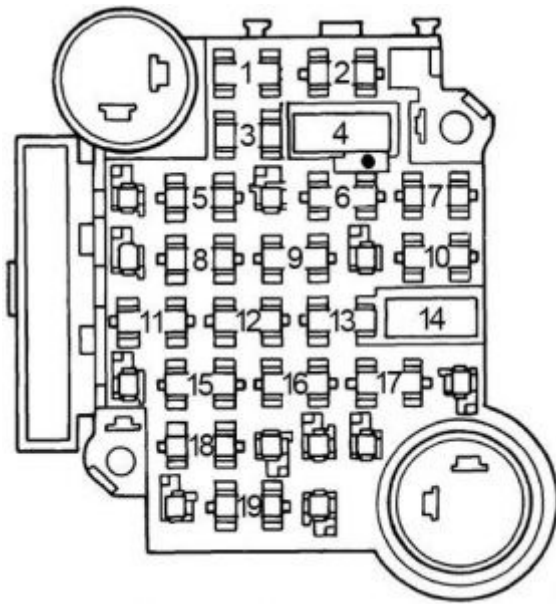

Chevrolet Citation – fuse box diagram

Fuse	[A]	Protected Component
1	5	Instrument illumination and lights on reminder
2	20	Choke heater and cooling fan
3	—	—
4	30	Circuit breaker: Power windows
5	—	—
6	25	Air conditioning blower and compressor, and heater
7	10	Electronic Control Module
8	—	—
9	—	—
10	20	Hazard and stop lights
11	20	Air conditioning anti-dieseling relay, brake warning indicator, choke heater, rear window defogger, fuel gauge, gauges, idle stop solenoid, lights on reminder, seat belt warning, warning indicators, charge indicator and computer command control
12	20	Front and rear parking and marker lights, and license lights
13	—	—
14	30	Circuit breaker: Power door locks, power seats and rear window defogger
15	20	Fast idle control, back-up and turn signal lights
16	20	Air conditioning anti-dieseling relay, cigar lighter, clock, courtesy lights, horn, ignition key warning, lights on reminder, power door locks and power antenna, trunk and vanity mirror lights and computer command control
17	—	—
18	25	Windshield wiper/washer and wiper/washer delay

Circuit Breaker:

- Headlights — Circuit breaker is integral with headlight switch to protect headlight circuit.
- Windshield Wiper — Circuit breaker integral with windshield wiper switch to protect wiper circuit.
- Power Seats, Power Windows & Power Door Locks — Circuit breaker is located on fuse panel to protect power accessories.
- Rear Window Defogger – Circuit breaker is located on fuse panel to protect rear window circuit.\