

Function Setting (Customize)

LAN SYSTEM (DIAGNOSTICS)

10.Function Setting (Customize)

A: OPERATION

- 1) On the «Main Menu» display screen, select {Each System Check}.
- 2) On the «System Selection Menu» display screen, select the {Integ. unit mode}.
- 3) On the «Integ. unit mode failure diag» display screen, select the {ECM customizing}.
- 4) Change the setting with UP/DOWN key and set with the [OK] key.

- List of function setting item (ECM customizing)

Data	Initial setting value	Customize setting	Remarks
Off delay time	Normal		Delay time below can be selected by setting.
			After door closed After keyless unlock
		OFF	0 seconds 0 seconds
		Short	10 seconds 10 seconds
		Normal	20 seconds 20 seconds
		Long	30 seconds 30 seconds
Auto lock time	30 seconds	0 — 60 sec.	Workable when Auto locking is set to "ON" and Automatic locking setup is "ON". Time can be changed by 10 seconds: 0 (OFF) — 60 (maximum).
Rr defogger op. mode	15 min.	15 min.	Wiper deicer stops in 15 minutes automatically after switch is turned to ON.
		Continuous	The wiper deicer activates for 15 minutes and turns inactive for 2 minutes repeatedly until the switch is turned OFF.
Wiper deicer op. mode	15 min.	15 min.	Wiper deicer stops in 15 minutes automatically after switch is turned to ON.
		Continuous	The wiper deicer activates for 15 minutes and turns inactive for 2 minutes repeatedly until the switch is turned OFF.
Security Alarm Setup	OFF	ON	Security alarm (hazard, horn or siren) in active condition
		OFF	Security alarm in inactive condition
Impact Sensor Setup	OFF	ON	Workable when Impact Sensor Setup is set to "ON". Impact sensor function becomes activated.
		OFF	Impact sensor in inactive condition (Set to "OFF" in models without sensors.)
Alarm delay setup	ON		After the keyless lock operation, the alarm monitor starts after the following delay time has passed.
		ON	Delay time is 30 seconds.
		OFF	Delay time is 0 seconds.
Lockout prevention	ON	ON	Lockout prevention in inactive condition (The function does not operate if safety knob is locked by hand.)
		OFF	Lockout prevention in inactive condition
Impact sensor (OP)	OFF	ON	Vehicle is controlled in impact sensor equipped mode. (Make sure to set to OFF for models without the impact sensor. When set to ON, hazard, the horn or siren will operate after doors are locked by the keyless entry system operation (Alarm monitor start).
		OFF	Vehicle is controlled in no impact sensor mode.
Siren setting (OP)	OFF	ON	Make sure to set to OFF for models without the siren.
		OFF	
Answer-back buzzer setup	ON	ON	Workable when answer-back buzzer setup is set to "ON". When lock/unlock is selected by keyless entry system operated, hazard answer-back buzzer operates.
		OFF	When lock/unlock is selected by keyless entry system operated, answer-back buzzer does not sound.

Function Setting (Customize)

LAN SYSTEM (DIAGNOSTICS)

Data	Initial setting value	Customize setting	Remarks
Hazard answer-back setup	ON	ON	Workable when hazard answer-back setup is set to "ON" When lock/unlock is selected by keyless entry system operated, hazard answer-back buzzer operates.
		OFF	When lock/unlock is selected by keyless entry system operated, hazard answer-back does not operate.
Automatic locking setup	ON	ON	Not supported
		OFF	
Ans.-back Buzzer	ON	ON	Vehicle is controlled in answer-back buzzer equipped mode.
		OFF	Vehicle is controlled in answer-back buzzer non-equipped mode. (Make sure to set to "OFF" in models without answer back buzzers.)
Auto locking	ON	ON	Not supported
		OFF	
Initial keyless setting	—	—	—
		Execution	Settings of keyless entry system are initialized. (No. 2: 30 sec., No. 11: ON, No. 12: ON, No. 13: ON, No. 14: ON)
Initial button setting	—	—	—
		Execution	Settings of each function are initialized. (No. 1: Normal, No. 3: 15 min., No. 4: 15 min., No. 8: ON)
Initial Security setting	—	—	Not supported
		Execution	
Passive Alarm	OFF	ON	Setting only for North American models
		OFF	
Door open warning	OFF	ON	If detecting door open for 30 minutes, room light, key ring illumination are turned off to prevent battery run-out.
		OFF	Room light, key illumination and door warning light is not turned off.
Belt Warning Switch	ON	ON	When using normally
		OFF	Stop the belt warning buzzer beep and warning light illumination.

5) After setting, make sure that vehicle equipment is same as the setting changed in the {Current Data Display & Save}.

CAUTION:

- The above settings must match the actual vehicle equipment.
- Do not change settings other than the above while setting the functions.
- Be sure not to change Factory or Market setting except installation of new body integrated unit.

NOTE:

For details concerning the operation procedure, refer to the "PC application help for Subaru Select Monitor".