

General Diagnostic Table

LAN SYSTEM (DIAGNOSTICS)

15.General Diagnostic Table

A: INSPECTION

Read the DTC or inspect and diagnose the following data in the current data display using Subaru Select Monitor.

1. LAN SYSTEM

Item	Operation	Specifications		Note
		YES	NO	
DTC	DTC is not displayed when inspecting all DTCs.	DTC is not displayed.	Perform the diagnosis according to DTC.	—
Coolant Temp.	Check the current data display of ECM, TCM and body integrated unit. Three data value are the same.	Same values	Inspect LAN system.	If engine coolant temperature sensor is not OK, inspect the sensor circuit.
Rr Defogger SW	It turns to ON when pressing switch. (Low-speed CAN is OK)	Turns to ON.	Inspect rear defogger switch.	Rear defogger switch is connected with Low-speed CAN.
Rr defogger output	When switch input, it is output.	Output	Replace the body integrated unit.	If not operating with output, check the rear defogger relay.
Door lock SW (Open)	When locked with door lock switch, it turns to ON.	Turns to ON.	Inspect door lock switch.	The door lock switch is connected to the Low-speed CAN.
Door lock actuator	When locked with door lock switch, it is output.	Output	Replace the body integrated unit.	—

General Diagnostic Table

LAN SYSTEM (DIAGNOSTICS)

2. BODY INTEGRATED UNIT

Item	Operation	Specifications		Note
		YES	NO	
Illumination VR power supply	Operate the illumination volume, illumination light is controlled according to the change of voltage on data display.	Illumination light is controlled with changing of data.	Inspect the illumination volume.	—
Fuel level resistance	Check the fuel level resistance and fuel level resistance 2. Both resistances are same.	Same values	Inspect the body integrated unit.	Compare the input and output values of body integrated unit.
R wiper ON/INT SW input	When rear wiper SW to ON, data display turns to ON.	Turns to ON.	Inspect the rear wiper switch.	—
R wiper output	When rear wiper switch to ON, output signal turns to ON.	Turns to ON.	Replace the body integrated unit.	If not operate with output turned to ON, check the rear wiper motor.
Keyless Entry	Keyless entry LOCK/UNLOCK the doors.	Operate	Inspect the keyless antenna.	If the antenna is OK, replace the body integrated unit.
Brake Switch	When brake pedal is depressed, it turns to ON.	Turns to ON.	Inspect the brake switch.	—
Shift Lock Solenoid	The shift lock releases when depressing the brake pedal.	Released	Inspect the shift lock.	—
Registration function setting of body integrated unit	Does Vehicle equipment correspond to setting values?	Correspondence	Reconfigure the values according to vehicle equipment.	—
Customizing	When changing customize setting, the registration completes correctly.	Registered	Inspect the body integrated unit.	—
Manual Mode	Switch the shift (UP/DOWN) on Manual mode. Indicator is changed in 1 — 2.	Change	Inspect the shift lever.	—
Function check	Each checking item operate correctly. (Except for not equipped)	Operate	Inspect for nonfunctional actuator.	—
Security	After locking with keyless entry system and open the door, the security system operates and the horn sounds.	Horn sounds. (Security system operates.)	Inspect the security system.	—

General Diagnostic Table

LAN SYSTEM (DIAGNOSTICS)

WIRING SYSTEM SECTION

WIRING SYSTEM	WI
---------------	----

This service manual has been prepared to provide SUBARU service personnel with the necessary information and data for the correct maintenance and repair of SUBARU vehicles.

This manual includes the procedures for maintenance, disassembling, reassembling, inspection and adjustment of components and diagnostics for guidance of experienced mechanics.

Please peruse and utilize this manual fully to ensure complete repair work for satisfying our customers by keeping their vehicle in optimum condition. When replacement of parts during repair work is needed, be sure to use SUBARU genuine parts.

All information, illustration and specifications contained in this manual are based on the latest product information available at the time of publication approval.

WIRING SYSTEM



	Page
1. Basic Diagnostic Procedure	3
2. Working Precautions	14
3. Power Supply Circuit	15
4. Ground Circuit	22
5. Engine Electrical System	32
6. Radiator Fan System	60
7. Charging System	61
8. Starter System	62
9. Remote Engine Start System	64
10. AT Control System	68
11. AT Shift Lock Control System	75
12. Vehicle Dynamics Control System	76
13. Tire Pressure Monitoring System	80
14. Air Conditioning System	81
15. Power Seat System	89
16. Airbag System	90
17. Seat Belt Warning System	94
18. Occupant Detection System	95
19. Seat Heater System	96
20. Headlight System	97
21. Headlight Beam Leveler System	100
22. Front Fog Light System	102
23. Back-up Light System	104
24. Stop Light System	105
25. Clearance Light and Illumination Light System	106
26. Turn Signal Light and Hazard Light System	111
27. Interior Light System	114
28. Front Wiper and Washer System	118
29. Rear Wiper and Washer System	119
30. Wiper Deicer System	121
31. Audio System	122
32. Front Accessory Power Supply Socket System	124
33. Rear Accessory Power Supply Socket System	125
34. Navigation System	126
35. Horn System	130
36. Power Window System	131
37. Remote Control Mirror System	135
38. Rear Defogger System	136
39. Combination Meter System	137
40. Speedometer System	142
41. Clock System	143
42. Fuel Gauge System	144
43. Coolant Temperature System	145

44.	Oil Pressure Warning Light System	147
45.	Parking Brake / Brake Fluid Level Warning Light System	148
46.	Sunroof Control System	149
47.	Security System	150
48.	Immobilizer System	153
49.	Keyless Entry System	154
50.	Cruise Control System	158
51.	CAN Communication System	166
52.	Compass Mirror System	168
53.	Harness Components Location	169
54.	Front Wiring Harness	170
55.	Bulkhead Wiring Harness (In Engine Compartment)	172
56.	Bulkhead Wiring Harness (In Compartment)	176
57.	Engine Wiring Harness and Transmission Cord	179
58.	Instrument Panel Wiring Harness	183
59.	Rear Wiring Harness	185
60.	Door Cord	188
61.	Rear Wiring Harness and Rear Gate Cord	190