

7. Read Diagnostic Trouble Code (DTC)

A: OPERATION

- 1) On the «Main Menu» display screen, select {Each System Check}.
- 2) On the «Each System Check» menu display screen, select the {Integ. unit mode}.
- 3) Select the [OK] after the information of body integrated unit type is displayed.
- 4) On the «Integ. unit mode» display screen, select the {Diagnostic Code(s) Display}.
- 5) Record the DTC displayed.

NOTE:

- For details concerning the operation procedure, refer to the “PC application help for Subaru Select Monitor”.
- For details concerning DTC, refer to “List of Diagnostic Trouble Code (DTC)”. <Ref. to LAN(diag)-28, List of Diagnostic Trouble Code (DTC).>