

8. Clear Memory Mode

A: OPERATION

- 1) On the «Main Menu» display screen, select the {2. Each System Check}.
- 2) On the «System Selection Menu» display screen, select the {Integ. unit mode}.
- 3) Press the [OK] key after the information of body integrated unit type is displayed.
- 4) On the «Integ. unit mode failure diag» display screen, select {Clear Memory} and press the [OK] key.

Display	Contents to be monitored
Clear Memory ?	Clear function of DTC and freeze frame data

- 5) When “Done” is shown on the display screen, turn the ignition switch to OFF.

NOTE:

For details concerning the operation procedure, refer to the “PC application help for Subaru Select Monitor”.