



D RELAY LOCATIONS


[Engine Compartment]

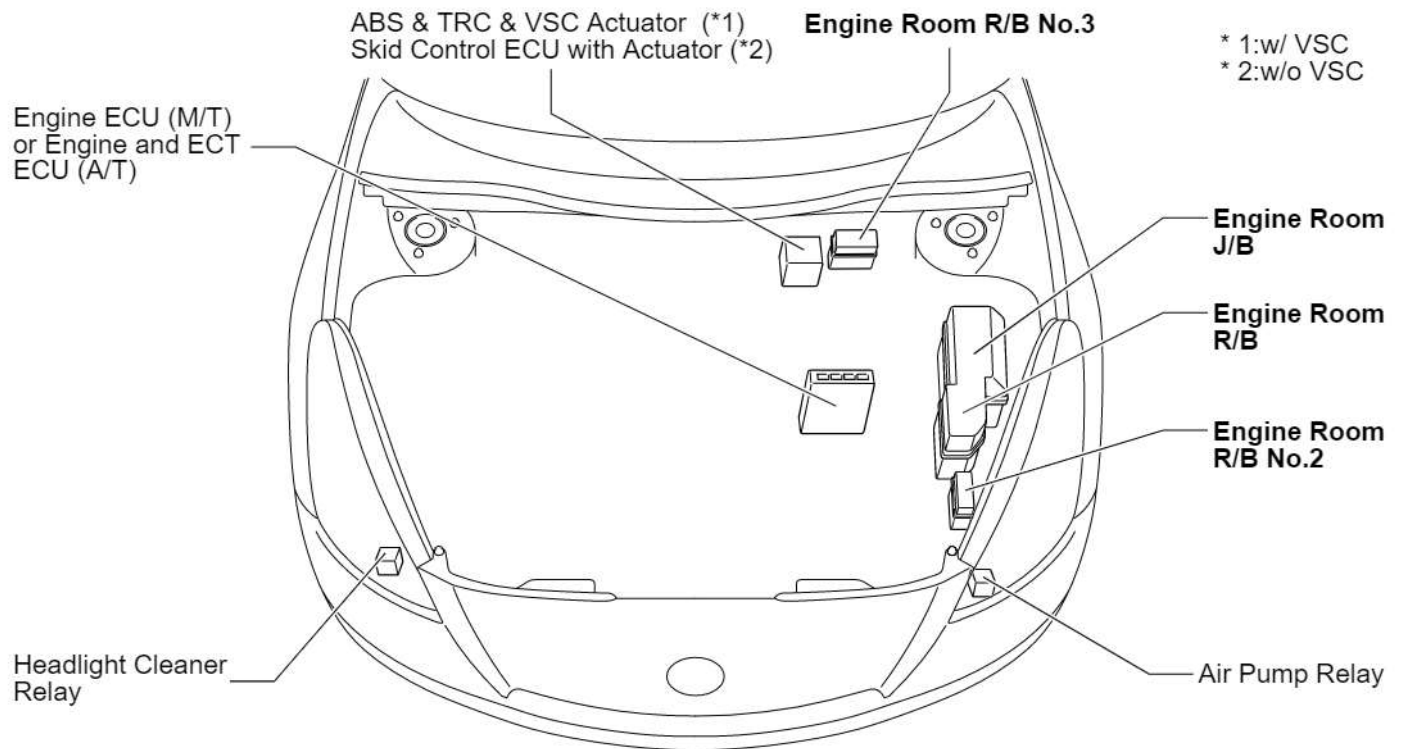


[Body]

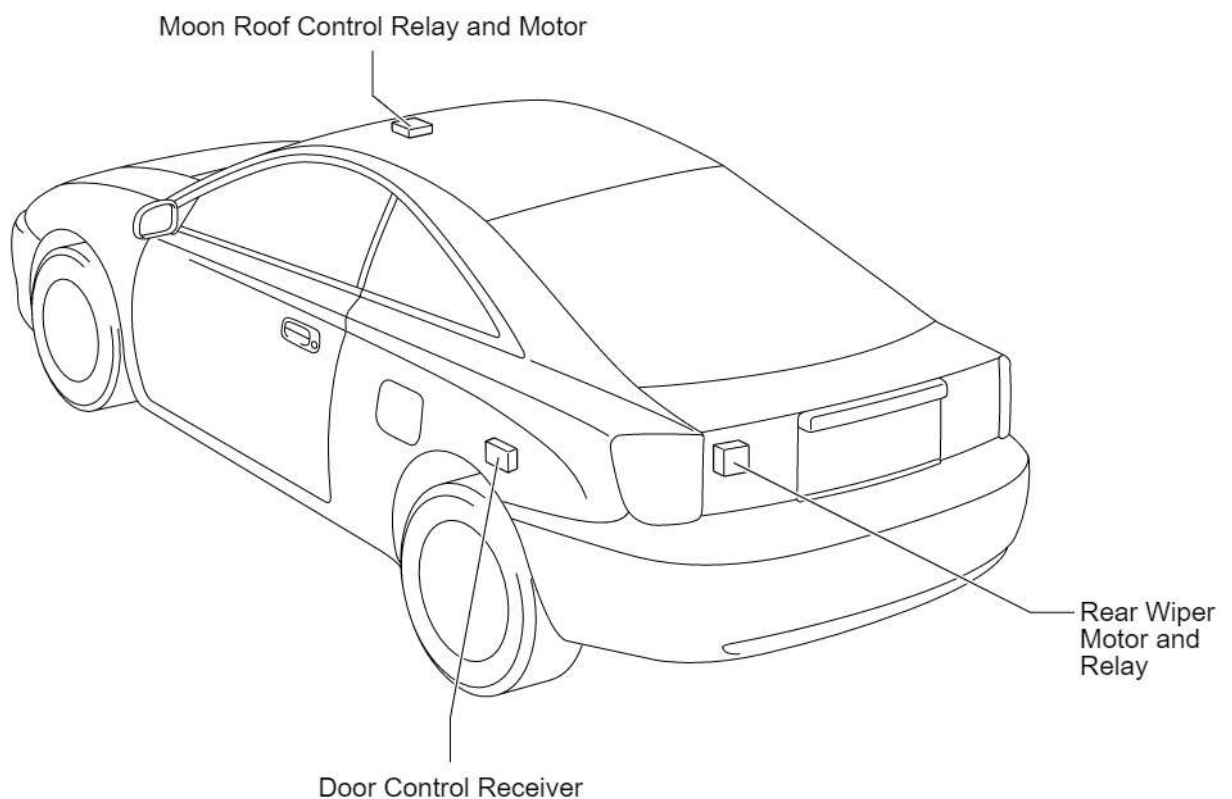

[Instrument Panel] (LHD)

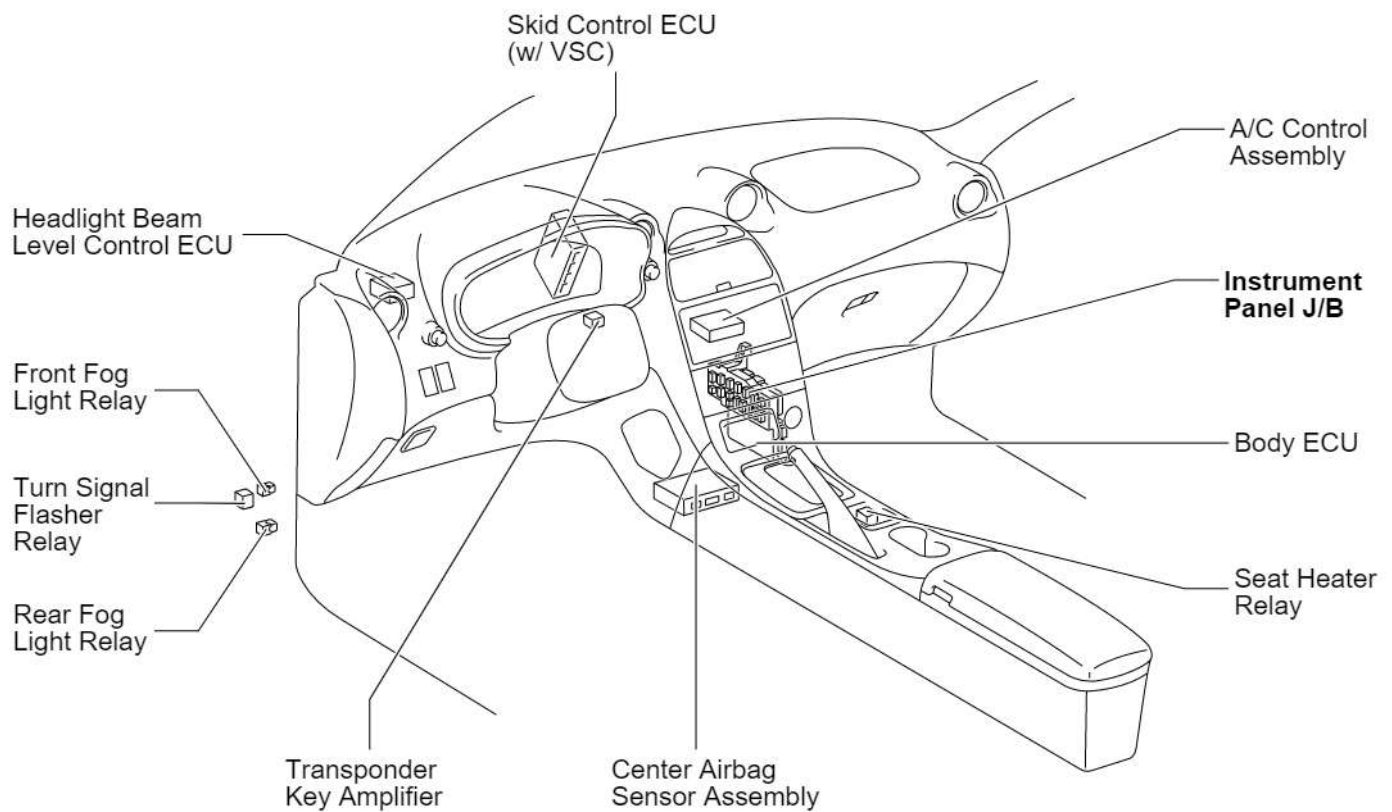

(RHD)

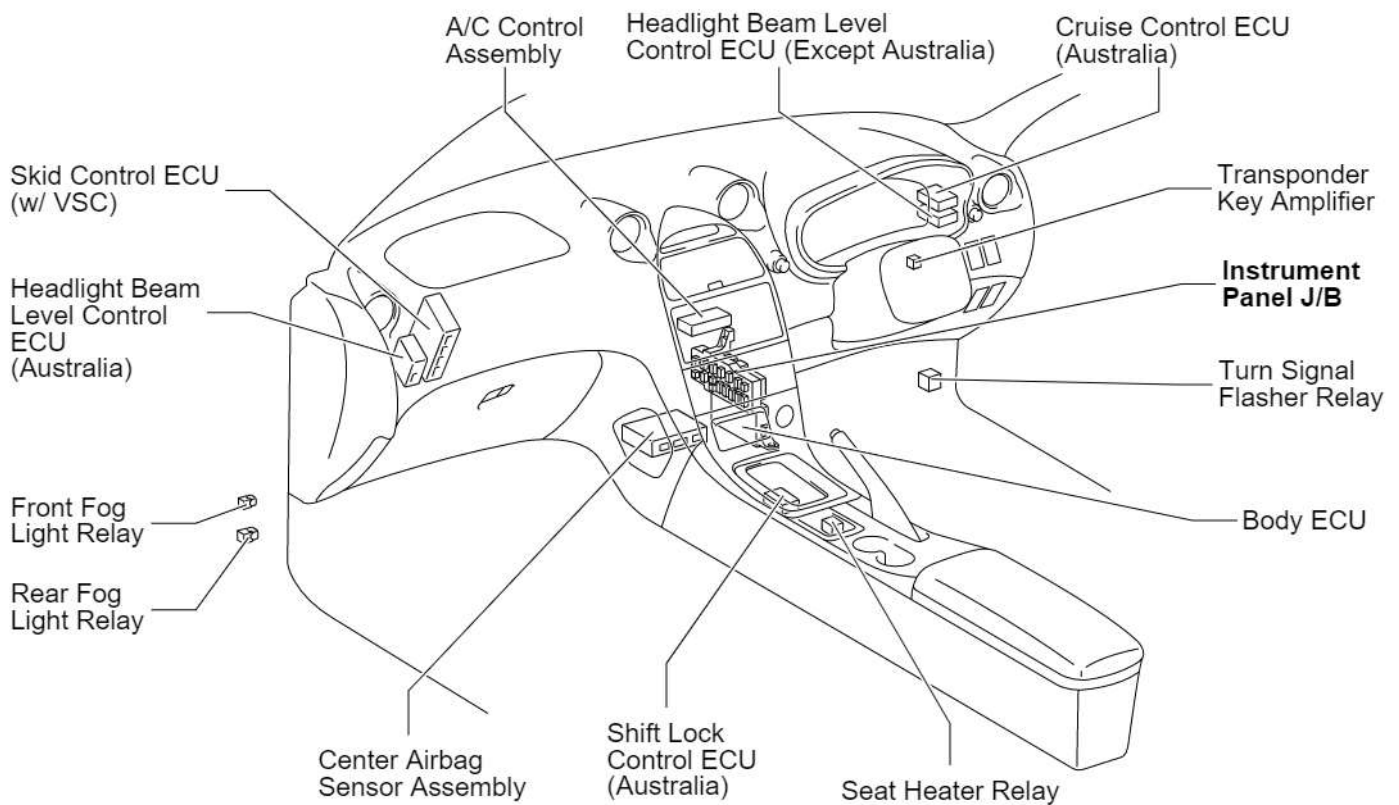


D RELAY LOCATIONS

 : Engine Room J/B

Engine Compartment Left (See Page 8)


- * 1: 20A HEAD RH UPR DRL NO.2 (*2)
20A HEAD RH UPR (*3)
- * 2: Europe
- * 3: Australia
- * 4: 7.5A HEAD LVL (*2)
- * 5: 15A HAZ (*2)
10A HAZ (*3)
- * 6: 10A EFI NO.1 (*3)
7.5A EFI NO.1 (*3)

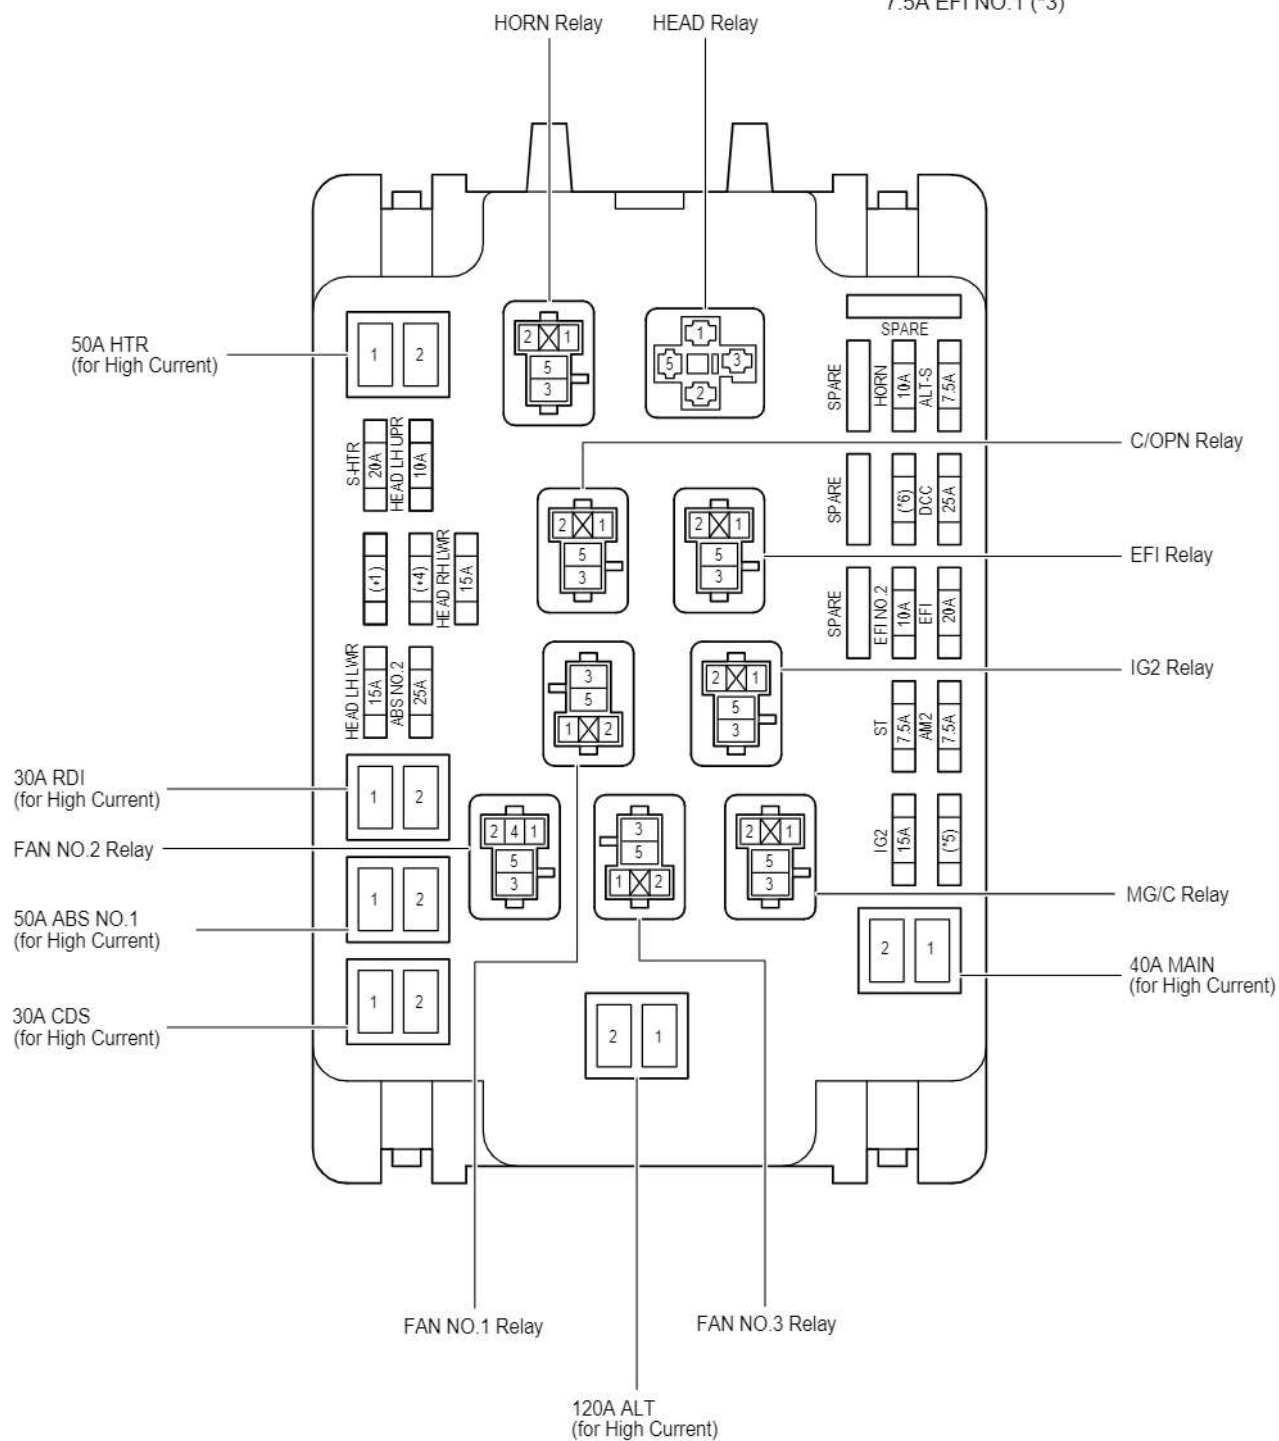



D RELAY LOCATIONS


 : Instrument Panel J/B Instrument Panel Brace RH (See Page 9)

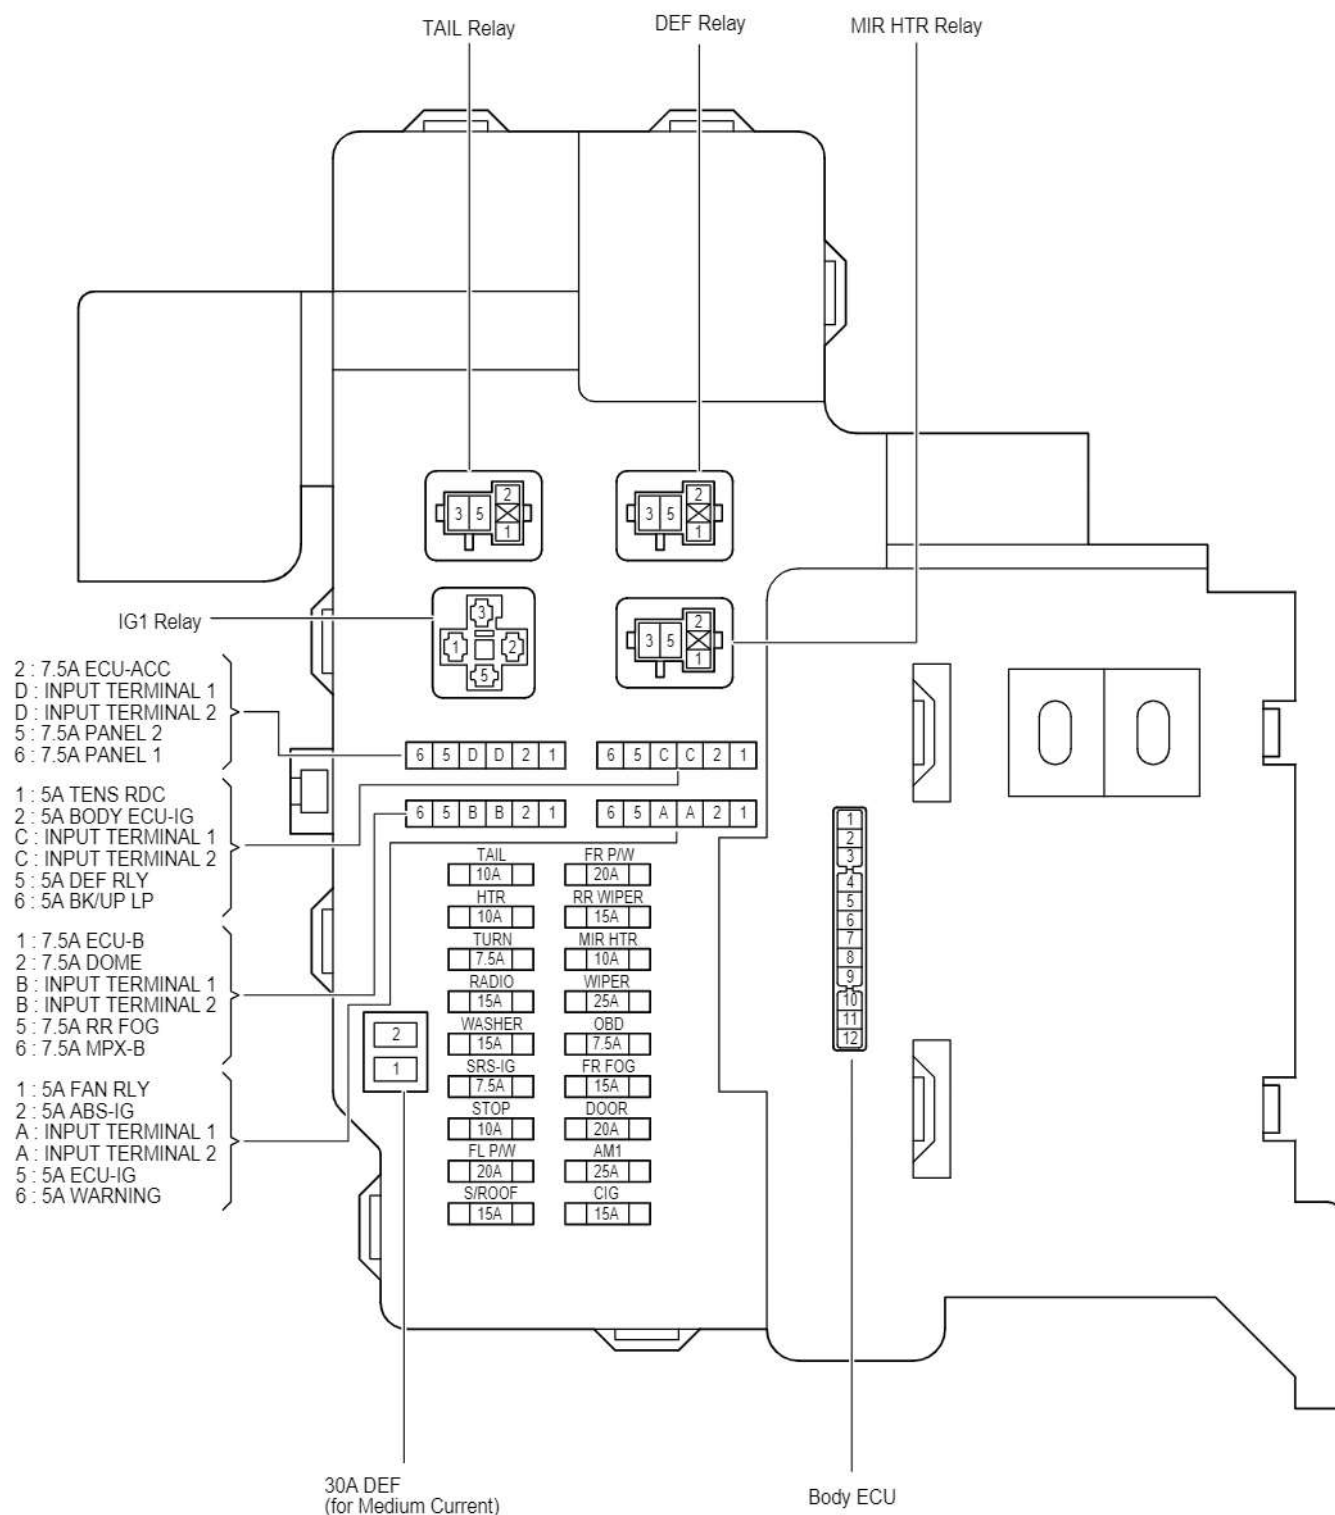




D RELAY LOCATIONS


① : Engine Room R/B No.1 Engine Compartment Left (See Page 8)

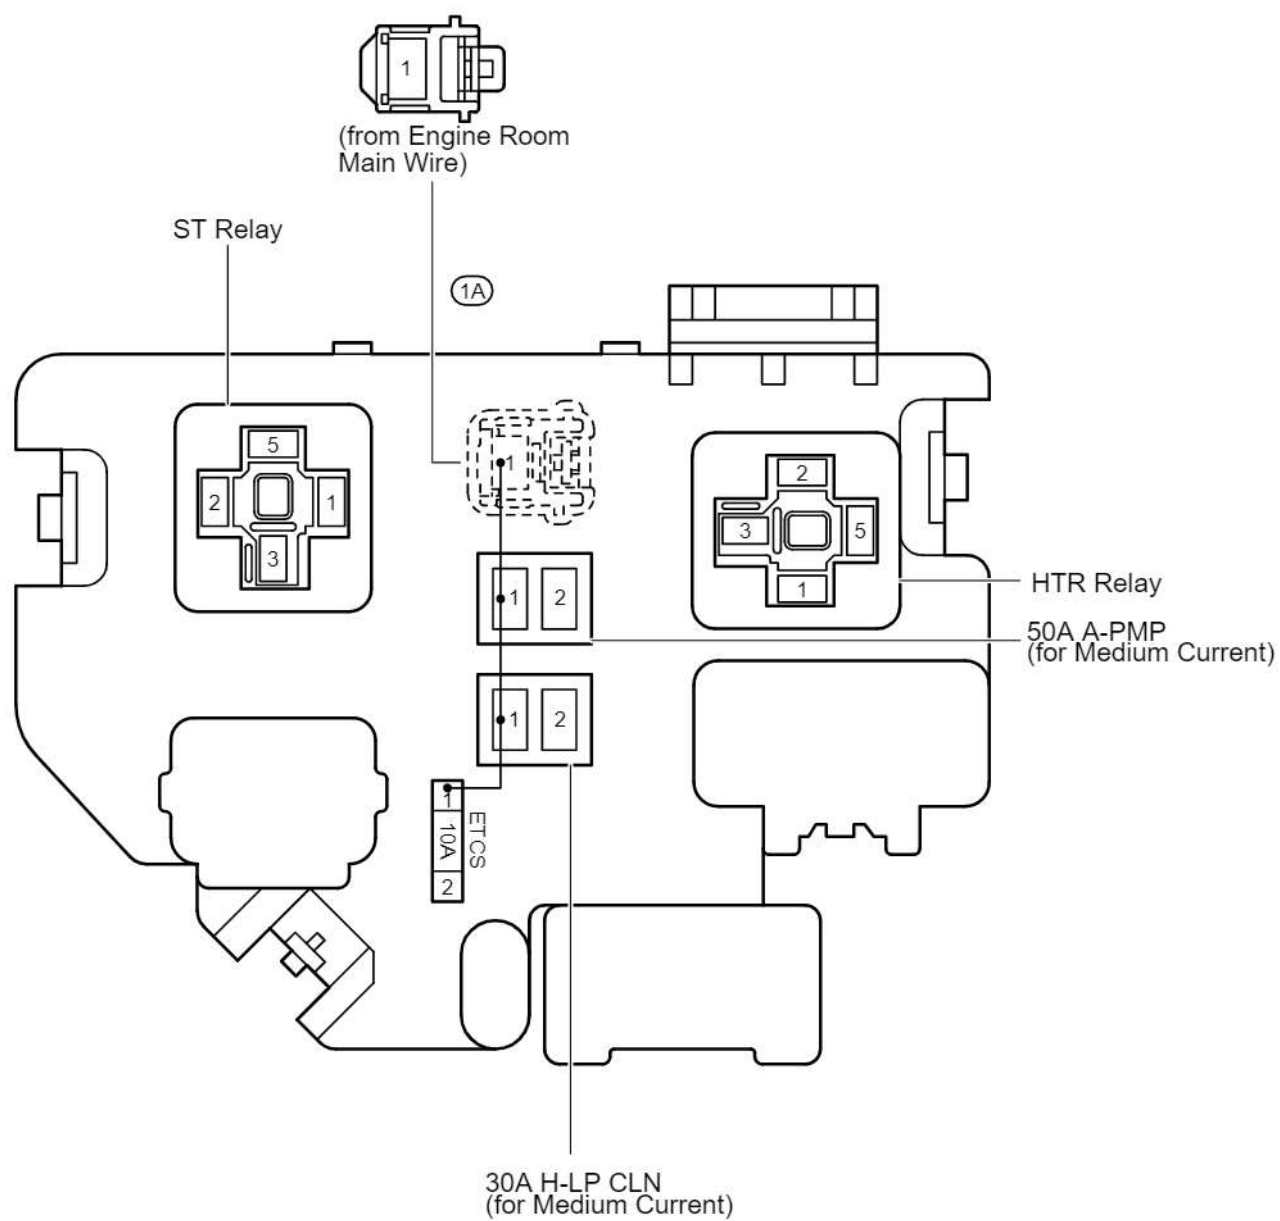

① : Engine Room R/B No.2 Engine Compartment Left (See Page 8)

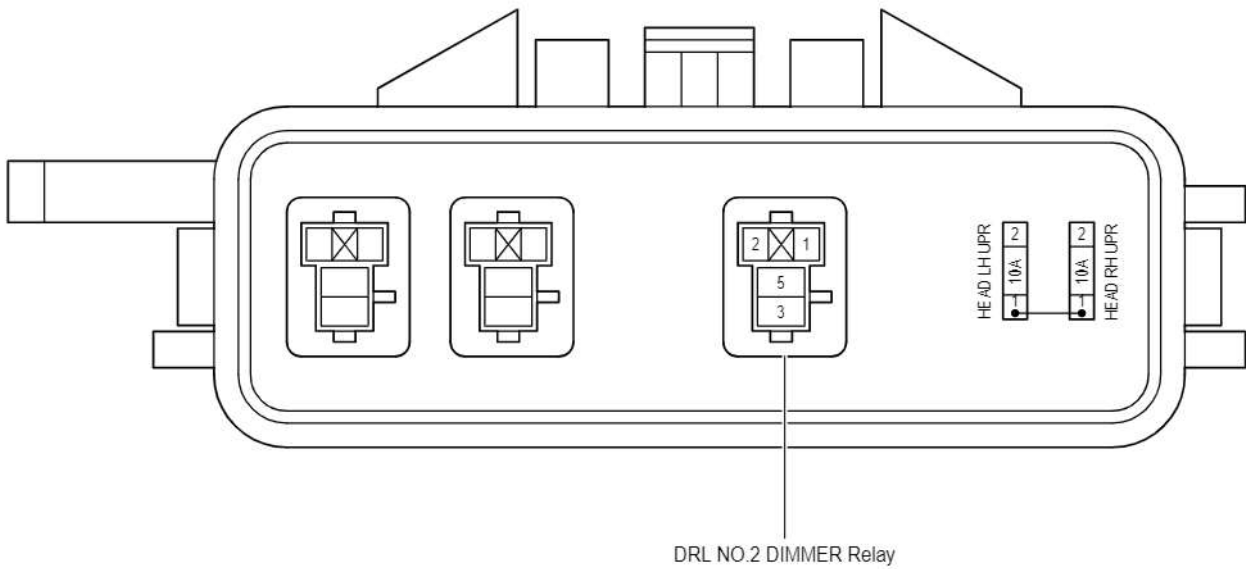


① : Engine Room R/B No.3 Engine Compartment Right (See Page 8)

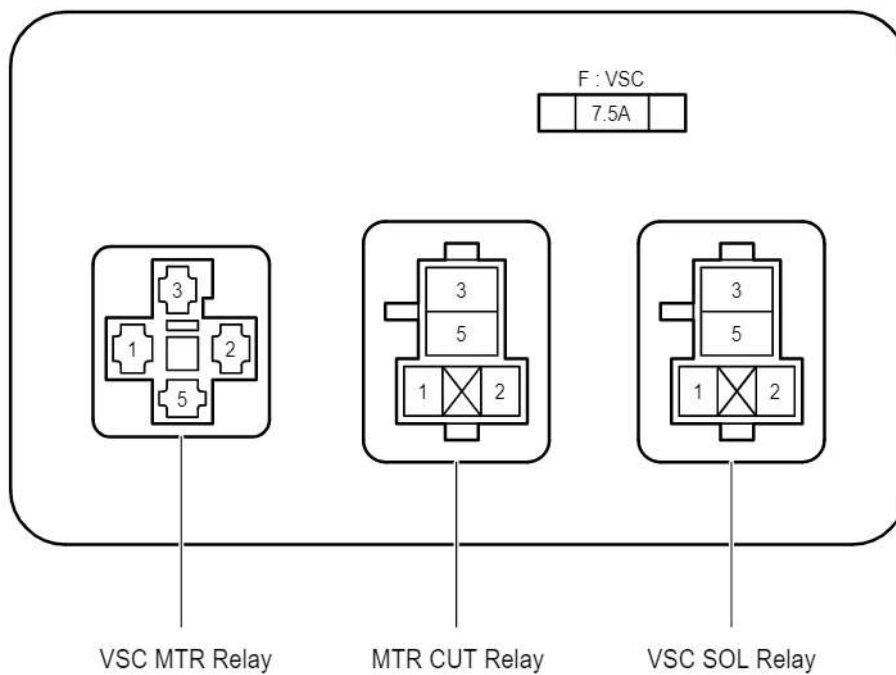


D RELAY LOCATIONS

[Engine Room J/B Inner Circuit]

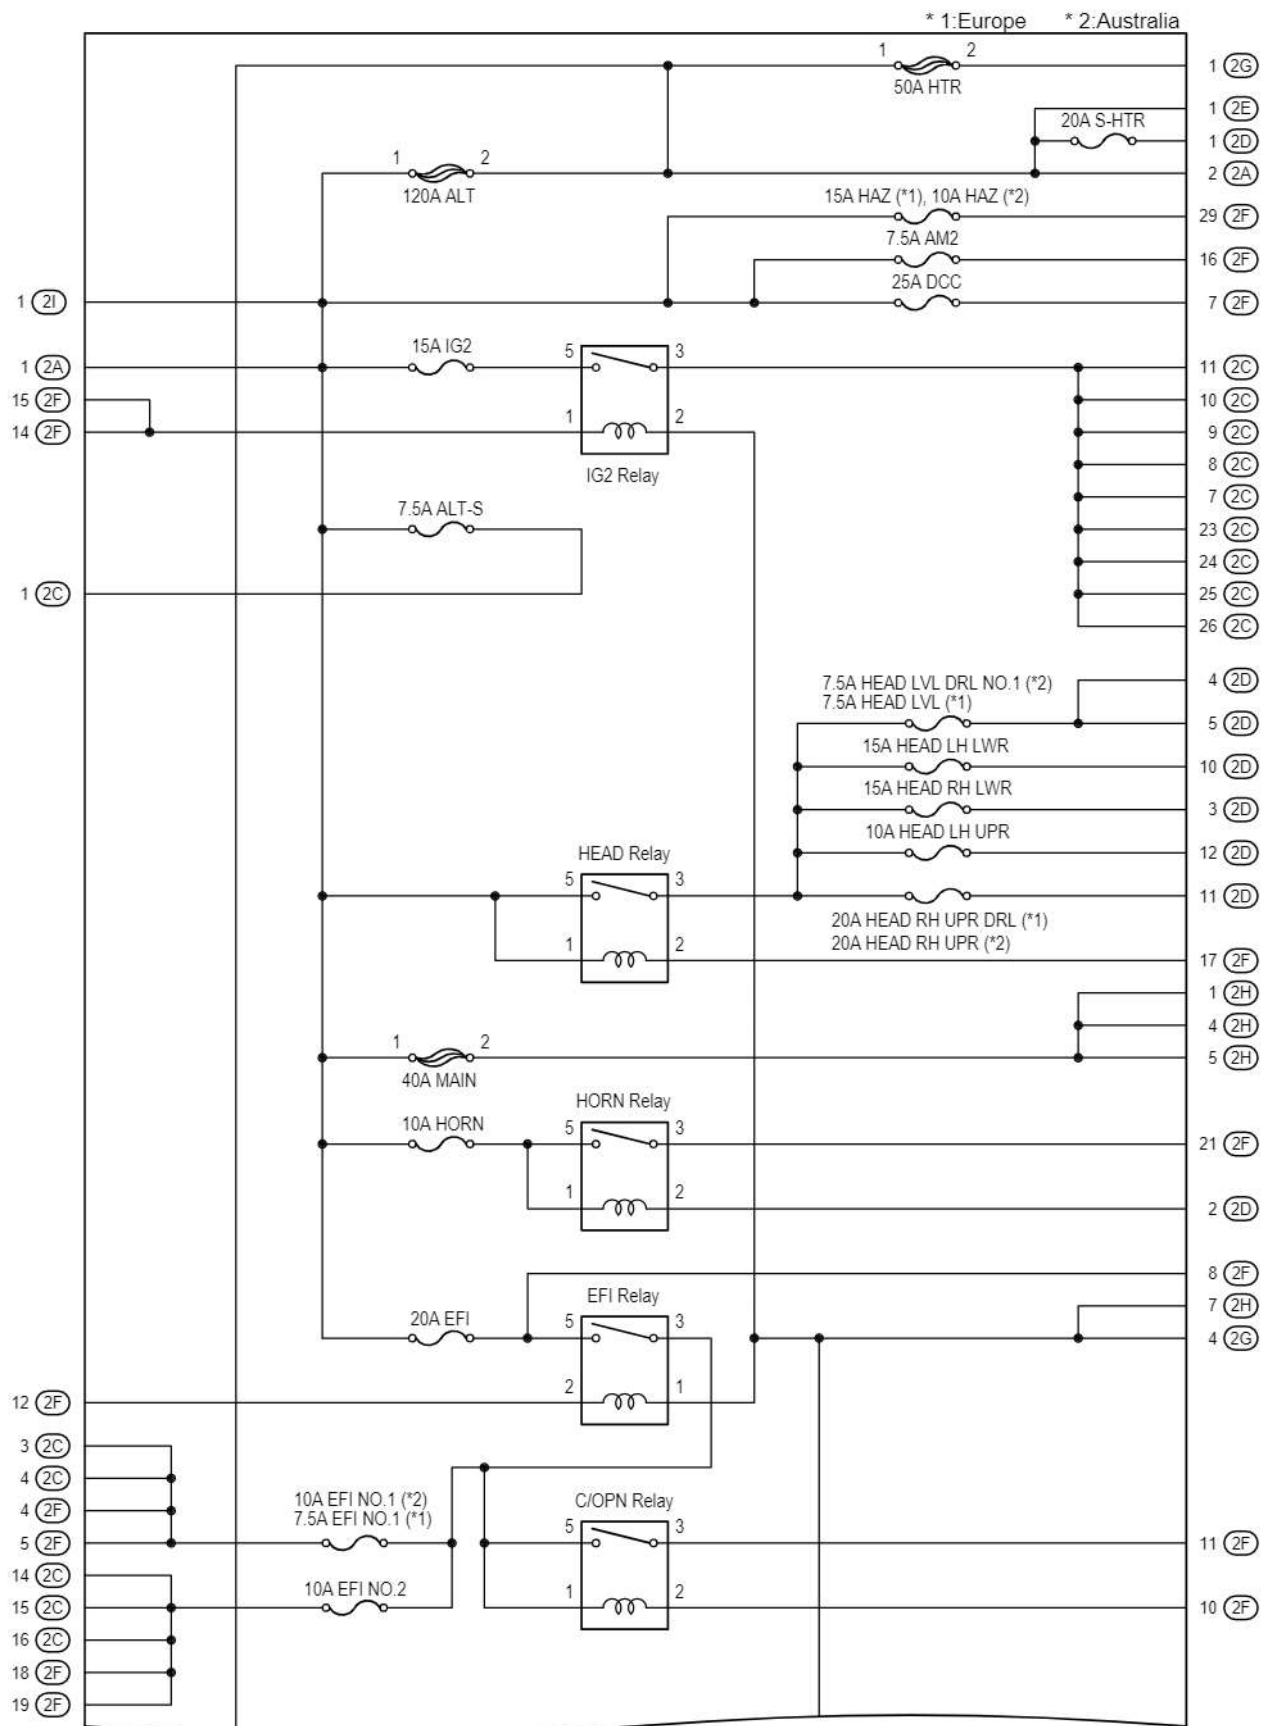


(Cont. next page)

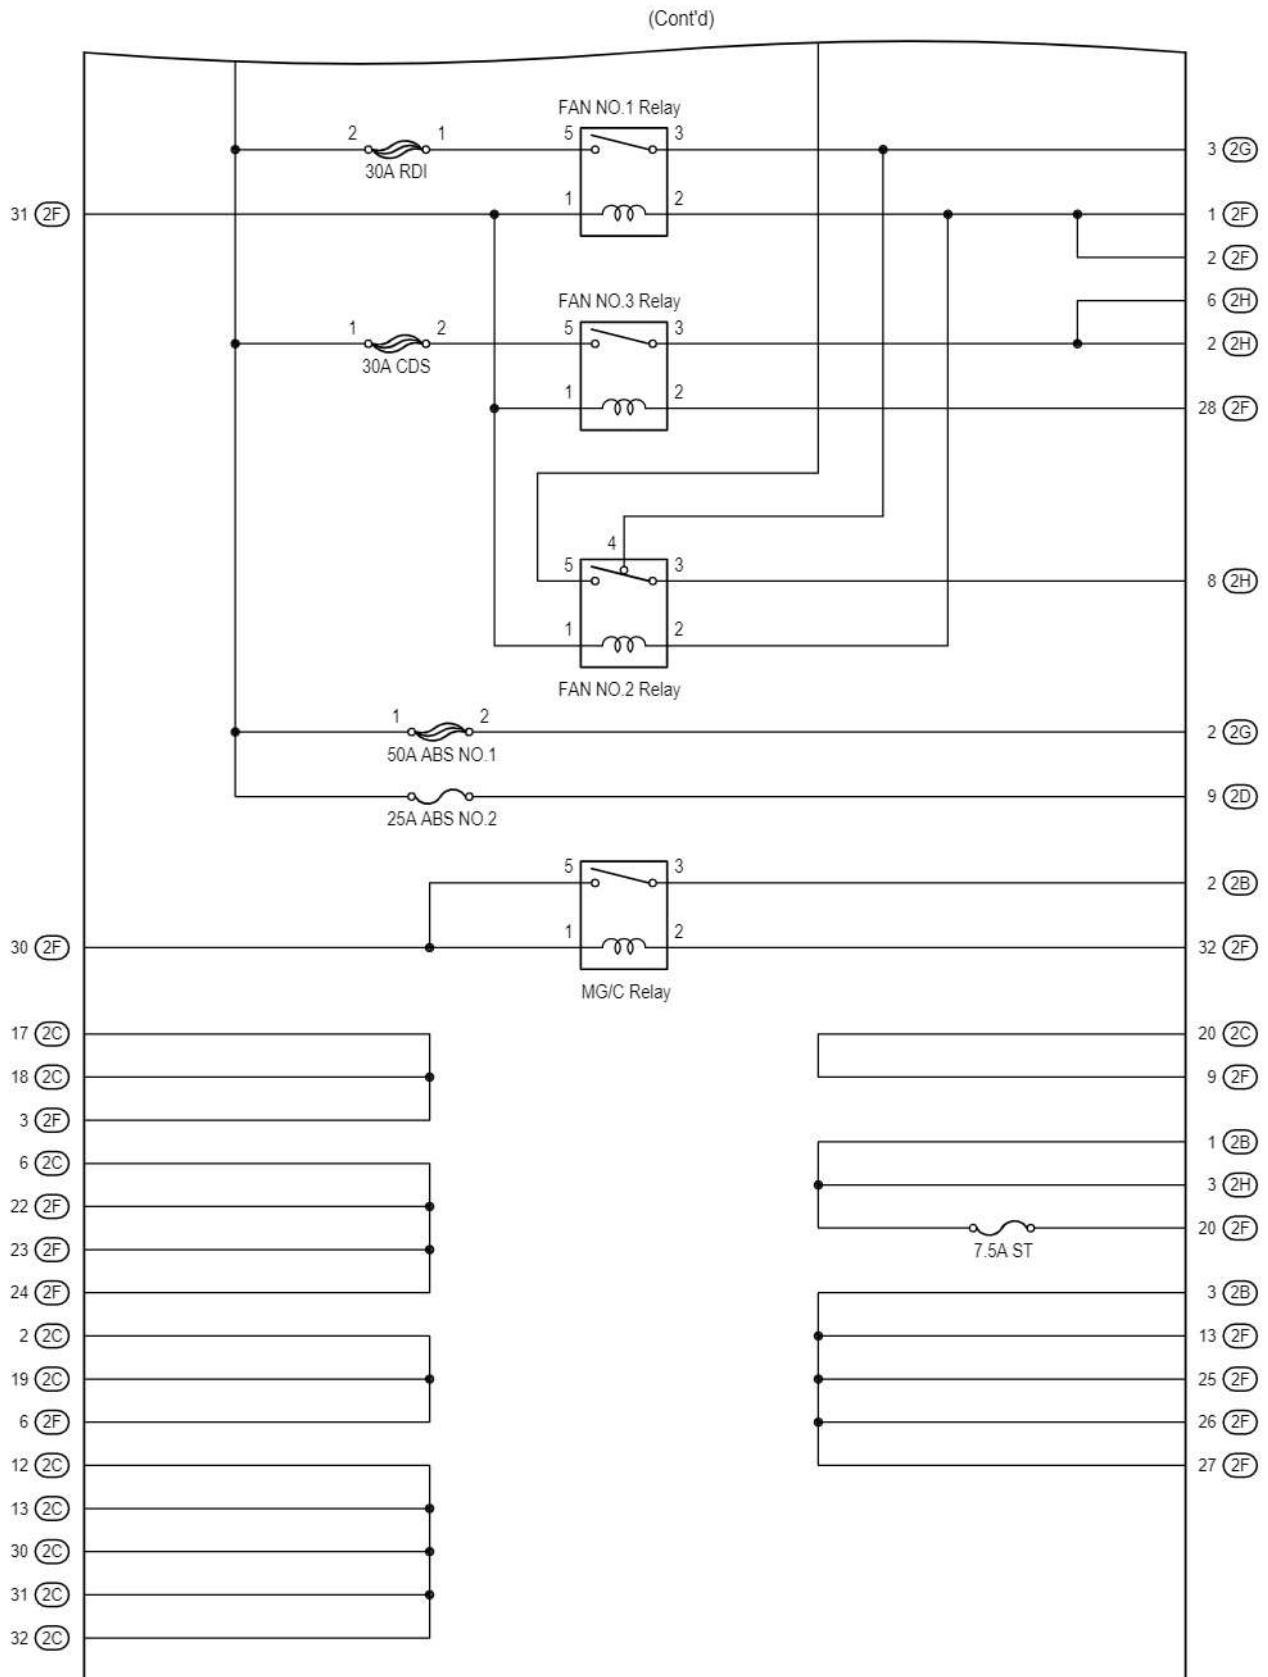

D RELAY LOCATIONS

[Instrument Panel J/B Inner Circuit]

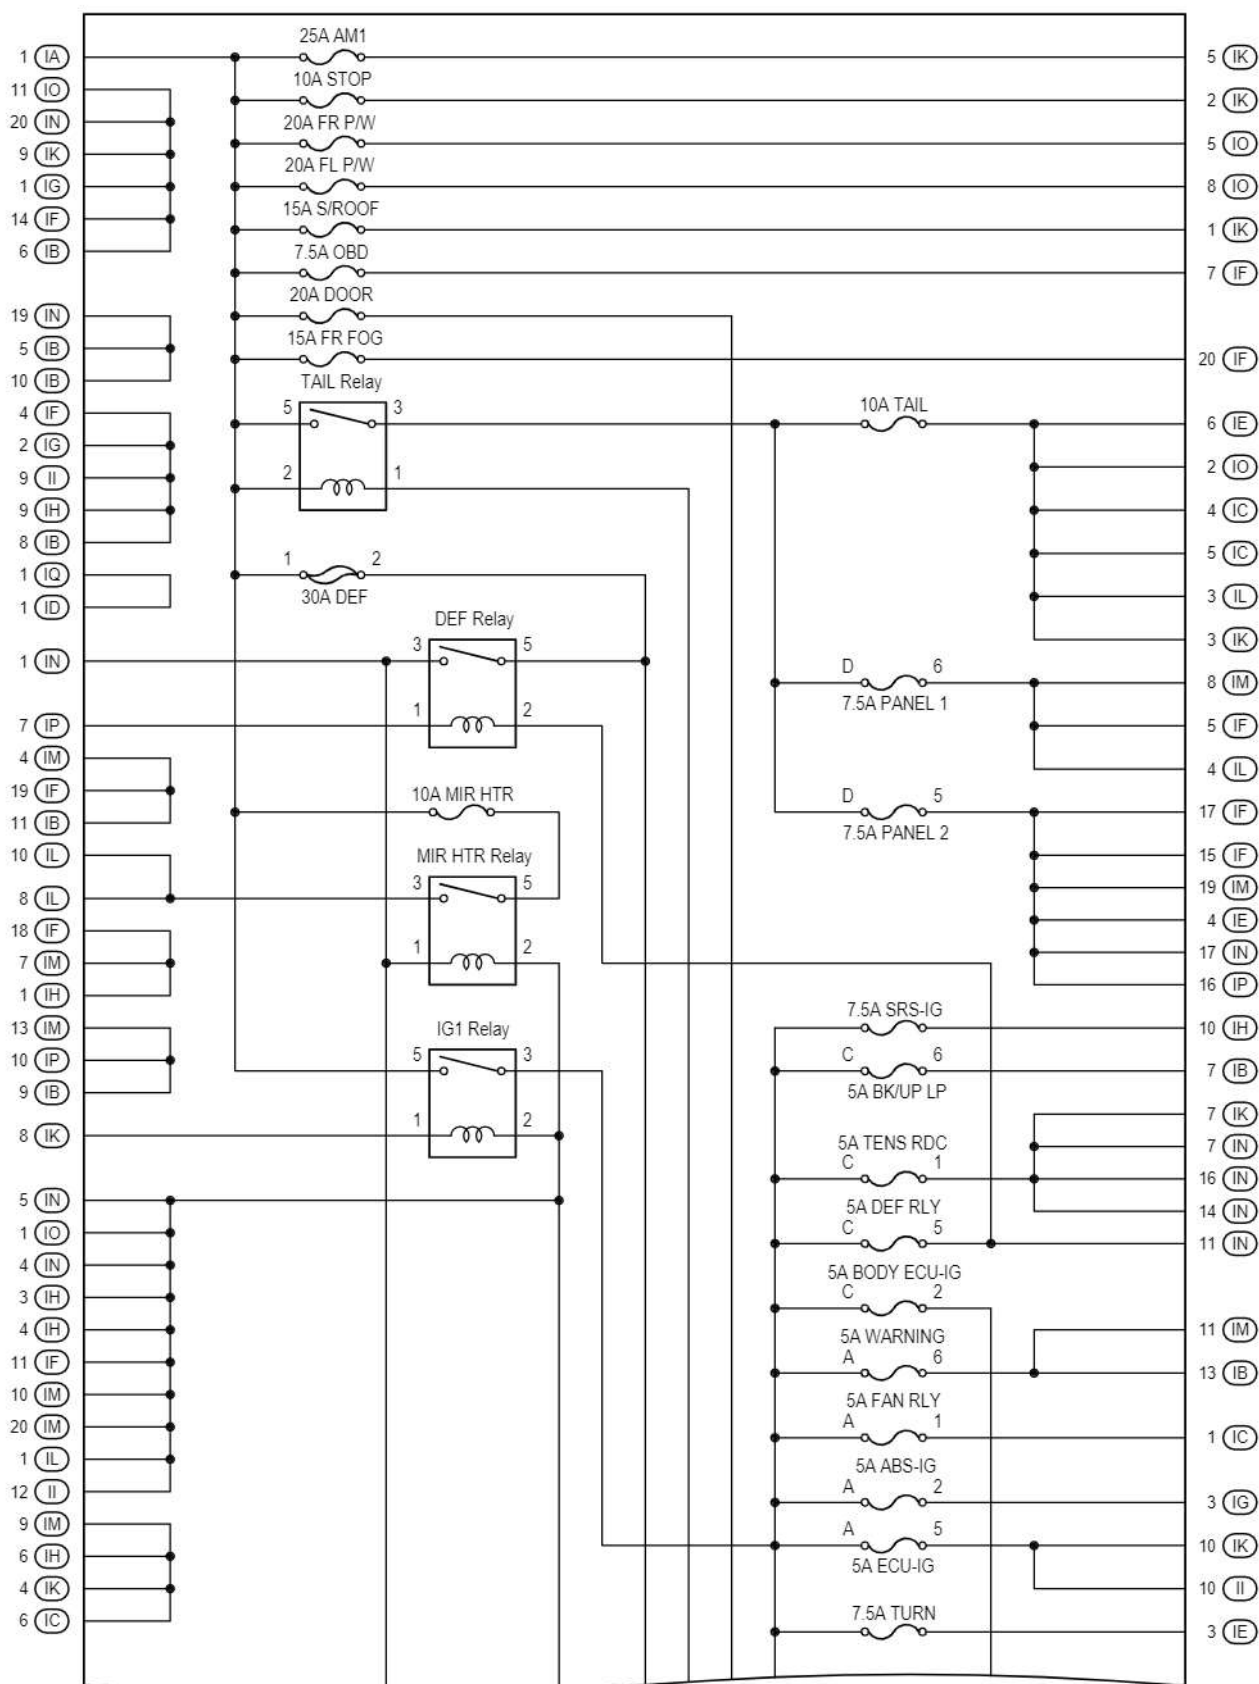

(Cont. next page)

(Cont'd)

