

CABIN AIR FILTERS

Air Refiner Filter & Air Conditioning Filter - RAV4


REMOVAL & INSTALLATION

NOTE: Manufacturer's terminology for this filter is air refiner filter or air conditioning filter.

CABIN AIR FILTER

Removal & Installation (2001-2005)

1. Disconnect the glove compartment door. Push both sides inward one after another and pull out the glove compartment door. See **Fig. 1**.

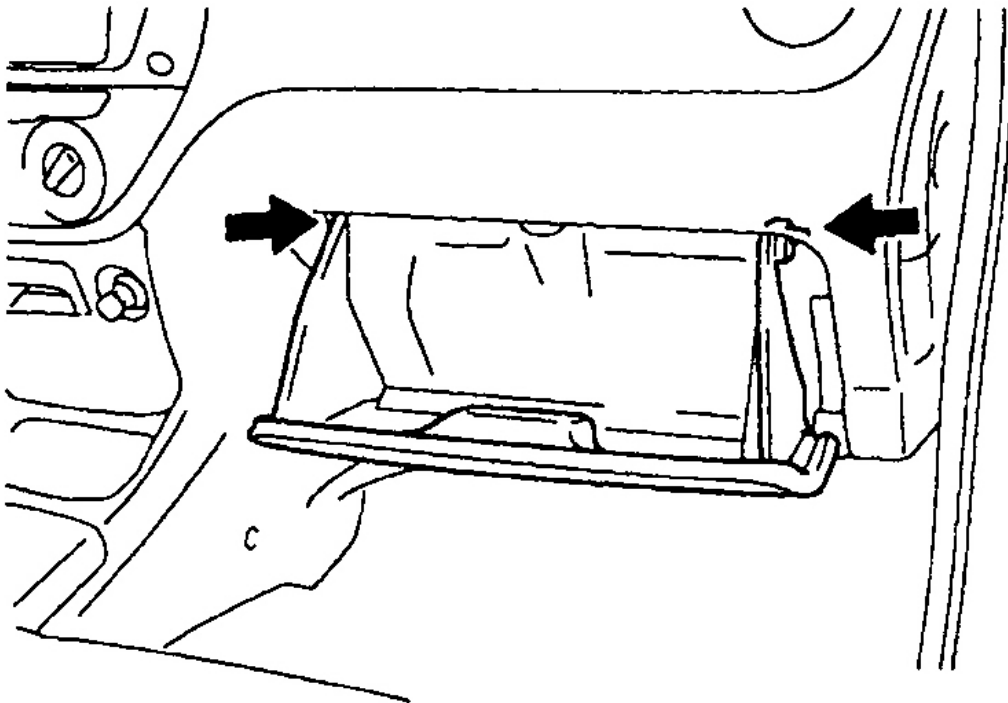


G00213174

Fig. 1: Disconnecting Glove Compartment
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

2. Pull out the air refiner filter case. See **Fig. 2**.

2005 Toyota RAV4

CABIN AIR FILTERS Air Refiner Filter & Air Conditioning Filter - RAV4

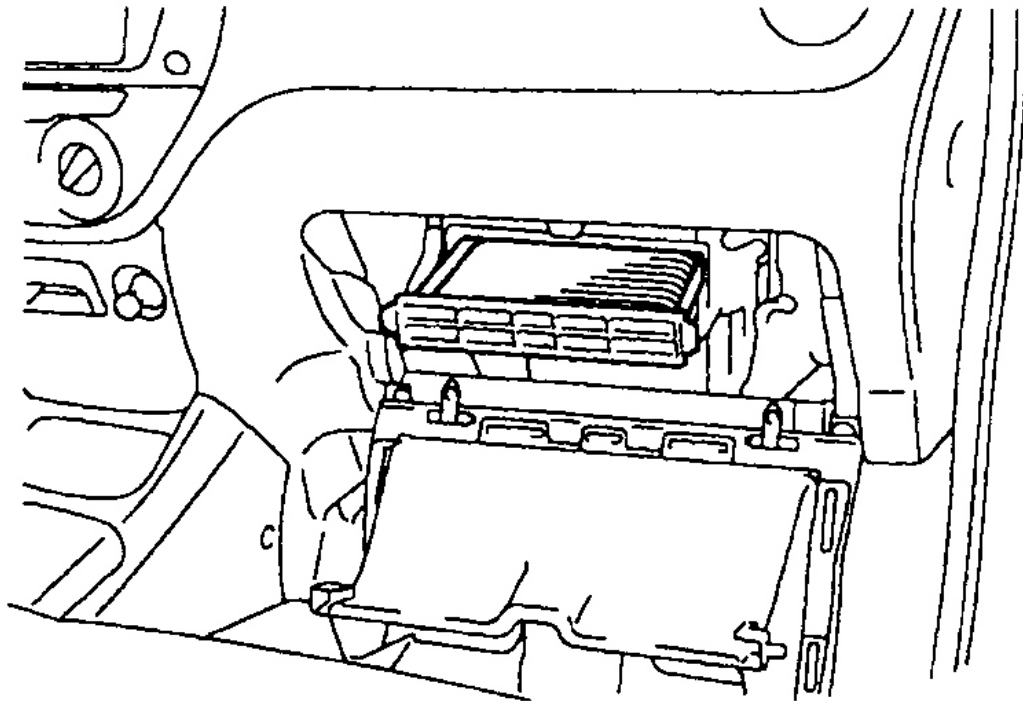

G00213175

Fig. 2: Removing Air Refiner Filter Case

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

3. Remove the air refiner filter from the filter case.
4. To install air refiner filter, reverse removal procedure.