

Vauxhall Agila 2008 – 2011 fuse box diagram

Engine compartment fuse box (petrol engines)




Vauxhall Agila mk2 (from January 2008 – 2011) – fuse box – engine compartment (petrol engines)

Number	Circuit
1	Heater motor
2	Fuel injection
3	Air conditioning compressor
4	Automatic transmission
5	Brake lamp switch
6	ABS, ESP
7	Starting motor
8	—
9	Power steering control module

10	Ignition switch
11	Radiator fan
12	—
13	ABS, ESP
14	—
15	Throttle motor
16	Front fog lamps
17	Headlamp (left)
18	Headlamp (right)

Engine compartment fuse box (diesel engines)

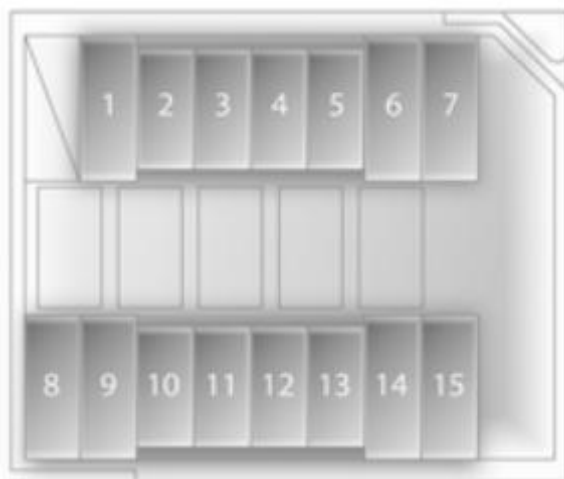

Vauxhall Agila mk2 (from January 2008 – 2011) – fuse box- engine compartment (diesel engines)

Numer	Circuit

1	Starting motor
2	Air conditioning compressor
3	Fuel pump
4	Fuel injection
5	Heater fan
6	Radiator fan
7	Power steering control module
8	ABS, ESP
9	ABS, ESP
10	Brake lamp switch
11	Headlamp (right)
12	Headlamp (left)
13	Front fog lamps
14	Ignition switch
15	Ignition switch, power windows, wiper, starter

Skrzynka bezpieczników w desce rozdzielczej



Vauxhall Agila mk2 (from January 2008 –

2011) – fuse box- instrument panel

Numer	Circuit
1	—
2	Ignition coils
3	Back-up lamp
4	Instrument cluster
5	Accessory socket, cigarette lighter, power exterior mirror
6	Infotainment system
7	Power window
8	Wiper/wash
9	Power steering
10	Airbag system
11	ABS

12	Tail lamp
13	—
14	Door lock
15	HID lamp (left), diesel engine
16	Starting motor
17	Seat heater
18	Interior fan
19	De-icer, rear fog lamp
20	Infotainment system
21	Heated rear window
22	Horn, hazard warning
23	HID lamp (right), manual transmission
24	Power window timer