


Chevrolet Caprice 1994 – 1996 fuse box diagram

Passenger Compartment Fuse Box

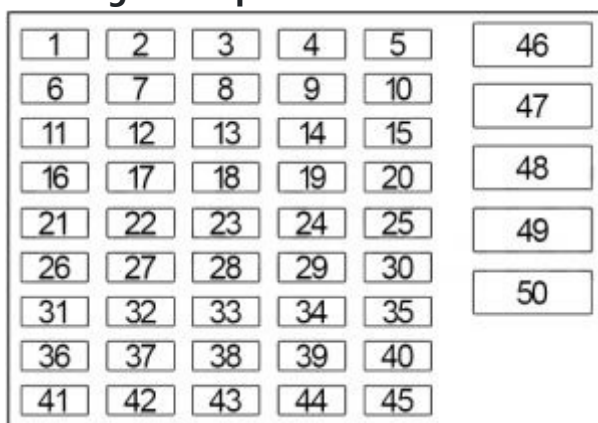

Chevrolet Caprice – fuse box diagram – passenger


compartment

No.	A	Circuit Protected
1	–	–
2	–	–
3	–	–
4	–	–
5	–	–
6	15	'94: Turn Signal Lamp Flasher, Park Neutral Position Switch
7	10	'94: Anti-Lock Brake (ABS) Control Module
	10	'95 (Police): HUD Projector, Night Vision Control Unit, Auxiliary Display
8	15	Tailgate Switch Module
9	10	'94: Radio
	15	'95: Radio
10	25	Windshield Wiper Motor Module
11	10	Rear Defog Relay, Air Bag, I/P Cluster, Headlamp Switch
12	10	'94 (Wagon): Auto Level Control
	15	'95: Turn Signals, Back-up Lamp, PRNDL Position Sensor
13	10	Automatic Inside Rearview Mirror, Chime Module, TCC Cruise Brake Switch, Twilight Sentinel, Daytime Running Lights Canada), Keyless Entry System
14	10	Pass-Key II

15	15	Air Bag
16	10	Cruise Control
17	20	Heater & A/C Control
18	10	'95: Seat Heater, Power Steering Control Module
19	–	–
20	10	Instrument Cluster, Daytime Running Lights (Canada)
21	15	'95 (Police): RH Spot Lamp
22	15	'95 (Police): LH Spot Lamp
23	–	–
24	10	Air Bag, Theft Deterrent Relay
25	–	–
26	20	'94: Power Antenna
	10	'95 (Police): Night Vision Roof Unit
27	10	'94: Heat Sensor, Trunk Lamp
	10	'95: Automatic Level Control, Trunk Lamp
28	20	Cigarette Lighter
29	20	Keyless Entry System, Trunk Release, Rear Glass Release Liftgate Wiper Latch Switch (Wagon)
30	15	Radio
31	20	Headlamp Switch, Twilight Sentinel, Daytime Running Lights (Canada)
32	25	Horn
33	10	Chime Module, Heater and A/C, Glove Box Light, Instrument Cluster
34	10	Pass-Key II
35	15	Dome Lamp, Front Reading Lights, Rear Reading Lights, Automatic Inside Rearview Mirror, Illuminated Visor Vanity Mirror, Power Door Locks, Front Door Courtesy Lights, Rear Door Courtesy Lights, Power Mirror Sw. Instrument Panel Courtesy Lights
36	15	Wagon: Rear Wiper
37	20	Hazard Warning Flasher, Stop Lights

38	30	'95: Blower Motor Control
39	20	'95: Power Door Lock Relay
40	20	'95: Heated Seats
41	10	Cornering Lamps, Side Marker Lamp, Turn-Park Lamp
42	10	Instrument Cluster, Radio, Brightness Control, Headlamp and Instrument Panel Lamp Dimmer Switch, Panel Lamps Dimming Module
43	10	License Lights, Taillights, Tail/Stop/Turn Lights, Markerlamps
44	10	Heater Power Mirrors
45	10	'95 (Police): HUD Projector
Circuit Breaker		
46	20	'95: Power Seat Recline, Lumbar Support, Power Antenna Relay
47	30	Power Window, Power Window Lockout Switch
48	30	'94: Door Locks, Power Seat Switch, Passenger Seat Lumbar Controls
	25	'95: Door Locks, Power Seat Switch
49	30	Rear Window Defogger
50	–	–

Engine Compartment Fuse Box

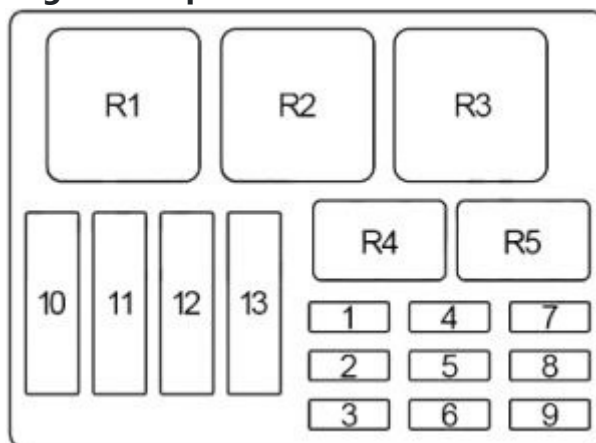

Chevrolet Caprice – fuse box diagram – engine

compartment

No.	A	Protected Component
1	10	Fuel Injector (2, 3, 5, 8)

2	10	Fuel Injector (1, 4, 6, 7)
3	20	'94: Primary Air Pump Relay, Underhood Lamp
	25	'95: Primary Air Pump Relay, Underhood Lamp
4	10	'94: Secondary Engine Coolant Fan, Generator
	15	'95: Automatic Transmission, Mass Air Flow Sensor (MAF), Secondary Air Pump Relay, EGR Control Valve Relay, Evaporative Emission Canister Purge Valve Solenoid, LH Heated Oxygen Sensor, RH Heated Oxygen Sensor
5	10	Control Module (PCM), Ignition Coil Electronic Brake Control Module
6	15	Fuel Pump Relay, Fuel Pump and Engine Oil Pressure Switch Powertrain Control Module (PCM)
7	10	Primary Engine Coolant Fan, A/C Compressor Relay
8	10	Automatic Transmission, Mass Air Flow Sensor (MAF), Secondary Air Pump Relay, EGR Control Valve Relay, Evaporative Emission Canister Purge Valve Solenoid, LH Heated Oxygen Sensor, RH Heated Oxygen Sensor
9	25	Automatic Level Control Air Compressor (ALC)
10	40	Secondary Engine Coolant Fan
11	40	Primary Engine Coolant Fan
12	60	Fuse Block
13	60	Main
	80	Main
Relay		
R1	Coolant Fan	

R2	Coolant Fan
R3	Air Pump
R4	A/C Compressor
R5	Fuel Pump