


Chevrolet Cavalier 1995 – 2005 fuse box diagram

Passenger Compartment Fuse Box ('00-'05)

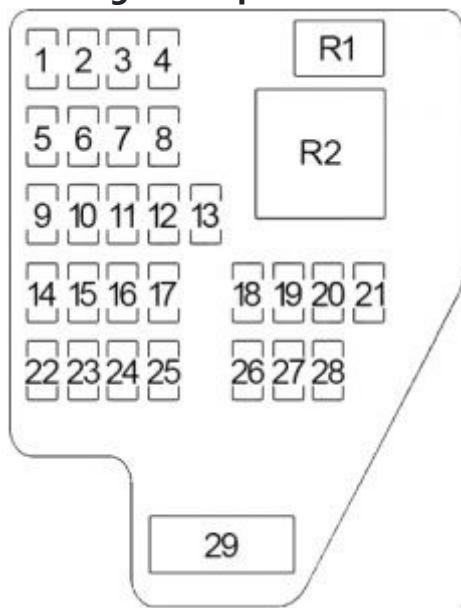


Chevrolet Cavalier – fuse box diagram – passenger compartment

No.	A	Circuit Protected
1	20	Ignition Module
2	20	'02-'05: Accessory Power Outlet
3	15	Right Headlamp
4	15	Horn
5	10	Powertrain Control Module (PCM)
6	10	Anti-lock Brake Solenoids
7	10	Radio, Interior Lamps, OnStar
8	10	Daytime Running Lamps: Fog Lamps
9	10	Body Control Module, Instrument Panel Cluster
10	10	Cruise Control
11	15	Left Headlamp
12	20	Cigarette Lighter, Interior Lamps, Exterior Lamps
13	20	Stop Lamps, Hazard Lamps, Anti-lock Brakes, Cruise Control
14	10	Brake Transaxle Shift Interlock (BTSI), Cruise Control, HVAC Compressor Control, Multi-Port Injection
15	15	Air Bag

16	10	Power Mirror, Data Link Connector
17	20	Park Lamps, Side Marker Lamps, Instrument Panel Lamps
18	15	Power Door Locks, Convertible Top
19	10	Anti-lock Brake, Coolant Fan, HVAC: Compressor Control
20	10	Body Control Module
21	10	Cavalier: Amplifier
	20	Sunfire: Amplifier
22	10	Backup Lamps, Turn Signal Lamps
23	15	Fuel Pump, Fuel Injectors
24	15	'01-'05: Remote Keyless Entry System
	10	'00: Remote Keyless Entry System
25	10	Instrument Panel Cluster, Electronic Brake Control Module
26	30	Rear Window Defogger
27	10	O ₂ Sensor Heater
28	25	Wiper/Washer
Relay		
29	25	Power Windows, Power Sunroof
	30	Convertible: Power Windows, Convertible Top
Relay		
R1	'05: Headlamps	
R2	Daytime Running Lamps	

Passenger Compartment Fuse Box ('95-'99)

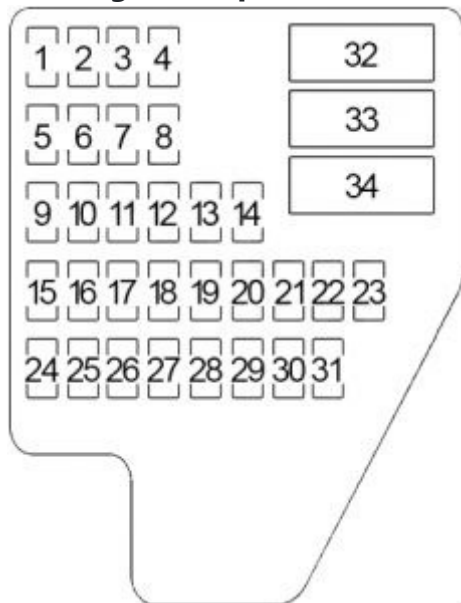


Chevrolet Cavalier – fuse box diagram – passenger compartment

No.	A	Protected Component
1	20	Engine Ignition, Multiport Fuel Injection
2	–	–
3	10	Headlamp
	15	Right Headlamp
4	–	–
5	10	Powertrain Control Module (PCM)
6	–	–
7	10	Alarm Module, Warning Chimes, Illuminated Entry, Trunk Lamp, Overhead Lamps, Map/Reading Lamps, Glove Box Lamp, Radio Power Mirrors
8	10	Daytime Running Lights, Fog Lamps
9	10	Alarm Module, Warning Chimes, Illuminated Entry
10	10	Cruise Control
11	20	Headlights (Flash to Pass)
	15	Left Headlamp
12	15	Cigarette Lighter, Horn, Diagnostic Connector, Asynchronous Receiver/Transmitter (UART) Link
13	10	Instrument Panel Lamps

14	20	Stop Lamps, Hazard Lamps, ABS, Cruise Control, Exterior Lights
15	10	Automatic Transaxle, Brake Transaxle Shift Interlock (BTSI), Cruise Control, HVAC: Compressor Control, EGR (2.2L), Canister Purge Valve, A/C High Pressure Switch (2.3L)
16	15	Air Bag-DERM (Diagnostic Energy Reserve Module) Power
17	–	–
18	20	Park Lamps, Side Marker Lamps, Instrument Panel Lamps
19	–	–
20	20	Power Door Locks, Convertible Top
21	10	Heater-A/C Control, Crankcase Vent Heater (2.3L), Rear Window Defogger, Antilock Brake System, Engine Cooling Fan (2.2L)
22	10	Radio/Audio Systems
23	–	–
24	20	Turn Signals, Back-Up Lights
25	20	Fuel Pump, Fuel Injectors
26	10	Air Bag-DERM (Diagnostic Energy Reserve Module) Crank Signal
27	10	Instrument Panel, Antilock Brake Control Module
28	10	Instrument Panel, Powertrain Control Module (PCM), Asynchronous Receiver/Transmitter (UART) Link
29	30	Rear Window Defogger
30	10	Rear Oxygen Sensor Heater (2.3L Cal. Auto)
31	25	Wiper/Washer
Relay		
32	20	Headlight, Daytime Running Lights
33	–	–
33	25	Power Windows, Sunroof
	30	Convertible: Power Windows, Convertible Top

Engine Compartment Fuse Box

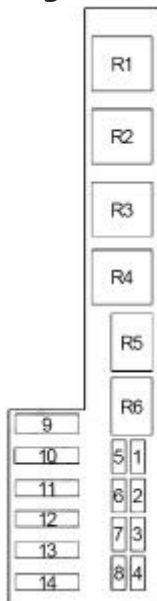

Chevrolet Cavalier – fuse box diagram – engine compartment

No.	A	Protected Component
1	10	'95-'99: Starter and Charging System: Generator Voltage Sense
2	10	HVAC Compressor Control
3	10	PCM, Multiport Fuel Injection
4	30	HVAC Blower Control, HVAC Compressor Control
5	15	'95-'99: ABS
6	10	'02-'05: Starter Relay Control
7	–	–
8	10	'95-'96: Tach
9	50	'00-'05: Blower Relay Control, Multiport Fuel Injection
10	30	Cooling Fan
11	50	'00-'05: ABS, Power Distribution
	40	'95-'99: ABS
12	40	Power Distribution (Lighting)
13	40	Power Distribution (Power ACC/Stop Lamp)
14	50	Power Distribution, Starter, Ignition, Charging System
Relay		
R1		Blower Motor

R2	'95-'99: ABS and Electronic Variable Orifice Steering
R3	Cooling Fan
R4	'02-'05: Starter
R5	Fuel Pump
R6	Air Conditioner