



Owner's manual

MMI Radio



Foreword

You have decided on the MMI Radio - thank you very much for your confidence in us.

With your new Audi, you are receiving a vehicle with a state-of-the art system that allows you to change the vehicle's settings and operate the electronic equipment from a central location using the MMI.

We recommend that you read these Operating Instructions carefully so that you quickly get to know all of the functions and possibilities that the MMI offers and are able to make full use of them while driving.

Please note that these instructions are a supplement to your vehicle Owner's Manual and should only be used in conjunction with your current vehicle Owner's Manual.

We hope you enjoy driving your Audi.

AUDI AG



1515663MS21

About this owner's manual . . .	3	Selecting the telephone	28
Overview	4	Selecting a phone number	28
Components at a glance	4	Calling up the directory	31
Traffic safety information	4	Using a contact	31
Care information	5	Importing or exporting contacts	32
MMI control panel	6	Storing a new contact	33
Switching the MMI on/off	6	Additional settings	33
Adjusting the volume	6	Troubleshooting	35
Operation	6	Listening to the radio	36
Menus and symbols	7	Selecting the radio	36
Multifunction steering wheel .	8	Radio functions	37
Operating	8	Additional settings	37
Calling	9	Troubleshooting	38
.	10	Playing media	39
Voice recognition system	12	Accessing media	39
Operating	11	Media functions	39
Information about the the command overviews	13	Additional settings	40
Global commands	13	Index	42
Telephone	13		
Radio	14		
Media	14		
Media drives/connections	15		
Introduction	15		
Notes	15		
Audi music interface	17		
Supported media and file formats	19		
Troubleshooting	20		
System settings	22		
Setting the clock time and date	22		
Adjusting the sound	22		
Adjusting the system volume	23		
Restarting the MMI (Reset)	23		
Additional settings	23		
Making a phone call	25		
Introduction	25		
Pairing a cell phone through Bluetooth .	25		
Connecting a cell phone	26		
Using the Audi phone box	27		

This book contains important information, tips, suggestions and warnings for using your vehicle.

Keep this book in your vehicle at all times. This is especially important if you loan your vehicle to others or sell it.

Some sections in this book do not apply to all vehicles. When this is the case, the beginning of the section indicates the **validity**, for example “Applies to vehicles: with multifunction steering wheel”. Optional or vehicle-specific equipment is also identified with an asterisk “*”.

The **illustrations** are designed as schematic images. Some of the details on your vehicle may look slightly different than illustrated.

There is a **Table of Contents** at the beginning of this book that lists all of the topics covered in this book in the order that they appear. There is also an alphabetically arranged **Index** at the end of this book.

All **directions** such as “left”, “right”, “front” and “rear” are based on the vehicle's direction of travel.

* Optional or vehicle-specific equipment.

► The section continues on the next page.

⇒ ⚠ Cross reference to a “WARNING” within a section. If a page number is indicated, the WARNING is located outside of the section.

WARNING

Text with this symbol contains information about safety and how to reduce the risk of serious personal injury or death.

Note

Text with this symbol contains information about avoiding damage to your vehicle.

For the sake of the environment

Text with this symbol contains information on protecting the environment.

Tips

Text with this symbol contains additional useful information.

Overview

Components at a glance

The Multi Media Interface, or MMI for short, combines various communication* and entertainment systems in your Audi.



Fig. 1 MMI controls

You can control the MMI through the MMI control panel and the multifunction steering wheel*⇒ fig. 1:

① Multifunction steering wheel . . .	8
② Driver information system	8
③ MMI Display	
④ Button for opening/closing the MMI display	
⑤ On/Off knob	6
⑥ Buttons for opening menus directly	6
⑦ MMI control panel	6

i Tips

– Please note that this manual only describes MMI components. You can find additional information on operating your vehicle in your vehicle Owner's Manual.

- This book describes the **equipment range** specified for this model at the time of the editorial deadline. Individual items of equipment may not yet be available at the time of printing or may only be offered in certain countries.
- On vehicles with right-hand drive steering*, the layout of the system components differs somewhat from what is shown here ⇒ fig. 1. The symbols for the controls are the same.

Traffic safety information

Audi recommends only performing certain functions such as entering a destination when the vehicle is stationary. Always remember to stop using the MMI if necessary to ensure your safety and the safety of other drivers.

**WARNING**

- Driving requires your complete and undivided attention. As the driver, you have complete responsibility for safety in traffic. Only use the MMI when traffic conditions permit and always in a way that allows you to maintain complete control over your vehicle.
- Adjust the volume of the audio system so signals from outside the vehicle such as police and fire sirens can be heard easily at all times.
- Obey all applicable laws regarding use of telephones in vehicles.

Care information

For information on cleaning and caring for the Infotainment components, refer to the *Cleaning and Protection* chapter of your vehicle owner's manual.

MMI control panel

Switching the MMI on/off

The MMI switches on and off automatically with the ignition. It can also be switched on or off manually.

- **Switching on manually:** Press the On/Off knob briefly ⑤ ⇒ page 4, fig. 1. **Or:** Press the **MENU** button or one of the buttons used to call up a menu ⑥.

When switched on, the last menu that was selected is displayed and the last audio source that was selected begins playing.

- **Switching off manually:** Press and hold the On/Off knob until the MMI switches off. An MMI that has been switched off manually does *not* switch on again automatically the next time the ignition is switched on.

The MMI can still be operated for approximately ten minutes after switching the ignition off. If you do not press any buttons or the control knob on the MMI control panel within this time, the MMI automatically switches off.

Tips

The MMI switches off automatically when the engine is not running and there is a low battery charge.

Adjusting the volume

You can adjust the volume or mute the selected audio source using the On/Off knob.

The volume of an audio source or system message can be adjusted while playing.

- ▶ **Volume higher/lower:** Turn the On/Off knob ⑤ ⇒ page 4, fig. 1 to the right or left.
- ▶ **Mute/pause:** Press the On/Off knob briefly. **Or:** Turn the On/Off knob to the left.
- ▶ **Unmute/resume:** Press the On/Off knob briefly. **Or:** Turn the On/Off knob to the right.

Tips

Volumes that are too high or too low are automatically adjusted to a specified level when the MMI is switched on.

Operation

You can easily access functions in the MMI using an intuitive and standardized operating process.

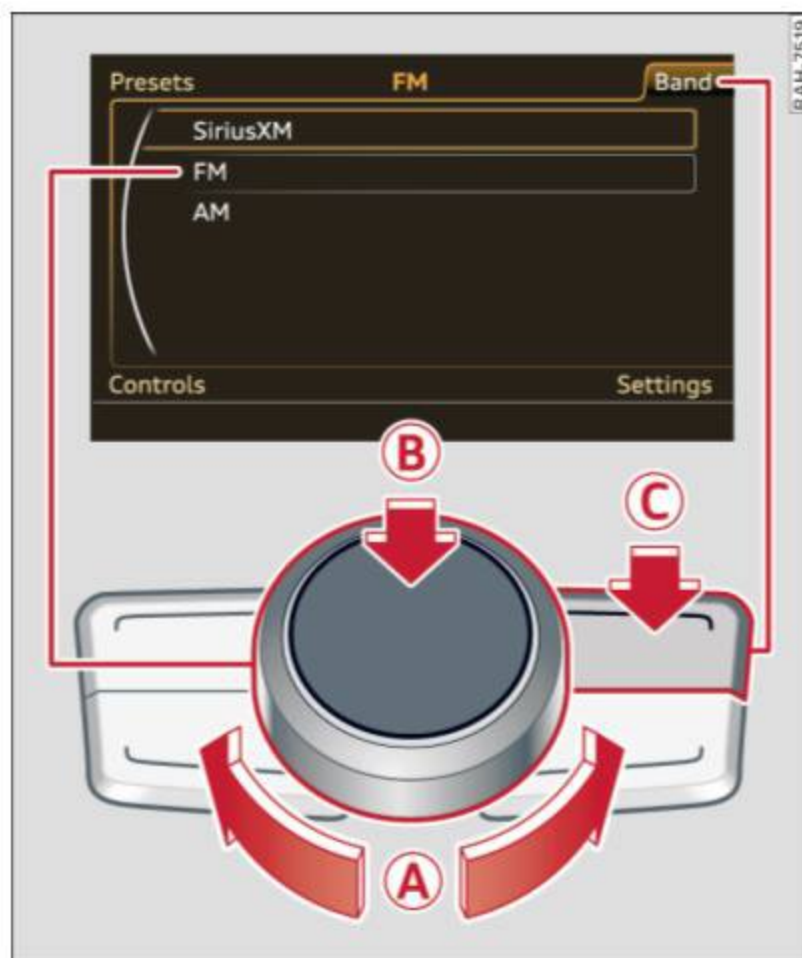


Fig. 2 Operating

Selecting and confirming a function

- ▶ **① Selecting a function:** Turn the control knob to the desired function.
- ▶ **② Confirming a selection:** Press the control knob.

Calling up a function in a corner of the display

- ▶ Press the control button ③ in the corresponding corner of the display. For example, the upper right control button corresponds to the upper right corner of the display.

Opening the main menu

- ▶ Press the **MENU** button ⑦ ⇒ page 4, fig. 1. The MMI menus (such as **Radio**) are displayed.

Calling up a menu directly

- Press the respective button **⑥** toward the desired menu (such as **RADIO** or **MEDIA**).

Return to functions at higher levels

- Press the **BACK** button **⑦**.

Menus and symbols

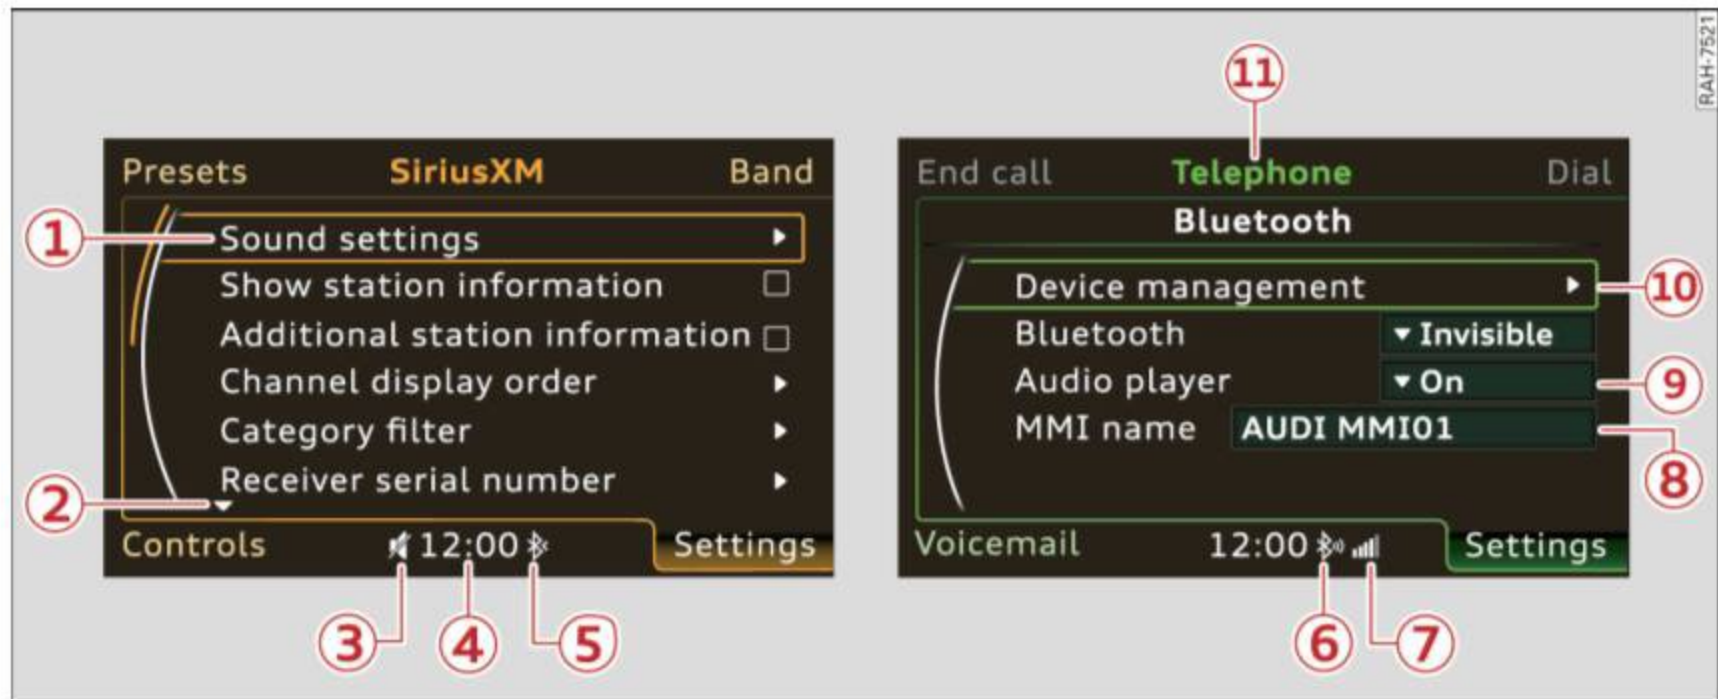


Fig. 3 Menus and symbols

	Symbol/Description	Explanation
①	Selected text	Selected function
②	Arrow down or up	Additional functions when scrolling forward/back
③	Mute	The audio source is muted ⇒ <i>page 6</i>
④	Time	Set time ⇒ <i>page 22</i>
⑤	Bluetooth*	Bluetooth is switched on ⇒ <i>page 33</i>
⑥	Bluetooth*	Bluetooth device connected ⇒ <i>page 16</i> or ⇒ <i>page 26</i>
⑦	Signal strength bar	Cell phone network signal strength for a connected cell phone ⇒ <i>page 26</i>
⑧	Selection list	Settings for the selected function that is called up by pressing the control knob
⑨	Arrow	Submenu with additional functions that are called up by pressing the control knob
⑩	Title line	Selected menu (such as Telephone)

Multifunction steering wheel

Operating

Applies to vehicles: with a multi-function steering wheel

You can operate various MMI functions and the driver information system, change the volume, and turn the voice recognition system on and off with the multifunction steering wheel.



Fig. 4 Driver information system

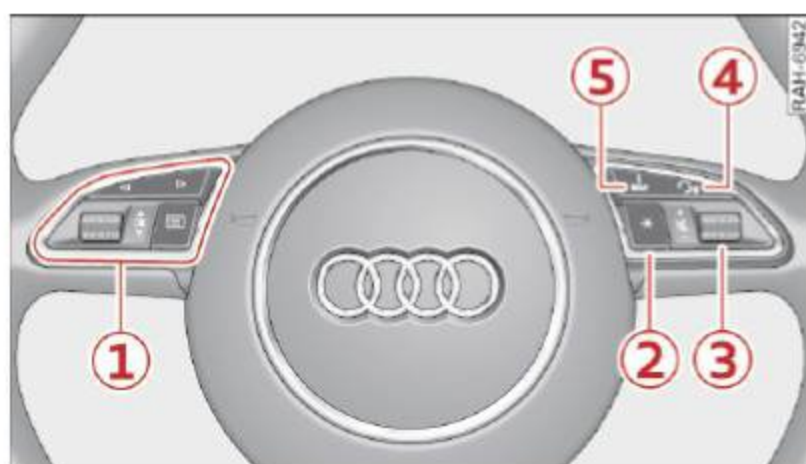


Fig. 5 Controls on the multifunction steering wheel

Requirement: The ignition and the MMI must be switched on ⇒ page 6.

① Operating the driver information system

The driver information system contains several tabs **A** in which various information **B** is displayed.

- **Switching tabs:** Press the button to the left/right.
- **Selecting a function:** Turn the left thumbwheel to the desired function.

- **Confirming your selection:** Press the left thumbwheel.
- **Quick scrolling through lists:** Turn the left thumbwheel quickly.
- **Displaying/leaving the submenu:** Press the button.

The following tabs are available depending on vehicle equipment:

- First tab: Vehicle information, assistance systems
- Second tab¹⁾: Indicator lights, driver messages, speed warning system
- Third tab: Radio/media ⇒ page 10
- Fourth tab: Telephone* ⇒ page 9

② Programmable steering wheel button

- **Calling up a function:** Press the button.
- **Changing a function:** Select the button > **Car** > **Car systems*** control button > **Vehicle settings** > **Steering wheel button program..**

③ Adjusting the volume

You can adjust the volume of an audio source or a system message (for example, from the voice recognition system) when the sound is playing.

- **Volume higher/lower:** Turn the right thumbwheel upward/downward.
- **Mute/pause:** Turn the right thumbwheel downward. **Or:** Turn the right thumbwheel.
- **Unmute/resume:** Turn the right thumbwheel upward. **Or:** Turn the right thumbwheel.

④ Switching the voice recognition system on/off

- **Switching on:** Briefly press the button on the multifunction steering wheel. Say the desired command after the **Beep**.
- **Switching off:** Press and hold the button. **Or:** Say the command **Cancel**.

¹⁾ The second tab is only visible if at least one indicator light or message is shown or if that system is switched on.

For more information about the voice recognition system, refer to ⇒ *page 12*.

The button ⑤ does not have a function assigned to it.

Calling

Overview

Applies to vehicles: with a multifunction steering wheel and telephone



Fig. 6 Directory

Requirements: A cell phone must be connected to the MMI ⇒ *page 26* and the telephone tab must be displayed ⇒ *page 8*.

► Select:  button.

- **Calling a contact from the directory:** Select **Directory**. Select and confirm a contact.
- **Calling a contact from the recent calls list:** Select **Recent calls**. Select and confirm a contact.

Directory contacts: The driver information system only displays directory contacts that have a phone number saved. If several phone numbers are stored in a contact, the list with stored numbers is displayed first when the entry is selected. For more information about the displayed symbols, refer to ⇒ *page 31*.

Recent calls: The recent calls list contains all incoming, outgoing and missed calls ⇒ *page 28*, *fig. 24*.

Tips

- The telephone functions can only be controlled on the multifunction steering wheel if the telephone equipment was installed *at the factory*.

- The telephone and call options depend on the cell phone service provider and the cell phone. You can obtain more information from your cell phone service provider.

Incoming call

Applies to vehicles: with a multifunction steering wheel and telephone

Caller information: The *Name*, *Phone number* or **Unknown** appears in the driver information system display depending on whether the caller has been stored in the directory and if the phone number has been transmitted.

- **Answering a call:** Press the left thumbwheel when there is an incoming call.
- **Rejecting a call:** Select and confirm **Reject** when there is an incoming call.
- **Ending a phone call:** Select and confirm **End call**.

During a phone call

Applies to vehicles: with a multifunction steering wheel and telephone

Requirement: The **3-way calling** function must be switched on for some of the options listed ⇒ *page 33* and there must be a call in progress.

- **Making an additional call:** Select **Hold** >  button > **Directory** or **Recent calls** > *Entry in the list*.
- **Answering a call while in a call and there is another call on hold:** Select and confirm **Replace**. The active call is replaced by the incoming call.

Additional functions include:

Mute: If you select and confirm this function, the other caller cannot hear you. You can hear the other caller.

Holding/resuming a call: You can put a current call on hold and resume a call.

Call waiting: You can alternate between two phone calls at the same time. One of the calls will be on hold. You can end a current call with **End call**. A call that was placed on hold stays ►

on hold and can be taken off hold with **Resume**.

Conference: A call on hold and up to five active parties (depending on the network) can be added to a conference call. To make an additional call, put all participants in the current conference call on hold using **Hold**. If you press the  button, you can make an additional calls from the directory or the call list. All parties are taken off hold with **Resume**.

Tips

The **Call waiting** function must be activated in your cell phone and in the MMI to be alerted to an incoming call during an active call. The call options depend on the cell phone and service provider. You can obtain more information from your cell phone service provider.

Listening to the radio

Applies to vehicles: with a multi-function steering wheel



Fig. 7 Radio menu

Requirement: The radio/media tab must be displayed ⇒ *page 8*.

- ▶ **Selecting a station from the station list:** Select and confirm a radio station.
- ▶ **Updating the station list¹⁾:** Select and confirm **Update station list**.

The following functions are available with the  button:

- **Selecting frequency band:** Select and confirm a band.

- **Selecting a station from the presets list:** Select and confirm **Presets** and then a radio station.
- **Accessing media from the source overview:** Select and confirm an audio source.

Applies to vehicles: with a multi-function steering wheel

Requirement: A media drive must contain audio files ⇒ *page 15* and the radio/media tab must be displayed ⇒ *page 8*.

- ▶ **Playing an audio file:** Select and confirm a file.
- ▶ **Pausing/continuing playback:** Press the right thumbwheel. Press the right thumbwheel again to resume playback.
- ▶ **Restarting playback of an audio file:** Select the track that is currently playing, if necessary. Press the left thumbwheel.
- ▶ **Switching to the next higher level in the folder structure:** Select and confirm **Go up**.

The following functions are also available with the  button:

- **Selecting a source:** Select and confirm a source such as Audi music interface*.
- **Calling up a radio station from the source list:** Select and confirm a band and then a station from the station list.

Tips

The media drives do not play files protected by DRM and are identified with the symbol .

¹⁾ Applies to the AM band.

Globale Kommandos

- Telefon
- Navigation
- Adressbuch
- Radio
- Media
- Hilfe
- Hilfe Sprachdialogsystem
- Hilfe Telefon
- Hilfe Navigation
- Hilfe Karte
- Hilfe Radio
- Hilfe Media
- Anrufen bei (XY)
- Nummer eingeben
- Wahlwiederholung
- Navigiere zu (XY)
- Adresse eingeben
- Zielführung abbrechen
- Karte
- Zeile 1-6
- Nächste | vorherige Seite
- Abbruch



Telefon

- Nummer eingeben
- Nummer wählen
- Nummer löschen | Korrektur
- Anrufliste
- Wahlwiederholung
- Mailbox anrufen
- Anrufen bei (XY)
 - geschäftlich | privat | Festnetz | Mobil



Navigation

- Navigiere zu (XY)
- Geschäftsadresse | Privatadresse
- Zielführung starten | abbrechen
- Letzte Ziele
- Favoriten
- Heimatadresse
- Adresse eingeben
- Land eingeben
- Ort eingeben
- Streckenliste
- Dynamische Stauumfahrung ein | aus
- Schnelle Route | Eco Route | kurze Route
- Route sperren | Route sperren für (XY) km/m
- Alternativrouten berechnen
- Sonderziel eingeben
- Nächster Flughafen
- Nächster Audi Service
- Nächster Bahnhof
- Nächstes Krankenhaus
- Nächstes Hotel
- Nächstes Restaurant
- Nächste Tankstelle
- Nächste Raststätte
- Nächste Parkmöglichkeit



Karte

- Karte
- Tagkarte | Nachtkarte | Kartenzusatz ein oder aus
- 2D-Fahrtkarte | 2D-Nordkarte | 3D-Fahrtkarte | Zielkarte | Übersichtskarte
- Automatischer Zoom ein | aus

Radio

- FM | AM | DAB
- Sender (XY)
- Ensemble (XY)
- Frequenz (XY)
- Senderliste | Speicherliste
- Verkehrsfunk ein | aus



Media

- CD
- SD-Karte 1 | SD-Karte 2
- Audi music interface
- Bluetooth
- Titel | Interpret | Album | Wiedergabelisten | Hörbücher | Video | Podcasts | Genre | Komponisten
- Ordner aufwärts



Fig. 8 Command overview

Voice recognition system

Operating

Applies to vehicles: with voice recognition system

You can operate many Infotainment functions comfortably using voice operation.

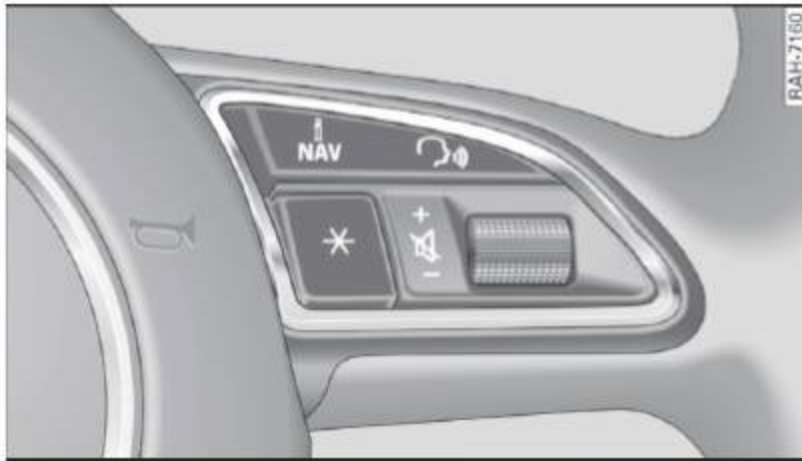


Fig. 9 Talk button and right thumbwheel

Requirement: The ignition and the MMI must be switched on ⇒ *page 6*, there must be no phone call in progress and the parking system must not be active.

- ▶ **Switching on:** Press the  button ⇒ *fig. 9* on the multifunction steering wheel* briefly and say the desired command after the **Beep**.
- ▶ **Switching off:** Press and hold the  button.
Or: Press one of the buttons to open a menu on the MMI control panel  ⇒ *page 4*, *fig. 1*.
- ▶ **Cancel:** Press the  button and say a new command. **Or:** Say the command **Cancel**.

Input assistance

The system gives visual and audio confirmation of your input.

- **Visual input assistance:** After turning on speech input, a display with a selection of possible commands appears in the MMI display. The command display can be tuned on or off in the main menu using the **Setup MMI** control button.
- **Audio input assistance:** To have the possible commands read, turn the voice recognition system on and say **Help**.

For the system to understand you:

Speak clearly and distinctly at a normal volume. Speak louder when driving faster.

Pronounce the commands evenly and do not leave long pauses.

Do not speak a command when the voice recognition system is making an announcement.

Close the doors, the windows and the sunroof* to reduce ambient noise. Make sure that passengers are not speaking when you are giving a voice command.

Do not direct the air vents toward the hands-free microphone near the front interior lights on the headliner.

Only use the system from the driver's position since the hands-free microphone is oriented toward that position.

Additional settings

Additional settings such as **Individual speech training** to your voice, the **Command display** or the **voice recognition volume** can be adjusted in the main menu using the **Setup** control button ⇒ *page 23*.



WARNING

- Direct your full attention to driving. As the driver, you have complete responsibility for safety in traffic. Only use the functions in such a way that you always maintain complete control over your vehicle in all traffic situations.
- Do not use voice recognition system in emergencies because your voice may change in stressful situations. It may take longer to dial the number or the system may not be able to dial it at all. Dial the emergency number manually.



Tips

- The dialog stops when there is an incoming phone call and will continue if you ignore the call. The dialog is canceled if you answer the call.

- You can select an item in the list using either the voice recognition system or with the control knob.

Information about the the command overviews

Applies to vehicles: with voice recognition system

The following overviews describe the commands that can be used to operate the MMI using the voice recognition system.

Global commands

Applies to vehicles: with voice recognition system

You can always use the global commands, regardless of the menu selected.

Function	Say:
Calling up a menu	Telephone Directory Radio Media
Say the commands that are possible	Help Help speech dialog system Help Telephone Help Radio Help Media
Telephone functions	Call (XY), for example Call "John Smith" Enter number Redial Directory
Selecting an entry from a list	Line (XY)
Scroll through a list	Next page Previous page
Switching the voice recognition system off	Cancel

Telephone

Applies to vehicles: with voice recognition system and telephone

Requirement: A cell phone must be connected to the MMI ⇒ *page 26* and the **Telephone** menu must be called up ⇒ *page 28*.

Function	Say:
Call a contact from the directory	Call (XY), for example Call "John Smith"
Select a specific contact number	Call (XY) business Private Land line Cell, for example Call John Smith private
Selecting a phone number with an address card open	Call Call business Call private Call land line Call cell phone
Display recent calls	Recent calls
Call the last number dialed	Redialing

Alternative commands are separated using a "|", for example say: **Telephone | (or) Directory | (or) Radio**.

Action commands that belong together are identified with a ">", for example say: **Station (XY) (then) > Line (XY)**.

The majority shown are main commands. This system also recognizes synonyms in certain cases. For example, for **Call business** you can also say **Call office number, Call work** or **Call office**.

Function	Say:
Selecting a phone number	Enter number > <i>After being prompted, say the telephone number in groups of individual numbers, for example. 0172 12 345 67</i> > Dial
Correcting the phone number that was entered	Delete number Correction
Show contact information	Directory > <i>when prompted, say the desired contact, for example John Smith</i>
Listening to messages	Call voice mail



Tips

- Contacts in the directory can be selected using the full name (“First name last name” and “last name, first name”) as well as with only the first or last name.

This applies to cell phones that transmit names separated into first and last names.

- For more information on the supported cell phones visit www.audi.com/bluetooth or your authorized Audi dealer.

Radio

Applies to vehicles: with voice recognition system

Requirement: The **Radio** menu must be called up ⇒ *page 36*.

Function	Say:
Selecting frequency band	FM AM SiriusXM*
Choosing a station from the station list	Station (XY) Station list > Line (XY)
Choosing a station from the presets list	Presets > Line (XY)
Selecting the frequency	Frequency (XY)
Switching traffic reports on/off	Traffic program on Traffic program off

Media

Applies to vehicles: with voice recognition system

Requirement: The **Media** menu must be called up ⇒ *page 39*.

Function	Say:
Selecting a source directly	CD SD card 1 SD card 2 Audi music interface Bluetooth
Selecting an audio/video file* in the Jukebox	Video Playlists Artist Album Tracks Genres
Selecting an iPod audio/video file* (source Audi music interface)	Video* Playlists Artist Album Tracks Podcasts Genres Composers Audio books
Navigating a folder structure/list	Folder up Line (XY)

Media drives/connections

Introduction

There are various media drives and connections available in the MMI. For example, you can play CDs, or you can connect a portable audio device to the Audi music interface* and use it through the MMI.

Notes

General information

Media and format restrictions: The MMI (including the SD card reader and the USB storage device connection*) was tested with a variety of products and media on the market. However, there may be cases where individual devices and audio/video files* are not recognized or may play only with restrictions or may not play at all.

Data protection: Note that audio/video files* are subject to copyright laws. The media drives do not play files protected by DRM and that are identified with the symbol .

Data security: Never store important data on SD cards, CDs or portable audio devices. Audi is not responsible for damaged or lost files.

Loading times: The more files/folders/playlists that are on a storage medium, the longer it will take to load the audio/video files*. Audi recommends using storage media that only contain audio/video files*. To decrease the time it takes to load audio/video files*, create subfolders (for example according to artist or album).

For information on the properties of supported media and file formats, refer to [⇒ page 19](#).

CD mode

CD and format restrictions: The functionality of individual storage media may be limited due to the variety of blank CDs available and the various capacities. Audio CDs with copy

protection, CDs that do not conform to the standard, and multisession CDs may not play or playback may be limited. Audi recommends finalizing the recording process when creating multisession CDs.

Handling CDs and the CD drive: To ensure good, high-quality sound reproduction and to prevent damage to the drive or disc reading errors, always store CDs in a protective sleeve and do not expose them to direct sunlight. Do *not* use:

- Damaged, dirty or scratched CDs
- Single CDs (3 inch/8 cm diameter)
- CDs that are not round
- CDs with labels
- Protective rings
- Cleaning CDs

Thermal protection switch: CD playback may be temporarily unavailable if outside temperatures are extremely hot or cold. A thermal protection switch is installed to protect the CD and the laser.

Laser devices: Laser devices are divided into safety classes 1 to 4 in accordance with DIN IEC 76 (CO) 6/VDE 0837. The various types of audio equipment installed conform to safety class 1. The laser uses so little power or is shielded so there is no danger when it is used correctly.

Cover: Do not remove the cover from the device. The device does not contain any parts that the owner can repair.

CD drive

The CD drive is located in the glove compartment.



Fig. 10 CD drive

- **Loading a CD:** Slide the CD straight into the slot ② with the label facing up ⇒ *fig. 10*.
- **Ejecting a CD:** Press the ① button.

The CD is pulled in again automatically if it is not removed from the slot within ten seconds of ejecting it.

The CD drive is started and operated through the MMI ⇒ *page 39*.

! Note

- Never force a CD into the drive. The CD is pulled in automatically.
- Do not insert CDs with labels into the drive. Labels can come loose from the CD and damage the drive.

i Tips

The CD playback can skip with audio files that have a higher data rate.

SD card reader

The SD card reader is located in the glove compartment.

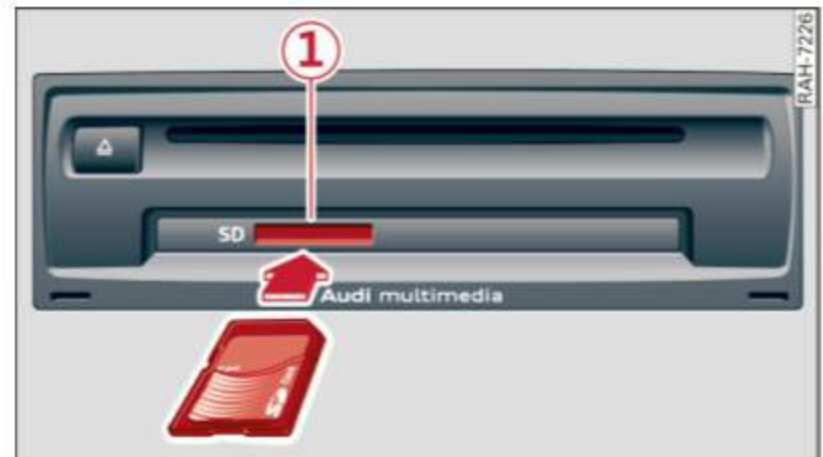


Fig. 11 SD card reader

- **Inserting the SD card:** Slide the SD card in the card reader slot with the label side up (contact surface facing down) ① ⇒ *fig. 11*. The angled corner of the SD card must point toward the right front. Then push the SD card into the slot until it clicks into place.
- **Removing the SD card:** Press briefly on the SD card. The card is released.

The SD card reader is started and operated through the MMI ⇒ *page 39*.

! Note

Only use one-piece memory cards. If adapter cards (memory cards with more than one piece) are used, the card could fall out of the adapter when driving because of vibrations. Individual pieces could then become stuck in the drive and affect the functionality.

i Tips

Always keep the SD card in a suitable case to protect it from dirt, dust particles and other damage.

Bluetooth audio player

Applies to vehicles: with cell phone prep

You can play music wirelessly from your cell phone through the MMI using the Bluetooth audio player.

Requirement: The vehicle must be stationary. The Bluetooth function on the portable audio ►

player and the MMI **Audio player** must be switched on.

Pairing the Bluetooth audio player

- ▶ Select: **MEDIA** button > **Source** control button > **Bluetooth audio player** > **Connect new BT audio player**.

The available Bluetooth audio players are displayed.

- ▶ Select and confirm the desired Bluetooth audio player from the list.
- ▶ Select and confirm **Audio player**. The MMI generates a PIN to pair.
- ▶ Select and confirm **Yes**.
- ▶ Enter the PIN for the pairing on your cell phone. **Or:** If the PIN is already displayed on your cell phone, confirm it in the cell phone and in the MMI. The time allowed for entering the PIN is limited to approximately 30 seconds.

The media is started and operated through the portable audio device or the MMI depending on the device being used ⇒ *page 39*.

Tips

- Be sure to pay attention to any possible connection prompts on your Bluetooth audio player.
- You only enter the PIN one time. Bluetooth devices that are already paired are automatically connected to the MMI as soon as they are in range.
- Several Bluetooth audio players can be connected to the MMI, but only one portable audio device can be active.
- Bluetooth A2DP and AVRCP (1.0/1.3) are supported.
- The supported media functions depend on the Bluetooth audio player being used.
- For additional information on supported devices, visit www.audi.de/mp3 (www.audi.com/mp3).

Audi music interface

Introduction

Applies to vehicles: with Audi music interface

You can connect a portable audio device (such as an MP3 player) to the Audi music interface using a special adapter cable and operate the device through the MMI. You can purchase adapter cables* from an authorized Audi dealer or at specialty stores.*

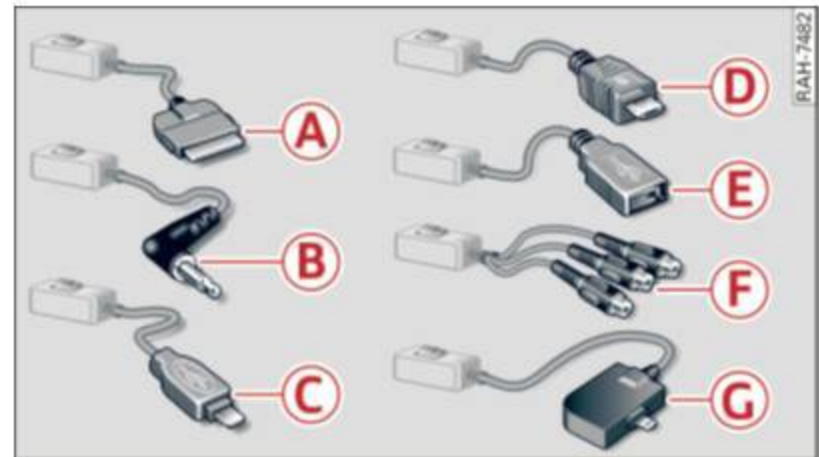


Fig. 12 Adapter cable

- A** iPod adapter cable*/iPod adapter cable plus*
- B** 3.5 mm stereo jack adapter cable*
- C** Mini USB adapter cable*
- D** Micro USB adapter cable*
- E** USB adapter cable*
- F** AV adapter cable*
- G** Adapter cable for Apple devices with Lightning connector*

Note

Handle the adapter cable carefully. Do not allow it to be pinched.

Tips

- For up-to-date information on the Audi music interface, visit www.audi.de/mp3 (www.audi.com/mp3).

Starting

Applies to vehicles: with Audi music interface

The Audi music interface is located in the center console under the center armrest.

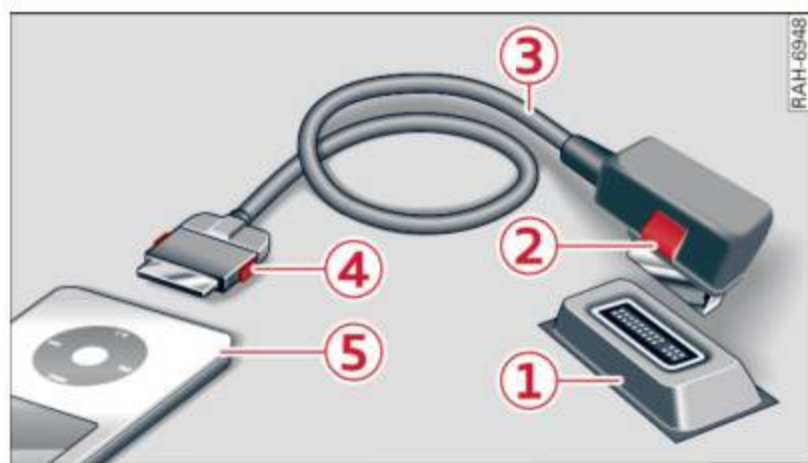


Fig. 13 Connecting the portable audio device

- **Connecting the adapter cable:** Connect the adapter cable * ③ ⇒ fig. 13 with the interface on Audi music interface ① and then connect with the portable audio device ⑤ (such as an iPod).
- **Disconnecting the adapter cable from the Audi music interface:** Hold the release catch ② down while disconnecting the jack from the Audi music interface.
- **Disconnecting the iPod adapter cable (plus)* from the iPod:** Hold the release catches ④ down while disconnecting the iPod jack from the iPod.

Depending on the device being used, the Audi music interface is started and operated through the portable audio device or the MMI ⇒ page 39.

! Note

- Remove the connector from the Audi music interface carefully so it is not damaged.
- Extremely high or low temperatures which can occur inside vehicles can damage portable audio devices or affect their performance. Never leave a portable audio device in the vehicle in extremely high or low temperatures.

i Tips

- Do not use USB extension cables or adapters. They may affect the functionality.
- Functionality is not guaranteed for portable audio devices that do not meet the USB 2.0 specification.
- USB hubs are not supported.
- When the vehicle ignition is on, the iPod/iPhone/iPad battery charges through the iPod adapter cable (plus)* once the device is connected to the Audi music interface.
- Only use the iPod/iPhone/iPad adapter cable (plus)* with a red or blue marking to connect the iPod.
- Other iPod versions such as the iPod shuffle cannot be connected with the iPod adapter cable (plus)*. Connect these devices using the optional 3.5 mm stereo jack adapter cable*.
- Some iPod functions, for example, rating music tracks, Cover Flow or adding tracks to the “On-the-go” playlist are not supported. Cover display and video playback are only supported by the iPod adapter cable plus* (red marking).
- The video image is only displayed when the vehicle is stationary for safety reasons. You will only hear the video while you are driving.
- Video playback through the iPod/iPhone/iPad does *not* continue after stopping and starting the vehicle.
- For video playback, you can also connect your iPod using the AV adapter cable*. You also need an Apple AV cable to do this. For more information on the Apple AV cable, refer to your iPod user guide.
- The new Apple Lightning connector does not support video playback.
- For more information about the Audi music interface and supported devices, visit www.audiusa.com or contact an authorized Audi dealer.

- iPod/iPhone/iPad malfunctions also affect the operation of the MMI. Reset your iPod/iPhone/iPad if this happens.
- For important information on operating your iPod/iPhone/iPad, refer to your iPod/iPhone/iPad owner's manual. Audi recommends updating the iPod/iPhone/iPad software to the latest version.

Aux-in connection

Applies to vehicles: with Aux-in connection

The Aux-in connection is located in the center console under the center armrest.

- **Connecting the adapter cable:** Connect the portable audio device (such as an iPod) with a 3.5 mm stereo jack* and then to the Aux-in connection.
- **Playing an audio file:** Select: **MEDIA** button > **Source** control button > **External audio player. External audio player is selected.** is shown in the MMI display.

The portable audio device is started and operated through the Aux-in connection.

You can adjust the volume using the on/off knob, the **Input level** function ⇒ *page 40*,

the multifunction steering wheel* or directly on the portable audio device.



WARNING

Driving requires your complete and undivided attention. As the driver, you have complete responsibility for safety in traffic. Never operate a portable audio device while driving because this increases the risk of an accident.



Note

Extremely high or low temperatures which can occur inside vehicles can damage portable audio devices or affect their performance. Never leave a portable audio device in the vehicle in extremely high or low temperatures.



Tips

- For important information regarding the operation of your portable audio device, refer to the manufacturer's owner's manual.
- Correct function of all portable audio devices cannot be guaranteed.

Supported media and file formats

The CD drive, SD card reader and the USB storage device connection support the following audio file properties:*

	Audio files	
Supported media	SD cards: with a capacity up to 64 GB CD drive: audio CDs (up to 80 minutes), CD-ROMS with a capacity up to 700 MB Audi music interface*: portable audio devices (such as an iPod ⇒ <i>page 17</i> , MTP player, USB storage devices from "USB Device Subclasses 1, 2 and 6": USB sticks, USB MP3 players that do not require any special driver software, external USB flash memory, external USB hard disks (HDD) - 1", 1.8", 2.5" - drives with an operating/continuous current of 500 mA maximum.	
File system	SD/SDHC/SDXC*/MMC memory cards, SDXC* memory cards: with an exFAT file system USB storage device*: FAT or FAT32 file system, maximum 4 primary partitions CD drive: Joliet (single session and multisession CDs); UDF 1.5 - 2.01	
Metadata	Album, track, artist, genre for MP3-/WMA-/AAC* files Embedded Album cover* up to 500x500 pixels and maximum size of 200 kB (GIF, JPEG, PNG, BMP)	

	Audio files			
Format	MPEG-1/-2 Layer-3	Windows Media Audio 8 and 9	MPEG-2/-4	PCM*
File extension	.mp3	.wma	.m4a*; .m4b*; .mp4*; .aac*	.wav*
Playlists	.M3U; .PLS; .WPL			
Characteristics	up to maximum 320 kbit/s and 48 kHz sampling frequencies			8 and 16 bit, 44.1 kHz sampling frequency
Number of files	Maximum 1000 files per directory			



Tips

- The media drives do not support Windows Media Audio 9 Voice, Windows Media Audio 9 Lossless and Windows Media 9, 10 Professional.
- For compressing MP3 files, Audi recommends a bitrate of at least 160 kbit/s. The display showing the remaining play time may deviate on MP3 files with variable bitrate.

- Special characters (such as those in ID3 tag information) display differently depending on the system language and cannot always be guaranteed.
- The manufacturer of the storage device can provide information about its “USB Device Subclass”.
- Some MTP player functions, such as rating music tracks and video playback, are not supported.

Troubleshooting

Problem	Solution
Audi music interface*/Bluetooth audio player*: The portable audio device/Bluetooth audio player is not supported.	Please refer to the instructions for the Audi music interface* ⇒ <i>page 17</i> /Bluetooth audio player* ⇒ <i>page 16</i> . You can learn about supported devices in the Audi database for mobile devices at www.audi.com/bluetooth .
Audi music interface*/Aux-in connection*: When starting the playback through the 3.5 mm stereo jack adapter cable*/AV adapter cable*, the volume is too high.	Adjust the volume of the portable audio device to approximately 70 percent of the maximum output (Input level) ⇒ <i>page 40</i> .
Audi music interface: The portable audio device is not recognized as a source.	For some cell phones or audio players with a low battery charge, playback is not possible when the charge is too low (less than 5% of its capacity). The portable audio player will only be recognized as a source in the MMI after connecting if the battery charge is sufficient.

Problem	Solution
Audi music interface*: The audio playback is malfunctioning when operated through the iPod/iPhone/iPad.	The Audio player function is switched On . Switch this function Off ⇒ <i>page 33</i> , if you are not using the Bluetooth audio player*.
Audi music interface*/Aux-in connection*: There is static when connecting/disconnecting the 3.5 mm stereo jack*/AV adapter cable* or when connecting/disconnecting the portable audio device to the 3.5 mm stereo jack*/AV adapter cable*.	When connecting/disconnecting, the source Audi music interface*/Aux-in connection* is already selected. Before connecting/disconnecting the portable audio device, either mute the device or switch to another audio source (such as radio ⇒ <i>page 36</i>).

System settings

Setting the clock time and date



Fig. 14 Setting a time zone

- Select: **MENU** button > **Time** control button.

Time

The **Time** can be set manually. The **Time source*** must be adjusted to **Manual** to do this.

Date

The **Date** can be set manually. The **Time source** must be adjusted to **Manual** to do this.

Man. daylt. sav.

When the function is switched **on**, an hour is added to the set **Time**.

Time zone

When selecting the appropriate time zone, a sampling of countries in this zone will be listed.

Time format

If you select **24h**, the clock will display, for example, **13:00**. If you select **AM/PM**, the clock will display, for example, **1:00 PM**.

Date format

If you select **DD.MM.YYYY**, the date display will show, for example, **31.12.2013**. If you select **MM/DD/YYYY**, the date display will show, for example, **12/31/2013**. If you select **YYYY-MM-DD**, the date display will show, for example, **2013-12-31**.

Adjusting the sound

The MMI sound characteristics and volume can be adjusted individually. The settings depend on the vehicle equipment.

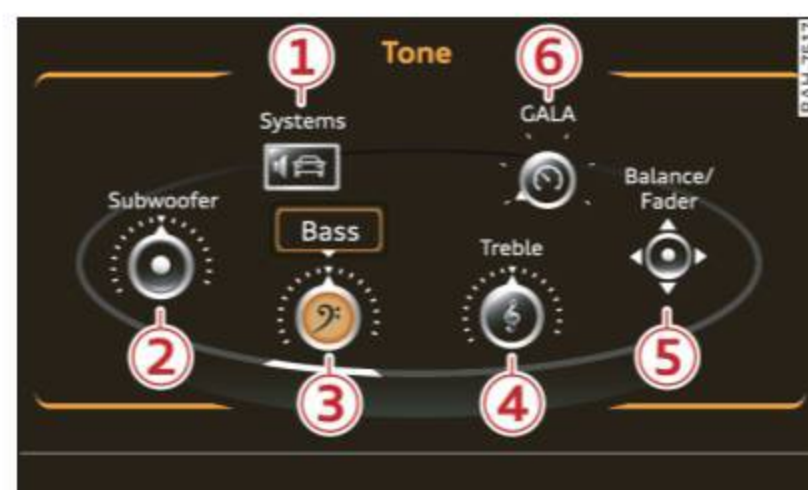


Fig. 15 Sound settings



Fig. 16 Adjusting the balance/fader

- Select: **MENU** button > **Tone**.

① Systems

You can individually adjust the **Telephone** functions * and **Parking aid*** volumes
⇒ page 23.

② Subwoofer* / ③ Bass / ④ Treble

You can adjust the **Subwoofer***, **Bass** and **Treble** settings by turning the control knob. Changed settings only apply to the active audio source. You can adjust the sound for each audio source separately.

⑤ Balance/Fader (sound distribution)

- **Adjusting the left/right sound distribution ratio:** Select and confirm **Balance**. Turn the control knob to the left or right to the desired position.
- **Adjusting the front/rear sound distribution ratio:** Select and confirm **Fader**. Turn the

control knob to the left or right to the desired position.

- **Adjusting the sound distribution***: Select and confirm **Focus > All** (symmetrical sound distribution)/**Front/Rear** (for a sound distribution oriented toward the front/rear of the vehicle).

⑥ SDV (speed dependent volume control)

You can adjust how much the volume changes to compensate for noise inside the vehicle by turning the control knob.

Surround*

You can adjust the volume of the surround effect by turning the control knob.

Adjusting the system volume

- ▶ Select: **MENU** button > **Tone > Systems**.

Telephone*

Ringtone: see ⇒ page 33

Ringtone volume/Call volume: You can adjust the selected ringtone volume/call volume by turning the control knob.

Speech dialog system*

You can adjust the volume of the announcements by turning the control knob.

Parking aid*

You can adjust the signal tone volume by turning the control knob.

Restarting the MMI (Reset)

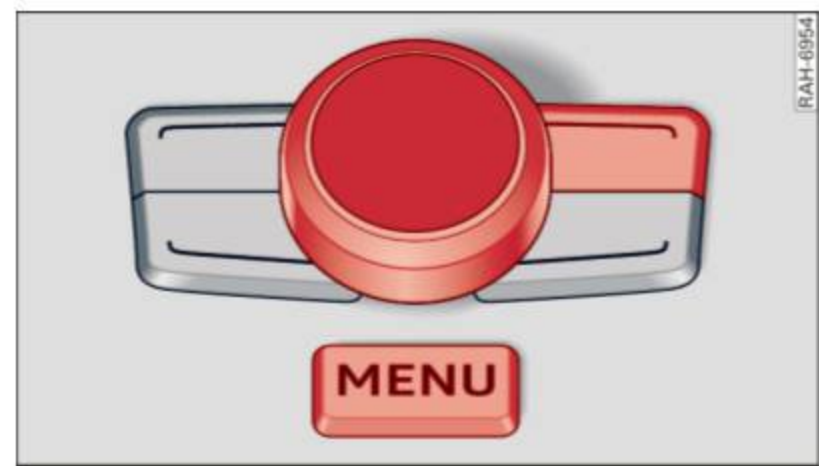


Fig. 17 Button combination to restart the MMI

- ▶ Press and hold the **MENU** button, the control knob and the upper right control button ⇒ *fig. 17 at the same time* briefly and then release the buttons.

Additional settings

- ▶ Select: **MENU** button > **Setup** control button.

Language

You can change the information in the MMI display and in the driver information system.

English and Taiwanese are available.

Units of measurement

The following measurement units can be set in the MMI display and driver information system.

- **Speed** (mph or km/h)
- **Distance** (miles or kilometers)
- **Temperature** (°F or °C)
- **Pressure** (psi or bar)
- **Fuel consumption** (mpg (US), l/100 km, mpg (UK) or km/l)
- **Volume** (gallons (US), liter or gallons (UK))

Display brightness

You can adjust the MMI display brightness by turning the control knob.

Factory settings

The following functions can be reset to the default factory settings:



- Sound settings
- Radio
- Media
- Phone book*
- Telephone*
- Bluetooth*

You can select the desired functions individually or all at once with the option **Select all entries**. Select and confirm **Restore factory settings**.

Reset media driver

The selected media driver package is reset to the settings at time of delivery.

System update

The MMI software can be updated by USB or SD card using the system update feature.

For more information about the **System update**, visit www.audi.com/bluetooth or contact an authorized Audi dealer.

Version information

This function displays the MMI software version.

Making a phone call

Introduction

Applies to vehicles: with telephone

To make calls through the MMI system, you must connect your phone to the MMI with Bluetooth. After connecting your phone to the MM with Bluetooth, you can use the telephone functions comfortably through the MMI.

WARNING

- Medical experts warn that cell phones can interfere with the function of pacemakers. Always maintain a minimum distance of 20 centimeters between the cell phone antenna and the pacemaker.
- Do not carry the cell phone in a pocket directly over the pacemaker when the phone is switched on.
- Switch the cell phone off immediately if you suspect it may be interfering with the pacemaker.
- Do not use voice recognition system ⇒ *page 12* in emergencies because your voice may change in stressful situations. It may take longer to dial the number or the system may not be able to dial it at all. Dial the emergency number manually.
- Switch your cell phone off in areas at risk for an explosion. These locations are not always clearly marked. They may include gas stations, equipment that stores or transports fuel or chemicals, or locations where fuel vapors (such as propane or gasoline vapor in vehicles or buildings), chemicals or large quantities of dust particles (such as flour, sawdust or metal) may be present in the air. This also applies to all other locations where you would normally switch your vehicle off.
- The demands of traffic require your full attention. Refer to and follow the guidelines provided in ⇒ *page 4, Traffic safety information*.

Note

- Obey all applicable laws regarding use of telephones in vehicles.
- Switch off the telephone where use of cell phones is prohibited. Obey all applicable instructions and regulations.

Tips

The Bluetooth connection range is limited to inside the vehicle. It also depends on the current circumstances and on interference with other devices.

Pairing a cell phone through Bluetooth

Before beginning

Applies to vehicles: with telephone



Fig. 18 This QR-Code takes you directly to the database for mobile devices (connection charges apply based on your mobile plan).

To learn which of the functions in your cell phone are supported, check with your cell phone service provider or the database for mobile devices at www.audi.com/bluetooth.

Connecting a cell phone

Applies to vehicles: with telephone

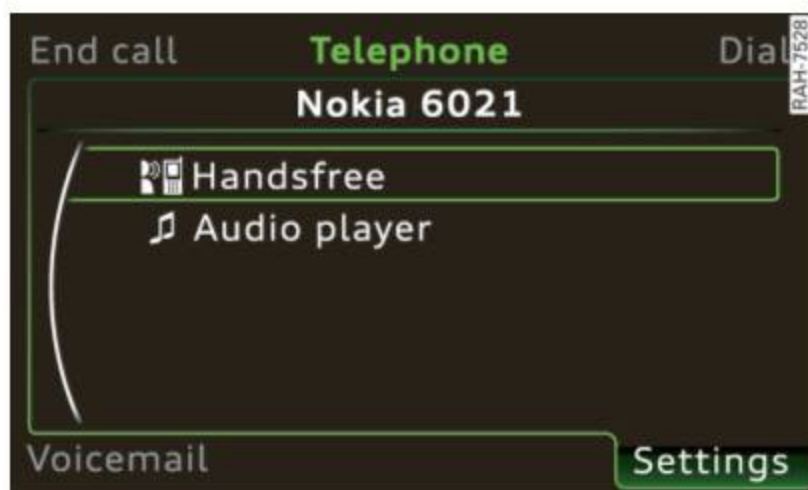


Fig. 19 Bluetooth profile



Fig. 20 Displaying the PIN for entering in the cell phone

Requirements

The vehicle must be stationary and the ignition must be switched on.

The Bluetooth function and visibility of the MMI ⇒ *page 33* and cell phone must be turned on.

The MMI and the cell phone to be paired must not be actively connected with any other Bluetooth devices.

Pairing a cell phone

- ▶ Select: **TEL** > button **Connect cell phone** > **Find new devices**. The available Bluetooth devices are shown in the MMI display. **Or**: Search for the MMI using the Bluetooth device search on your cell phone.
- ▶ Select and confirm the desired cell phone from the list of displayed Bluetooth devices.
- ▶ Select and confirm **Handsfree**. The MMI generates a PIN for the connection ⇒ *fig. 20*.

- ▶ Select and confirm **Yes**.
- ▶ Enter the PIN for the pairing on your cell phone. **Or**: If the PIN is already displayed on your cell phone, confirm it in the cell phone and in the MMI. The time allowed for entering the PIN is limited to approximately 30 seconds.

Pay attention if necessary to further system prompts displayed on your cell phone, for example if the system should connect automatically in the future. Depending on the cell phone, you may have to confirm downloading the directory separately.

After connecting successfully

After a successful connection, the signal strength bars ⑦ ⇒ *page 7* and the Bluetooth symbol ⑤ are displayed in the status line of the MMI display. In addition, the cell phone contacts will be automatically loaded in the MMI directory. Depending on the amount of contacts, this process can take several minutes.

Once all four of the memory locations for directories are filled, you will be requested to replace the contacts of one cell phone after connecting another cell phone. With the **Restricted use of telephone** option, the cell phone contacts will not be loaded into the MMI.

Tips

- Using the telephone through the MMI is only possible using the Bluetooth connection (**Handsfree**).
- You only have to pair one time. Bluetooth devices that are already paired automatically connect to the MMI when they are within range and the ignition is switched on.
- Authorizing the MMI connection in your cell phone will speed up the automatic connection.

- You will receive the SIM PIN along with the SIM card from your cell phone service provider. If you enter a PIN (SIM) incorrectly three times ¹⁾ in a row, the SIM card is locked and must be unlocked by entering the PUK (Personal Unblocking Key).
- Several cell phones can be connected to the MMI, but only one cell phone can be active.
- An active connection with a Bluetooth device ends when another device is connected.
- When leaving the vehicle, the Bluetooth connection to the cell phone is automatically ended.
- You can obtain more information from your cell phone service provider or from your cell phone owner's manual. For information on using the telephone, visit www.audiusa.com/bluetooth or your authorized Audi dealer.

Using the Audi phone box

Applies to vehicles: with Audi phone box

With the Audi phone box and a USB adapter cable for your cell telephone, you can call via the vehicle antenna and charge your cell phone. Using the external antenna helps when there is a low signal and also provides better reception quality. The Audi phone box is located in the center console under the center armrest.*

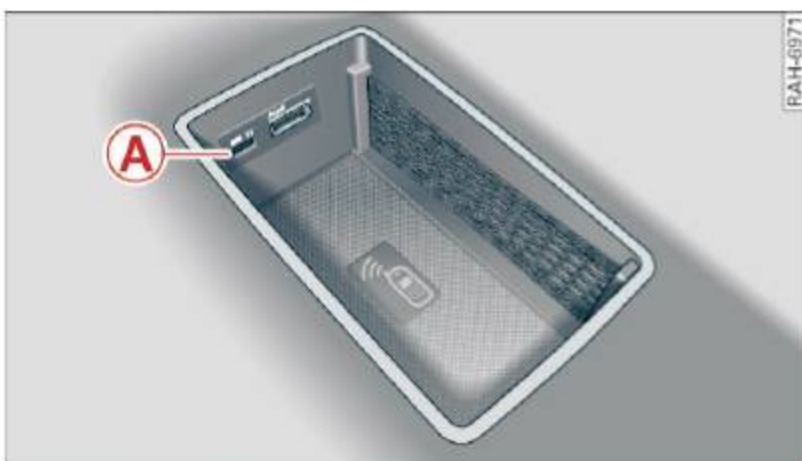


Fig. 21 Audi phone box

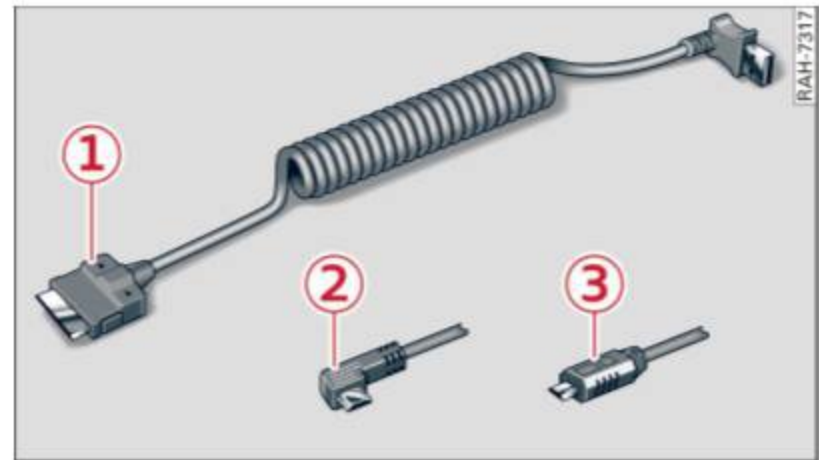


Fig. 22 Available adapter cable

Requirement: A cell phone must be connected via Bluetooth ⇒ page 26.

- **Connecting to the external vehicle antenna:** Lay the cellphone on the cell phone symbol in the Audi phone box with the display facing up. Make sure there are no objects between the Audi phone box and the cell phone.
- **Charging the cell phone with the USB adapter cable:** Connecting your cell phone with the USB adapter cable and the 5 Volt socket **A** ⇒ fig. 21.

For ease of use, Audi offers a special USB adapter cable* ⇒ fig. 22. The following USB adapter cables are available at this time:

- ① Apple Dock Connector
- ② Mini USB (angled)
- ③ Mini USB (straight)



WARNING

Loose objects can be thrown around the vehicle interior during sudden driving or braking maneuvers. This can cause serious injuries and loss of control of the vehicle. Always keep the center armrest closed while driving.



Tips

- The Audi phone box is not available in all countries. For additional information, contact your authorized Audi dealership.
- To prevent malfunctions, make sure the cell phone is positioned correctly in the Audi phone box.

¹⁾ The number of attempts depends on the SIM card.

- If the cell phone is placed in the Audi phone box in a bag or protective sleeve this can interfere with the connection to the external antenna.
- Audi recommends using original Audi accessories. Audi has established their reliability, safety and suitability.
- USB adapter cables are available from your authorized Audi dealer or specialty stores.

Selecting the telephone

Applies to vehicles: with telephone

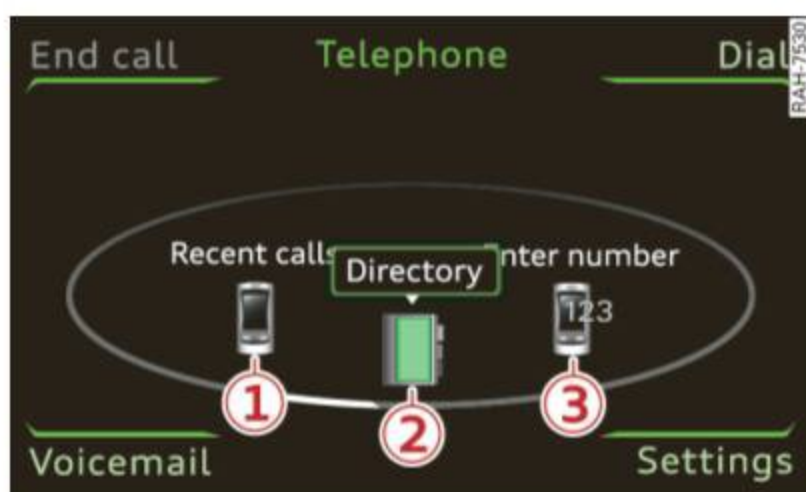


Fig. 23 Telephone functions

Requirement: A cell phone must be connected to the MMI ⇒ *page 26*.

- Select: **TEL** button.

The last active telephone menu is shown in the MMI display. Press the **TEL** button in the **Telephone** menu to access the telephone functions.

The following telephone functions are available ⇒ *fig. 23*:

- ① Call lists ⇒ *page 28*
- ② Directory ⇒ *page 31*
- ③ Entering a number ⇒ *page 29*

Selecting a phone number

From the directory

Applies to vehicles: with telephone

You can select a phone number directly from the directory ⇒ *page 31*.

From the recent calls list

Applies to vehicles: with telephone



Fig. 24 Dialing a phone number from the recent calls list

Requirement: A telephone number must be in the recent calls list or stored in the directory.

- Select: **TEL** button.

- **Selecting a phone number:** Select and confirm the desired telephone number from the recent calls list. Select and confirm **Call**.

Call list symbol ⇒ *fig. 24*:

- ① Dialed calls
- ② Received calls
- ③ Missed calls

Dial control button

- **Selecting a phone number:** Select and confirm the desired telephone number from the **Recent calls** list. Select and confirm **Call**.

Using the speller

Applies to vehicles: with telephone



Fig. 25 Entering telephone numbers using the number speller

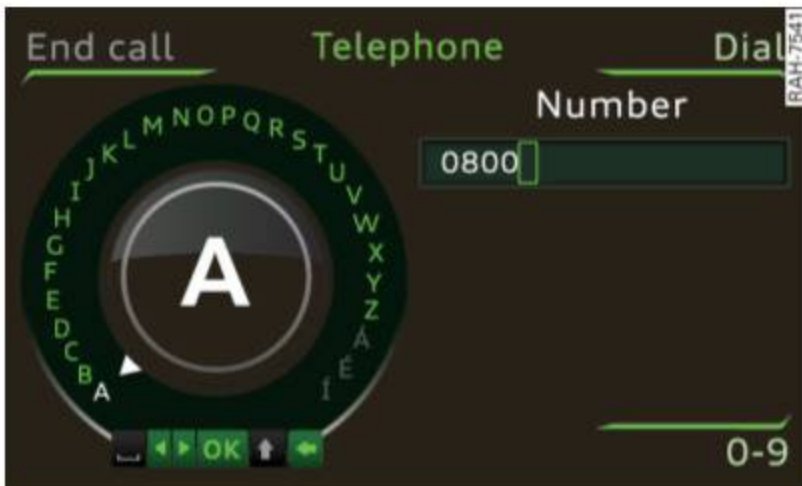


Fig. 26 Entering telephone numbers using the letter speller

- Select: **TEL** button **Enter number**.
- **Entering the phone number as a sequence of numbers:** Enter the number using the using the number speller ⇒ *fig. 25*.
- **Entering the phone number as a sequence of letters:** Press the **A-Z** control button. Enter a letter sequence using the letter speller such as *AUDISERVICE*.
- **Selecting a phone number:** Select and confirm **OK**. **Or:** Press the **Dial** control button. The active audio source is muted when making a call.
- **Deleting individual characters:** Select and confirm **←**.
- **Delete all characters entered at once:** Turn the speller to **←** and press and hold the control knob.

Tone sequences (**DTMF**) can be entered directly into the speller during a phone call.

Answering and ending calls

Applies to vehicles: with telephone

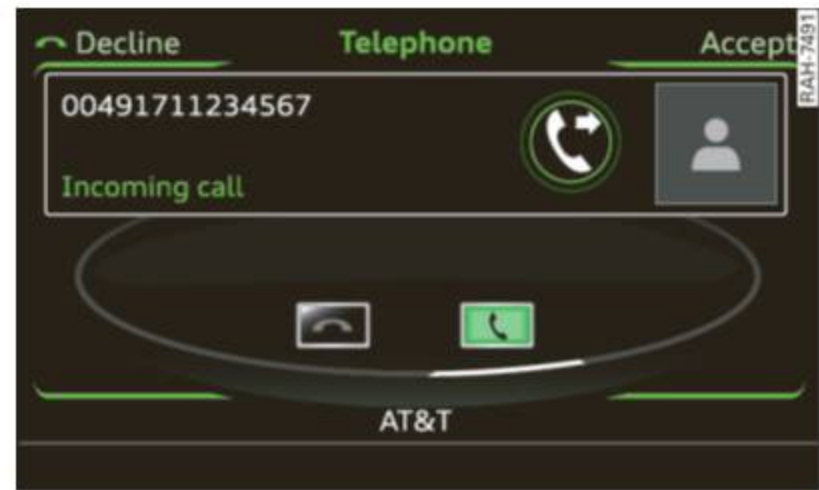


Fig. 27 Incoming call

- **Answering an incoming call:** Press the **Accept** control button.
- **Ignoring an incoming call:** Press the **Reject** control button.
- **Ending a call or canceling dialing:** Press the **End call** control button.

Accepting another call: If there is an incoming call during a call, you can select **Answer** to put the existing phone call on hold and answer the incoming call. If you select **Ignore**, the incoming call will be ignored.

Caller information: Depending on whether the caller is saved in the directory and if their number has been transmitted, the *Name*, *telephone number* or **Unknown** may shown in the MMI display.

Tips

- The audio source is muted during an incoming/outgoing call.
- If you have switched off the MMI display and an incoming call is received, the MMI display will automatically switch back on.

During a phone call

Applies to vehicles: with telephone

Requirement: The **3-way calling** function must be switched on for some of the options listed ⇒ *page 33* and there must be a call in progress.

- **Making an additional call:** Select **Additional call** > **Directory** or **Recent calls** > *entry in the list*.
- **Answering an incoming call during an active call and when there is a call on hold:** Select **Replace**. The active call is replaced with the incoming call.

Select: **Options** control button:

Mute/Unmute: If you select and confirm this function, the other caller cannot hear you. You can hear the other caller.

Hold call/Resume held call: You can put your existing phone call on hold and resume it. **On hold** and the duration of the phone call is shown in the MMI display.

Call waiting: You can alternate between two phone calls at the same time. One of the calls will be on hold. **End call** ends the active phone call. A phone call that is on hold stays on hold and can be removed using the **Options** control button and **Resume held call**.

Join conference: A party on hold and up to five active parties (depending on the network) can be added to a conference call. To make an additional call, put all participants in the current conference call on hold using **Hold conference**. Press the **Options** control button. Choose and select **Additional call** and choose a telephone number from **Recent calls** or the **Directory** or select **Enter number**. To add this party to the conference call, select **Conference call**. With **Resume held conference**, all participants are taken off hold. **Conference participants** shows all participants.

Privacy mode/Switch to hands-free mode: You can switch your current phone call from the MMI to your cell phone with **Privacy mode**. With **Switch to hands-free mode**, you can transfer your call from your cell phone to the MMI.

Telephone menu: The telephone menu opens.

Tips

- The *Call waiting* function must be activated in your cell phone to be alerted to an incoming call during an active call.
- The display of an incoming phone call in the MMI may still be visible for a few seconds depending on the cell phone in use. If you use the **Replace** or **Ignore** functions in the MMI while the display is still visible, the active phone call will end.

Listening to voicemail

Applies to vehicles: with telephone

- ▶ Select: **TEL** control button > **Voicemail**
- **Enter the voicemail number:** Select and confirm the **List** and select and confirm the desired number. **Or:** Enter the voicemail number using the speller. Select and confirm **OK**.
- **Dialing the voicemail number:** Press the **Voicemail** control button.

Tips

- This service must be set up and activated in advance in the cell phone network. You can obtain more information from your cell phone service provider.
- The voice mail number depends on the cell phone service provider.

Calling up the directory

Applies to vehicles: with telephone

After connecting the cell phone the cell phone contacts are automatically imported into the MMI.



Fig. 28 Contact list

► Select: **TEL** button > **Directory**

– **Dialing a contact:** Select and confirm a contact from the directory. The address card is displayed.

Contacts are displayed in alphabetical order and can be sorted according to first or last name ⇒ *page 34* and are identified with a symbol to tell the location where they are stored ⇒ *fig. 28*.

① **Public MMI directory:** These contacts do not depend on the connected cell phone they are visible and usable for every user.

No cell phone connected: Each new contact will be stored in the public directory ⇒ *page 31*.

Cell phone connected: To save a contact in the public directory so that all users can access it, the contact must be marked as **Visible to all** ⇒ *page 32*.

② **Private MMI directory:** These contacts are only visible when the corresponding cell phone is connected or the corresponding SIM card is in the SIM card reader*.

③ **Cell phone:** These contacts are stored in the cell phone and are only visible when the corresponding cell phone is connected.

Once all the memory locations are filled, you will be requested to replace the contacts of

one cell phone when connecting another cell phone. With the **Restricted use of telephone** option, the cell phone contacts will not be loaded into the MMI.

Tips

- Check for any possible request to synchronize on your cell phone. Requests to synchronize the directory must be confirmed so that your cell phone contacts can be loaded into the MMI.
- The phone book contact display in the MMI depends on the cell phone used. For more information on the supported cell phones visit www.audi.com/bluetooth or your authorized Audi dealer.
- The contacts from the cell phone may not be transferred in alphabetical order. If there are too many entries, contacts with different first letters may be missing in the MMI.
- The contacts in the public MMI memory are always visible and can be accessed by other users.

Using a contact

Applies to vehicles: with telephone

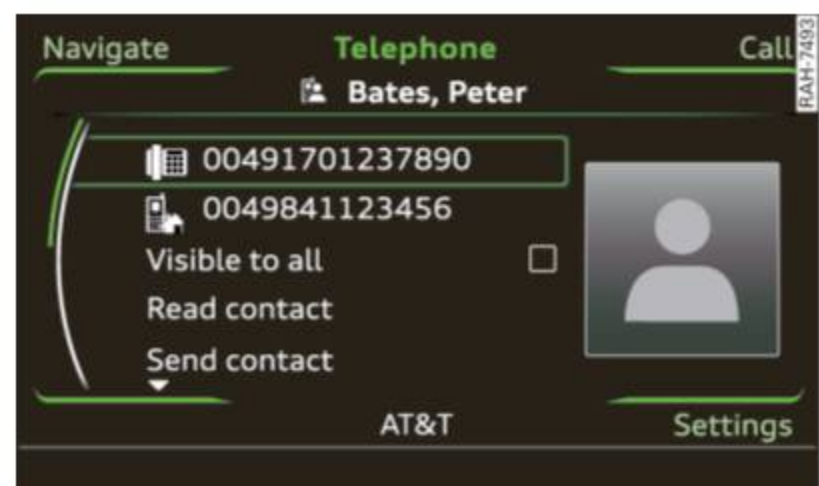


Fig. 29 Calling a contact



Fig. 30 Selecting a destination

- ▶ Select: **TEL** button > **Directory** > *a contact from the directory*.
- **Call**: Select and confirm the desired telephone number. **Or**: Select the desired telephone number and press the **Call** control button.

Visible to all

You can mark a contact as **Visible to all** ✓. The contact is then stored in the local MMI memory (public) ① ⇒ *page 31* and is available to all MMI users. If a contact is not marked as **Visible to all**, it is stored in the MMI memory (private) ② and is only visible when the cell phone in which the contact is saved is connected or the applicable SIM card is inserted.

Read contact

The MMI automatically creates a name tag for each entry in the directory that can be ready by the MMI.

Copy contact

A copy of the contact is stored in the private MMI memory.

You can change the information in the input fields ⇒ *page 33* using the spell-er ⇒ *page 29*.

Delete contact

Only the contacts in the MMI memory (private/public) can be deleted.

Tips

- Contacts edited in the MMI directory cannot be automatically updated in the paired cell phone. Audi recommends editing cell phone contacts directly in the cell phone.
- Only the contacts in the MMI memory (private/public) can be edited/deleted.
- To delete all public or private contacts at one time, select the **Delete shared contacts** or **Delete private contacts** option in the directory settings ⇒ *page 34*.

Importing or exporting contacts

Applies to vehicles: with telephone

Contacts in vCard format (.vcf) can be imported into the directory or exported.

Requirement: A SD card must be in the SD card reader ⇒ *page 16* or a USB storage device must be connected to the Audi music interface ⇒ *page 17*.

- ▶ Select: **TEL** button > **Directory** > **Settings** control button
- **Importing contacts from a storage device**: Select and confirm **Import contacts** > **SD Card** or **USB storage device** > *desired contacts* > **Import**.
- **Exporting contacts on a storage device**: Select and confirm **Export contacts** > **SD Card** or **USB storage device** > *desired contacts* > **Export**.
- **Selecting all contacts at once for import or export**: Select and confirm **Import contacts/Export contacts** > **SD card** or **USB storage device** > **All** control button > **Import/Export**.

Tips

- The imported contacts are stored in the local phone book memory.
- A maximum of 500 contacts can be imported. You can check the phone book memory capacity at any time ⇒ *page 34*.
- Never save important data on memory cards or USB storage devices. Audi is not responsible for damaged or lost files and media.

Storing a new contact

Applies to vehicles: with telephone



Fig. 31 Storing a new contact

- Select: **TEL** button > **Directory** > **New contact**.

Last name/First name

Enter the last name and first name using the speller ⇒ *page 29*.

Telephone numbers

You can store up to five telephone numbers in an address card. You can also assign a **Type** (**Business** or **Private**) and a **Category** (**Land line**, **Cell** or **Fax**) to each telephone number. You can also identify a frequently used phone number **As standard number**. That number is then displayed first in the open address card.

Using the **New number** function and the **List** control button, you can import a number from **Recent calls** into the address card.

Business addresses/Private addresses

You can specify a business and private address in an address card. With the **Delete mailing address** function, you can delete the business or private address.

Structured addresses from a cell phone that have information regarding country, ZIP code, city and street name can be imported directly into the directory.

Tips

- The contacts in the public MMI memory are always visible and can be accessed by other users.
- The new contact will be stored in the memory in the directory that is currently being used.
- The import of new addresses depends on the cell phone.
- Up to 500 contacts can be stored in memory in a private or public phone book.
- Contacts edited in the MMI directory cannot be automatically updated in the paired cell phone. Audi recommends editing cell phone contacts directly in the cell phone.

Additional settings

Telephone settings

Applies to vehicles: with telephone

- Select: **TEL** button > **Settings**.

Telephone settings

Ringtone settings¹⁾: Using the **Ringtone** function plays the ringtones. Press the control knob to save the selected ringtone. For the **Ringtone volume/Call volume** settings, see ⇒ *page 23*.

Voicemail number The voicemail number can be entered in the **Number** field or edited using the speller. The **Delete voicemail number** function deletes the stored voicemail number.

Call options

3-way calling: Can be switched **on-/off**.

Bluetooth

Device management: Bluetooth devices that have been paired with the MMI are listed. The active connected device is identified with a Bluetooth symbol. To switch between **Hands-free** and **Audio player** when cell phones are connected, select the Bluetooth device when ►

¹⁾ Depends on the connected cell phone.

the vehicle is stationary and change the profile using **Connect**. Use **Disconnect** to disconnect the paired profile. To delete paired Bluetooth devices individually, select the device and delete it with the **Delete Bluetooth device** function. The **Find new devices** function searches for Bluetooth devices in range and lists them.

Bluetooth; When this function is switched on, the Bluetooth symbol  ⇒ *page 7* appears in the MMI display. The visibility of the MMI for Bluetooth devices can be turned on and off using the **Visible/Invisible** settings. However, it is still possible to establish a Bluetooth connection with paired devices that have already been paired when the visibility is switched off. The **Bluetooth** should be switched to **Invisible** when the pairing process is complete so the cell phone prep is not visible to others. The **Bluetooth** can be turned **off**, but then a Bluetooth connection is no longer possible.

Audio player: The Bluetooth audio player function must be switched **on** to be able to select the Bluetooth audio player as the source in the **Media** menu ⇒ *page 39*. Switch the **Audio player off** if you are not using it to prevent malfunctions in the **Telephone** or **Media** menus.

MMI name: The Bluetooth name in the MMI (for example “AUDI MMI 2613”) is shown and can be changed.

Tips

- Several cell phones can be connected to the MMI, but only one cell phone can be active.

- To delete all paired Bluetooth devices, the Bluetooth function can be reset to the default factory settings ⇒ *page 23*.

Directory settings

Applies to vehicles: with telephone

- Select:  button > **Directory** > **Settings** control button

Memory capacity

Shows the **Memory capacity** of the directory.

You can manage up to 8,000 contacts with the directory. You can load up to 2,000 contacts from your cell phone into each private directory.

Sort order

You can sort the contacts in your directory in phonetic order according to **Last name/First name**.

Download directory

To update the contacts in the MMI, you can manually download your cell phone contacts. Depending on the cell phone, the Bluetooth connection may need to be disconnected and reconnected to update the contacts.

Troubleshooting

Applies to vehicles: with telephone

Problem	Solution
Cell phone fails to connect to the MMI.	Check if the visibility of the cell phone and MMI is turned on. For many cell phones, the visibility turns off automatically after a short period. Or Restart your cell phone. For information on how to do this, see your cell phone owner's manual.
After pairing, not all contacts/no contacts are loaded in the MMI.	Remove special characters from names. Avoid using contact groups.
Some telephone functions are turned off or not available	The telephone functions depend on the cell phone service provider and the cell phone you are using. You can obtain more information from your cell phone service provider, in your cell phone owner's manual or in the database for mobile devices at www.audi.com/bluetooth .
Some telephone functions are turned off or not available although the cell phone is supported.	In addition, some Bluetooth settings may not be compatible or the cell phone Bluetooth function may be deactivated. You can obtain more information from your system administrator.

Listening to the radio

Selecting the radio

The radio supports three bands: FM, AM and SiriusXM*(satellite radio). With an HD Radio receiver*, you also receive FM/AM radio stations in digital format.



Fig. 32 FM station list

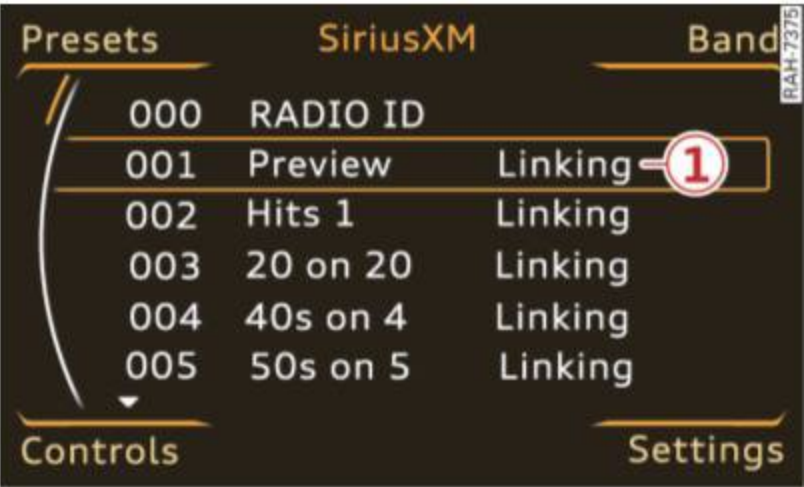


Fig. 33 SiriusXM station list during loss of reception

► Select: the **RADIO** button.

After selecting the radio, the last menu that was open is displayed.

- **Show station list:** press the **RADIO** button again. The receivable stations are shown on a radio station list ⇒ fig. 32 and can be selected directly.
- **Select a station:** select and confirm a station from the station list (FM only max. 61 stations, FM+HD max. 90 stations, AM max. 50 stations, SiriusXM max. 384 stations) When the FM/AM station is available in digital format, the HD symbol appears in the FM/AM station list (B) ⇒ fig. 32. If the digital signal is lost, the radio switches automatically to the analog FM/AM station. Digital FM HD Radio channels may have several additional channels*. The available additional

channels* are listed under the related radio station. When leaving the reception area, additional channels* that are not received are identified with the symbol (A) ⇒ fig. 32.

- **Tag a song for iTunes* (SiriusXM*/HD Radio*):** connect your Apple device to the Audi music interface in your MMI. Press the control in the station list. Select and confirm **Tag this song for iTunes**. The track that is currently playing is stored on your Apple device. Synchronize your Apple device with iTunes. The tagged track will display the next time you open your iTunes media center.

You can also store the tagged track temporarily in the MMI (up to 50 tracks). Once you connect your Apple device to the MMI, the tags are stored on the device.

- **Storing stations:** Select and confirm a station from the station list ⇒ fig. 33. Press and hold the control knob until *station name/frequency store here* appears in the presets list. Select and confirm the desired presets location.
- **Updating the station list:** To update the station list in the AM reception range, select and confirm **Update station list**. The station lists in the FM and SiriusXM* bands are updated automatically. If the station currently selected in the SiriusXM* band is no longer available, station 001 (Preview) is automatically stored.
- **Select the band:** press the **Band** control button. Select and confirm the desired band. The current band is shown in the title line. **Or:** press the **RADIO** button repeatedly until the desired band is displayed.
- **Enable SiriusXM* satellite radio:** select and confirm the **SiriusXM*** band. The station list is displayed. Select **000 Sirius ID**. The Electronic Serial Number is displayed. If the radio signal is lost, radio stations that are not currently received are displayed in the station list with the following system information:

LINKING: The tuner is currently not receiving any satellite signal (1) ⇒ fig. 33

ANTENNA: No antenna is connected to the tuner.

The system information turns off when the radio stations are received again.

Tips

- The stations in the AM station list are still displayed after leaving the reception area. Reception is lost.
- To receive satellite programs, you must contact the SiriusXM* service provider.
- Objects such as buildings, tunnels, bridges, terrain, other vehicles or objects on the roof of the vehicle can result in decreased performance.
- Satellite Radio reception is not available in Alaska and Hawaii.
- HD Radio reception is not available in Canada.
- Not all broadcasting services support iTunes Tagging*.

Radio functions

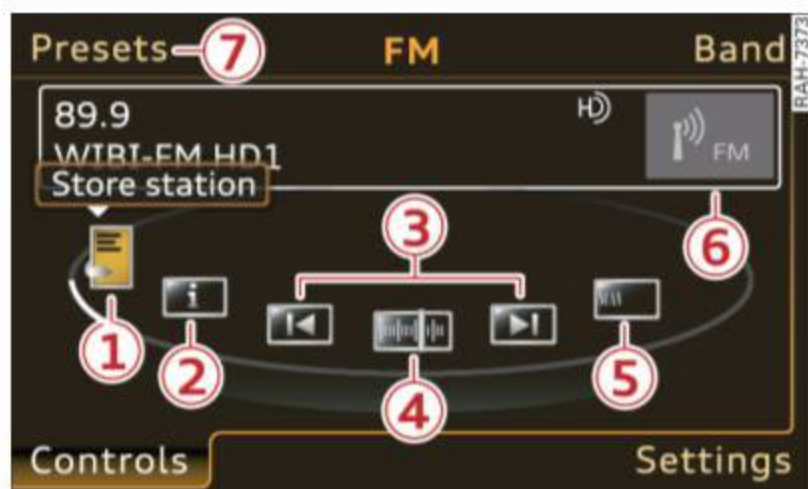


Fig. 34 FM band functions

- Select: **RADIO** button > **Controls** control button.

The following functions can be selected, depending on the band that is selected

⇒ fig. 34:

① Store station

The selected station is stored in the next empty position in the presets list. Select and confirm the desired presets location. Each station/frequency can only be stored once in the presets list.

② Information (i)

The radio text such as the station name, artist or title or the information accompanying the program are shown in the MMI display. The availability of Radio text is also indicated by a symbol in the information window.

③ Previous/next station

The previous ◀ or next ▶ frequency that can be received is selected. **Or:** turn the on/off knob to the left/right (◀◀ / ▶▶).

④ Manual search

The frequency bars are displayed. Select and confirm the desired frequency.

⑤ SCAN

All stations are played for several seconds each. To stop the **SCAN**, select and confirm **SCAN** again or press one of the buttons to open a menu. The current station is selected.

⑥ Information window

Various information about the selected station (such as the station name) is displayed depending on availability.

⑦ Presets list

The presets list can contain up to 50 stations from all frequency bands.

- **Store station:** select the **Store > station name/frequency here** control button. The selected station is stored in the next empty position in the presets list. Select and confirm the desired presets location.
- **Select a stored station:** press the **Presets** control button. Select and confirm a station from the presets list.
- **Move a stored station:** press the **Presets** control button. Select and confirm the station from the station list and then **move station name/frequency**. Select and confirm the desired presets location.

Additional settings

- Select: **RADIO** button > **Settings** control button.

The following settings can be selected, depending on the band that is selected (FM, AM, SiriusXM*):

Sound settings

For additional information on sound settings, refer to ⇨ *page 22*.

Show station information* (SiriusXM*)

If information such as the artist or title is available for the current track, it will be displayed in a pop-up window if this function is activated.

Station names (FM)

Fixed: The current station name stays in the display.

variable: Different station names for FM stations are displayed.

Enable now playing screen*

When this function is switched on ☒ and the station or presets list is open, various information for the current station (such as the station name, the artist or current photos of the artist) is displayed after several seconds.

Channel display order (SiriusXM*)

- **Channel number:** The channels are listed by channel number in ascending order.

- **Channel name:** The channel are listed by channel name in alphabetical order.
- **Category and channel number:** The channels are listed by category and then by channel number.
- **Category and channel name:** The channels are listed by category and then by channel name.

Category filter (SiriusXM*)

The channels that are displayed in the channel list can be filtered according to your personal desires as to type of program. The selection of program categories depends on what your provider offers. If you select the option **Deactivate filter**, all filter options are deactivated and all available channels are displayed in the satellite channel list.

Radio ID

The Electronic Serial Number is displayed.

Deleting presets entries

Requirement: A station must be stored in the presets list ⇨ *page 37*.

Stored stations can be deleted individually, or all at once.

Troubleshooting

Problem	Solution
A station with poor reception will no longer be displayed in the station list once you switch to a different station.	Store the station ahead of time and then select it from the presets list later ⇨ <i>page 37</i> .

Playing media

Accessing media

You can start and operate various media drives through the MMI control panel.



Fig. 35 Possible sources

Requirement: A media drive must contain audio files ⇒ *page 15*.

► Select: **MEDIA** button.

The source overview or the last played file is displayed after calling up the media type.

- **Selecting a source:** Press the **Source** control button. Select and confirm a source from the list. **Or:** Press the **MEDIA** button repeatedly until the desired source is displayed.
- **Playing an audio file:** Select a folder, if necessary. Select and confirm a track.
- **Switching to the next higher level in the folder structure:** Press the **BACK** button. **Or:** Select and confirm **Go up**.
- **Switching to the highest level in the folder structure:** Press the **MEDIA** button.

Possible sources are ⇒ *fig. 35*:

- ① SD card reader ⇒ *page 16*
- ② CD drive ⇒ *page 16*
- ③ Audi music interface* (for example, an iPod, USB or an external audio/video input*) ⇒ *page 17* or Aux-in connection* ⇒ *page 19*
- ④ Bluetooth audio player* ⇒ *page 16*

Tips

You can scroll through long lists of folders/tracks quickly by turning the control knob quickly. The scrolling speed depends on the number of folders/tracks.

Media functions

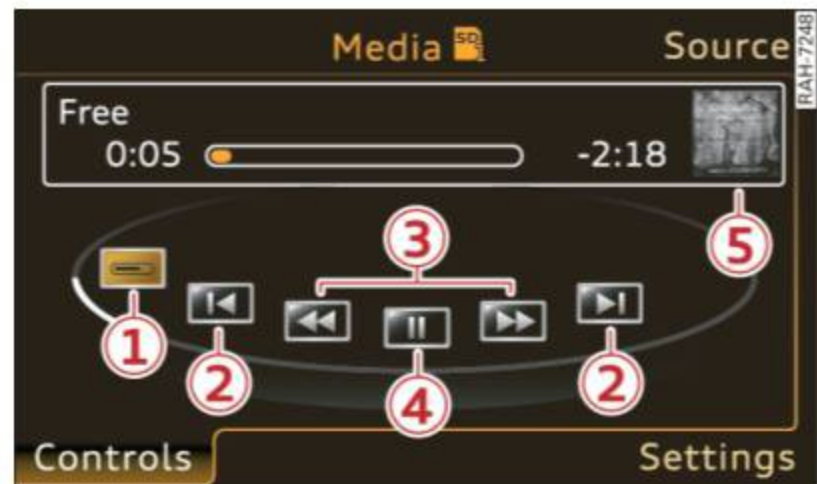


Fig. 36 SD card functions

► Select: **MEDIA** button > **Controls** control button.

① Changing the current playing position*

The play bar is activated in the information window ⑤ ⇒ *fig. 36*. Select and confirm the desired playing position.

② Previous/next track

The previous ◀ or next ▶ track is played. If you select and confirm ◀ within the first 10 seconds of playback, the previous track will play. If you press it after about 10 seconds, the current track will begin playing again from the beginning. **Or:** turn the on/off knob to the left/right (◀◀ / ▶▶).

③ Fast forward/rewind

Press and hold the control button to rewind ◀◀ or fast forward ▶▶ an audio file. **Or:** Turn the on/off knob to the left/right (◀◀ / ▶▶) and then press and hold it.

④ Pause

The mute symbol ③ ⇒ *page 7* appears in the status line in the MMI display. To resume playback, select and confirm **II (Pause)** again. **Or:** Press the On/Off knob briefly.

⑤ Information window

Various information about the current track (such as the embedded album cover*), the playing time and remaining playing time may be displayed depending on availability.

Additional settings

Requirement: A source must be selected.

- ▶ Select: **MEDIA** button > **Settings** control button.

The following settings can be selected depending on the active source and the storage medium:

Sound settings

Refer to ⇒ *page 22*.

Repeat*

Off: The repeat options are switched off.

Directory: The tracks in the currently selected directory are repeated.

Track: The track currently being played will be repeated. Shuffle is not possible.

Playlist: The playlist currently being played will be repeated.

Shuffle*

When this function is switched on ☒, all files in the active source or the set repeat range (**Repeat**) are played in random order.

Track display*

File name: The name of the file is displayed with the file extension.

Track name: The name of the current track or the track that was just played is displayed.

Video picture settings*

Requirement: A portable player must be connected using the iPod adapter cable plus*/AV adapter cable* ⇒ *page 18*.

Aspect: The picture format can be adjusted automatically with **auto**. The picture width varies depending on the film format. The for-

mat **4:3** and **16:9** can also be displayed. The picture is expanded to fill the entire MMI display using the **Zoom** function and is displayed in the stored picture format using **Original**.

AV standard: You can select **PAL**, **NTSC** or **auto** for an externally connected device. The same standard must be selected on the playback device. Selecting the incorrect AV Standard can cause a poor-quality image, no image or no color at all.

Brightness: You can decrease/increase the brightness.

Contrast: You can decrease/increase the contrast.

Color: You can decrease/increase the color intensity.

Input level*

Requirement: A portable player must be connected with a 3.5 mm stereo jack adapter cable*/AV adapter cable*/iPod adapter cable (plus)* ⇒ *page 18*, ⇒ *page 19*.

The volume of the portable audio device is adapted to the MMI. Audi recommends adjusting the volume of the portable audio device to 70 percent of the maximum output.

Additional song information*

When this function is switched on ☒ and the folder or track list is opened, various information about the current track, the playing time and remaining playing time appears after several seconds. You can also select and confirm the desired playing position in the play bar depending on vehicle equipment.

Tips

- The video image is only displayed when the vehicle is stationary for safety reasons. You will only hear the video while you are driving.
- The **Repeat*** and **Shuffle*** functions switch off automatically when the source changes in the **Media** menu.
- When synchronizing a portable audio device with "Cloud" services, playlists may

display incorrectly in the MMI. Use the local media center for the corresponding device.

A

- Adapter cable (Audi music interface) 17
- Adjusting the sound (Tone) 22
- Adjusting the volume
 - MMI control panel 6
 - Multifunction steering wheel 8
- Adjusting volume
 - Multifunction steering wheel 12
- Assigning a button (Multifunction steering wheel) 8
- Audi music interface 17
 - Adapter cable 17
 - Connecting/disconnecting 18
- Audio file
 - Fast forward/rewinding 39
 - Playing 39
 - Previous/next 39
- Audio player
 - refer to* Bluetooth 16
- Audi phone box 27
- Aux-in connection 19

B

- Balance (sound) 22
- Band
 - refer to* Selecting frequency band 36
- Bass (sound) 22
- Bluetooth
 - Audio player 16
 - Devices 33
 - Pairing a cell phone 26
 - Settings 33
- Buttons
 - MMI control panel 6
 - Multifunction steering wheel 8

C

- Cable (Audi music interface) 17
- Call
 - Answer/reject 29
 - Answering/rejecting 9
 - Holding/resuming 9
 - Options during a phone call 29

- Calling
 - Multifunction steering wheel 9
 - Voice recognition system 13
- Calling a contact 9
- Calling up menus (operation) 6
- Call waiting 9, 29
- Care 5
- CD
 - Drive 16
 - Ejecting 16
 - Loading 16
 - Multifunction steering wheel 10
 - Notes 15
 - Player 16
 - also refer to* Media 16, 39
- Cell phone
 - Audi phone box 27
 - pairing 26
 - Playing music 16
 - also refer to* Cell phone 26
 - also refer to* Telephone 25
- Cell phone compartment
 - refer to* Audi phone box 27
- Cell phone preparation
 - refer to* Telephone 25
- Characters 7
- Charging or replacing batteries 27
- Cockpit overview 4
- Commands 23
- Command (Voice recognition system) 12
- Connecting/disconnecting a MP3 player . . 19
- Connecting/Disconnecting a MP3 player . . 16
- Connecting/removing an audio device . . . 19
- Connections
 - refer to* Media drives 15
- Contact
 - Calling 31
 - Deleting 31, 34
 - dialing 31
 - Editing 31
 - Importing/exporting 32
 - Reading 31
 - Storing 33
- Control buttons 6
- Control knob 6
- Controls
 - MMI control panel 4, 6

Multifunction steering wheel	8
Overview	4
Correcting problems	
Media drives	20
Telephone	35

D

Data encryption	23
Data protection (Media drives)	15
Date	22
Daylight saving time	22
Delete	
Station	37
Deleting	
Bluetooth devices	33
Call lists	33
Contact	31, 34
Voicemail number	33
Directory	31
Memory capacity	34
Multifunction steering wheel	9
Saved location	31
Settings	34
Sort order	34
Storing an address	33
Directory entry	
<i>refer to</i> Contact	31
Display	
Brightness	23
MMI control panel	7
Multifunction steering wheel	8
Settings	23
Settings (Video)	40
Driver information system	8
Drives	
<i>refer to</i> Media drives	15
Driving noise compensation (SDV)	22
DTMF tones	29
Dynamic volume	
<i>refer to</i> Music volume	23

E

End call	9
Ending a phone call	9
Enhanced track info	40

Entering an address	
MMI control panel	33
Entry	
using the Voice recognition system	12

F

Factory default settings	23
Fader (sound)	22
Fast forwarding (audio file)	39
File formats (Media devices)	19
Fixing problems	
Radio	38

G

Global commands (Voice recognition system)	13
--	----

H

Help	
Media drives	20
Radio	38
Telephone	35
Voice recognition system	13
Hold	29

I

Importing/exporting (contacts)	32
Incoming call	
<i>refer to</i> Telephone	25
Information	
Care	5
Owner's Manual	3
Traffic Safety	4
Input level	40
iPod	
Input level	40
Video picture settings	40
<i>also refer to</i> Audi music interface	17

J

Jack (Aux-in connection)	19
Join conference	9
Joining a conference call	29

L

- Listening to music
 - refer to* Playing media 39
- Listening to the radio
 - MMI control panel 36
 - Multifunction steering wheel 10
 - Voice recognition system 14
- Loss of reception
 - Radio 38

M

- Making a call
 - MMI control panel 25
 - Options during a phone call 29
- Media
 - Accessing 39
 - Formats 19
 - Information window 39
 - Pausing 39
 - Previous/next track 39
 - Selecting a source 39
- Media devices
 - Supported formats 19
- Media drives
 - Audi music interface 17
 - Aux-in connection 19
 - Bluetooth audio player 16
 - CD drive 16
 - Restrictions 15
 - SD card reader 16
 - Troubleshooting 20
- Memory
 - Directory 34
- Memory card
 - refer to* SD card reader 16
- Menu language 23
- Microphone on/off 9
- MMI components 4
- MMI control panel 4
 - Controls 4
 - Operation 6
 - Restarting 23
 - Switching on/off 6
 - Symbols/menus 7
 - System update 23

- Multifunction steering wheel
 - Call 9
- Multifunction steering wheel
 - Button 8
 - Calling 9
 - Directory 9
 - Listening to the radio 10
 - Operating 8
 - Pausing 8
 - Playing media 10
 - Recent calls 9
 - Switching tabs 8
 - Voice recognition system 8
- Music volume 23
- Mute 6
- Muting 8
- myAudi
 - Importing contacts 32

N

- Network selection (Telephone mode) 33
- Network settings 33
- Note
 - Audi music interface 18
- Notes
 - CD 15
 - Data protection (Media drives) 15
 - Making a call 25
 - Media drives 15
 - Privacy protection (storing a contact) ... 33
 - Voice recognition system 12, 13

O

- On/Off knob 6
- Operating
 - Multifunction steering wheel 8
 - Voice recognition system 12
- Operation
 - MMI control panel 6
- Overview
 - Controls 4
 - Menus and symbols 7
 - Voice recognition system 12

P

- Pausing 8, 39

Pausing/continuing playback	10
Pausing (audio file)	39
Phone number	
entering	29
Picture format	40
Playing media	39
Additional settings	40
MMI control panel	39
Multifunction steering wheel	10
Voice recognition system	14
Presets list	37
Previous/next track	39
Privacy protection	
Storing a contact	33
Prompt (Voice recognition system)	12

R

Radio	
Delete station	37
Moving a station	37
Presets list	37
Previous/next station	37
Receiver serial number	37
Station information	37
Storing a station	37
Storing stations	36
Troubleshooting	38
Read aloud	
Possible commands	13
Reading aloud	
Contact	31
Recent calls	
MMI control panel	28
Multifunction steering wheel	9
Voice recognition system	13
Redial	33
Repeating (audio file)	40
Requirements	
Pairing a cell phone	26
Phone calls	28
Reset (Restart)	23
Restart (Reset)	23
Restricted use of phone	26
Rewinding (audio file)	39
Ringtone settings	23

S

Safety	
Making a call	25
Voice recognition system	12
Saved location (directory)	31
Screen	
<i>refer to</i> Display	8
SD card reader	16
SDV (speed dependent volume control) ..	22
Security	
Data protection (Media drives)	15
Privacy protection (storing a contact) ...	33
Seeking (audio)	39
Seek (Radio)	37
Selecting a frequency	37
Selecting a source	
MMI control panel	39
Multifunction steering wheel	10
Voice recognition system	14
Selecting frequency band	36
Sending a tone sequence	29
Settings	
Directory	34
Media	40
Radio	37
System	23
Telephone	33
Voice recognition system	12
Setting the language	23
Setup MMI (system settings)	23
Short dialog	23
Shuffle	40
Software version	23
Steering wheel	
<i>refer to</i> Multifunction steering wheel	8
Subwoofer (sound)	22
Switching tabs	
<i>refer to</i> Multifunction steering wheel	8
Switching the microphone on/off	29
Symbols	3, 7
System settings	22
Systems (sound)	22
System update	23

T

Telephone	25
Main functions	28
Options during a phone call	9
Settings	33
Switching microphone on/off	9
Troubleshooting	35
Time	22
Tone (sound)	22
Track display	40
Traffic Safety	4
Treble (sound)	22

U

Units of measurement	23
Update software	23

V

Version information	23
Video picture settings	40
Voicemail	30
Deleting voicemail number	33
Entering voicemail number	33
Voice recognition system	12
Calling	13
Command	12
Help commands	13
Input assistance	12
Listening to the radio	14
Multifunction steering wheel	8
Operating	12
Overview	12
Playing media	14
Settings	12
Switching on/off	12
Volume	8, 12
Volume	6
Input level	40
Music volume	23
Parking aid	23
System volumes	23
Voice recognition system	12

© 2013 AUDI AG

It has always been Audi's policy to continuously improve its products. Audi, therefore, reserves the right to make changes in design and specifications, and to make additions or improvements in its products without incurring any obligation to install them on products previously manufactured. Text, illustrations and specifications in this book are based on the most up-to-date information available at the time of printing.

May not be reproduced or translated in whole or in part without the written consent of AUDI AG. All rights reserved by AUDI AG. Subject to alteration or amendment. Printed in Germany.

Editorial deadline: 8/30/2013



For the sake of the environment

Printed on environmentally friendly paper
(bleached without chlorine, recyclable)

Owner's manual
MMI Radio
Englisch Nordamerika 11.2013
151.566.3MS.21



1515663MS21

www.audi.com