

Buick Riviera 1996 fuse box diagram

Instrument Panel Fuse Block

There is a fuse panel located at the end of the instrument panel near the driver's door.




Buick Riviera – fuse box – instrument panel

Fuses	Usage
1	Air Bag
2	Injectors
3	Anti-Lock Brake System
4	Left Exterior Lamps
5	Turn Signal Lamps
6	Oxygen Sensor
7	Climate Control
8	Right Exterior Lamps
9	HVAC Relay
10	MAF
11	Auxiliary Power
12	Interior Lamps
13	Chime
14	TMNSS
15	Cruise Control
16	Perimeter Lights
17	Not Used
18	Not Used
19	Radio
20	Cooling Fan

21	Not Used
22	Not Used
23	Windshield Wipers
24	Not Used
25	PCM
26	Cigarette Lighter
27	Crank
28	HVAC Blower


Engine Compartment Fuse Block

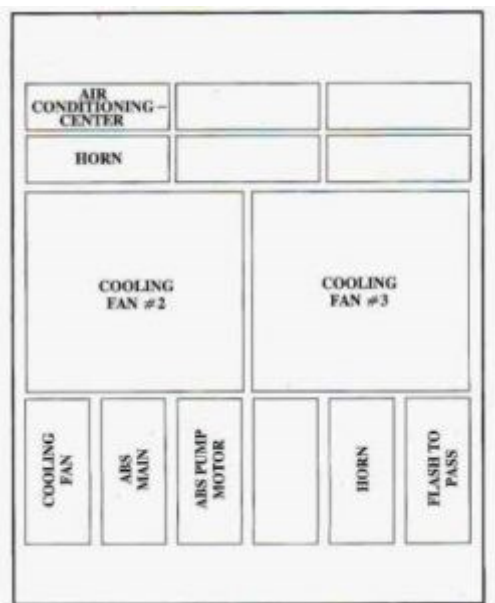

Buick Riviera – fuse box – engine compartment

Fuse	Usage
1	Air Conditioning Compressor
2	Not Used
3	Not Used
4	Horn
5	Not Used
6	Not Used
7	Cooling Fan #2
8	Cooling Fan #3
9	Cooling Fan
10	ABS Main
11	ABS Pump Motor
12	Not Used
13	Horn
14	Flash-To-.Pass

Rear Compartment Driver's Side Fuse Block

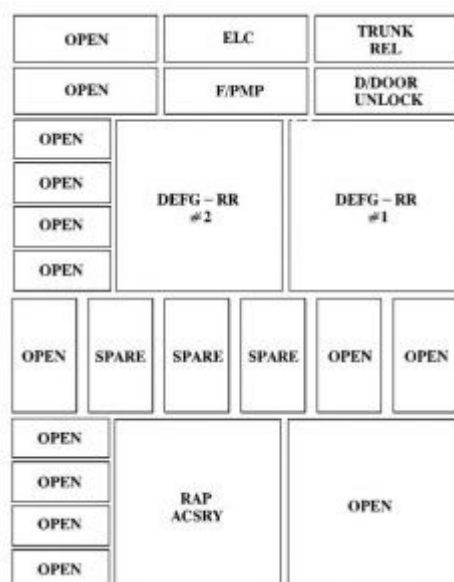

Buick Riviera – fuse box – rear compartment (driver’s side)

Fuse	Usage
1	Open
2	Electronic Level Control
3	Trunk Release Relay
4	Not Used
5	Fuel Pump Relay
6	Driver Door Unlock Relay
7	Not Used
8	Not Used
9	Not Used
10	Not Used
11	Rear Defogger Relay (Upper Zone)
12	Rear Defogger Relay (Lower Zone)
13	Not Used
14	Spare
15	Spare
16	Spare
17	Not Used
18	Not Used
19	Not Used
20	Not Used
21	Not Used
22	Not Used
23	Direct Accessory Power – Accessory
24	Open

Rear Compartment Passenger’s Side Fuse Block

SPARE	SPARE	OPEN	PWR WDO/SUNRF CB		
SPARE	SPARE	OPEN			
SPARE	SPARE	OPEN	PWR ST CB		
SPARE	SPARE	OPEN			
PWR ST	HDL P	HVAC BLO MTR	PCM/VATS	IGN 3	IGN 1
DEFOG RR	TRUNK FDR REL	ELC	HTD ST/ IP	EXT LP	OPEN
PWR DR LK	INTR LP	HZRD/STOP	PARK LP		
HTD MIR	OPEN	F/DR REL	TRUNK REL		
BATT THER	I/P 2	I/P 1	HTD ST		
F/PMP	OPEN	RR DEFOG 2	RR DEFOG 1		

Buick Riviera – fuse box – rear compartment (passenger’s

side)

Fuses	Usage
1	Spare
2	Spare
3	Open
4	Breaker – Power Windows/Sunroof
5	Spare
6	Spare
7	Open
8	Spare
9	Spare
10	Open
11	Breaker – Power Seats
12	Spare
13	Spare
14	Open
15	Power Seat
16	Breaker-Headlamps
17	HVAC Blower Motor
18	Powertrain Control Module/PASS-Key II
19	Ignition 3
20	Ignition 1
21	Rear Defogger
22	Trunk and Fuel Door Releases
23	Heated Seat
24	Electronic Level Control/Instrument Panel
25	Exterior Lamps

26	Open
27	Power Door Locks
28	Interior Lamps
29	Hazard Lamps/Stoplamps
30	Parking Lamps
31	Open
32	Open
33	Fuel Door Release
34	Trunk Release
35	Battery Thermistor
36	Instrument Panel #2
37	Instrument Panel #1
38	Heated Seats
39	Fuel Pump
40	Open
41	Defog 2
42	Defog 1