

Toyota Yaris iA / Scion iA (DJ; 2015-2018..) fuses

*Toyota Yaris iA (Scion iA) is available from 2015 to the present. In this article, you will find fuse box diagrams of **Toyota Yaris iA 2015, 2016, 2017 and 2018**, get information about the location of the fuse panels inside the car, and learn about the assignment of each fuse (fuse layout).*

See other Toyota Yaris / Echo / Vitz:

Fuse Layout Toyota Yaris iA / Scion iA 2015-2018...



Cigar lighter (power outlet) fuse in the Toyota Yaris iA / Scion iA is the fuse #5 "F.OUTLET" in the Passenger Compartment fuse box.


Passenger Compartment Fuse Box

Fuse box location

The fuse box is located under the instrument panel (left-side).



Fuse box diagram

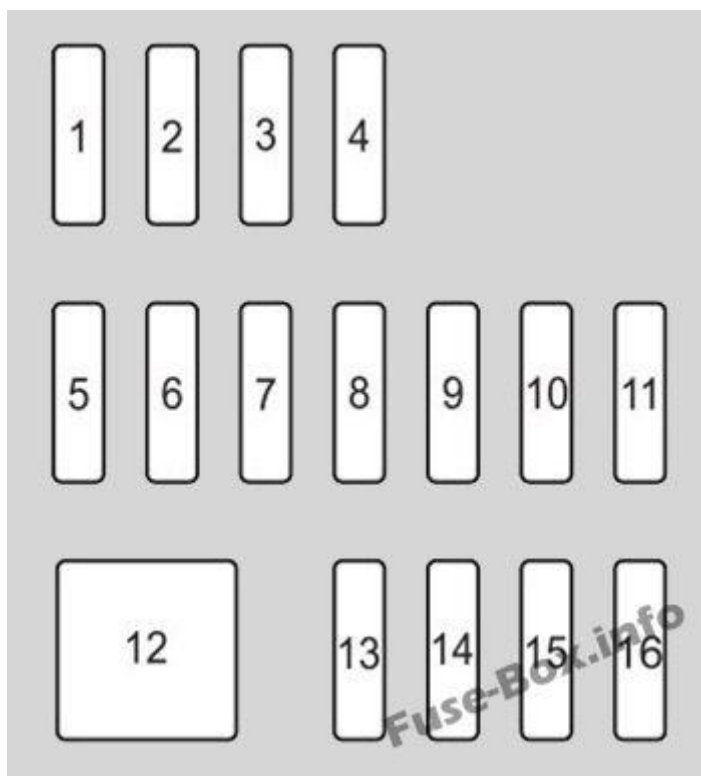

Assignment of the fuses in the Passenger Compartment

No	Name	Amp	Protected component
1	—	—	—
2	—	—	—
3	—	—	—
4	—	—	—
5	F.OUTLET	15	Accessory sockets
6	—	—	—
7	AT IND	7,5	AT shift indicator (if equipped)
8	MIRROR	7,5	Power control mirror
9	—	—	—
10	P.WINDOW2	25	Power windows
11	R.WIPER	15	—
12	—	—	—
13	—	—	—
14	SRS2/ESCL	15	—
15	SEAT WARM	20	Seat warmer (if equipped)
16	M.DEF	7,5	Mirror defogger (if equipped)


Advertisements

Engine Compartment Fuse Box

Fuse box location



Fuse box diagram

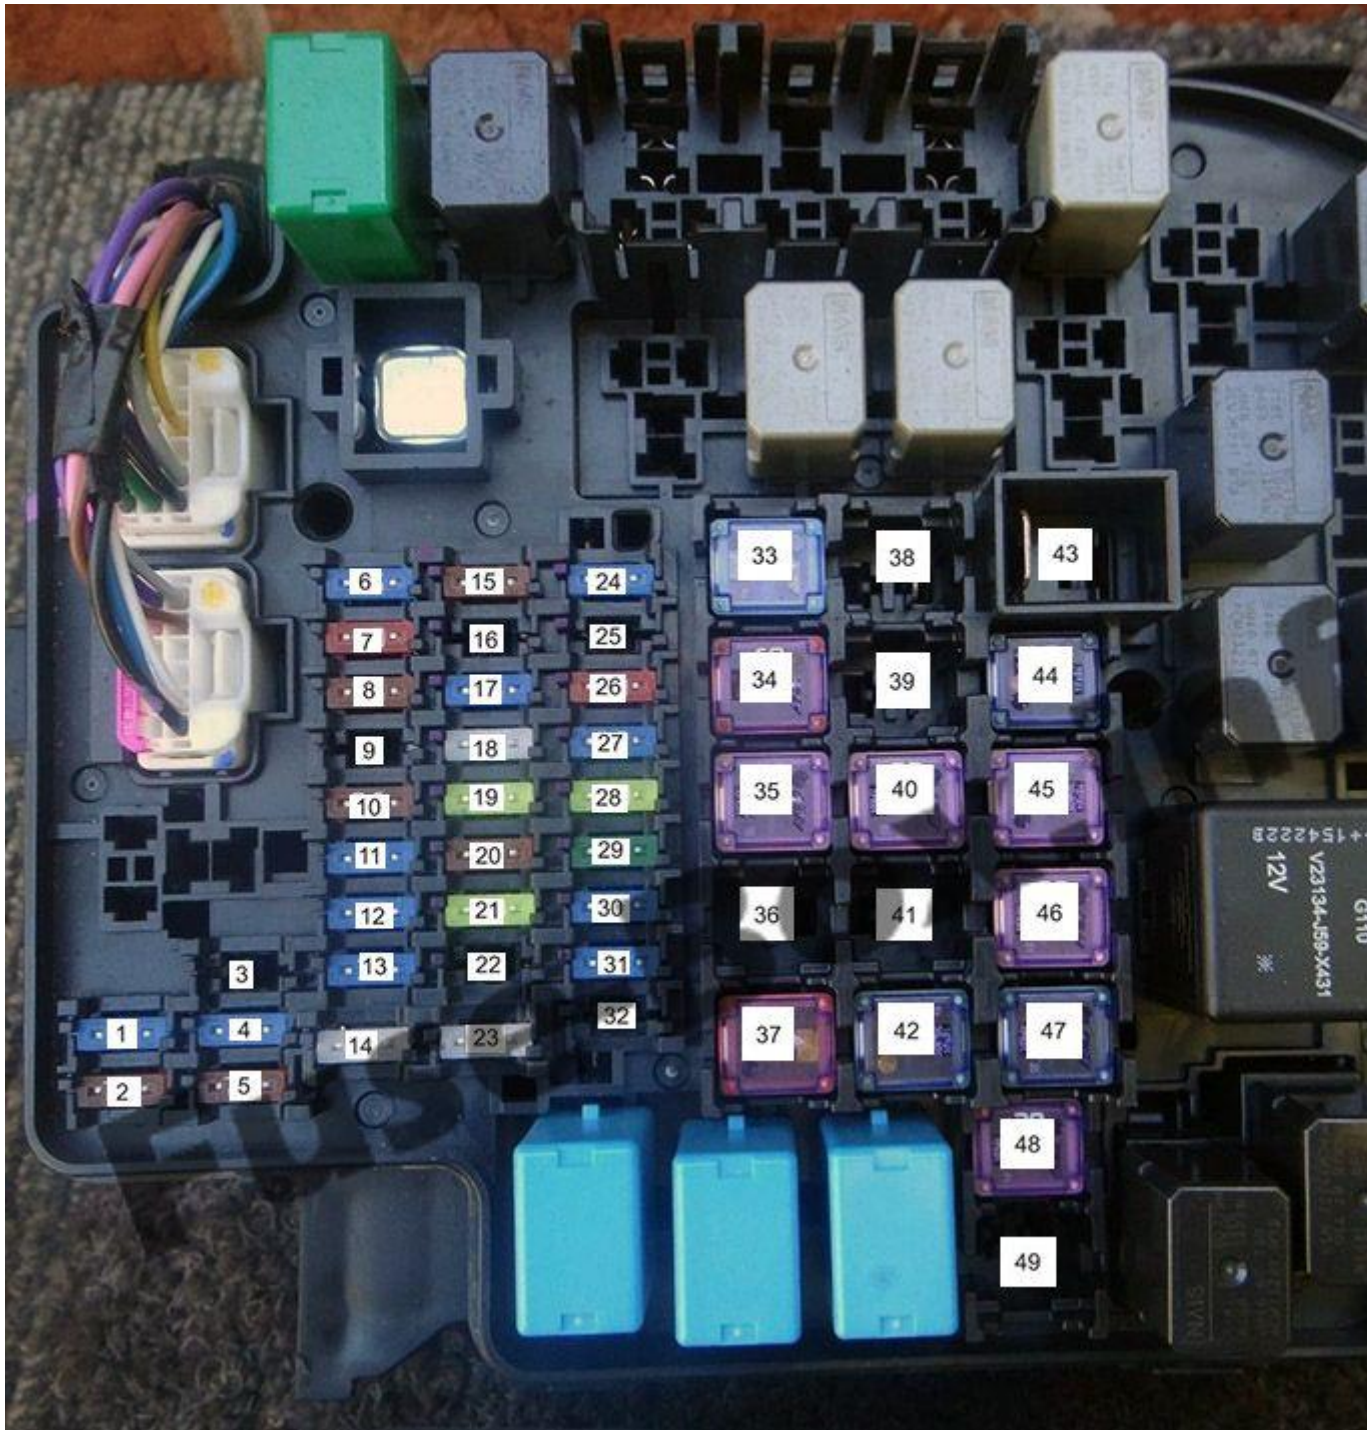

Advertisements

Assignment of the fuses in the Engine Compartment

№	Name	Amp	Protected component
1	C/U IG1	15	For protection of various circuits
2	ENGINE IG1	7,5	Engine control system

№	Name	Amp	Protected component
3	SUNROOF	10	—
4	INTERIOR	15	Overhead light
5	ENG+B	7,5	Engine control system
6	AUDIO2	15	Audio system
7	METER1	10	Combination meter
8	SRS1	7,5	Air bag
9	METER2	7,5	Combination meter (if equipped)
10	RADIO	7,5	Audio system
11	ENGINE3	15	Engine control system
12	ENGINE1	15	Engine control system
13	ENGINE2	15	Engine control system
14	AUDIO1	25	Audio system
15	A/C MAG	7,5	Air conditioner
16	AT PUMP	15	Transaxle control system (if equipped)
17	AT	15	Transaxle control system (if equipped)
18	D.LOCK	25	Power door locks
19	H/L RH	20	Headlight (RH)
20	ENG+B2	7,5	Engine control system
21	TAIL	20	Taillights, License plate lights, Parking lights

№	Name	Amp	Protected component
22	—	—	—
23	ROOM	25	Overhead light
24	FOG	15	Fog lights (if equipped)
25	H/CLEAN	20	—
26	STOP	10	Brake lights
27	HORN	15	Horn
28	H/L LH	20	Headlight (LH)
29	ABS/DSC S	30	ABS, Dynamic stability control system
30	HAZARD	15	Hazard warning flashers, Turn signal lights
31	FUEL PUMP	15	Fuel system
32	FUEL WARM	25	—
33	WIPER	20	Front window wiper and washer
34	CABIN+B	50	For protection of various circuits
35	FAN 2	30	Cooling fan
36	FUEL PUMP	30	—
37	ABS/DSC M	50	ABS, Dynamic stability control system
38	EVVT	20	Engine control system (if equipped)
39	—	—	—
40	FAN1	30	Cooling fan

№	Name	Amp	Protected component
41	FAN 3	40	—
42	ENG.MAIN	40	Engine control system
43	EPS	60	Power steering system (if equipped)
44	DEFOG	40	Rear window defogger
45	IG2	30	For protection of various circuits
46	INJECTOR	30	Engine control system
47	HEATER	40	Air conditioner
48	P.WINDOW1	30	Power windows
49	DCDC DE	40	—