

Lexus LS460 (XF40; 2007-2009) fuses

*In this article, we consider the fourth-generation Lexus LS (XF40) before a facelift, produced from 2007 to 2009. Here you will find fuse box diagrams of **Lexus LS 460 2007, 2008 and 2009**, get information about the location of the fuse panels inside the car, and learn about the assignment of each fuse (fuse layout).*

See other Lexus LS:

Fuse Layout Lexus LS 460 2007-2009



Cigar lighter (power outlet) fuses in the Lexus LS460 are the fuse #5 “PWR OUTLET” in the Passenger Compartment Fuse Box №1, #5 “P-CIG” (Cigarette lighter) in the Passenger Compartment Fuse Box №2, and fuses #6 “RR-CIG” (Cigarette lighter), #7 “AC100/115V” (Power outlet 100/115V) in the Luggage compartment fuse box.

Fuse box location

Passenger Compartment Fuse Box №1

The fuse box is located under the left side of the instrument panel, under the cover.



Passenger Compartment Fuse Box №2

It is located under the right side of the instrument panel, under the cover.



Engine Compartment Fuse Box №1

The fuse box is located in the engine compartment (on the left-side).



Engine Compartment Fuse Box №2

It is located in the engine compartment (on the left-side).



Luggage Compartment Fuse Box

The fuse box is located in the left side of the luggage compartment, under cover.




Fuse box diagrams

Advertisements

2007, 2008

Passenger Compartment Fuse Box №1

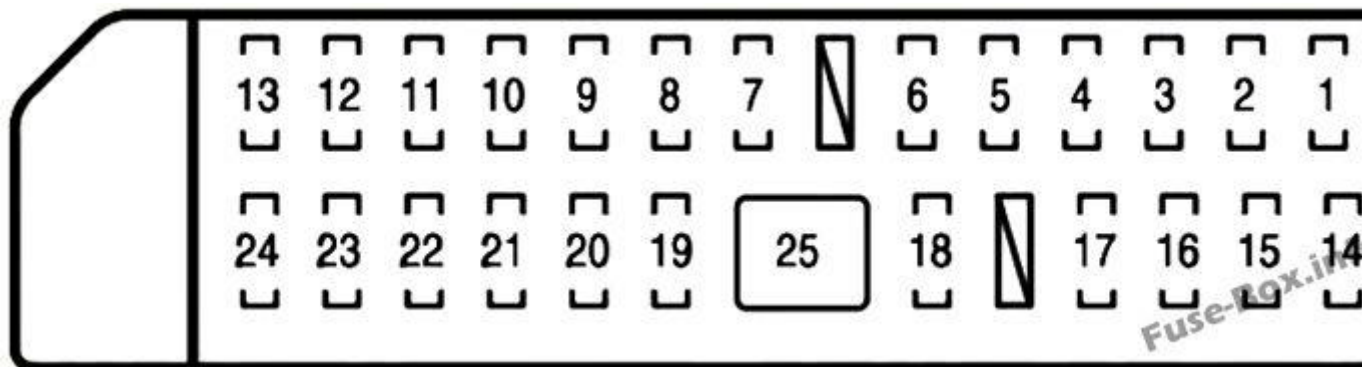


Assignment of the fuses in the Passenger Compartment Fuse Box №1 (2007, 2008)

№	Name	Ampere	Circuit
1	D-IG1-3	10 A	Automatic transmission, power door lock system, cruise control system, brake system, rear window delogger, moon roof, pre-collision seat belt, head restraints, power outlet, turn signal lights, climate control seat system, audio system
2	D-IG1-2	5 A	Cruise control system
3	D-IG1-4	15 A	Starter system, climate control seat system
4	D-IG1-1	5 A	Main body ECU, pre-collision seat belt, tilt and telescopic steering, starter system
5	PWR OUTLET	15 A	Power outlet
6	D-ACC	5 A	Power door lock system
7	S/ROOF	30 A	Moon roof
8	TI&TE	30 A	Tilt and telescopic steering
9	AM1	5 A	Power door lock system

№	Name	Ampere	Circuit
10	OBD	10 A	On-board diagnosis system
11	D P/SEAT	30 A	Front seat adjustment
12	D S/HTR	20 A	Climate control seat system
13	D RR S/HTR	30 A	Climate control seat system
14	D MPX-B1	10 A	Meters and gauges, front seat adjustment, rear seat adjustment, tilt and telescopic steering, power door lock system, cruise control system
15	DOME	10 A	Interior lights, clock
16	D MPX-B2	10 A	Audio system
17	PANEL	10 A	Fuel filler door opener, interior lights, audio system
18	SECURITY	5 A	Smart access system with push-button start, theft deterrent system
19	STR LOCK	20 A	Tilt and telescopic steering
20	D DOOR2	10 A	Power door lock system
21	HAZ	10 A	Turn signal lights
22	D RR DOOR	25 A	Interior lights, power door lock system, power windows
23	D DOOR 1	25 A	Interior lights, outside rear view mirror, power door lock system, power windows, outside rear view mirror defogger
24	STOP	5 A	Stop lights
25	AMP	30 A	Audio system

Passenger Compartment Fuse Box №2

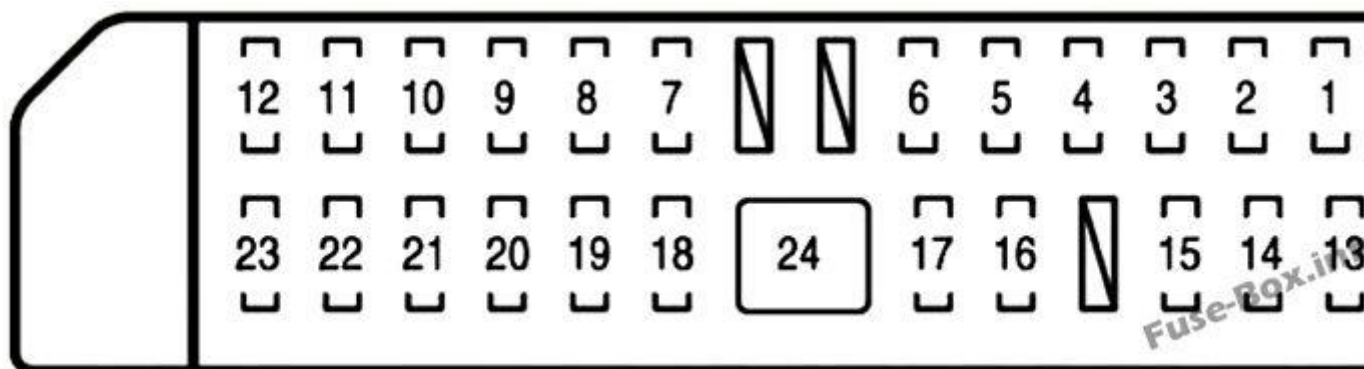


Assignment of the fuses in the Passenger Compartment Fuse Box №2 (2007, 2008)

№	Name	Ampere	Circuit
1	P-IG1-2	5 A	Audio system
2	P-IG1-3	5 A	VGRS
3	P-IG1-1	10 A	Audio system, navigation system, power door lock system, VGRS, air conditioning system, head restraints, pre-collision seat belt, intuitive parking assist, tire pressure warning system
4	P-IG1-4	10 A	Climate control seat system
5	P-CIG	15 A	Cigarette lighter
6	P-ACC	5 A	Audio system, navigation system, clock, Lexus link system, cruise control system
7	A/C	10 A	Air conditioning system
8	P S/HTR	20 A	Climate control seat system
9	P P/SEAT2	30 A	Front seat adjustment
10	RR SEAT	30 A	Rear seat adjustment
11	P P/SEAT1	30 A	Front seat adjustment

№	Name	Ampere	Circuit
12	P RR S/HTR	30 A	Climate control seat system
13	P IG2	5 A	Tilt and telescopic steering, smart access system with push-button start, meters and gauges, electric power control system, Lexus link system
14	P RR-IG2	5 A	On-board diagnosis system, Lexus link system
15	P MPX-B	10 A	Power door lock system, front seat adjustment, rear seat adjustment, VGRS, smart access system with push-button start, starter system, intuitive parking assist
16	AIRSUS	20 A	Electronically modulated air suspension system
17	AM2	10 A	Power door lock system
18	RADIO NO.1	20 A	Air conditioning system, navigation system, Lexus link system
19	PMG	5 A	Electric power control system
20	P-D/C CUT	5 A	Headlight switch, windshield wiper and washer, horn, tilt and telescopic steering, power windows, power door lock system, door sunshade, rear sunshade, rear seat adjustment, steering wheel switches
21	P DOOR 2	10 A	Power door lock system
22	P RR DOOR	25 A	Interior lights, power door lock system, power windows
23	P DOOR 1	25 A	Interior lights, outside rear view mirror, power door lock system, power windows, outside rear view mirror defogger
24	AMP	30 A	Audio system

Advertisements

Engine Compartment Fuse Box №1

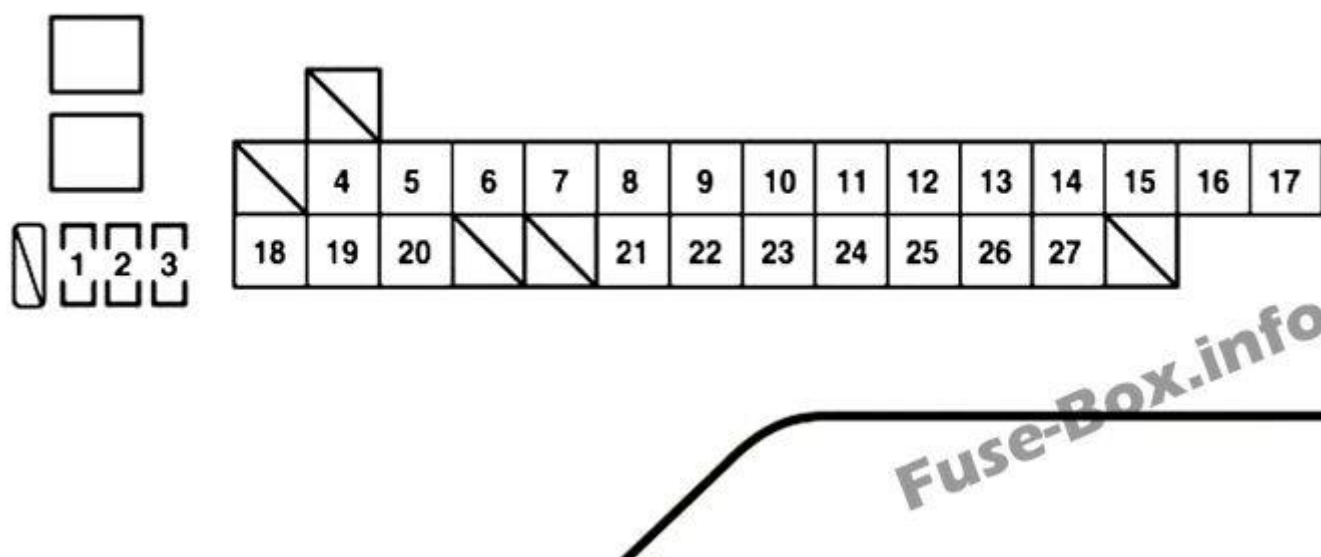


Assignment of the fuses in the Engine Compartment Fuse Box №1 (2007, 2008)

№	Name	Ampere	Circuit
1	PTC HTR3	25 A	PTC heater
2	PTC HTR1	25 A	PTC heater
3	VSSR	5 A	Electric power control system
4	ALT	180 A	AIR SUS. HTR, DEFOG, FAN NO.1, H-LP CLN, PTC HTR 2, PTC HTR, RR A/C, E/G RM1, D-J/B ALT, P-J/B ALT, LUG-J/B ALT
5	P-J/B ALT	60 A	P P/SEAT1, P P/SEAT 2, A/C, RR SEAT, P-IG1-1, P-IG1-2, P-IG1-3, P-IG1-4, P-ACC, P-CIG, AIR SUS, climate control seat system
6	FAN NO.1	80 A	Electric cooling fans
7	E/G RM1	80 A	DEICER, WIP, E/G RM-IG1-1. E/G RM-IG1-2, NV-IR, FR FOG, FR CTRL ALT, ABS MTR1
8	D-J/B ALT	80 A	OBD, D P/SEAT, TI&TE, AM1, S/ROOF, D-IG1-1, D-IG1-2, D-IG1-3, D-IG1-4, D-ACC, PWR OUTLET, PANEL, climate control seat system

№	Name	Ampere	Circuit
9	PTC HTR	60 A	PTC HTR 1, PTC HTR 3
10	LUG-J/B ALT	50 A	PTL, RL SEAT, B/ANC, FUEL OPN, RR S/SHADE, PSB, RR-IG1-1, RR-IG1-2, RR-IG1-3, RR-ACC, RR-CIG
11	RR A/C	30 A	Air conditioning system
12	AIRSUS	40 A	Electronically modulated air suspension system
13	HTR	50 A	Air conditioning system
14	NOISE FILTER	40 A	Condenser
15	DEFOG	40 A	Rear window defogger
16	PTC HTR 2	50 A	PTC heater
17	H-LP CLN	30 A	Headlight cleaner
18	EPS	80 A	EPS
19	EFI	80 A	VVT, ETCS, ABS MAIN1. EDU1. EDU2, A/F, ECU-IG, IGN, INJ, P-J/B
20	E/G RM B	80 A	D/C CUT 1, FR CTRL BAT. EPS ECU, ABS MAIN 2, ABS MTR2, ST. H-LP RL, H-LP LL
21	EFI NO.1	40 A	Multiport fuel injection system/ sequential multiport fuel injection system
22	E/GRM B2	30 A	ABS MAIN 3. EPS ECU, D/C CUT 2
23	D-J/B B	40 A	D-DOOR 1, HAZ, D-DOOR 2, STR LOCK, STOP, SECURITY
24	LUG J/B B	40 A	STOP LP1. STOP LP 2, TAIL, E-PKB, capacitor

№	Name	Ampere	Circuit
25	P-J/B B	40 A	P DOOR 1.PRR DOOR, AM2, RADIO NO.1, P-D/C CUT, P DOOR 2, PMG, AMP
26	VGRS	40 A	VGRS
27	BAT VB	30 A	VSSR

Engine Compartment Fuse Box №2

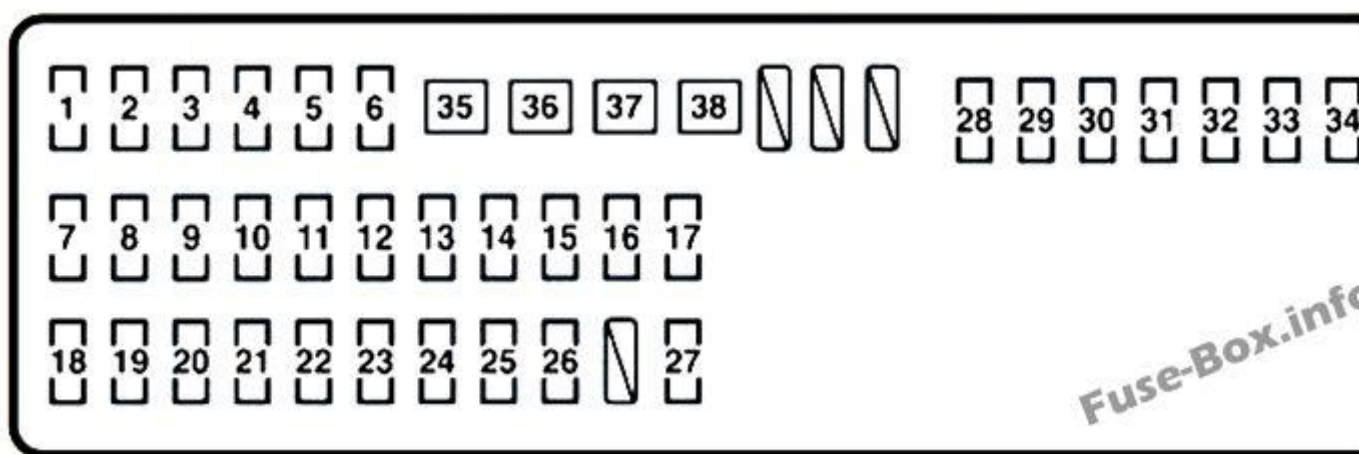

Advertisements

Assignment of the fuses in the Engine Compartment Fuse Box №2 (2007, 2008)

№	Name	Ampere	Circuit
1	DEICER	25 A	Windshield wiper de-icer
2	WIP	30 A	Windshield wiper
3	ABS MAIN 2	10 A	ABS, VSC, VDIM
4	IGCT1	25 A	Smart access system with push-button start
5	EPS ECU	10 A	EPS
6	FR CTRL BAT	30 A	Headlight high beams, horns


№	Name	Ampere	Circuit
7	E/G RM-IG1-2	10 A	AFS, headlight high beams, parking lights, side marker lights, horns, alarm, windshield washer, exhaust system, headlight cleaner
8	E/G RM-IG1-1	10 A	Charging system, EPS, electric cooling fans, AFS
9	H-LP LL	15 A	Headlight low beams
10	ABS MAIN1	10 A	Brake system, pre-collision seat belt
11	H-LP RL	15 A	Headlight low beams
12	ETCS	10 A	Multiport fuel injection system/ sequential multiport fuel injection system
13	NV IR	10 A	Cruise control system
14	IGN	10 A	Multiport fuel injection system/ sequential multiport fuel injection system, brake system, airbag system
15	ECU-IG	10 A	Multiport fuel injection system/ sequential multiport fuel injection system, stop lights, pre-collision seat belt, charging system
16	D/C CUT 1	30 A	ECU-B, D MPX-B1, D MPX-B 2, P MPX-B, RR MPX-B 1, RR MPX-B 2, DOME
17	ECU-B	10 A	Headlight high beams, parking lights, horns, alarm, windshield washer, precollision seat belt, headlight cleaner
18	A/F	15 A	Multiport fuel injection system/ sequential multiport fuel injection system, exhaust system
19	EDU2	25 A	Multiport fuel injection system/ sequential multiport fuel injection system
20	FR CTRL ALT	20 A	Windshield washer, alarm, headlight cleaner, parking lights, side maker lights

№	Name	Ampere	Circuit
21	EDU1	25 A	Multiport fuel injection system/ sequential multiport fuel injection system
22	RELIEF VLV	10 A	Fuel system
23	FR FOG	15 A	Front fog lights
24	A/C W/P	10 A	Air conditioning system, electric cooling fans
25	H-LP LVL	10 A	Discharge headlights, headlight high beams, parking lights, side marker lights, horns, alarm, windshield washer
26	P-J/B	10 A	PIG2.PRR-IG2
27	INJ	10 A	Multiport fuel injection system/ sequential multiport fuel injection system
28	D/C CUT 2	30 A	PMPX-B, RRECU-B
29	ECU-B2	5 A	Brake system
30	ABS MAIN 3	10 A	Brake system, pre-collision seat belt
31	EFI MAIN 2	25 A	Multiport fuel injection system/ sequential multiport fuel injection system, exhaust system
32	EFI MAIN	25 A	Multiport fuel injection system/ sequential multiport fuel injection system, fuel system
33	EFI	10 A	Multiport fuel injection system/ sequential multiport fuel injection system, fuel system
34	EFI-B	10 A	Multiport fuel injection system/ sequential multiport fuel injection system
35	ST	30 A	Starter system

№	Name	Ampere	Circuit
36	ABS MTR1	50 A	Brake system
37	ABS MTR2	50 A	Brake system
38	VVT	40 A	Multiport fuel injection system/ sequential multiport fuel injection system

Advertisements

Luggage Compartment Fuse Box

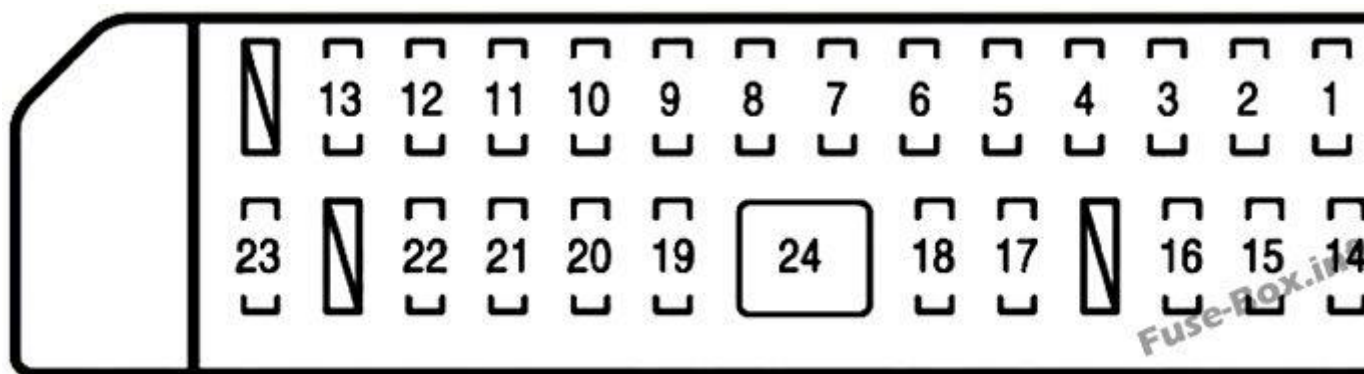

Assignment of the fuses in the trunk (2007, 2008)


№	Name	Ampere	Circuit
1	RR-IG1-3	10 A	Climate control seat system
2	RR-IG1-4	10 A	Rear seat adjustment
3	RR-IG1-2	10 A	Power door lock system, cool box, air conditioning system
4	RR-IG1-1	5 A	Capacitor, brake system, rear seat adjustment
5	RR-ACC	5 A	Audio system, rear seat entertainment system
6	RR-CIG	15 A	Cigarette lighter
7	AC100/115V	15 A	Power outlet

No	Name	Ampere	Circuit
8	RL SEAT	30 A	Rear seat adjustment
9	B/ANC	10 A	Shoulder anchor
10	RR S/SHADE	10 A	Rear sunshade
11	PSB	30 A	Pre-collision seat belt
12	PTL	30 A	Power trunk opener and closer
13	FUEL OPN	15 A	Fuel filler door opener, power trunk opener and closer
14	RR MPX-B1	10 A	Audio system, rear seat entertainment system, power trunk opener and closer
15	RR MPX-B2	5 A	Power door lock system, rear seat adjustment, interior lights, power trunk opener and closer, alarm
16	IGCT3	5 A	—
17	RATT FAN	20 A	Ffartrir. cooling fan
18	B-FAN RLY	5 A	Electric cooling fan
19	RR ECU-B	5 A	Seat belt buckle lights, trunk light
20	ABS MAIN4	10 A	Capacitor
21	STOP LP1	10 A	Stop lights, back-up lights
22	STOP LP 2	10 A	Stop lights, high-mounted stoplights
23	TAIL	5 A	Tail lights, license plate lights
24	E-PKB	30 A	Brake system

2009

Advertisements

Passenger Compartment Fuse Box №1

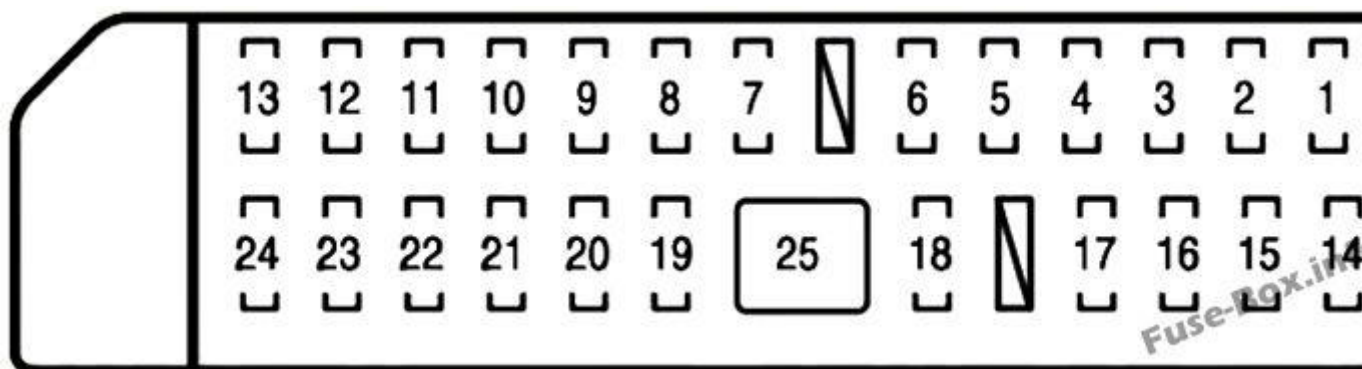


Assignment of the fuses in the Passenger Compartment Fuse Box №1 (2009)

№	Name	Ampere	Circuit
1	D-IG1-3	10 A	Automatic transmission, power door lock system, cruise control system, brake system, rear window defogger, moon roof, pre-collision seat belt, head restraints, power outlet, turn signal lights, climate control seat system, audio system
2	D-IG1-2	5 A	Cruise control system
3	D-IG1-4	15 A	Starter system, climate control seat system
4	D-IG1-1	5 A	Main body ECU, pre-collision seat belt, tilt and telescopic steering column, starter system
5	PWR OUTLET	15 A	Power outlet
6	D-ACC	5 A	Multiplex communication system
7	S/ROOF	30 A	Moon roof
8	TI&TE	30 A	Tilt and telescopic steering column
9	AM1	5 A	Power door lock system
10	OBD	10 A	On-board diagnosis system
11	D P/SEAT	30 A	Front seat adjustment
12	D S/HTR	20 A	Climate control seat system

№	Name	Ampere	Circuit
13	D RR S/HTR	30 A	Climate control seat system
14	D MPX-B1	10 A	Meters and gauges, front seat adjustment, rear seat adjustment, tilt and telescopic steering column, power door lock system, cruise control system
15	DOME	10 A	Interior lights, clock
16	D MPX-B2	10 A	Audio system
17	PANEL	10 A	Fuel filler door opener, interior lights, audio system
18	SECURITY	5 A	Smart access system with push-button start
19	STR LOCK	20 A	Steering lock system
20	D DOOR2	10 A	Power door lock system
21	HAZ	10 A	Emergency flashers
22	D RR DOOR	25 A	Interior lights, power door lock system, power windows
23	D DOOR1	25 A	Interior lights, outside rear view mirror, power door lock system, power windows, outside rear view mirror defogger
24	STOP	5 A	Stoplights
25	AMP	30 A	Audio system

Passenger Compartment Fuse Box №2

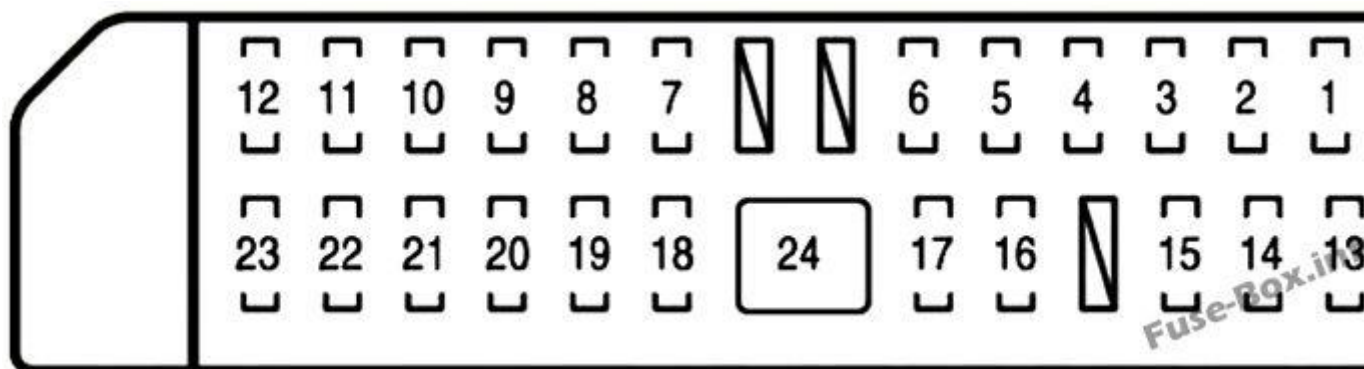


Assignment of the fuses in the Passenger Compartment Fuse Box №2 (2009)

№	Name	Ampere	Circuit
1	P-IG1-2	5 A	Audio system
2	P-IG1-3	5 A	VGRS
3	P-IG1-1	10 A	Audio system, navigation system, power door lock system, air conditioning system, head restraints, precollision seat belt, intuitive parking assist, tire pressure warning system
4	P-IG1-4	10 A	Climate control seat system
5	P-CIG	15 A	Cigarette lighter
6	P-ACC	5 A	Audio system, navigation system, clock, Lexus link system, cruise control system
7	A/C	10 A	Air conditioning system
8	P S/HTR	20 A	Climate control seat system
9	P P/SEAT2	30 A	Front seat adjustment
10	RR SEAT	30 A	Rear seat adjustment
11	P P/SEAT1	30 A	Front seat adjustment

No	Name	Ampere	Circuit
12	P RR S/HTR	30 A	Climate control seat system
13	P IG2	5 A	Tilt and telescopic steering column, smart access system with push-button start, meters and gauges, electric power control system, Lexus link system
14	P RR-IG2	5 A	On-board diagnosis system, Lexus link system
15	P MPX-B	10 A	Power door lock system, front seat adjustment, rear seat adjustment, VGRS, smart access system with push-button start, starter system, intuitive parking assist
16	AIRSUS	20 A	Electronically modulated air suspension system
17	AM2	5 A	Multiplex communication system
18	RADIO NO.1	20 A	Air conditioning system, navigation system, Lexus link system
19	PMG	5 A	Electric power control system
20	P-D/C CUT	5 A	Headlight switch, windshield wiper and washer, horn, tilt and telescopic steering column, power windows, power door lock system, door sunshade, rear sunshade, rear seat adjustment, steering wheel switches
21	P DOOR2	10 A	Power door lock system
22	P RR DOOR	25 A	Interior lights, power door lock system, power windows
23	P DOOR 1	25 A	Interior lights, outside rear view mirror, power door lock system, power windows, outside rear view mirror defogger
24	AMP	30 A	Audio system

Advertisements

Engine Compartment Fuse Box №1

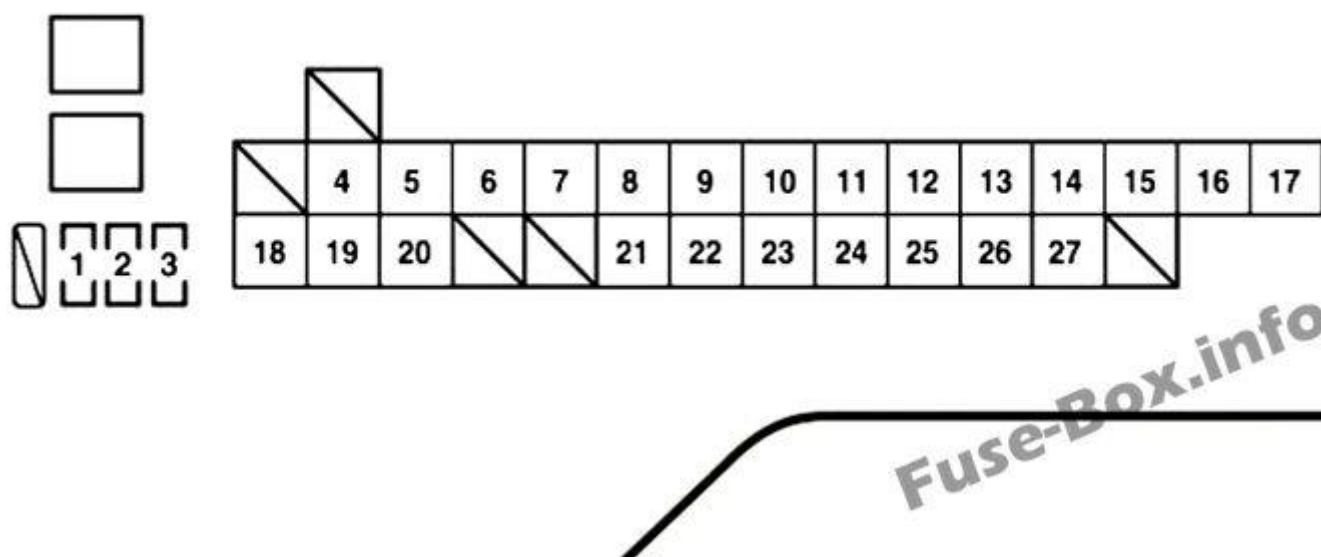


Assignment of the fuses in the Engine Compartment Fuse Box №1 (2009)

№	Name	Ampere	Circuit
1	PTC HTR 3	25 A	PTC heater
2	PTC HTR 1	25 A	PTC heater
3	VSSR	5 A	Electric power control system
4	ALT	180 A	AIR SUS, HTR, DEFOG, FAN NO.1, H-LP CLN, PTC HTR 2, PTC HTR, RR A/C, E/G RM1, D-J/B ALT, P-J/B ALT, LUG-J/B ALT
5	PTC HTR	60 A	PTC HTR 1. PTC HTR 3
6	FAN NO.1	80 A	Electric cooling fans
7	E/GRM1	80 A	DEICER, WIP, E/G RM-IG1-1, E/G RM-IG1-2, NV IR, FR FOG, FR CTRL ALT, ABS MTR1
8	D-J/B ALT	80 A	OBD, D P/SEAT, TI&TE, AM1, D S/HTR, S/ROOF, D RR S/HTR, D-IG1-1, D-IG1-2, D-IG1-3, D-IG1-4, D-ACC, PWR OUTLET, PANEL
9	P-J/B ALT	60 A	P P/SEAT 1, P P/SEAT 2, A/C, RR SEAT, P S/HTR, P RR S/HTR, P-IG1-1, P-IG1-2, P-IG1-3, P-IG1-4, P-ACC, P-CIG, AIR SUS

No	Name	Ampere	Circuit
10	LUG-J/B ALT	50 A	PTL, RL SEAT, B/ANC, FUEL OPN, RR S/SHADE, PSB, RR-IG1-1, RR-IG1-2, RR-IG1-3, RR-IG1-4, RR-ACC, RR-CIG, AC100/115V
11	RR A/C	30 A	Rear air conditioning system
12	AIRSUS	40 A	Electronically modulated air suspension system
13	HTR	50 A	Air conditioning system
14	NOISE FILTER	40 A	—
15	DEFOG	40 A	Rear window defogger
16	PTC HTR 2	50 A	PTC heater
17	H-LP CLN	30 A	Headlight cleaner
18	E/G RM B	80 A	D/C CUT 1, FR CTRL BAT, EPS ECU, ABS MAIN 2, ABS MTR2, ST, H-LP RL, H-LP LL, H-LP LVL
19	EFI	80 A	VVT, ETCS, ABS MAIN 1, EDU1, EDU2, A/F, ECU-IG, IGN, INJ, P-J/B
20	EPS	80 A	DC-DC converter
21	EFI NO.1	40 A	Multiport fuel injection system/ sequential multiport fuel injection system
22	E/G RM B2	30 A	ABS MAIN 3, ECU-B2, D/C CUT 2
23	D-J/B B	40 A	D-DOOR 1, D RR DOOR, HAZ, D-DOOR 2, STR LOCK, STOP, SECURITY
24	LUG J/B B	40 A	STOP LP 1, STOP LP 2, TAIL, E-PKB, ABS MAIN 4

№	Name	Ampere	Circuit
25	P-J/B B	40 A	P DOOR 1, P RR DOOR, AM2, RADIO NO.1, P-D/C CUT, P DOOR 2, PMG, AMP
26	VGRS	40 A	VGRS
27	BAT VB	30 A	VSSR

Engine Compartment Fuse Box №2

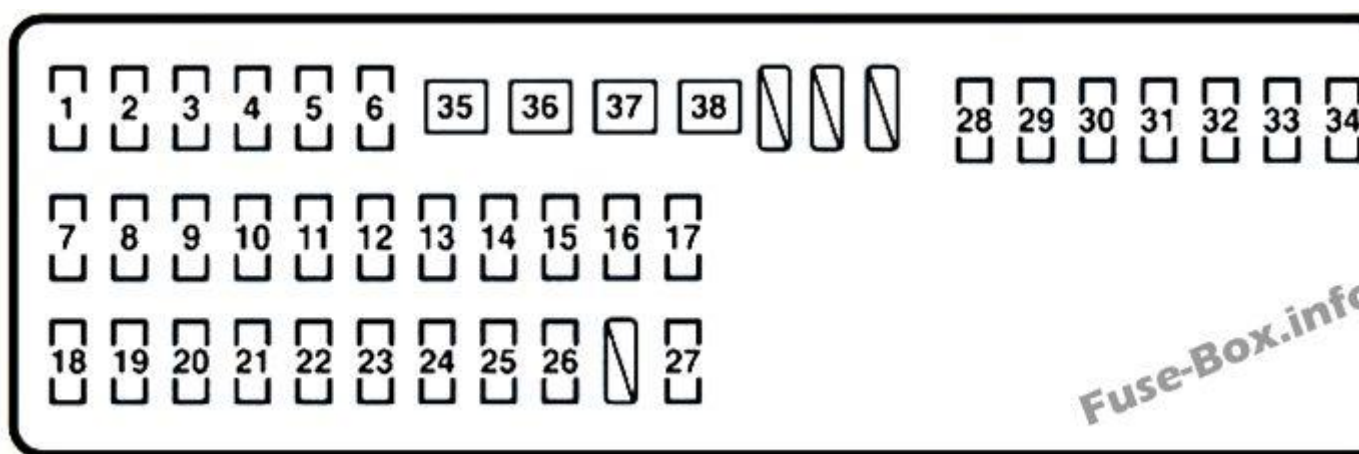

Advertisements

Assignment of the fuses in the Engine Compartment Fuse Box №2 (2009)

№	Name	Ampere	Circuit
1	DEICER	25 A	Windshield wiper de-icer
2	WIP	30 A	Windshield wiper
3	ABS MAIN 2	10 A	ABS, VSC, VDIM
4	IGCT1	25 A	Smart access system with push-button start
5	EPS ECU	10 A	EPS
6	FR CTRL BAT	30 A	Headlight high beams, horns


No	Name	Ampere	Circuit
7	E/G RM-IG1-2	10 A	AFS, headlight high beams, parking lights, side marker lights, horns, windshield washer, exhaust system, headlight cleaner
8	E/G RM-IG1-1	10 A	Starting system, EPS, electric cooling fans, AFS
9	H-LP LL	15 A	Headlight low beam (left)
10	ABS MAIN1	10 A	Brake system, pre-collision seat belt
11	H-LP RL	15 A	Headlight low beam (right)
12	ETCS	10 A	Multiport fuel injection system/ sequential multiport fuel injection system
13	NV IR	10 A	Cruise control system
14	IGN	10 A	Multiport fuel injection system/ sequential multiport fuel injection system, brake system, SRS airbag system
15	ECU-IG	10 A	Multiport fuel injection system/ sequential multiport fuel injection system, stop lights, pre-collision seat belt, charging system
16	D/C CUT 1	30 A	ECU-B, D MPX-B1, D MPX-B 2, DOME
17	ECU-B	10 A	Headlight high beams, parking lights, horns, windshield washer, pre-collision seat belt, headlight cleaner
18	A/F	15 A	Multiport fuel injection system/ sequential multiport fuel injection system, exhaust system
19	EDU2	25 A	Multiport fuel injection system/ sequential multiport fuel injection system
20	FR CTRL ALT	20 A	Windshield washer, headlight cleaner, parking lights, side maker lights

№	Name	Ampere	Circuit
21	EDU1	25 A	Multiport fuel injection system/ sequential multiport fuel injection system
22	RELIEF VLV	10 A	Fuel system
23	FR FOG	15 A	Front fog lights
24	A/C W/P	10 A	Air conditioning system, electric cooling fans
25	H-LP LVL	10 A	Discharge headlights, headlight high beams, parking lights, side marker lights, horns, windshield washer
26	P-J/B	10 A	PIG2, PRR-IG2
27	INJ	10 A	Multiport fuel injection system/ sequential multiport fuel injection system
28	D/C CUT 2	30 A	P MPX-B, RR MPX-B1, RR MPX-B2
29	ECU-B2	5 A	Brake system
30	ABS MAIN 3	10 A	Brake system, pre-collision seat belt
31	EFI MAIN 2	25 A	Multiport fuel injection system/ sequential multiport fuel injection system, exhaust system
32	EFI MAIN	25 A	Multiport fuel injection system/ sequential multiport fuel injection system, fuel system
33	EFI	10 A	Multiport fuel injection system/ sequential multiport fuel injection system, fuel system
34	EFI-B	10 A	Multiport fuel injection system/ sequential multiport fuel injection system
35	ST	30 A	Starter system

№	Name	Ampere	Circuit
36	ABS MTR1	50 A	Brake system
37	ABS MTR2	50 A	Brake system
38	VVT	40 A	Multiport fuel injection system/ sequential multiport fuel injection system

Advertisements

Luggage Compartment Fuse Box

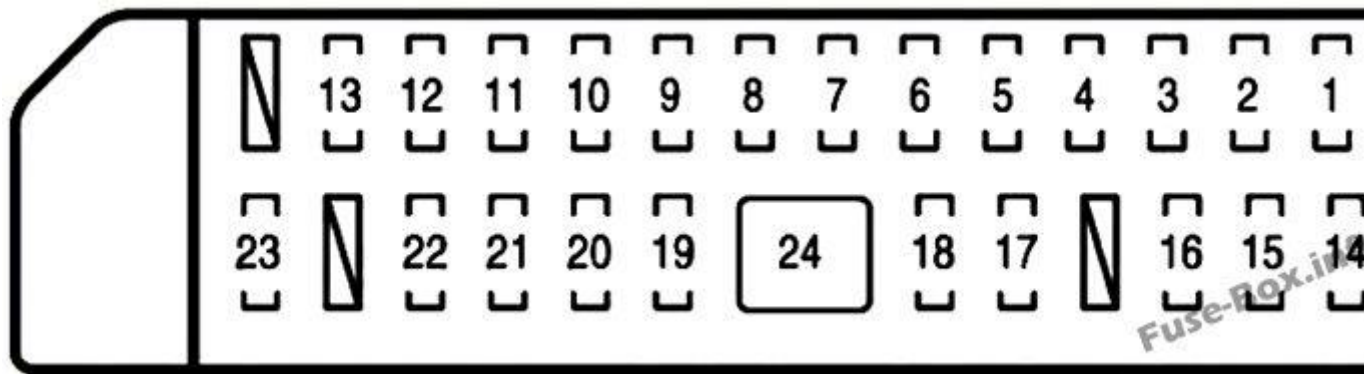

Assignment of the fuses in the trunk (2009)

№	Name	Ampere	Circuit
1	RR-IG1-3	10 A	Climate control seat system
2	RR-IG1-4	10 A	Rear seat adjustment
3	RR-IG1-2	10 A	Power door lock system, cool box, air conditioning system
4	RR-IG1-1	5 A	Capacitor, brake system, pre-collision seat belt, rear seat adjustment
5	RR-ACC	5 A	Audio system, rear seat entertainment system
6	RR-CIG	15 A	Cigarette lighter
7	AC100/115V	15 A	Power outlet

No	Name	Ampere	Circuit
8	RL SEAT	30 A	Rear seat adjustment
9	B/ANC	10 A	Shoulder anchor
10	RR S/SHADE	10 A	Rear sunshade
11	PSB	30 A	Pre-collision seat belt
12	PTL	30 A	Power trunk opener and closer
13	FUEL OPN	15 A	Fuel filler door opener, power trunk opener and closer
14	RR MPX-B1	10 A	Audio system, rear seat entertainment system, power trunk opener and closer
15	RR MPX-B2	5 A	Power door lock system, rear seat adjustment, interior lights, power trunk opener and closer
16	IGCT3	5 A	—
17	RATT FAN	20 A	Ffartrir. cooling fan
18	B-FAN RLY	5 A	Electric cooling fan
19	RR ECU-B	5 A	Seat belt buckle lights, trunk light
20	ABS MAIN4	10 A	Capacitor
21	STOP LP1	10 A	Stop lights, back-up lights
22	STOP LP 2	10 A	Stop lights, high-mounted stoplights
23	TAIL	5 A	Tail lights, license plate lights
24	E-PKB	30 A	Brake system