

Fuse Layout Toyota Tacoma (1995-2000)

*In this article, we consider the first-generation Toyota Tacoma before a facelift, produced from 1995 to 2000. Here you will find fuse box diagrams of **Toyota Tacoma 1995, 1996, 1997, 1998, 1999 and 2000**, get information about the location of the fuse panels inside the car, and learn about the assignment of each fuse (fuse layout).*

See other Toyota Tacoma:

Fuse Layout Toyota Tacoma (1995-2000)



Cigar lighter (power outlet) fuses:


- 1995-1997: #25 "CIG" in the instrument panel fuse box.
- 1998-2000: #26 "CIG" in the instrument panel fuse box and #1 "PWR OUTLET" in the engine compartment fuse box.

Fuse Box Location

The fuse box is located behind the cover to the left and below the steering wheel.




Engine Compartment

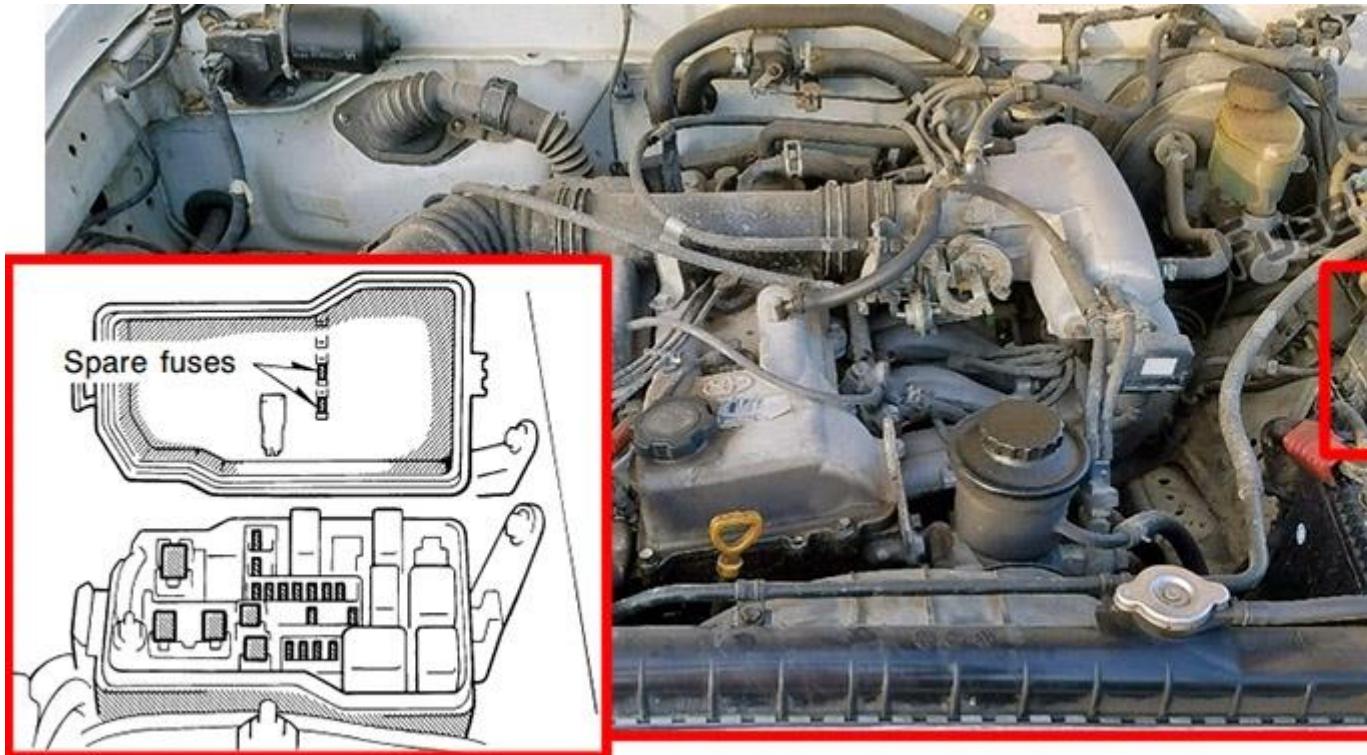

Fuse Box Diagrams

1995, 1996 and 1997


Passenger Compartment

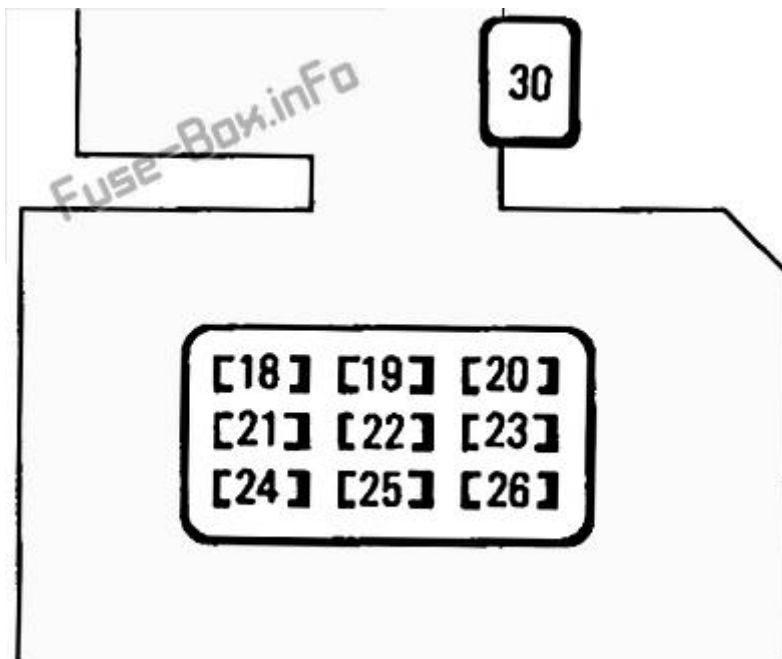

Assignment of the fuses in the instrument panel (1995-1997)

No	Name	Amp	Description
18	4WD	15A	A.D.D. control system, four-wheel drive control system, rear differential lock system
19	GAUGE	10A	Gauges and meters, back-up lights, cruise control system, power antenna, power door lock control system, electronically controlled automatic transmission system, starting system, charging system, heater control system
20	TURN	10A	Turn signal lights
21	ECU-IG	15A	Cruise control system, anti-lock brake system, shift lock system
22	WIPER	20A	Windshield wipers and washer
23	IGN	7.5A	Discharge warning light, SRS airbag system
24	RADIO	7.5A	Car audio system, power antenna
25	CIG	15A	Cigarette lighter, clock, power rear view mirrors, back-up lights, shift lock system
26	ECU-B	15A	SRS airbag warning light, daytime running light system, cruise control system, anti-lock brake system
30	POWER	30A	Power windows, power door lock control system

Engine Compartment

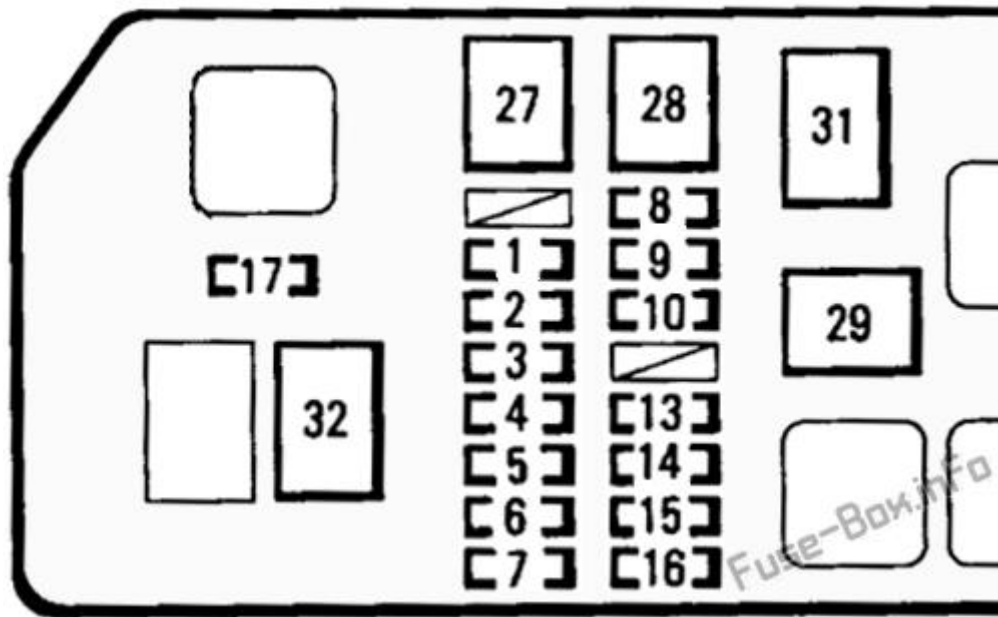


Assignment of the fuses in the engine compartment (1995-1997)

No	Name	Amp	Description
1	STOP	15A	Stop lights, high-mounted stoplight, cruise control system
2	ALT-S	7.5A	Charging system
3	STA	7.5A	Multiport fuel injection system/sequential multiport fuel injection system, starting system, gauges and meters
4	OBD	10A	On-board diagnosis system
5	EFI	15A	Multiport fuel injection system/sequential multiport fuel injection system
6	HORN	15A	Emergency flashers, horns

No	Name	Amp	Description
7	DOME	15A	Car audio system, power antenna, interior light, clock, ignition switch light, personal lights, door courtesy lights
8	TAIL	10A	Tail lights, license plate lights
9	PANEL	10A	Emergency flashers, heater control system, air conditioning cooling system, gauges and meters, clock, car audio system overdrive indicator light, glovebox light, cigarette lighter, instrument panel lights
10	A/C	10A	Air conditioning cooling system
13	HEAD (HI RH)	10A	With DRL: Right-hand headlight (high beam), hi-beam indicator light
13	HEAD (RH)	10A	Without DRL: Right-hand headlight
14	HEAD (HI LH)	10A	With DRL: Left-hand headlight (high beam)
14	HEAD (LH)	10A	Without DRL: Left-hand headlight
15	HEAD (LO RH)	10A	With DRL: Right-hand headlight (low beam); Without DRL: Not Used
16	HEAD (LO LH)	10A	With DRL: Left-hand headlight (low beam); Without DRL: Not Used
17	DRL	7.5A	With DRL: Daytime running light system; Without DRL: Not Used

No	Name	Amp	Description
27	HEATER	40A	"A/C" fuse
28	AM1	40A	All components in "STA", "ECU-B", "POWER", "RADIO", "CIG", "GAUGE", "TURN", "ECU-IG", "WIPER" and "4WD" fuses
29	AM2	30A	All components in "IGN" fuse
31	ABS	60A	Anti-lock brake system
32	ALT	80A	All components in "ABS", "AM1", "STA", "ECU-B", "POWER", "RADIO", "CIG", "GAUGE", "TURN", "ECU-IG", "WIPER", "4WD", "HEATER", "A/C", "TAIL", "PANEL", "STOP" and "ALT-S" fuses

Passenger Compartment

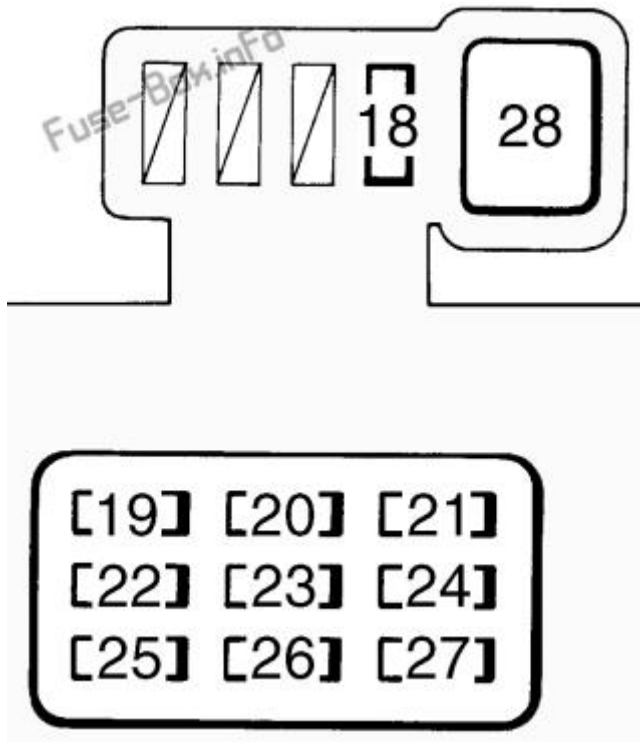


Advertisements

Assignment of the fuses in the instrument panel (1998-2000)

No	Name	Amp	Description
18	STA	7.5A	Clutch start cancel system, starting system, gauges and meters
19	4WD	20A	A.D.D. control system, four-wheel drive control system, rear differential lock system
20	GAUGE	10A	Gauges and meters, back-up lights, cruise control system, power antenna, power door lock control system, electronically controlled automatic transmission system, starting

No	Name	Amp	Description
			system, charging system, air conditioning system
21	TURN	10A	Turn signal lights, emergency flashers
22	ECU-IG	15A	Cruise control system, anti-lock brake system, automatic transmission shift lock system
23	WIPER	20A	Windshield wipers and washer
24	IGN	7.5A	Discharge warning light, SRS airbag system, seat belt pretensioners, multiport fuel injection system/ sequential multiport fuel injection system
25	RADIO	7.5A	Car audio system, power antenna
26	CIG	15A	Cigarette lighter, clock, power rear view mirrors, back-up lights, automatic transmission shift lock system, SRS airbag system, seat belt pretensioners
27	ECU-B	15A	SRS warning light, daytime running light system, cruise control system, SRS airbag system, seat belt pretensioners
28	POWER	30A	Power windows

Engine Compartment

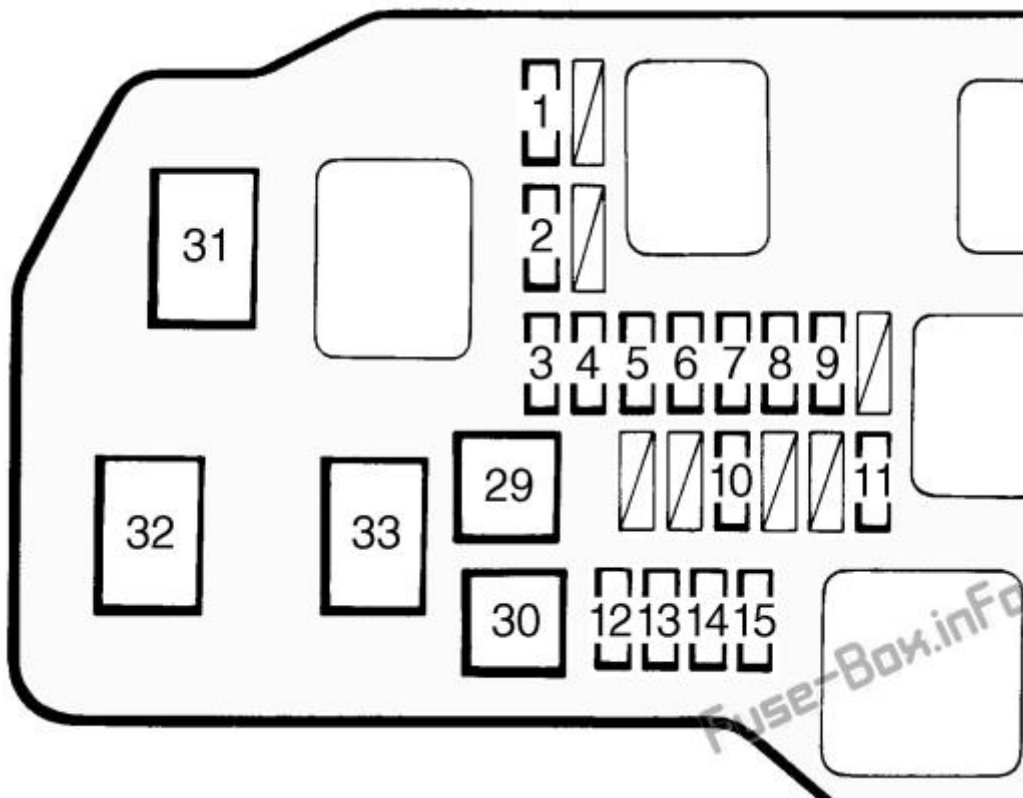

Assignment of the fuses in the engine compartment (1998-2000)

No	Name	Amp	Description
1	PWR OUTLET	15A	Power outlet
2	DRL	7.5A	with DRL: Daytime running light system; without DRL: Not Used
3	HEAD (HI RH)	10A	with DRL: Right-hand headlight (high beam), high beam indicator light; without DRL: Not Used
4	HEAD (HI LH)	10A	with DRL: Left-hand headlight (high beam); without DRL: Not Used
5	HEAD (LO RH)	10A	with DRL: Right-hand headlight (low beam)

No	Name	Amp	Description
5	HEAD (RH)	10A	without DRL: Right-hand headlight
6	HEAD (LO LH)	10A	with DRL: Left-hand headlight (low beam)
6	HEAD (LH)	10A	without DRL: Left-hand headlight
7	TAIL	10A	Tail lights, licence plate lights
8	PANEL	10A	Emergency flashers, heater control system, air conditioning system, gauges and meters, clock, car audio system, overdrive indicator light, glove box light, cigarette lighter, instrument panel lights, rear differential lock system, Multiport fuel injection system/ sequential multiport fuel injection system, electronically controlled automatic transmission system
9	A.C.	10A	Air conditioning system
10	STOP	15A	Stop lights, high mounted stoplight, cruise control system
11	ALT-S	7.5A	Charging system
12	DOME	15A	Car audio system, power antenna, interior light, clock, ignition switch light, personal lights, door courtesy lights
13	OBD	10A	On-board diagnosis system

No	Name	Amp	Description
14	HORN	15A	Emergency flashers, horns
15	EFI	20A	Multiport fuel injection system/sequential multiport fuel injection system
29	AM1	40A	Starting system
30	AM2	30A	Ignition system
31	ABS	60A	Anti-lock brake system
32	HEATER	40A	"A.C." fuse
33	ALT	120A	"ABS", "AM1", "HEATER", "A.C", "TAIL", "PANEL", "STOP" and "ALT-S", "PWR OUTLET" fuses