


17.Rearview Mirror

A: REMOVAL


CAUTION:

- Never reuse the spring. If the rear view mirror assembly is removed from the mirror base, the holding strength of the spring will become reduced and the rear view mirror assembly may fall off.
- Be careful not to damage the mirror surface and windshield glass.

1) Turn the mirror base 90° clockwise or counter-clockwise to remove it.

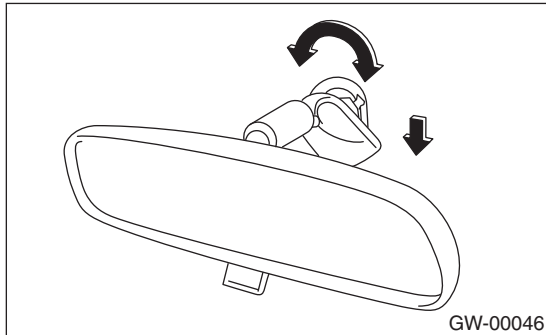

2) Remove the spring from the mirror base.

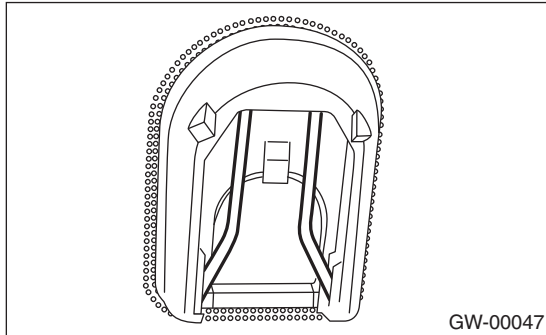

3) If the mirror base is damaged, use piano wire or a spatula to remove.

B: INSTALLATION

Install in the reverse order of removal.

NOTE:

When the mirror base is removed, it is attached according to the following procedures.

1. Remove the old adhesive completely.
2. Attach the mirror base by matching with the mark on the front glass.
3. Make sure the mirror base is securely attached and then install the spring to it.

Adhesive:

REPAIR KIT IN MR (Part No. 65029FC000) or equivalent

C: INSPECTION

- Make sure that the mirror is not damaged.
- Make sure that the spring is not damaged.
- Make sure that the mirror base is not damaged.