

2. Power Window System

A: WIRING DIAGRAM

<Ref. to WI-131, WIRING DIAGRAM, Power Window System.>

B: INSPECTION

Symptom	Repair order
All power windows do not operate.	1. Fuse (SBF-4) 2. Power window circuit breaker 3. Power window relay 4. Wiring harness
Particular window does not operate.	1. Power window main switch 2. Power window sub-switch 3. Power window motor 4. Wiring harness
"Window Lock" does not operate.	Power window main switch

C: NOTE

Refer to the respective sections for removal of power window system components.

- Power window control switch <Ref. to GW-8, Power Window Control Switch.>
- Front door glass <Ref. to GW-10, Front Door Glass.>
- Front regulator and motor ASSY <Ref. to GW-11, Front Regulator and Motor Assembly.>
- Rear door glass <Ref. to GW-17, Rear Door Glass.>
- Rear regulator and motor ASSY <Ref. to GW-18, Rear Regulator and Motor Assembly.>