

Power Window Control Switch


GLASS/WINDOWS/MIRRORS

3. Power Window Control Switch

A: REMOVAL


1. MAIN SWITCH

- 1) Disconnect the ground cable from the battery.
- 2) Open the cover and remove the screws, then remove the power window main switch panel.

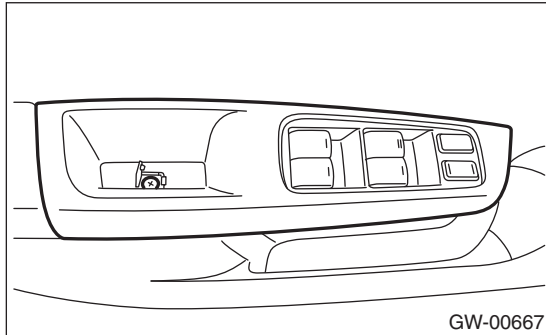

NOTE:


Remove it from the cutout portion at the tip of the switch panel.

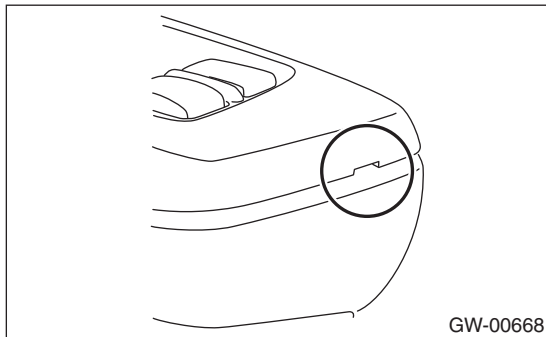

- 3) Disconnect the connector.
- 4) Remove the screws and remove the power window main switch assembly.


2. SUB-SWITCH

- 1) Open the cover and remove the screws, then remove the power window sub-switch panel.

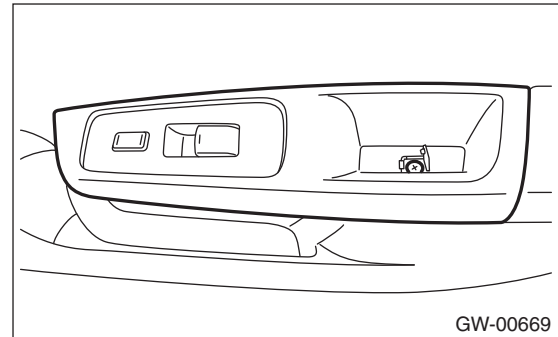

NOTE:

Remove from the notched part at the edge of the switch panel.

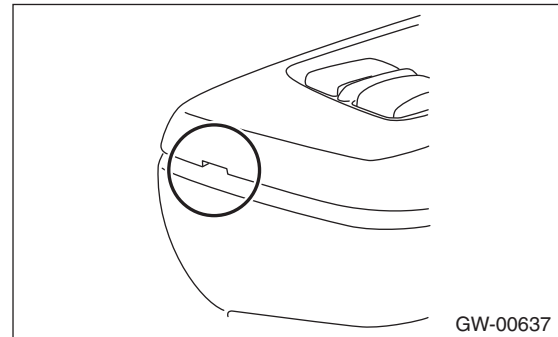

- 2) Disconnect the connector.
- 3) Remove the screws and remove the power window sub-switch assembly.


B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

1. MAIN SWITCH

- 1) Remove the main switch. <Ref. to GW-8, MAIN SWITCH, REMOVAL, Power Window Control Switch.>
- 2) Measure the switch resistance.

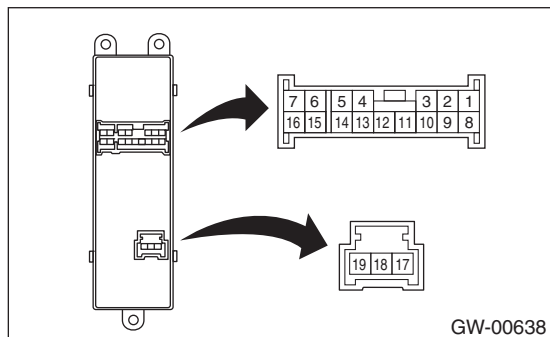


	Switch position	Terminal No.	Standard
Driver's side	UP	14 and 16 13 and 19	Less than 1 Ω
	OFF	14 and 13 14 and 16	1 MΩ or more
		17 and 18	Less than 1 Ω
	DOWN	14 and 13 16 and 19	Less than 1 Ω
	AUTO DOWN	14 and 13 16 and 19	Less than 1 Ω
Passenger's side	UP	14 and 8 12 and 19	Less than 1 Ω
	OFF	14 and 12 14 and 8	1 MΩ or more
		8 and 12 8 and 19 12 and 19	Less than 1 Ω
	DOWN	14 and 12 8 and 19	Less than 1 Ω
Rear LH	UP	14 and 7 5 and 19	Less than 1 Ω
	OFF	14 and 7 14 and 5	1 MΩ or more
		19 and 7 19 and 5 7 and 5	Less than 1 Ω
	DOWN	14 and 5 7 and 19	Less than 1 Ω
Rear RH	UP	14 and 1 3 and 19	Less than 1 Ω
	OFF	14 and 1 14 and 3	1 MΩ or more
		19 and 3 19 and 1 3 and 1	Less than 1 Ω
	DOWN	14 and 3 1 and 19	Less than 1 Ω

Replace the main switch if faulty.

2. SUB-SWITCH

- 1) Remove the sub-switch. <Ref. to GW-8, SUB-SWITCH, REMOVAL, Power Window Control Switch.>
- 2) Measure the sub-switch resistance.

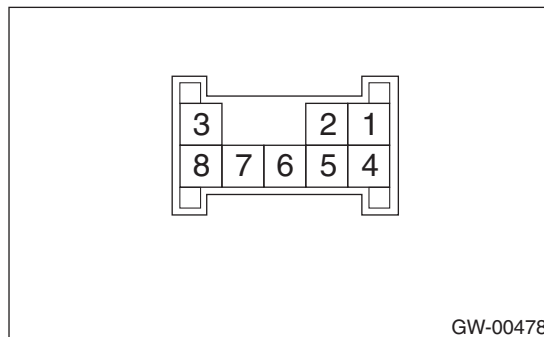

	Switch position	Terminal No.	Standard
Passenger seat, rear	UP	4 and 5 6 and 7	Less than 1 Ω
	OFF	7 and 4 8 and 4	1 MΩ or more
		5 and 8 6 and 7	Less than 1 Ω
	DOWN	4 and 6 5 and 8	Less than 1 Ω

Replace the sub-switch if faulty.