



4. Front Door Glass

A: REMOVAL

- 1) Remove the front door trim. <Ref. to EI-42, REMOVAL, Door Trim.>
- 2) Remove the sealing cover. <Ref. to EB-19, REMOVAL, Front Sealing Cover.>
- 3) Remove the pad.
- 4) Operate the power window switch to move the glass, and remove the two bolts.

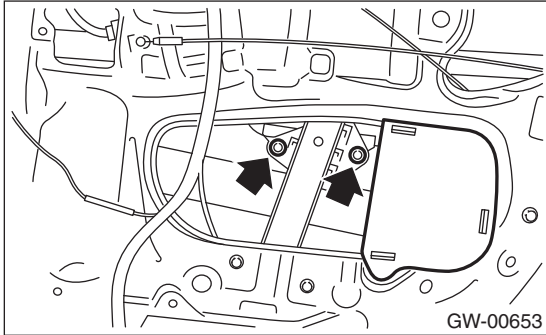

- 5) Tilt the door glass forward, and remove from the glass run rubber.
- 6) Remove the door glass.

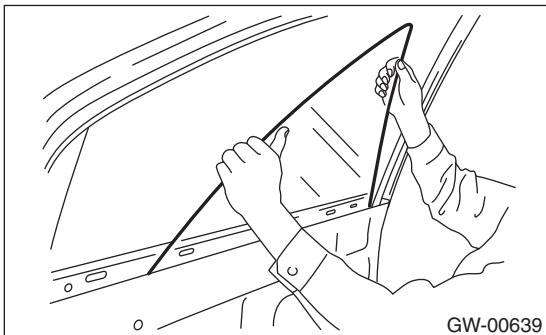

CAUTION:

Avoid impact and damage to the glass.

B: INSTALLATION

Install in the reverse order of removal.

CAUTION:

Make sure that the glass run rubber is affixed securely to the door frame and sash.

Tightening torque:

Refer to “**COMPONENT**” of “*General Description*”. <Ref. to GW-3, **FRONT DOOR GLASS, COMPONENT, General Description.**>