


5. Front Regulator and Motor Assembly

A: REMOVAL

- 1) Remove the front door glass. <Ref. to GW-10, REMOVAL, Front Door Glass.>
- 2) Disconnect the motor connector.
- 3) Remove the seven bolts, and remove the regulator and motor assembly.

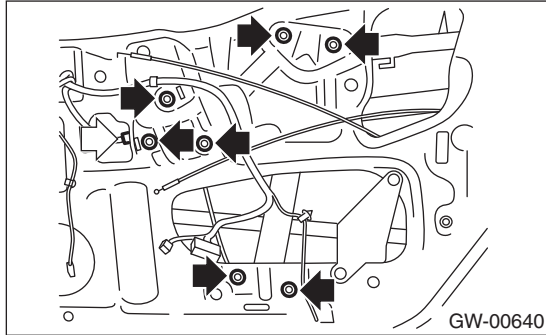

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

Refer to “COMPONENT” of “General Description”. <Ref. to GW-3, FRONT DOOR GLASS, COMPONENT, General Description.>

C: INSPECTION

- 1) Check that the power window motor rotates properly when the battery voltage is applied to the terminals of the motor connector.
- 2) Change polarity of the battery connection to the terminals to check that the motor rotates in reverse direction.