


Outer Mirror Assembly

GLASS/WINDOWS/MIRRORS

8. Outer Mirror Assembly

A: REMOVAL

- 1) Remove the front door trim. <Ref. to EI-42, REMOVAL, Door Trim.>
- 2) Disconnect the outer mirror connector.
- 3) Remove the bolts, then remove the outer mirror assembly.

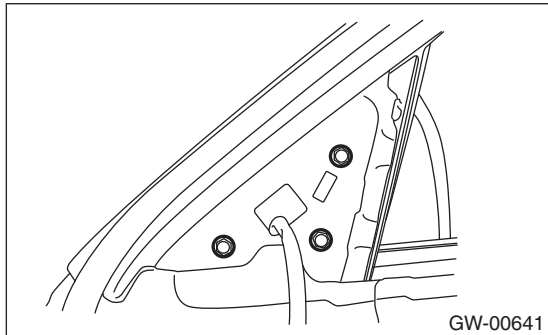

B: INSTALLATION

Install in the reverse order of removal.


Tightening torque:

4.5 N·m (0.46 kgf-m, 3.3 ft-lb)

C: INSPECTION

Check to ensure that the outer mirror moves properly when the battery voltage is applied to terminals.


Model without mirror heater

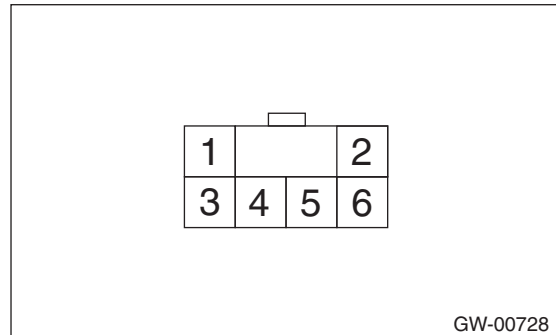

Switch position	Terminal No.
OFF	—
UP	4 (+) and 6 (–)
DOWN	6 (+) and 4 (–)
LEFT	5 (+) and 6 (–)
RIGHT	6 (+) and 5 (–)

If defective, replace the outer mirror.

Model with mirror heater

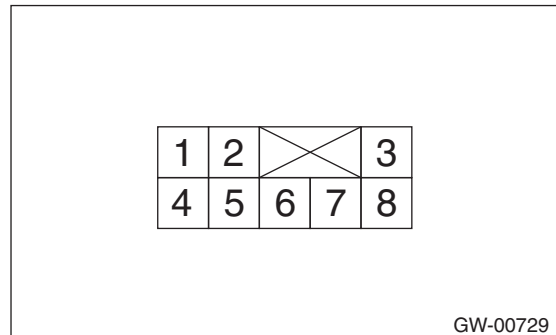

Switch position	Terminal No.
OFF	—
UP	6 (+) and 8 (–)
DOWN	8 (+) and 6 (–)
LEFT	7 (+) and 8 (–)
RIGHT	8 (+) and 7 (–)

If defective, replace the outer mirror.