



9. Outer Mirror

A: REPLACEMENT

- 1) Face the mirror upward.
- 2) Lift the lower part and the outer side of the mirror, and remove the connections (1) and (2).

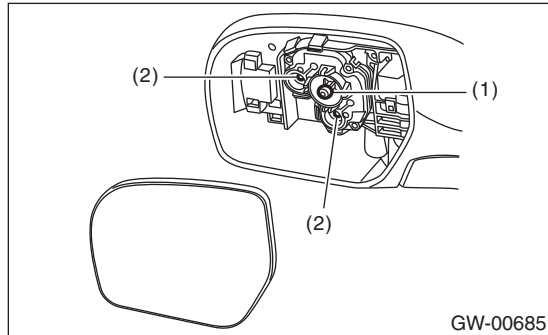

- 3) Disconnect the mirror heater connector. (Model with mirror heater)

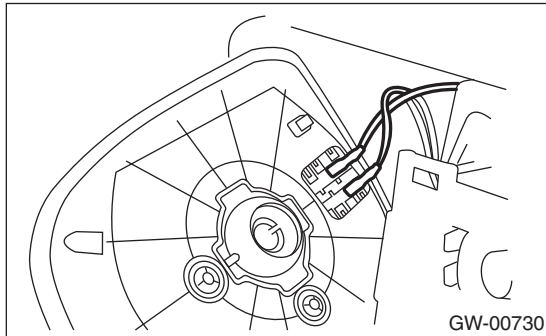

- 4) Attach the mirror to the connection (1), and attach the worm to the connection (2).

CAUTION:

When installing the mirror, insert the worm securely.