


Oldsmobile Bravada 1998 fuse box diagram

Instrument panel Fuse Block

The fuse block is under the instrument panel on the driver's side.

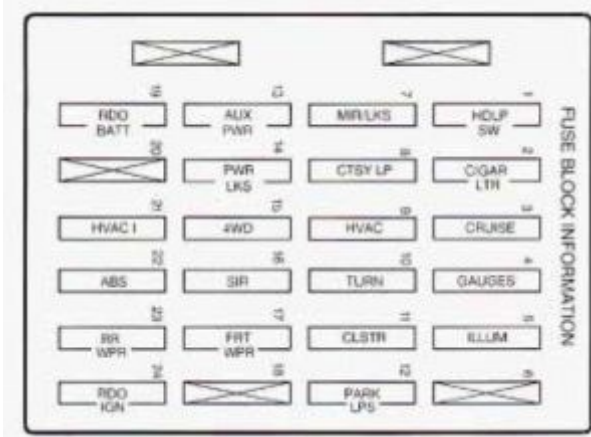

Oldsmobile Bravada – fuse box – instrument

panel

Fuse/Circuit Breaker	Usage
A	Not Used
B	Not Used
1	Headlamp Switch, Body Control Module, Headlamp Relay
2	Cigarette Lighter, Data Link Connector
3	Cruise Control Module and Switch, Body Control Module, Heated Seats
4	Gages, Body Control Module, Instrument Panel Cluster
5	Interior Lights
6	Not Used
7	Power Outside Mirror, Power Lock Relay
8	Courtesy Lamps, Battery Run-Down Protection
9	HVAC Control Head (Manual)
10	Turn Signal
11	Cluster, Engine Control Module
12	Parking Lamps, Power Window Switch, Body Control Module, Ashtray Lamp
13	Auxiliary Power
14	A/C Compressor Battery Feed
15	4WD Switch, Engine Controls (VCM, PCM, Transmission
16	Supplemental Inflatable Restraint, SDM Module
17	Front Wiper
18	Not Used

ECM 1	Engine Control Module Injectors
HORN	Horn
BTSI	Brake-Transmission Shift Interlock
BIU LP	Back-up Lamps
AIC	Air Conditioning
RAP	Retained Accessory Power
O2	Oxygen Sensor
IGN B	Column Feed, IGN 2, 3, 4
DRL	Daytime Running Lamps
FOG LP	Fog Lamps
IGN A	Starting and Charging IGN 1
STUD #2	Accessory Feeds, Electric Brake
PARKLP	Parking Lamps
LR PRK	Left Rear Parking Lamps
IGN C	Starter Solenoid. Fuel Pump, PRNDL
HTDSEAT	Heated Seat
ATC	Active Transfer Case
RRDFOG	Rear Defogger
HVAC	HVAC System
TRCHMSL	Trailer Center High-Mount stop Lamp
RR WIW	Rear Window Wiper
CRANK	Clutch Switch, NSBU Switch
HAZLP	Hazard Lamps
VECHMSL	Vehicle Center High-Mount Stop Lamp
HTDMTR	Heated Mirror
STOPLP	Stoplan1ps
TBC	Truck Body Computer