



## F RELAY LOCATIONS

[Engine Compartment]

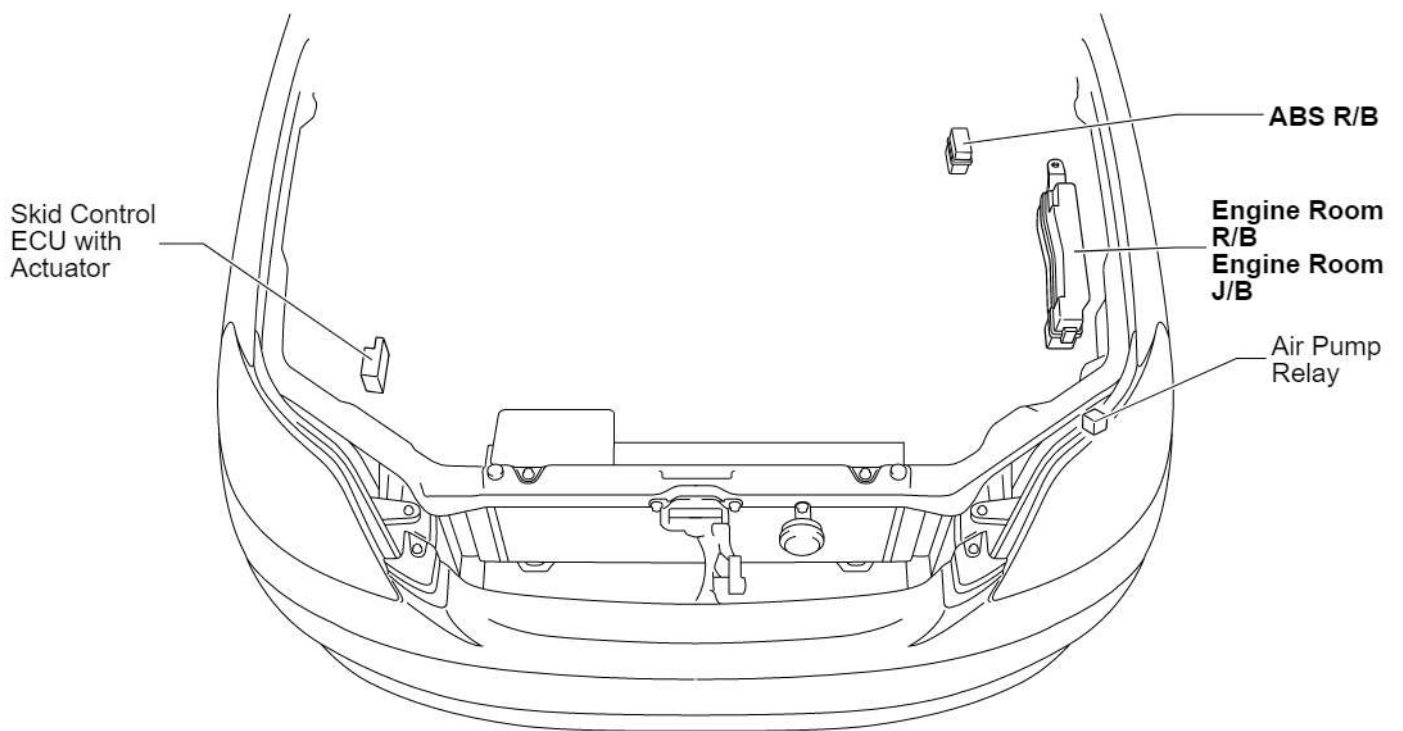


## [Instrument Panel]

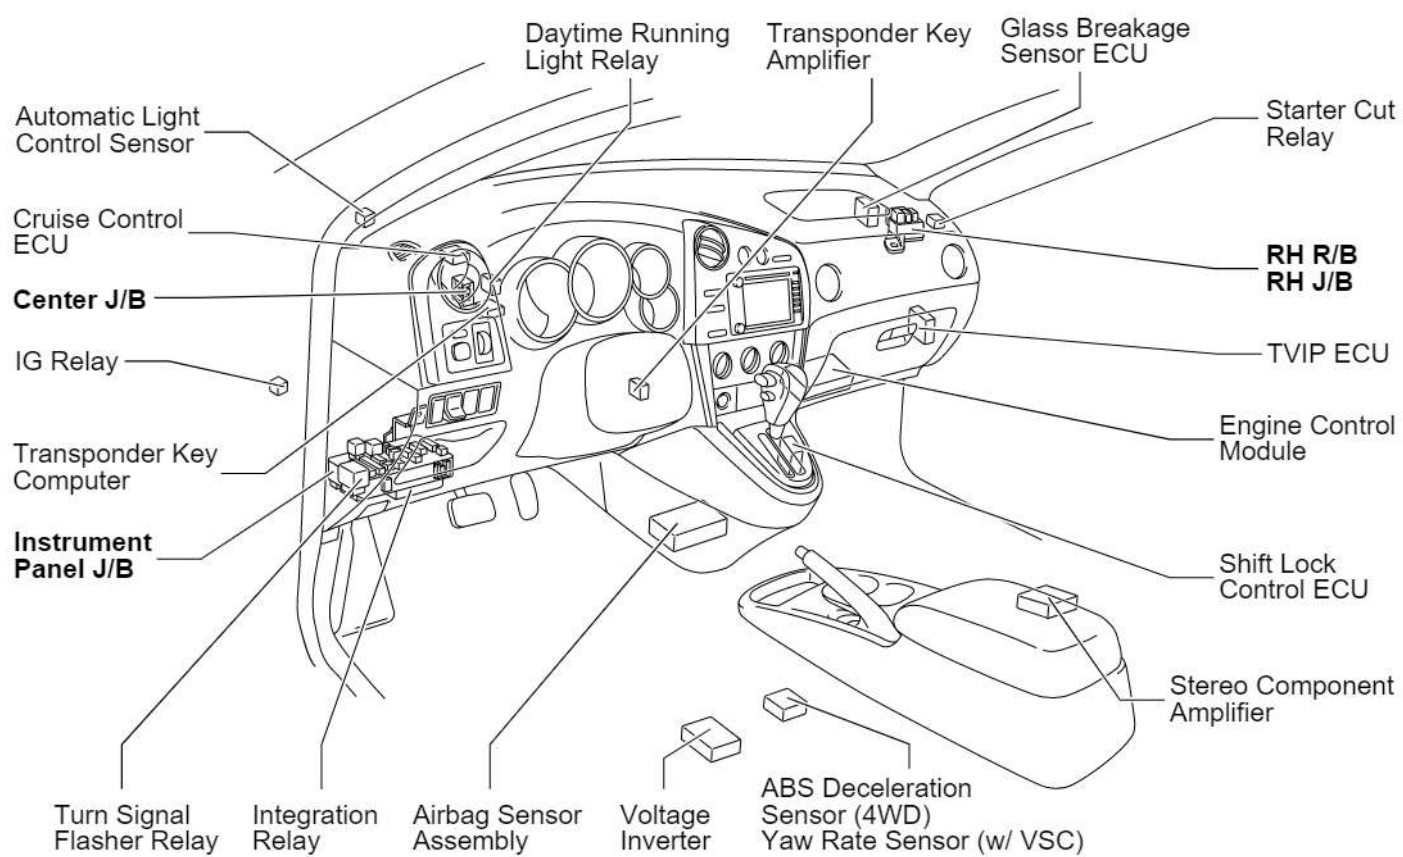


## F RELAY LOCATIONS

---

[Body]

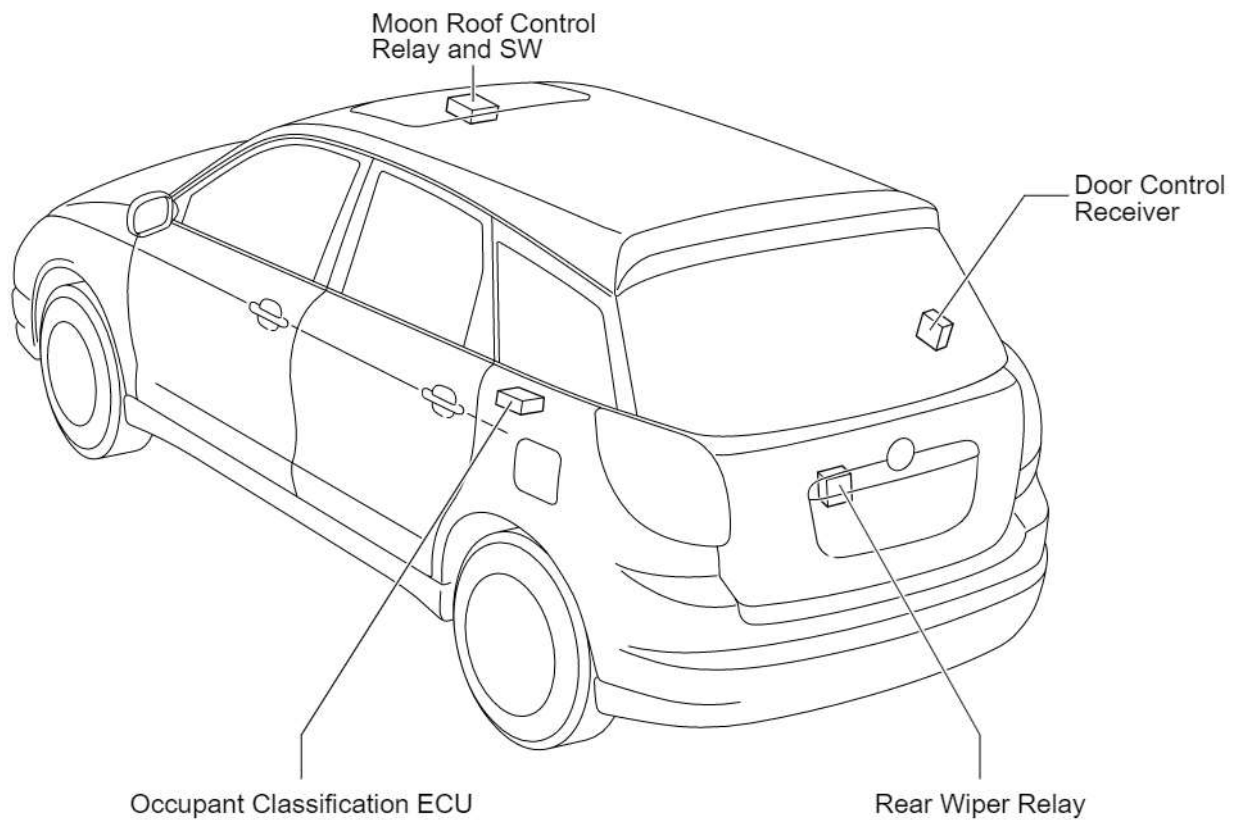



|                     |                                       |
|---------------------|---------------------------------------|
| ① : Engine Room R/B | Engine Compartment Left (See Page 20) |
| ○ : Engine Room J/B |                                       |

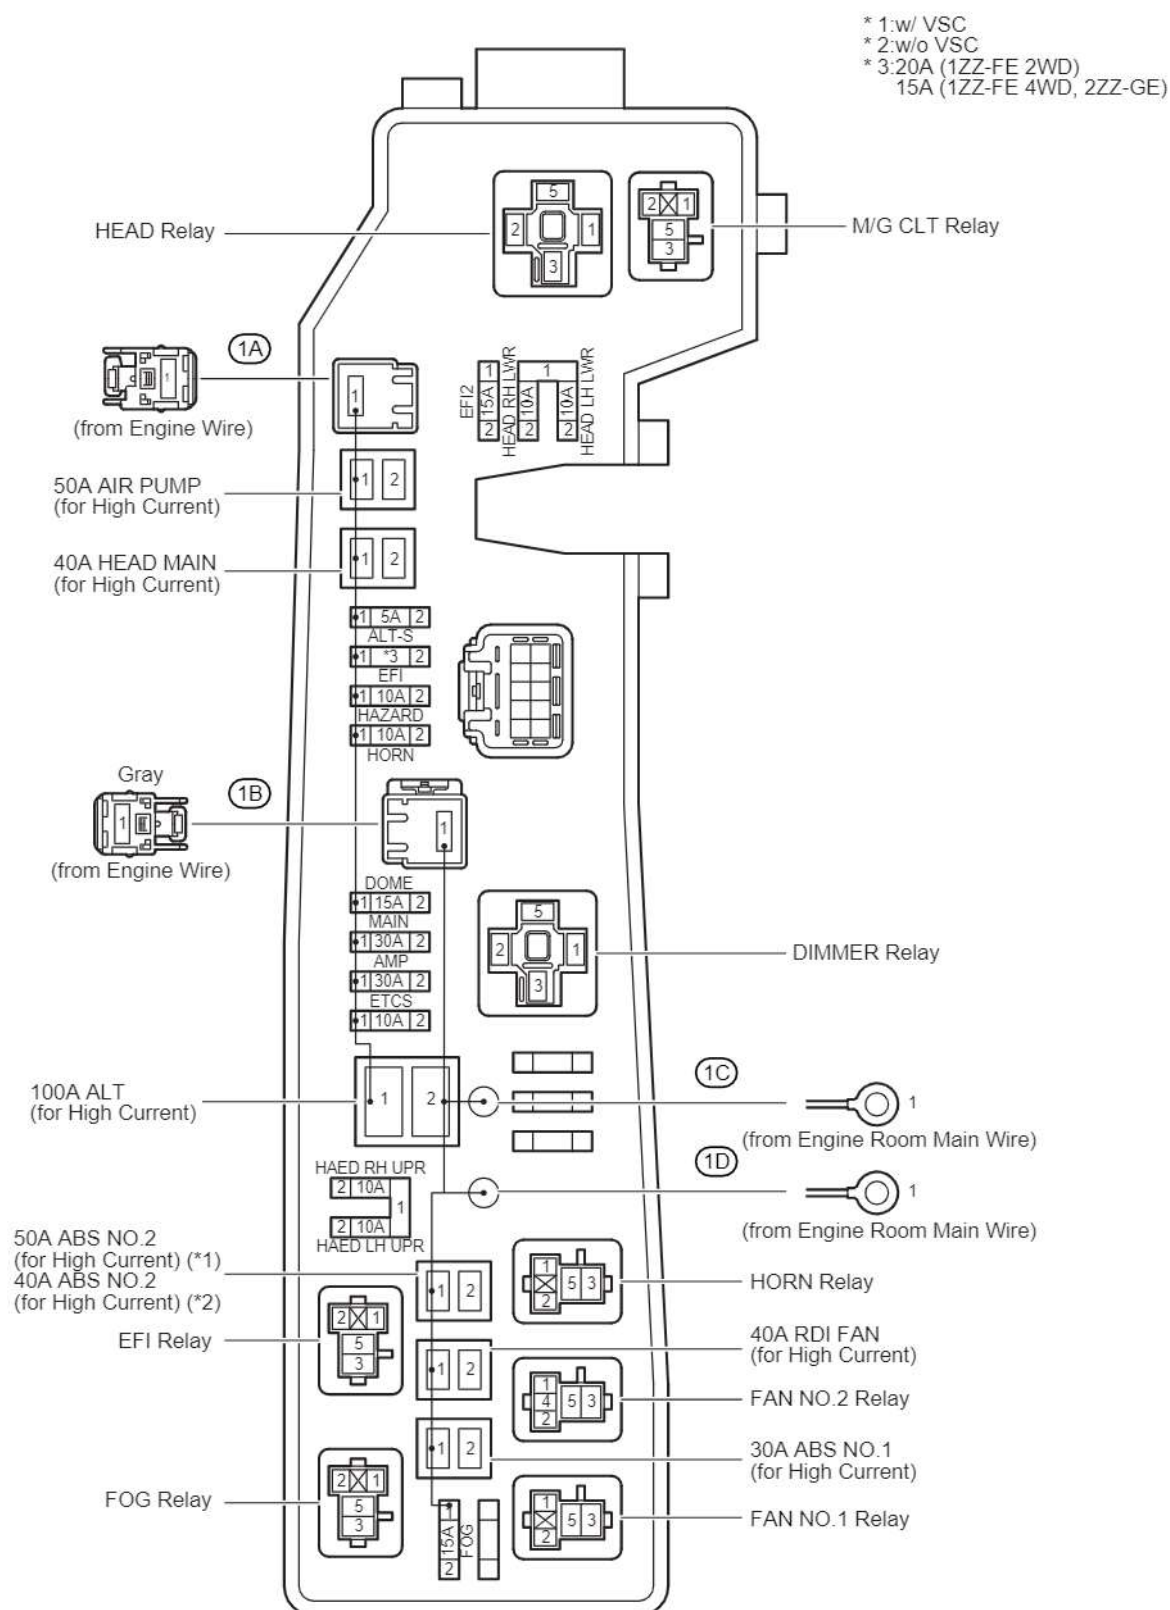

## F RELAY LOCATIONS


 : Instrument Panel J/B      Lower Finish Panel (See Page 21)

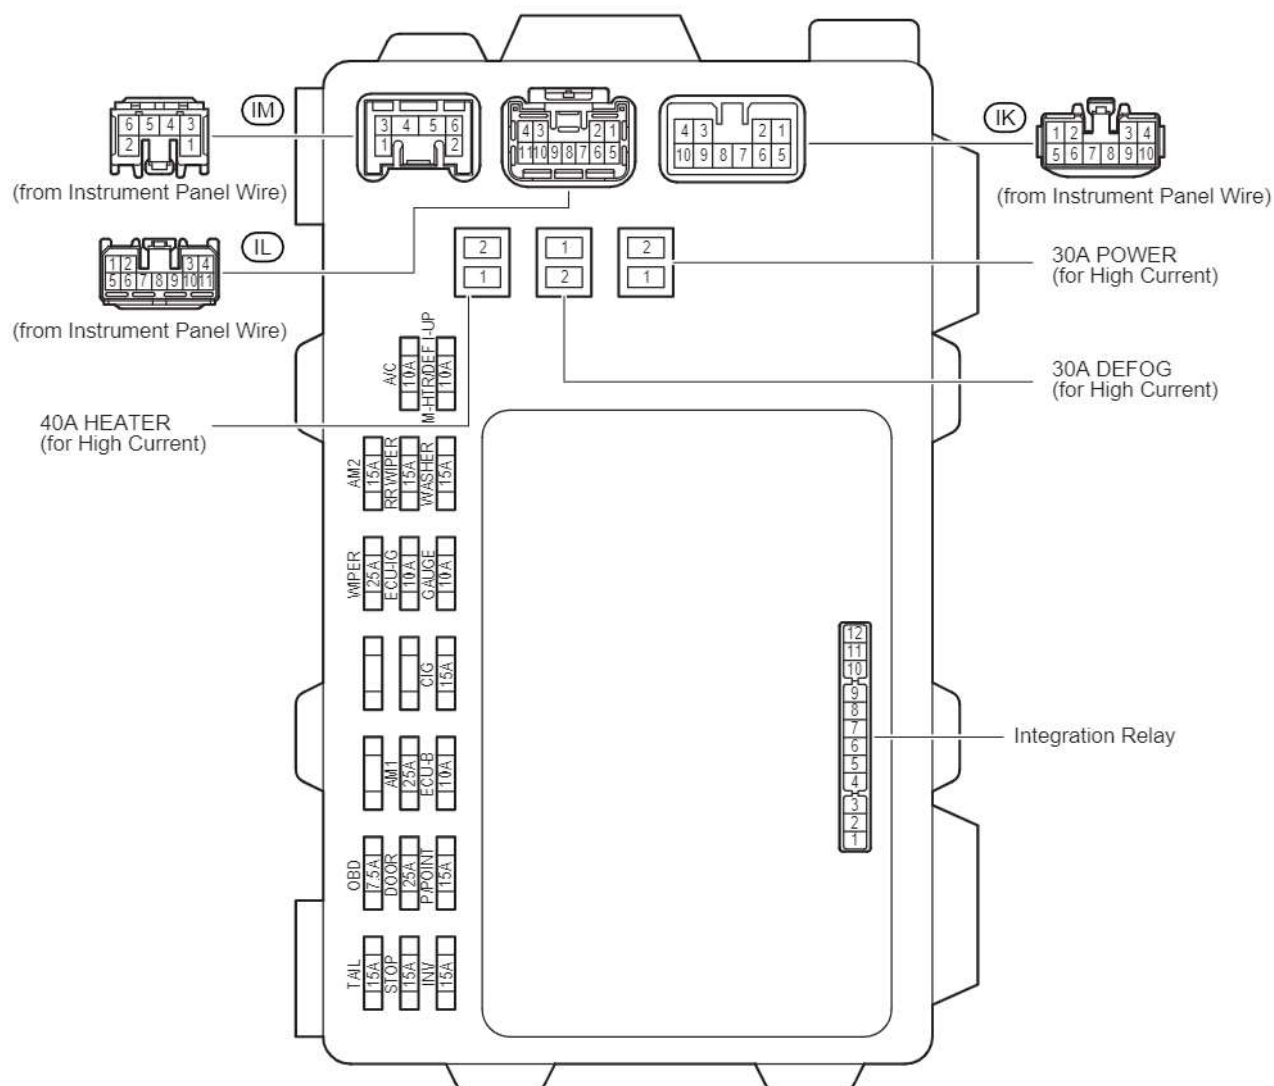

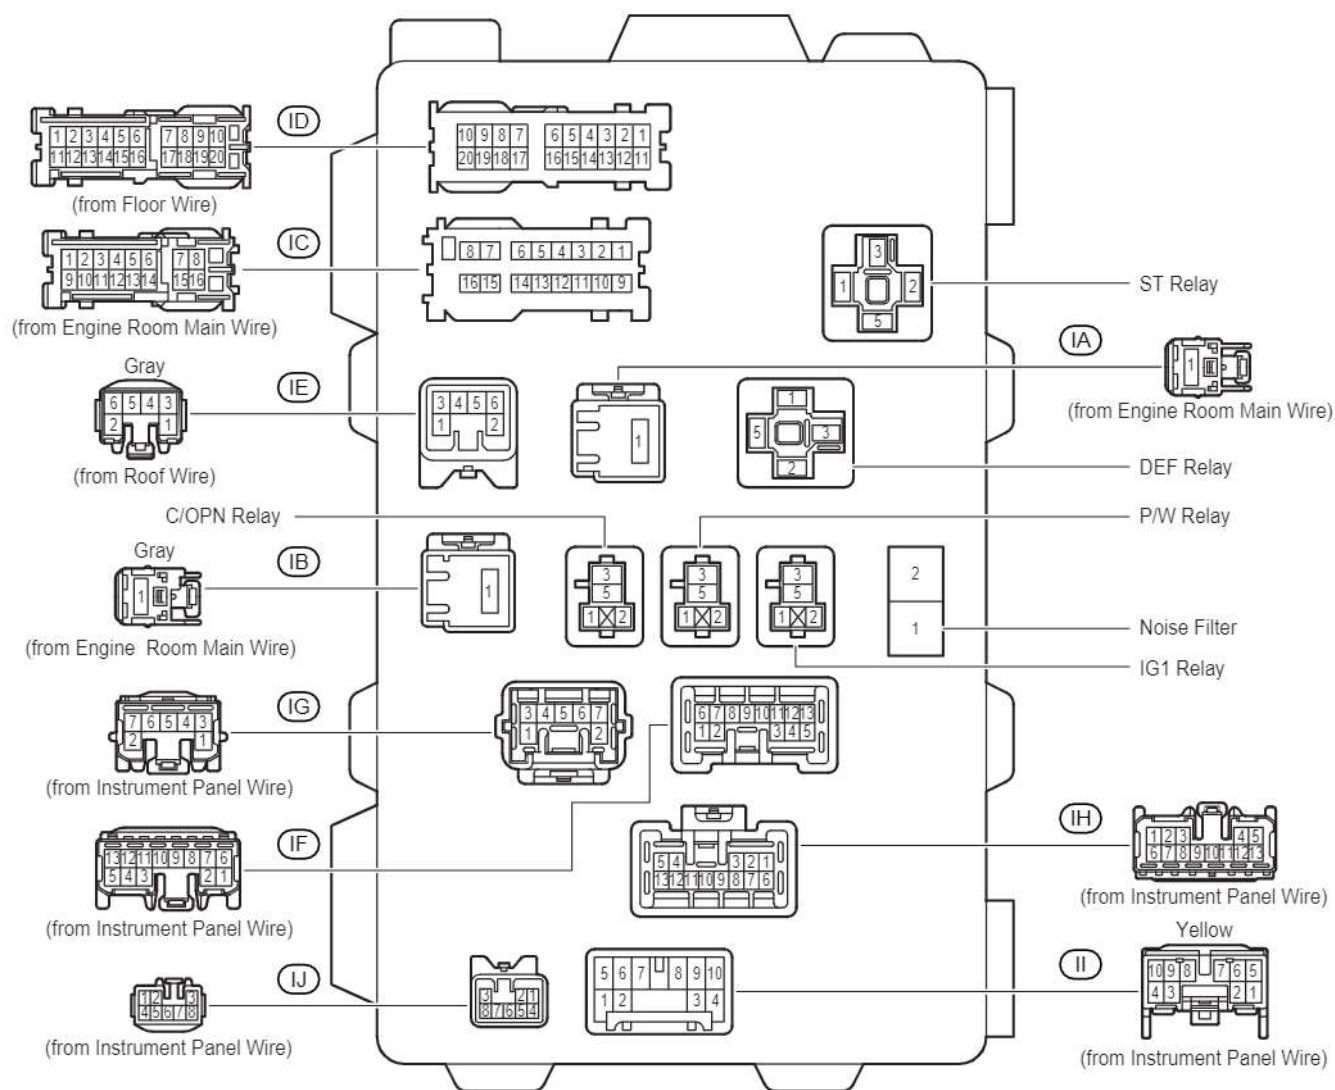


## F RELAY LOCATIONS

### [Instrument Panel J/B Inner Circuit]

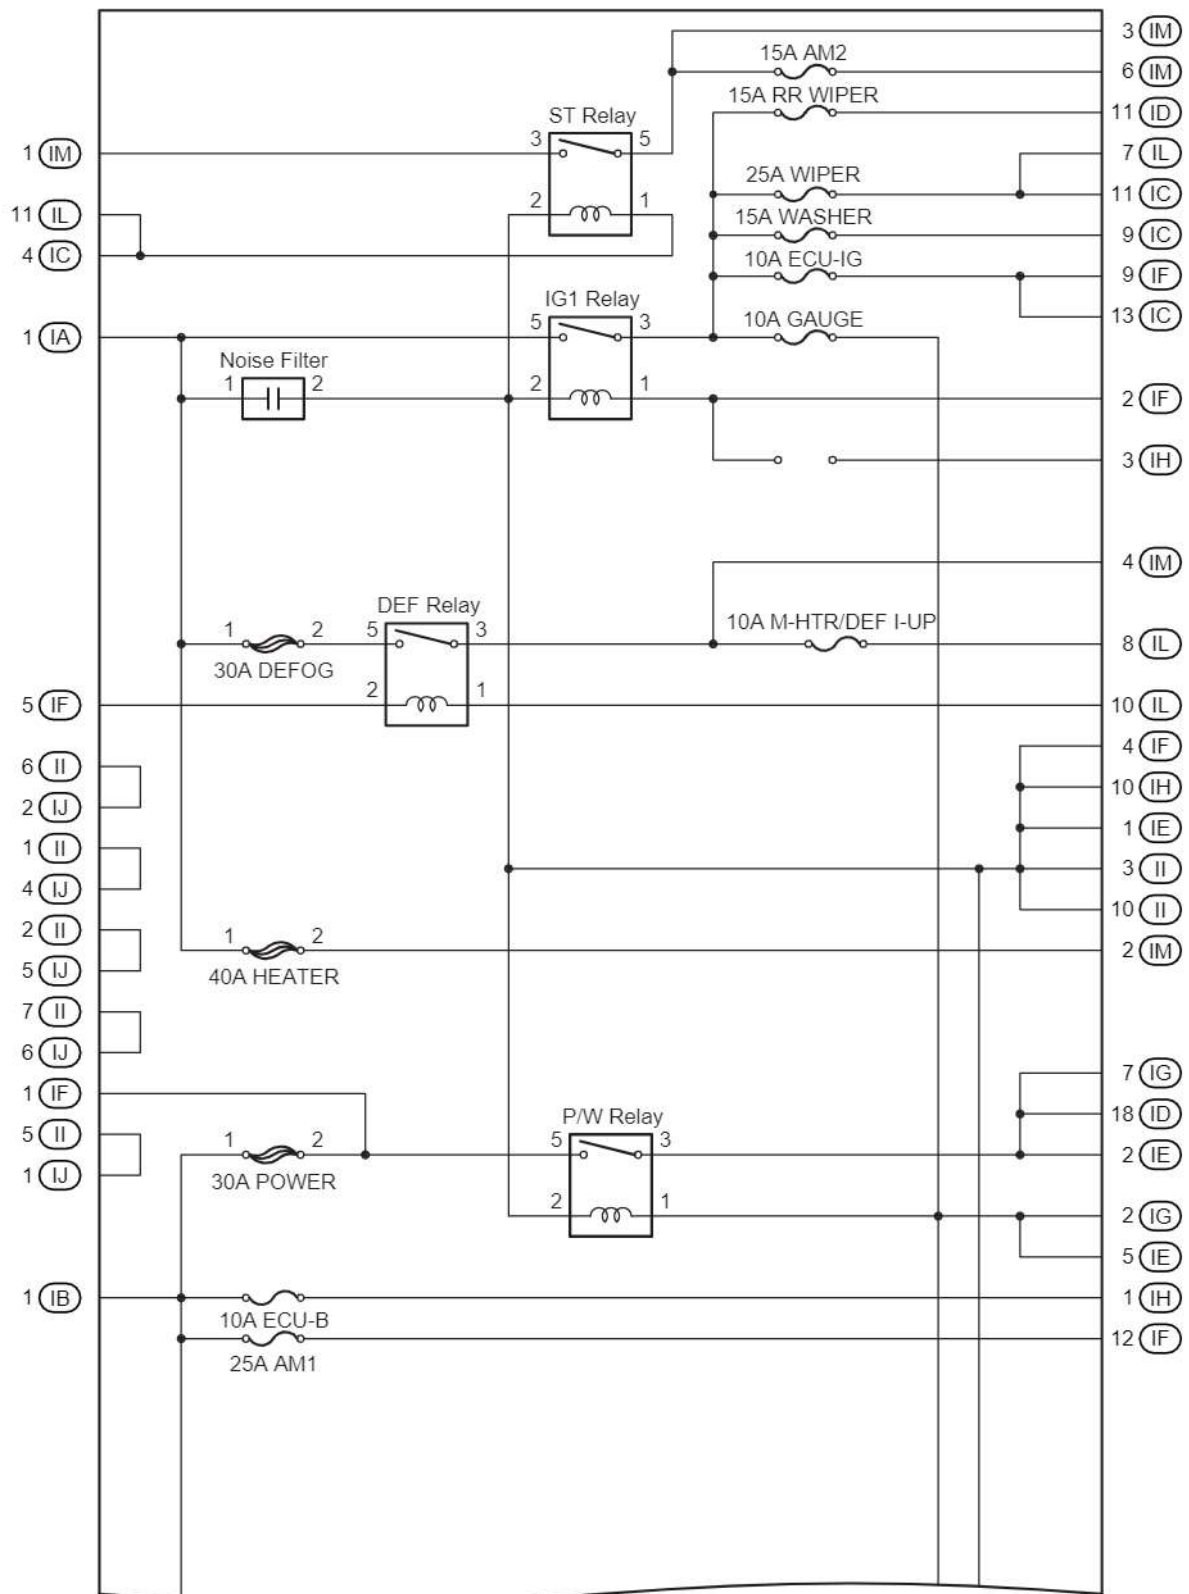


(Cont. Next Page)


(Cont'd)

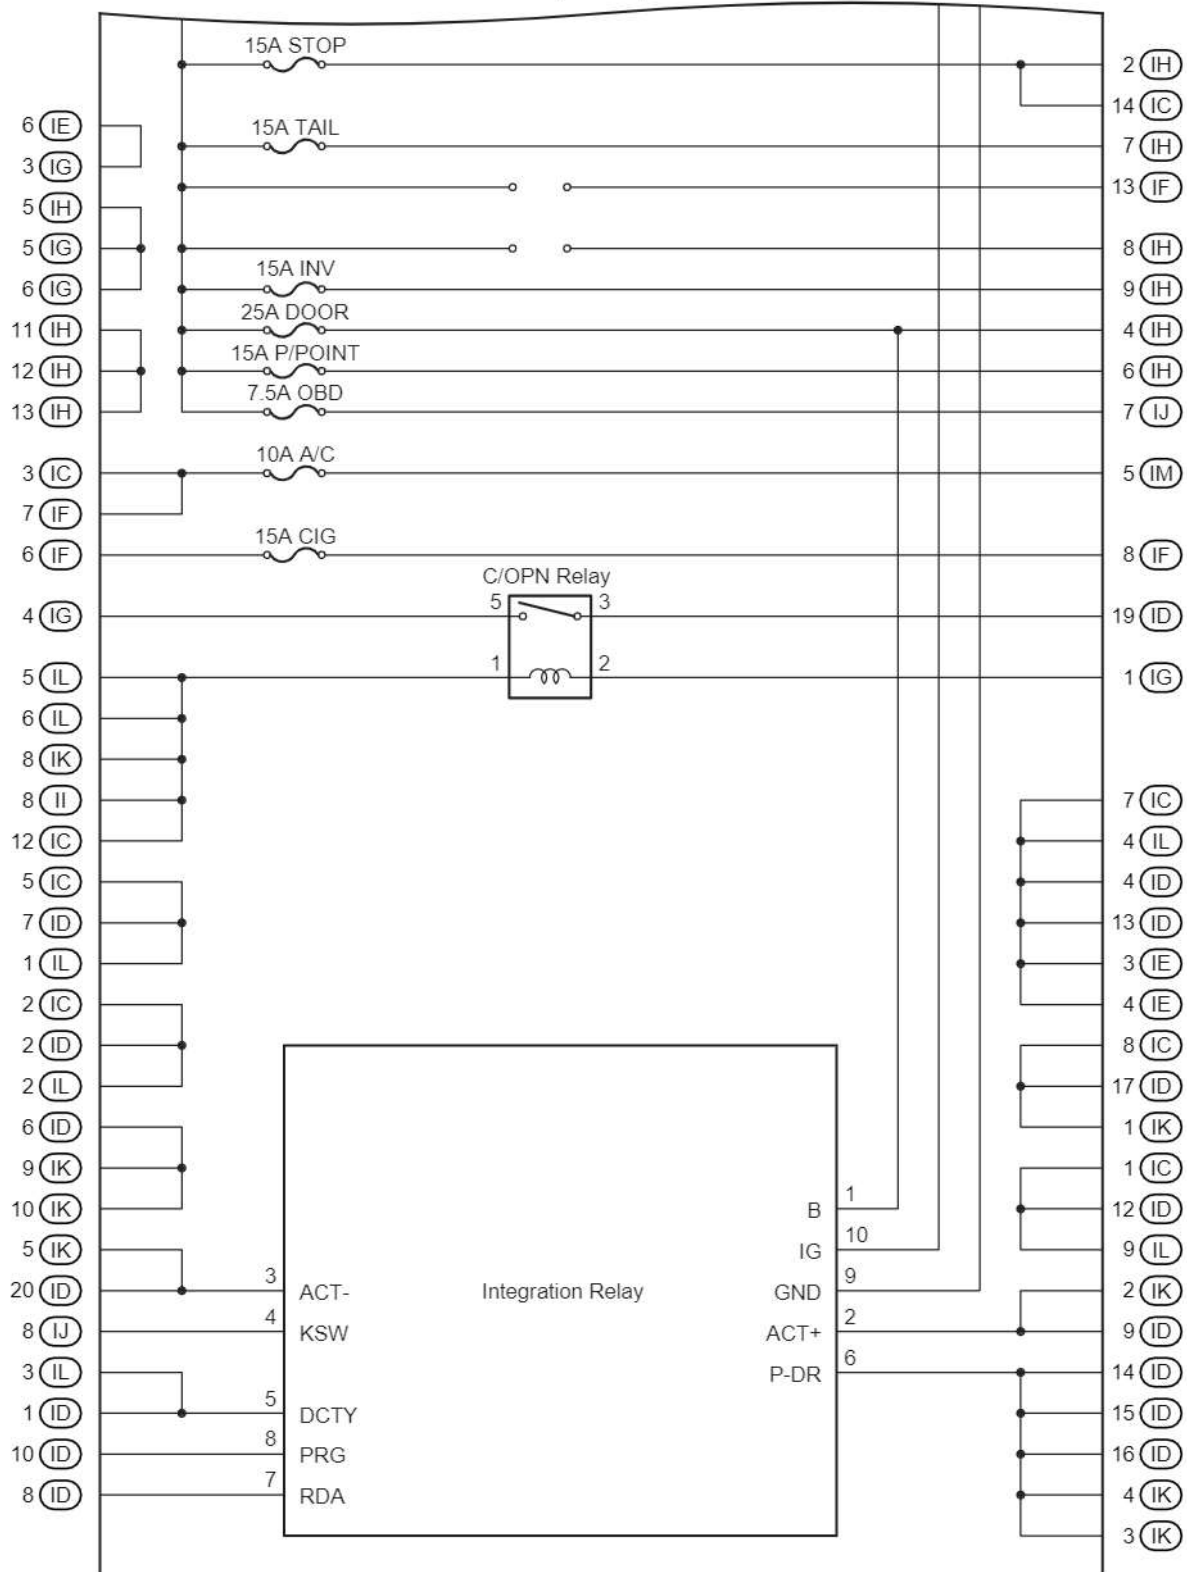

## F RELAY LOCATIONS


|            |                                                                |
|------------|----------------------------------------------------------------|
| ③ : RH R/B | Right Side of the Instrument Panel Reinforcement (See Page 21) |
| ○ : RH J/B |                                                                |

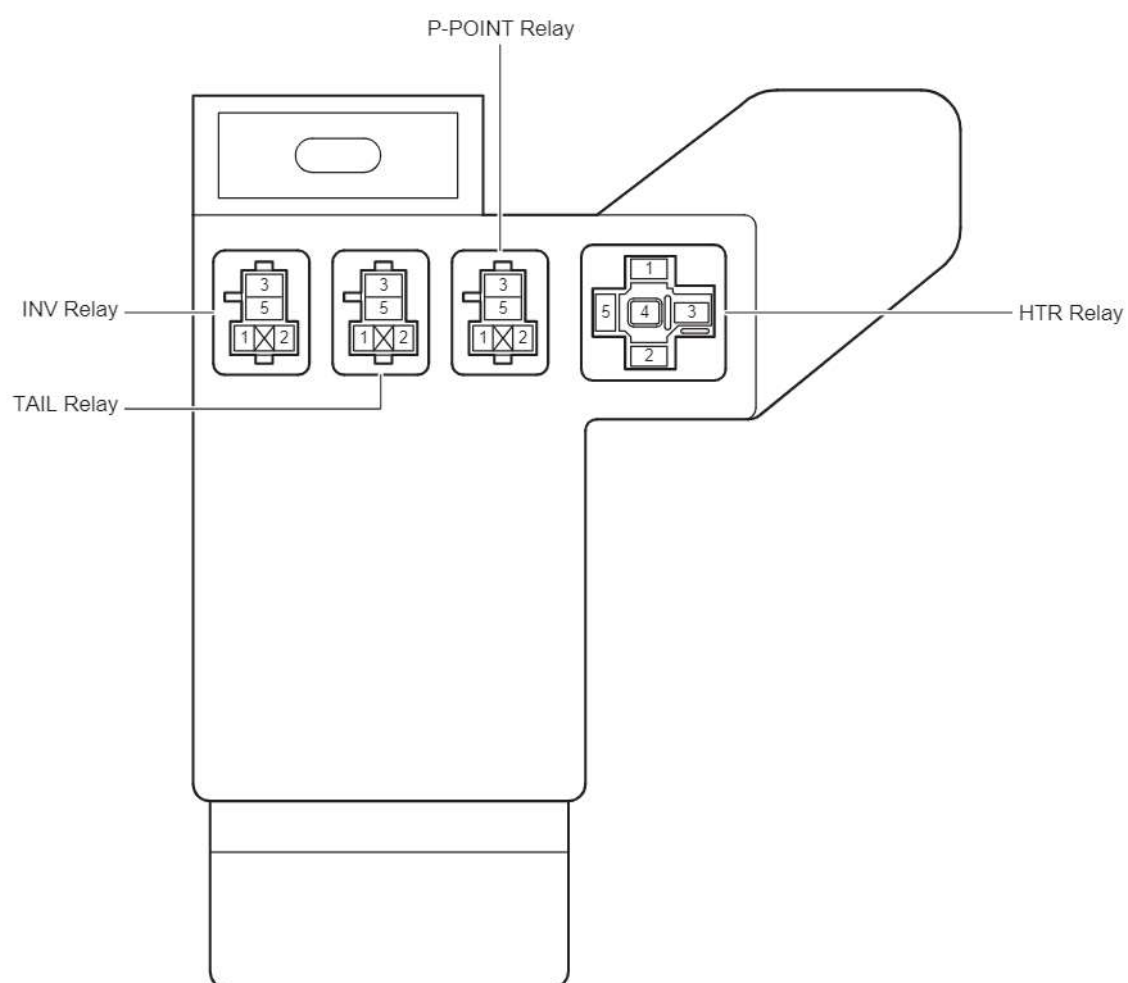

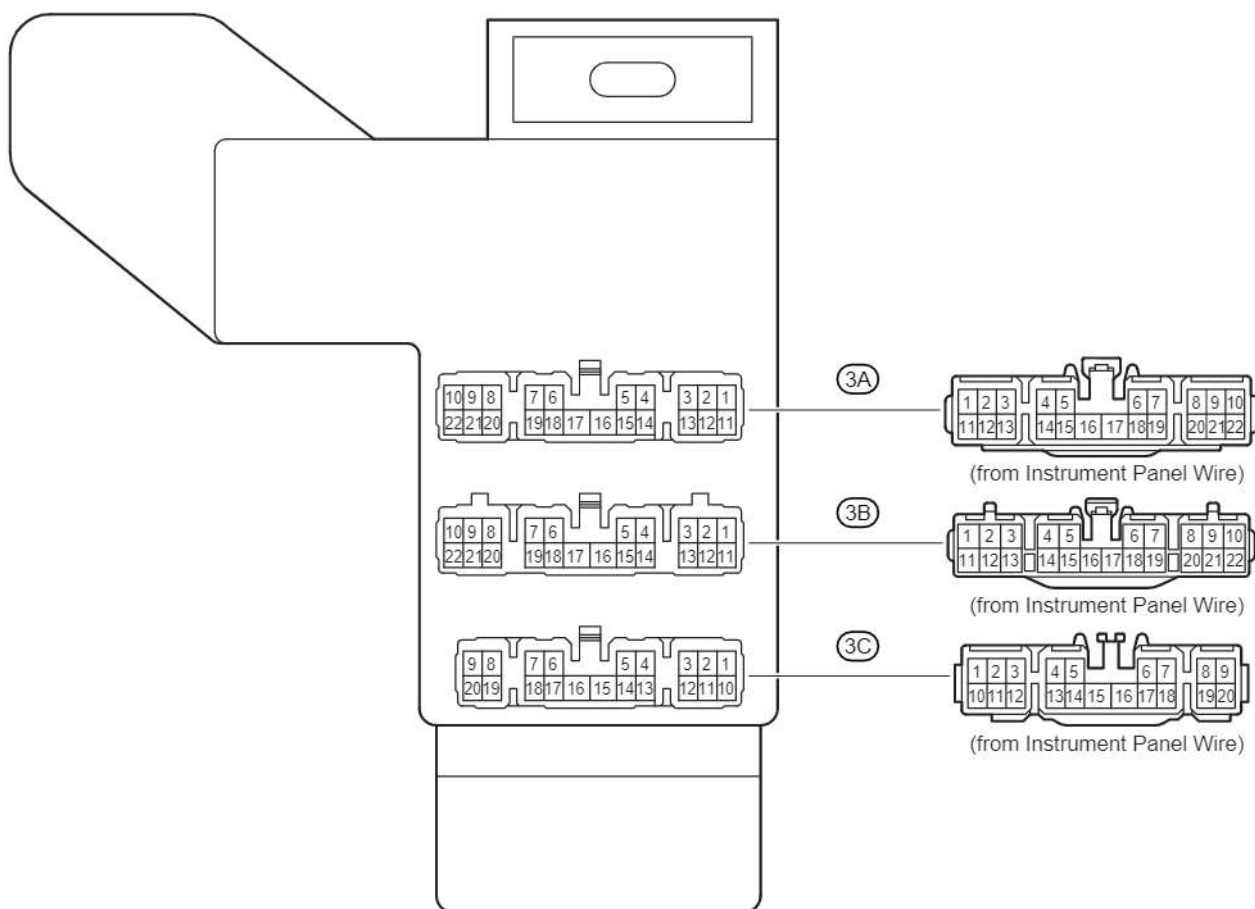


## F RELAY LOCATIONS

[RH J/B Inner Circuit]

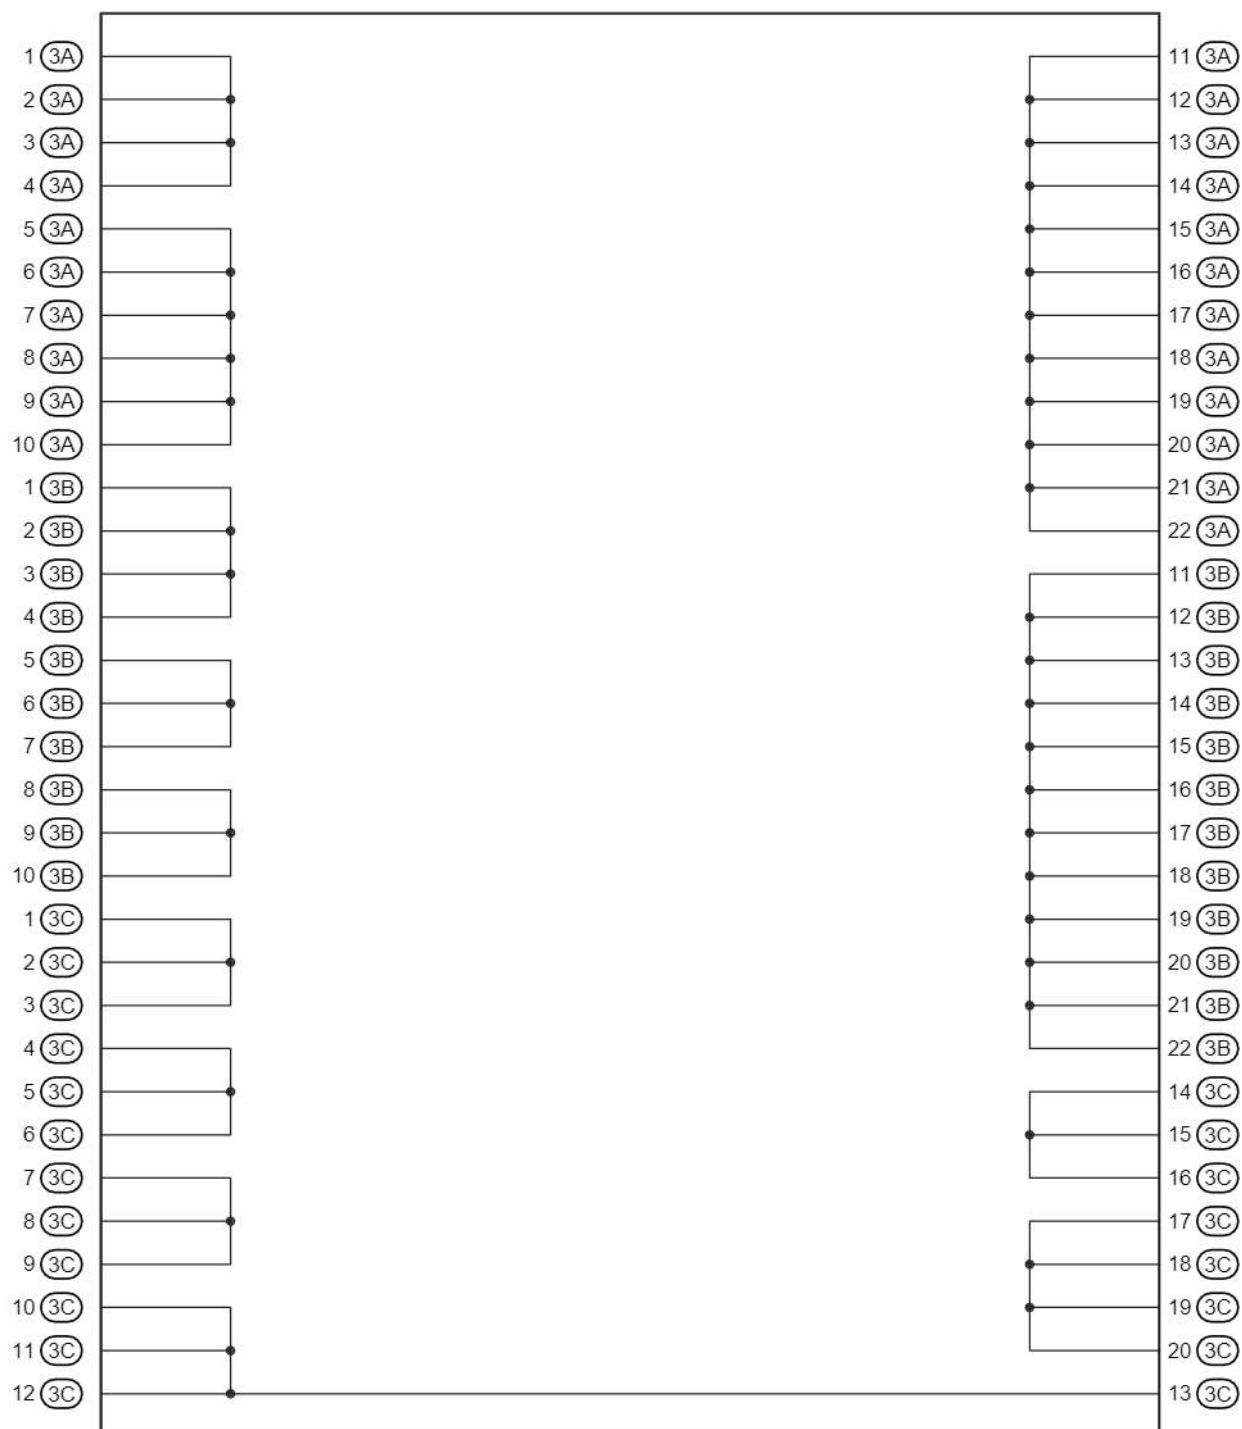

② : ABS R/B


Near the Front Left Suspension Tower (See Page 20)

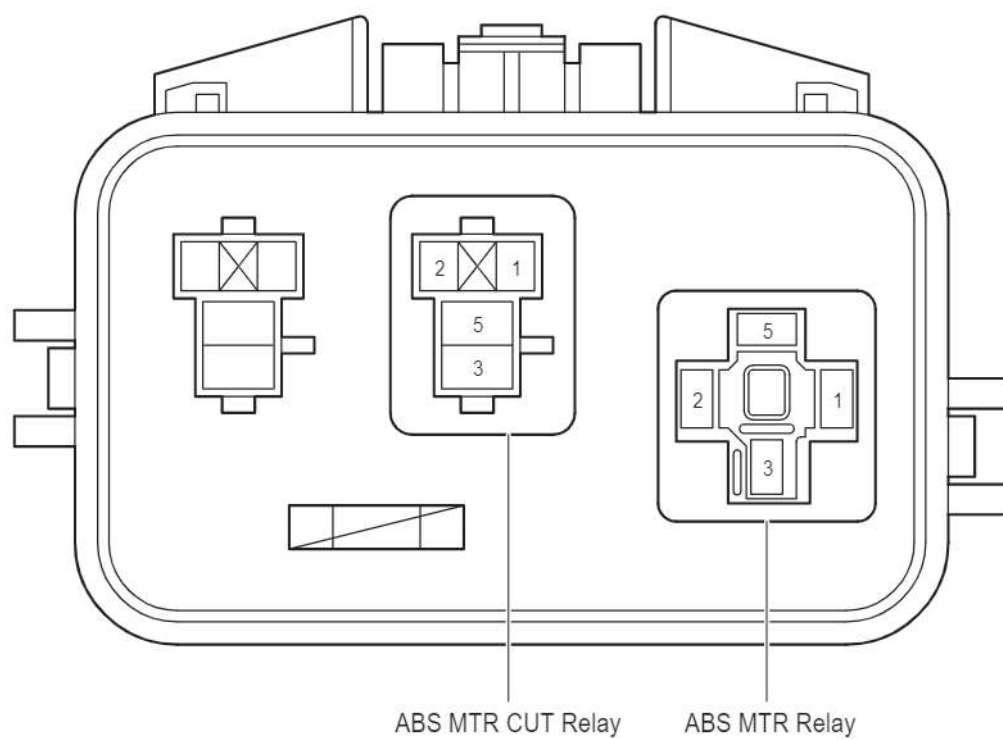

## F RELAY LOCATIONS

○ : Center J/B

Behind the Combination Meter (See Page 21)

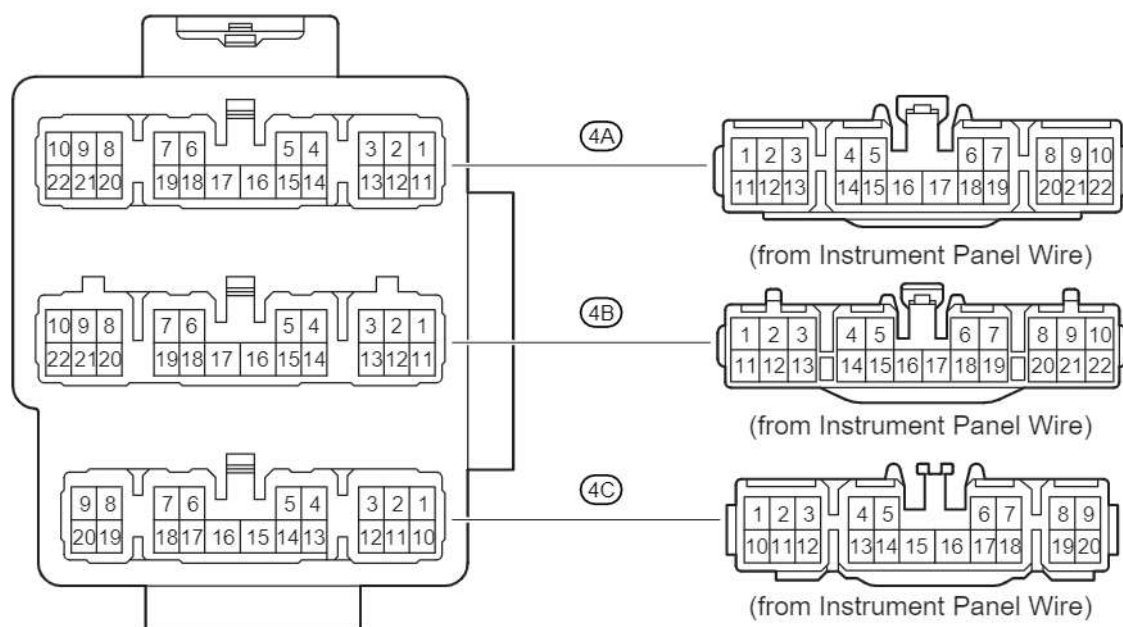

**[Center J/B Inner Circuit]**