

SECTION **AV**

AUDIO, VISUAL & NAVIGATION SYSTEM

CONTENTS

AUDIO WITHOUT NAVIGATION		
BASIC INSPECTION	5	
DIAGNOSIS AND REPAIR WORKFLOW	5	
Work Flow	5	
FUNCTION DIAGNOSIS	6	
AUDIO SYSTEM	6	
System Diagram	6	
System Description	6	
Component Parts Location	8	
Component Description	8	
COMPONENT DIAGNOSIS	9	
POWER SUPPLY AND GROUND CIRCUIT	9	
AUDIO UNIT	9	
AUDIO UNIT : Diagnosis Procedure	9	
MICROPHONE SIGNAL CIRCUIT	10	
Description	10	
Diagnosis Procedure	10	
STEERING SWITCH SIGNAL A CIRCUIT	11	
Description	11	
Diagnosis Procedure	11	
Component Inspection	11	
STEERING SWITCH SIGNAL B CIRCUIT	13	
Description	13	
Diagnosis Procedure	13	
Component Inspection	13	
STEERING SWITCH SIGNAL GND CIRCUIT	15	
Description	15	
Diagnosis Procedure	15	
Component Inspection	15	
ECU DIAGNOSIS	16	
AUDIO UNIT	16	
Reference Value	16	
Wiring Diagram - AUDIO WITHOUT NAVIGATION SYSTEM (LHD MODELS) -	18	
Wiring Diagram - AUDIO WITHOUT NAVIGATION SYSTEM (RHD MODELS) -	24	
SYMPTOM DIAGNOSIS	30	
MULTI AV SYSTEM SYMPTOMS	30	
Symptom Table	30	
NORMAL OPERATING CONDITION	31	
Description	31	
PRECAUTION	32	
PRECAUTIONS	32	
Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"	32	
ON-VEHICLE REPAIR	33	
AUDIO UNIT	33	
Exploded View	33	
Removal and Installation	33	
FRONT DOOR SPEAKER	34	
Exploded View	34	
Removal and Installation	34	
REAR DOOR SPEAKER	35	
Exploded View	35	
Removal and Installation	35	
TWEETER	36	
Exploded View	36	
Removal and Installation	36	
STEERING SWITCH	37	
Exploded View	37	
Removal and Installation	37	

MICROPHONE	38	Diagnosis Procedure	72
Exploded View	38	U1310 NAVI CONTROL UNIT	73
Removal and Installation	38	Description	73
RADIO ANTENNA	39	DTC Logic	73
Exploded View	39	U1200 NAVI CONTROL UNIT	74
Removal and Installation	39	Description	74
ANTENNA FEEDER (RADIO)	40	DTC Logic	74
Harness Layout	40	U1201 NAVI CONTROL UNIT	75
AUDIO WITH NAVIGATION		Description	75
BASIC INSPECTION	41	DTC Logic	75
DIAGNOSIS AND REPAIR WORKFLOW	41	U1216 NAVI CONTROL UNIT	76
Work Flow	41	Description	76
FUNCTION DIAGNOSIS	43	DTC Logic	76
MULTI AV SYSTEM	43	U1217 NAVI CONTROL UNIT	77
System Diagram	43	Description	77
System Description	43	DTC Logic	77
Component Parts Location	44	U1204 GPS	78
Component Description	45	Description	78
NAVIGATION SYSTEM	47	DTC Logic	78
System Diagram	47	Diagnosis Procedure	78
System Description	47	U1205 GPS	79
Component Parts Location	49	Description	79
Component Description	50	DTC Logic	79
REAR VIEW MONITOR SYSTEM	51	Diagnosis Procedure	79
System Diagram	51	U1206 GPS	80
System Description	51	Description	80
Component Parts Location	51	DTC Logic	80
Component Description	52	Diagnosis Procedure	80
AUDIO SYSTEM	53	U1207 GPS	81
System Diagram	53	Description	81
System Description	53	DTC Logic	81
Component Parts Location	53	Diagnosis Procedure	81
Component Description	54	U1208 NAVI CONTROL UNIT	82
DIAGNOSIS SYSTEM (NAVI CONTROL UNIT)	55	Description	82
Diagnosis Description	55	DTC Logic	82
CONSULT - III Function (MULTI AV)	65	Diagnosis Procedure	82
DIAGNOSIS SYSTEM (CAMERA CONTROL UNIT)	70	U1209 NAVI CONTROL UNIT	83
CONSULT-III Function (REAR VIEW CAMERA) ...	70	Description	83
COMPONENT DIAGNOSIS	71	DTC Logic	83
U1000 CAN COMM CIRCUIT	71	Diagnosis Procedure	83
Description	71	U120A NAVI CONTROL UNIT	84
DTC Logic	71	Description	84
Diagnosis Procedure	71	DTC Logic	84
U1010 CONTROL UNIT (CAN)	72	Diagnosis Procedure	84
Description	72	U120C NAVI CONTROL UNIT	85
DTC Logic	72	Description	85
		DTC Logic	85
		Diagnosis Procedure	85

U120D NAVI CONTROL UNIT	86	POWER SUPPLY AND GROUND CIRCUIT ..	100
Description	86	NAVI CONTROL UNIT	100
DTC Logic	86	NAVI CONTROL UNIT : Diagnosis Procedure	100
Diagnosis Procedure	86	AUDIO UNIT	100
U120E NAVI CONTROL UNIT	87	AUDIO UNIT : Diagnosis Procedure	100
Description	87	DISPLAY UNIT	101
DTC Logic	87	DISPLAY UNIT : Diagnosis Procedure	101
Diagnosis Procedure	87	CAMERA CONTROL UNIT	101
U120F NAVI CONTROL UNIT	88	CAMERA CONTROL UNIT : Diagnosis Procedure	102
Description	88	RGB (R: RED) SIGNAL CIRCUIT	103
DTC Logic	88	Description	103
Diagnosis Procedure	88	Diagnosis Procedure	103
U1210 NAVI CONTROL UNIT	89	RGB (G: GREEN) SIGNAL CIRCUIT	104
Description	89	Description	104
DTC Logic	89	Diagnosis Procedure	104
Diagnosis Procedure	89	RGB (B: BLUE) SIGNAL CIRCUIT	105
U1211 NAVI CONTROL UNIT	90	Description	105
Description	90	Diagnosis Procedure	105
DTC Logic	90	RGB SYNCHRONIZING SIGNAL CIRCUIT ...	106
Diagnosis Procedure	90	Description	106
U1212 NAVI CONTROL UNIT	91	Diagnosis Procedure	106
Description	91	RGB AREA (YS) SIGNAL CIRCUIT	107
DTC Logic	91	Description	107
Diagnosis Procedure	91	Diagnosis Procedure	107
U1213 NAVI CONTROL UNIT	92	HORIZONTAL SYNCHRONIZING (HP) SIG-	
Description	92	NAL CIRCUIT	108
DTC Logic	92	Description	108
Diagnosis Procedure	92	Diagnosis Procedure	108
U1214 NAVI CONTROL UNIT	93	VERTICAL SYNCHRONIZING (VP) SIGNAL	
Description	93	CIRCUIT	109
DTC Logic	93	Description	109
Diagnosis Procedure	93	Diagnosis Procedure	109
U1215 NAVI CONTROL UNIT	94	MICROPHONE SIGNAL CIRCUIT	110
Description	94	Description	110
DTC Logic	94	Diagnosis Procedure	110
Diagnosis Procedure	94	CAMERA IMAGE SIGNAL CIRCUIT (REAR	
U1243 DISPLAY UNIT	95	VIEW CAMERA TO CAMERA CONTROL	
Description	95	UNIT)	111
DTC Logic	95	Description	111
Diagnosis Procedure	95	Diagnosis Procedure	111
U1244 GPS ANTENNA	97	CAMERA IMAGE SIGNAL CIRCUIT (CAM-	
Description	97	ERA CONTROL UNIT TO DISPLAY UNIT)	112
DTC Logic	97	Description	112
Diagnosis Procedure	97	Diagnosis Procedure	112
U1250 CAMERA CONTROL UNIT	98	CAMERA ON SIGNAL CIRCUIT	113
Description	98	Description	113
DTC Logic	98		
Diagnosis Procedure	98		
U1300 AV COMM CIRCUIT	99		
Description	99		

Diagnosis Procedure	113	ON-VEHICLE REPAIR	201
STEERING SWITCH SIGNAL A CIRCUIT	114	NAVI CONTROL UNIT	201
Description	114	Exploded View	201
Diagnosis Procedure	114	Removal and Installation	201
Component Inspection	114	AUDIO UNIT	202
STEERING SWITCH SIGNAL B CIRCUIT	116	Exploded View	202
Description	116	Removal and Installation	202
Diagnosis Procedure	116	DISPLAY UNIT	203
Component Inspection	116	Exploded View	203
STEERING SWITCH SIGNAL GND CIRCUIT	118	Removal and Installation	203
Description	118	FRONT DOOR SPEAKER	204
Diagnosis Procedure	118	Exploded View	204
Component Inspection	118	Removal and Installation	204
ECU DIAGNOSIS	120	REAR DOOR SPEAKER	205
NAVI CONTROL UNIT	120	Exploded View	205
Reference Value	120	Removal and Installation	205
Wiring Diagram - AUDIO WITH NAVIGATION		TWEETER	206
SYSTEM -	124	Exploded View	206
DTC Index	137	Removal and Installation	206
AUDIO UNIT	139	STEERING SWITCH	207
Reference Value	139	Exploded View	207
Wiring Diagram - AUDIO WITH NAVIGATION		Removal and Installation	207
SYSTEM -	142	MICROPHONE	208
DISPLAY UNIT	156	Exploded View	208
Reference Value	156	Removal and Installation	208
Wiring Diagram - AUDIO WITH NAVIGATION		RADIO ANTENNA	209
SYSTEM -	159	Exploded View	209
CAMERA CONTROL UNIT	173	Removal and Installation	209
Reference Value	173	GPS ANTENNA	210
Wiring Diagram - AUDIO WITH NAVIGATION		Harness Layout	210
SYSTEM -	175	Removal and Installation	210
SYMPTOM DIAGNOSIS	189	CAMERA CONTROL UNIT	212
MULTI AV SYSTEM SYMPTOMS	189	Exploded View	212
Symptom Table	189	Removal and Installation	212
NORMAL OPERATING CONDITION	192	REAR VIEW CAMERA	213
Description	192	Exploded View	213
PRECAUTION	200	Removal and Installation	213
PRECAUTIONS	200	Adjustment	213
Precaution for Supplemental Restraint System		ANTENNA FEEDER (RADIO)	216
(SRS) "AIR BAG" and "SEAT BELT PRE-TEN-		Harness Layout	216
SIONER"	200	ANTENNA FEEDER (GPS)	217
Precaution for Trouble Diagnosis	200	Harness Layout	217
Precaution for Harness Repair	200		

BASIC INSPECTION

DIAGNOSIS AND REPAIR WORKFLOW

Work Flow

INFOID:000000000996219

DETAILED FLOW

1.CHECK SYMPTOM

Check the malfunction symptoms by performing the following items.

- Interview the customer to obtain the malfunction information (conditions and environment when the malfunction occurred).
- Check the symptom.

>> GO TO 2.

2.PERFORM DIAGNOSIS BY SYMPTOM

Perform the relevant diagnosis referring to the diagnosis chart by symptom. Refer to [AV-30. "Symptom Table"](#).

>> GO TO 3.

3.REPAIR OR REPLACE MALFUNCTIONING PARTS

Repair or replace the malfunctioning parts.

>> GO TO 4.

4.FINAL CHECK

Perform the operation to check that the malfunction symptom is solved or any other symptoms are present.

Is there any symptom?

YES >> GO TO 2.

NO >> INSPECTION END

A

B

C

D

E

F

G

H

I

J

K

L

M

AV


O

P

FUNCTION DIAGNOSIS

AUDIO SYSTEM

System Diagram

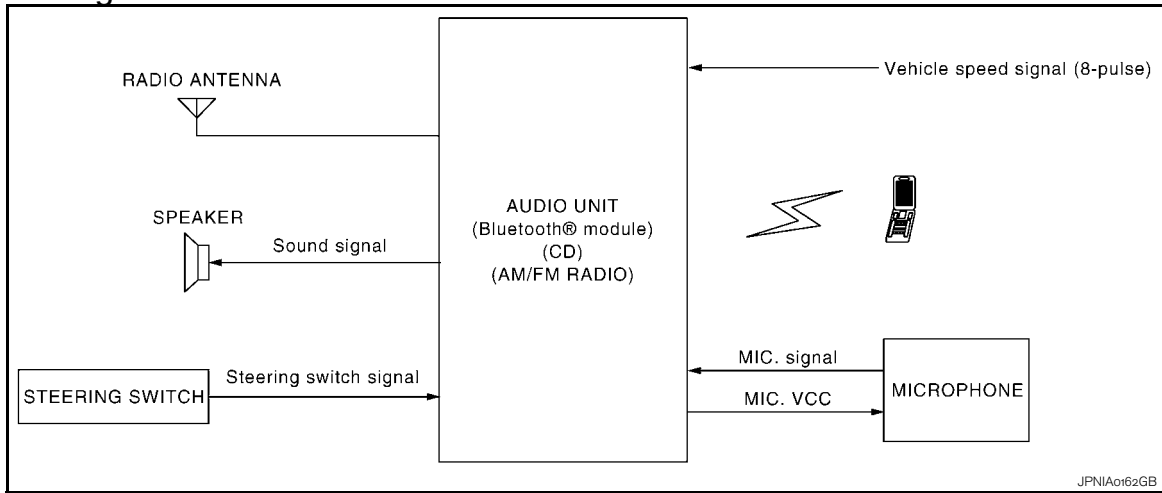

System Description

INFOID:000000000996245

The audio system is equipped with following function. Each function is operated with audio switch or steering switch.

Function
AM/FM radio
CD
HANDS-FREE PHONE

FUNCTION DESCRIPTION

Operating signal

Audio system operation can be performed with audio switch or steering switch.

AM/FM Radio Mode


- AM/FM radio tuner is built into audio unit.
- Audio signal is received by antenna, next it is input to audio unit. Audio unit outputs the audio signal to each speaker.

CD Mode

- CD function is built into audio unit.
- Audio unit outputs audio signal to each speaker when CD is inserted to audio unit.

Hands-free phone system

- Hands-free communication can be operated by connecting using Bluetooth® with cellular phone.
- Operation is performed by steering switch.
- Guide sound that is heard during operation is output from audio unit to front speaker.

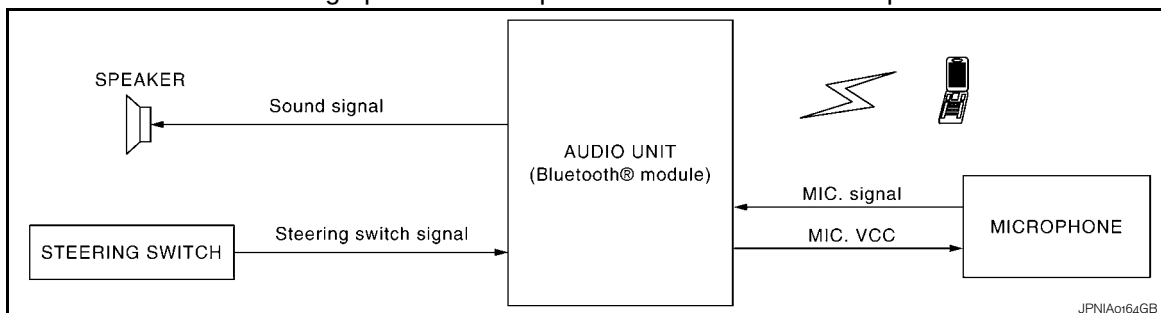

AUDIO SYSTEM

< FUNCTION DIAGNOSIS >

[AUDIO WITHOUT NAVIGATION]

When a call is originated

- Spoken voice sound output from the microphone (Mic. Signal) is input to audio unit. Audio unit outputs to cellular phone with Bluetooth® communication as a TEL voice signal. Voice sound is then heard at the other party.

When receiving a call

- Voice sound is input to own cellular phone from the other party. TEL voice signal is output to front speaker, and the signal is input to audio unit by establishing Bluetooth® communication from cellular phone.

NATS AUDIO LINK

Description

The link with the NATS IMMU implies that the audio unit can basically only be operated if connected to the matching NATS IMMU to which the audio unit was initially fitted on the production line.

Since radio operation is impossible after the link with the NATS is disrupted, theft of the audio unit is basically useless since special equipment is required to reset the audio unit.

Initialization Process for Audio Units That Are Linked to the NATS IMMU

New audio units will be delivered to the factories in the "NEW" state, i.e. ready to be linked with the vehicle's NATS. When the audio unit in "NEW" state is first switched on at the factory, it will start up communication with the vehicle's immobilizer control unit (IMMU) and send a code (the "Audio Unit Code") to the IMMU. The IMMU will then store this code, which is unique to each audio unit, in its (permanent) memory.

Upon receipt of the code by the IMMU, the NATS will confirm correct receipt of the audio unit code to the audio unit. Hereafter, the audio unit will operate as normal.

During the initialization process, "NEW" is displayed on the audio unit display. Normally though, communication between audio unit and IMMU takes such a short time (300 ms) that the audio unit seems to switch on directly without showing "NEW" on its display.

Normal Operation

Each time the audio unit is switched on afterwards, the audio unit code will be verified between the audio unit and the NATS before the audio unit becomes operational. During the code verification process, "WAIT" is shown on the audio unit display. Again, the communication takes such a short time (300 ms) that the audio unit seems to switch on directly without showing "WAIT" on its display.

When The Radio Is Locked

In case of the audio unit being linked with the vehicle's NATS (immobilizer system), disconnection of the link between the audio unit and the IMMU will cause the audio unit to switch into the lock ("SECURE") mode in which the audio unit is fully inoperative. Hence, repair of the audio unit is basically impossible, unless the audio unit is reset to the "NEW" state for which special decoding equipment is required.

Clarion has provided their authorized service representatives with so called "decoder boxes" which can bring the audio unit back to the "NEW" state, enabling the audio unit to be switched on after which repair can be performed. Subsequently, when the repaired audio unit is delivered to the final user again, it will be in the "NEW" state to enable re-linking the audio unit to the vehicle's immobilizer system. As a result of the above, repair of the audio unit can only be done by an authorized Clarion representative (when the owner of the vehicle requests repair and can show personal identification).

Service Procedure

Item	Service procedure	Description
Battery disconnection	No additional action required.	—
Radio needs repair	Repair needs to be done by authorized representative of radio manufacturer since radio cannot be operated unless it is reset to NEW state, using special decoding equipment.	—
Replacement of radio by new part	No additional action required.	Radio is delivered in "NEW" state.
Transferring radio to another vehicle/replacement of radio by an old part	Radio needs to be reset to NEW state by authorized representative of radio manufacturer.	—
Replacement of IMMU	Radio needs to be reset to NEW state by authorized representative of Clarion.	After switching on the radio, it will display "SECURE" after 1 minute.

AUDIO SYSTEM


< FUNCTION DIAGNOSIS >

[AUDIO WITHOUT NAVIGATION]

Item	Service procedure	Description
No communication from IMMU to radio	1. Check NATS system if NATS is malfunctioning. 2. Reset radio to "NEW" state by authorized representative of Clarion after NATS is repaired.	The radio will display "SECURE" after 1 minute after switching on the radio. Further use of radio is impossible until communication is established again, or after radio is reset by authorized representative of Clarion.
When initialized between ECM and IMMU.	Radio needs to be reset to "NEW" status by authorized representative of Clarion.	It will display "SECURE" after 1 minute after switching on the radio.

Component Parts Location

INFOID:000000000996248

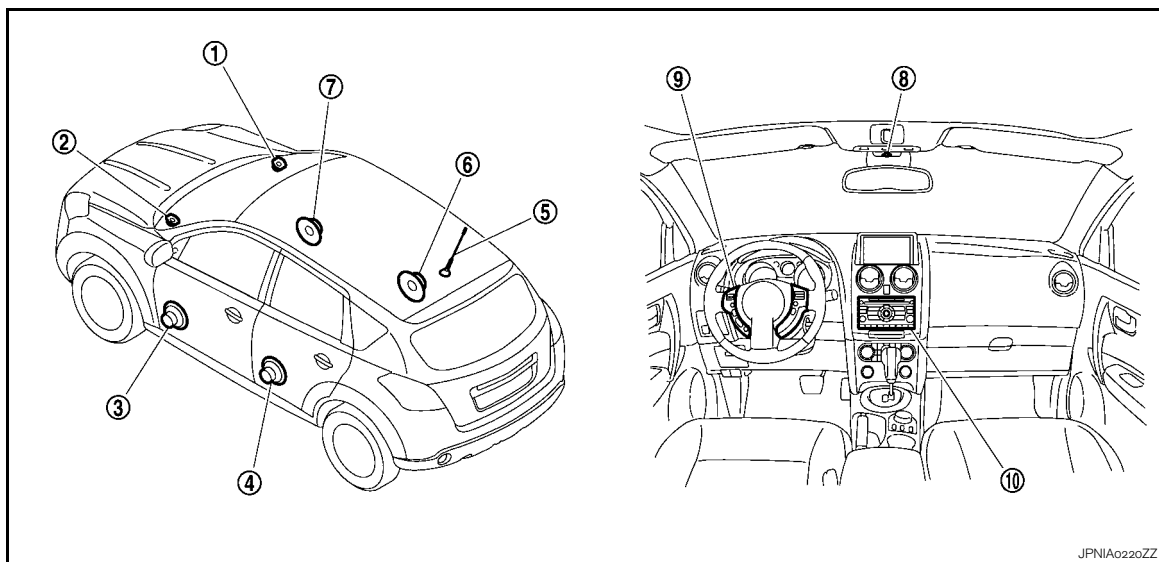

JPN/A0220ZZ

- | | | |
|--------------------------|------------------|--------------------------|
| 1. Tweeter RH | 2. Tweeter LH | 3. Front door speaker LH |
| 4. Rear door speaker LH | 5. Radio antenna | 6. Rear door speaker RH |
| 7. Front door speaker RH | 8. Microphone | 9. Steering switch |
| 10. Audio unit | | |

Component Description

INFOID:000000000996249

Part name	Description
AUDIO UNIT	• Operational switch of audio system is integrated. • Receiving function of AM/FM radio, replaying function of CD and hands-free phone function are integrated. • Audio signals are output to each speaker.
FRONT DOOR SPEAKER	• Outputs sound signal from audio unit. • Outputs high, mid and low range sounds.
REAR DOOR SPEAKER	• Outputs sound signal from audio unit. • Outputs high, mid and low range sounds.
TWEETER	• Outputs sound signal from audio unit. • Outputs high range sound.
STEERING SWITCH	• Operations for audio and hands-free phone are possible. • Steering switch signal (operation signal) is output to audio unit.
MICROPHONE	• Used for hands-free phone operation. • Mic. signal is sent to audio unit. • Power (Mic. VCC) is supplied from audio unit.
RADIO ANTENNA	Radio signal received by antenna is sent to audio unit.

COMPONENT DIAGNOSIS**POWER SUPPLY AND GROUND CIRCUIT****AUDIO UNIT****AUDIO UNIT : Diagnosis Procedure**

INFOID:000000000996400

1.CHECK FUSE

Check for blown fuses.

Power source	Fuse No.
Battery	38
Ignition switch ACC or ON	5

Is inspection result OK?

YES >> GO TO 2.

NO >> Be sure to eliminate cause of malfunction before installing new fuse.

2.CHECK POWER SUPPLY CIRCUIT

Check voltage between audio unit harness connector and ground.

Signal name	Connector No.	Terminal No.	Ignition switch position	Value (Approx.)
Battery power supply	M46	19	OFF	12 V
ACC power supply	M46	7	ACC	12 V

Is inspection result OK?

YES >> GO TO 3.

NO >> Check harness between audio unit and fuse.

3.CHECK GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect audio unit connector.
3. Check continuity between audio unit harness connector and ground.

Signal name	Connector No.	Terminal No.	Ignition switch position	Continuity
Ground	M48	31	OFF	Continuity should exist.

Is inspection result OK?

YES >> INSPECTION END

NO >> Repair harness or connector.

MICROPHONE SIGNAL CIRCUIT

< COMPONENT DIAGNOSIS >

[AUDIO WITHOUT NAVIGATION]

MICROPHONE SIGNAL CIRCUIT

Description

INFOID:000000000996424

Supply power from audio unit to microphone. The microphone transmits the sound voice to the audio unit.

Diagnosis Procedure

INFOID:000000000996425

1.CHECK CONTINUITY BETWEEN AUDIO UNIT AND MICROPHONE CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect audio unit connector and microphone connector.
3. Check continuity between audio unit harness connector terminals 35, 36, 37 and microphone harness connector terminals 1, 2, 4.

35 - 1 : Continuity should exist.

36 - 2 : Continuity should exist.

37 - 4 : Continuity should exist.

4. Check continuity between audio unit harness connector terminals 35, 37 and ground.

35, 37 - Ground : Continuity should not exist.

Is inspection result OK?

YES >> GO TO 2.

NO >> Repair harness or connector.

2.CHECK VOLTAGE MICROPHONE VCC

1. Connect audio unit connector.
2. Turn ignition switch ON.
3. Check voltage between audio unit harness connector terminal 37 and ground.

37 - ground : Approx. 5 V

Is inspection result OK?


YES >> GO TO 3.

NO >> Replace audio unit.

3.CHECK MICROPHONE SIGNAL

1. Connect microphone connector.
2. Check signal between audio unit harness connector terminals 35 and 36.

35 - 36

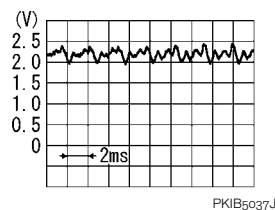

Is inspection result OK?

YES >> Replace audio unit.

NO >> Replace microphone.

STEERING SWITCH SIGNAL A CIRCUIT

< COMPONENT DIAGNOSIS >

[AUDIO WITHOUT NAVIGATION]

STEERING SWITCH SIGNAL A CIRCUIT

Description

INFOID:000000000996436

Transmits the steering switch signal to audio unit.

Diagnosis Procedure

INFOID:000000000996437

1.CHECK STEERING SWITCH SIGNAL A CIRCUIT

1. Disconnect audio unit connector and spiral cable connector.
2. Check continuity between audio unit harness connector terminal 6 and spiral cable harness connector terminal 24.

6 - 24 : Continuity should exist.

3. Check continuity between audio unit harness connector terminal 6 and ground.

6 - Ground : Continuity should not exist.

Is inspection result OK?

YES >> GO TO 2.

NO >> Repair harness or connector.

2.CHECK SPIRAL CABLE

Check spiral cable.

Is inspection result OK?

YES >> GO TO 3.

NO >> Replace spiral cable.

3.CHECK AUDIO UNIT VOLTAGE

1. Connect audio unit connector and spiral cable connector.
2. Turn ignition switch ON.
3. Check voltage between audio unit harness connector terminals 6 and 15.

6 - 15 : Approx. 5 V

Is inspection result OK?

YES >> GO TO 4.

NO >> Replace audio unit.

4.CHECK STEERING SWITCH

1. Turn ignition switch OFF.
2. Check steering switch. Refer to [AV-11, "Component Inspection"](#).

Is inspection result OK?

YES >> INSPECTION END

NO >> Replace steering switch.

Component Inspection

INFOID:000000000996438

Measure the resistance between the steering switch connector terminals 20 to 17 and 16 to 17.

A
B
C
D
E
F
G
H
I
J
K
L
M
O
P

cardiagn.com

AV

STEERING SWITCH SIGNAL A CIRCUIT

< COMPONENT DIAGNOSIS >

[AUDIO WITHOUT NAVIGATION]

Standard

Between terminals 20 and 17

VOL UP switch ON : 634 – 665 Ω

SEEK UP switch ON : 162 – 168 Ω


SOURCE switch ON : 0 Ω

Between terminals 16 and 17

VOL DOWN switch ON : 634 – 665 Ω

SEEK DOWN switch ON : 162 – 168 Ω

switch ON : 0 Ω

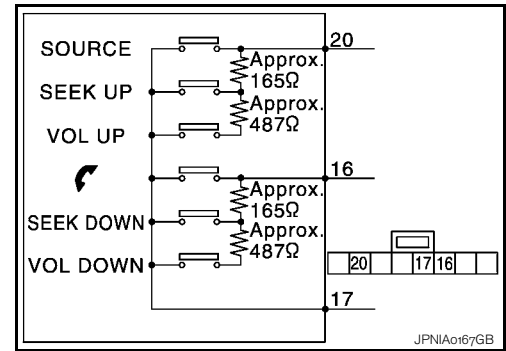

JPNIA0167GB

STEERING SWITCH SIGNAL B CIRCUIT

< COMPONENT DIAGNOSIS >

[AUDIO WITHOUT NAVIGATION]

STEERING SWITCH SIGNAL B CIRCUIT

Description

INFOID:000000000999575

Transmits the steering switch signal to audio unit.

Diagnosis Procedure

INFOID:000000000996441

1.CHECK STEERING SWITCH SIGNAL B CIRCUIT

1. Disconnect audio unit connector and spiral cable connector.
2. Check continuity between audio unit harness connector terminal 16 and spiral cable harness connector terminals 32.

16 - 32 : Continuity should exist.

3. Check continuity between audio unit harness connector terminal 16 and ground.

16 - Ground : Continuity should not exist.

Is inspection result OK?

YES >> GO TO 2.

NO >> Repair harness or connector.

2.CHECK SPIRAL CABLE

Check spiral cable.

Is inspection result OK?

YES >> GO TO 3.

NO >> Replace spiral cable.

3.CHECK AUDIO UNIT VOLTAGE

1. Connect audio unit connector and spiral cable connector.
2. Turn ignition switch ON.
3. Check voltage between audio unit harness connector terminals 16 and 15.

16 - 15 : Approx. 5 V

Is inspection result OK?

YES >> GO TO 4.

NO >> Replace audio unit.

4.CHECK STEERING SWITCH

1. Turn ignition switch OFF.
2. Check steering switch. Refer to [AV-13. "Component Inspection"](#).

Is inspection result OK?

YES >> INSPECTION END

NO >> Replace steering switch.

Component Inspection

INFOID:000000000999577

Measure the resistance between the steering switch connector terminals 20 to 17 and 16 to 17.

A
B
C
D
E
F
G
H
I
J
K
L
M
O
P

cardiagn.com

AV

STEERING SWITCH SIGNAL B CIRCUIT

< COMPONENT DIAGNOSIS >

[AUDIO WITHOUT NAVIGATION]

Standard

Between terminals 20 and 17

VOL UP switch ON : 634 – 665 Ω

SEEK UP switch ON : 162 – 168 Ω


SOURCE switch ON : 0 Ω

Between terminals 16 and 17

VOL DOWN switch ON : 634 – 665 Ω

SEEK DOWN switch ON : 162 – 168 Ω

switch ON : 0 Ω

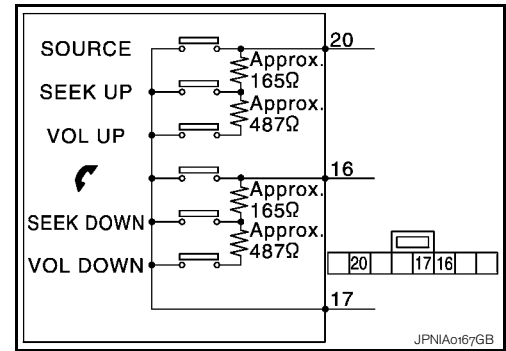

STEERING SWITCH SIGNAL GND CIRCUIT

< COMPONENT DIAGNOSIS >

[AUDIO WITHOUT NAVIGATION]

STEERING SWITCH SIGNAL GND CIRCUIT

Description

INFOID:000000000999576

Transmits the steering switch signal to audio unit.

Diagnosis Procedure

INFOID:000000000996446

1.CHECK STEERING SWITCH SIGNAL GND CIRCUIT

1. Disconnect audio unit connector and spiral cable connector.
2. Check continuity between audio unit harness connector terminal 15 and spiral cable harness connector terminal 31.

15 - 31 : Continuity should exist.

3. Connect audio unit connector.

Is inspection result OK?

YES >> GO TO 2.

NO >> Repair harness or connector.

2.CHECK SPIRAL CABLE

Check spiral cable.

Is inspection result OK?

YES >> GO TO 3.

NO >> Replace spiral cable.

3.CHECK GROUND CIRCUIT

1. Connect audio unit connector.
2. Check continuity between audio unit harness connector terminal 15 and ground.

15 - Ground : Continuity should exist.

Is inspection result OK?

YES >> GO TO 4.

NO >> Replace audio unit.

4.CHECK STEERING SWITCH

1. Turn ignition switch OFF.
2. Check steering switch. Refer to [AV-15, "Component Inspection"](#).

Is inspection result OK?

YES >> INSPECTION END

NO >> Replace steering switch.

Component Inspection

INFOID:000000000999578

Measure the resistance between the steering switch connector terminals 20 to 17 and 16 to 17.

Standard

Between terminals 20 and 17

VOL UP switch ON : 634 – 665 Ω

SEEK UP switch ON : 162 – 168 Ω


SOURCE switch ON : 0 Ω

Between terminals 16 and 17

VOL DOWN switch ON : 634 – 665 Ω

SEEK DOWN switch ON : 162 – 168 Ω

switch ON : 0 Ω

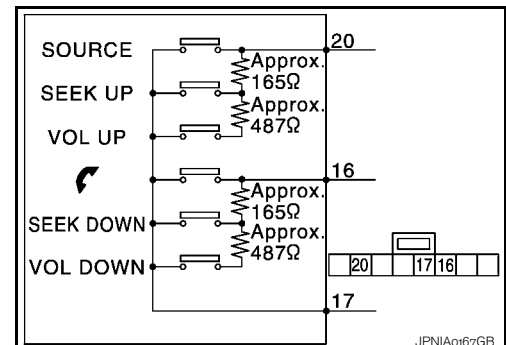


ECU DIAGNOSIS

AUDIO UNIT




Reference Value

INFOID:000000000996452

TERMINAL LAYOUT

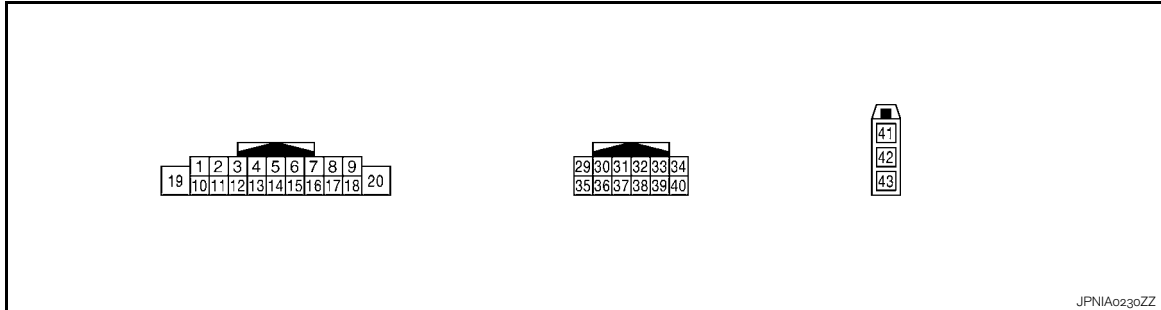




PHYSICAL VALUES

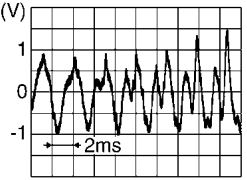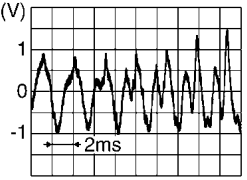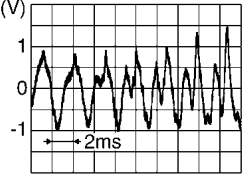Terminal (Wire color)		Description		Condition		Reference value (Approx.)
+	–	Signal name	Input/ Output			
2 (L)	3 (G)	Sound signal front LH	Output	Ignition switch ON	Voice output	 SKIB3609E
4 (LG)	5 (Y)	Sound signal rear LH	Output	Ignition switch ON	Voice output	 SKIB3609E
6 (R)	15 (B)	Steering switch signal A	Input	Ignition switch ON	Keep pressing SOURCE switch.	0 V
					Keep pressing SEEK UP switch.	1.7 V
					Keep pressing VOL UP switch.	3.3 V
					Except for above.	5 V
7 (R)	Ground	ACC power supply	Input	Ignition switch ACC	–	Battery voltage
11 (BR)	12 (P)	Sound signal front RH	Output	Ignition switch ON	Voice output	 SKIB3609E

AUDIO UNIT


< ECU DIAGNOSIS >

[AUDIO WITHOUT NAVIGATION]

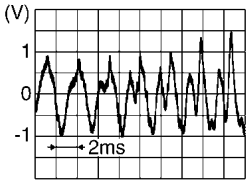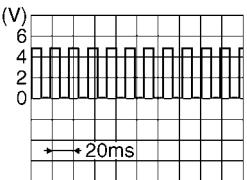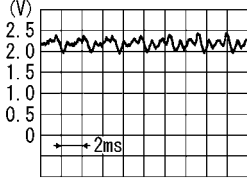Terminal (Wire color)		Description		Condition		Reference value (Approx.)
+	—	Signal name	Input/ Output			
13 (O)	14 (V)	Sound signal rear RH	Output	Ignition switch ON	Voice output	 SKIB360gE
15 (B)	Ground	Steering switch signal GND	—	Ignition switch ON	—	0 V
16 (Y)	15 (B)	Steering switch signal B	Input	Ignition switch ON	Keep pressing  switch.	0 V
					Keep pressing SEEK DOWN switch.	1.7 V
					Keep pressing VOL DOWN switch.	3.3 V
					Except for above.	5 V
17 (SB)	—	Immobilizer	—	—	—	—
18 (Y)	Ground	Vehicle speed signal (8- pulse)	Input	Ignition switch ON	When vehicle speed is ap- prox. 40 km/h (25MPH)	 SKIA664gJ
19 (LG)	Ground	Battery power supply	Input	Ignition switch OFF	—	Battery voltage
31 (B)	Ground	GND	—	Ignition switch ON	—	0 V
35 (B/W)	36	Microphone signal	Input	Ignition switch ON	Sounds	 PKIB5037J
36	Ground	Microphone GND	—	Ignition switch ON	—	0 V
37 (L)	36	Microphone VCC	Output	Ignition switch ON	—	5 V
42	—	Antenna signal	Input	—	—	—

Wiring Diagram - AUDIO WITHOUT NAVIGATION SYSTEM (LHD MODELS) -

INFOID:000000000996454

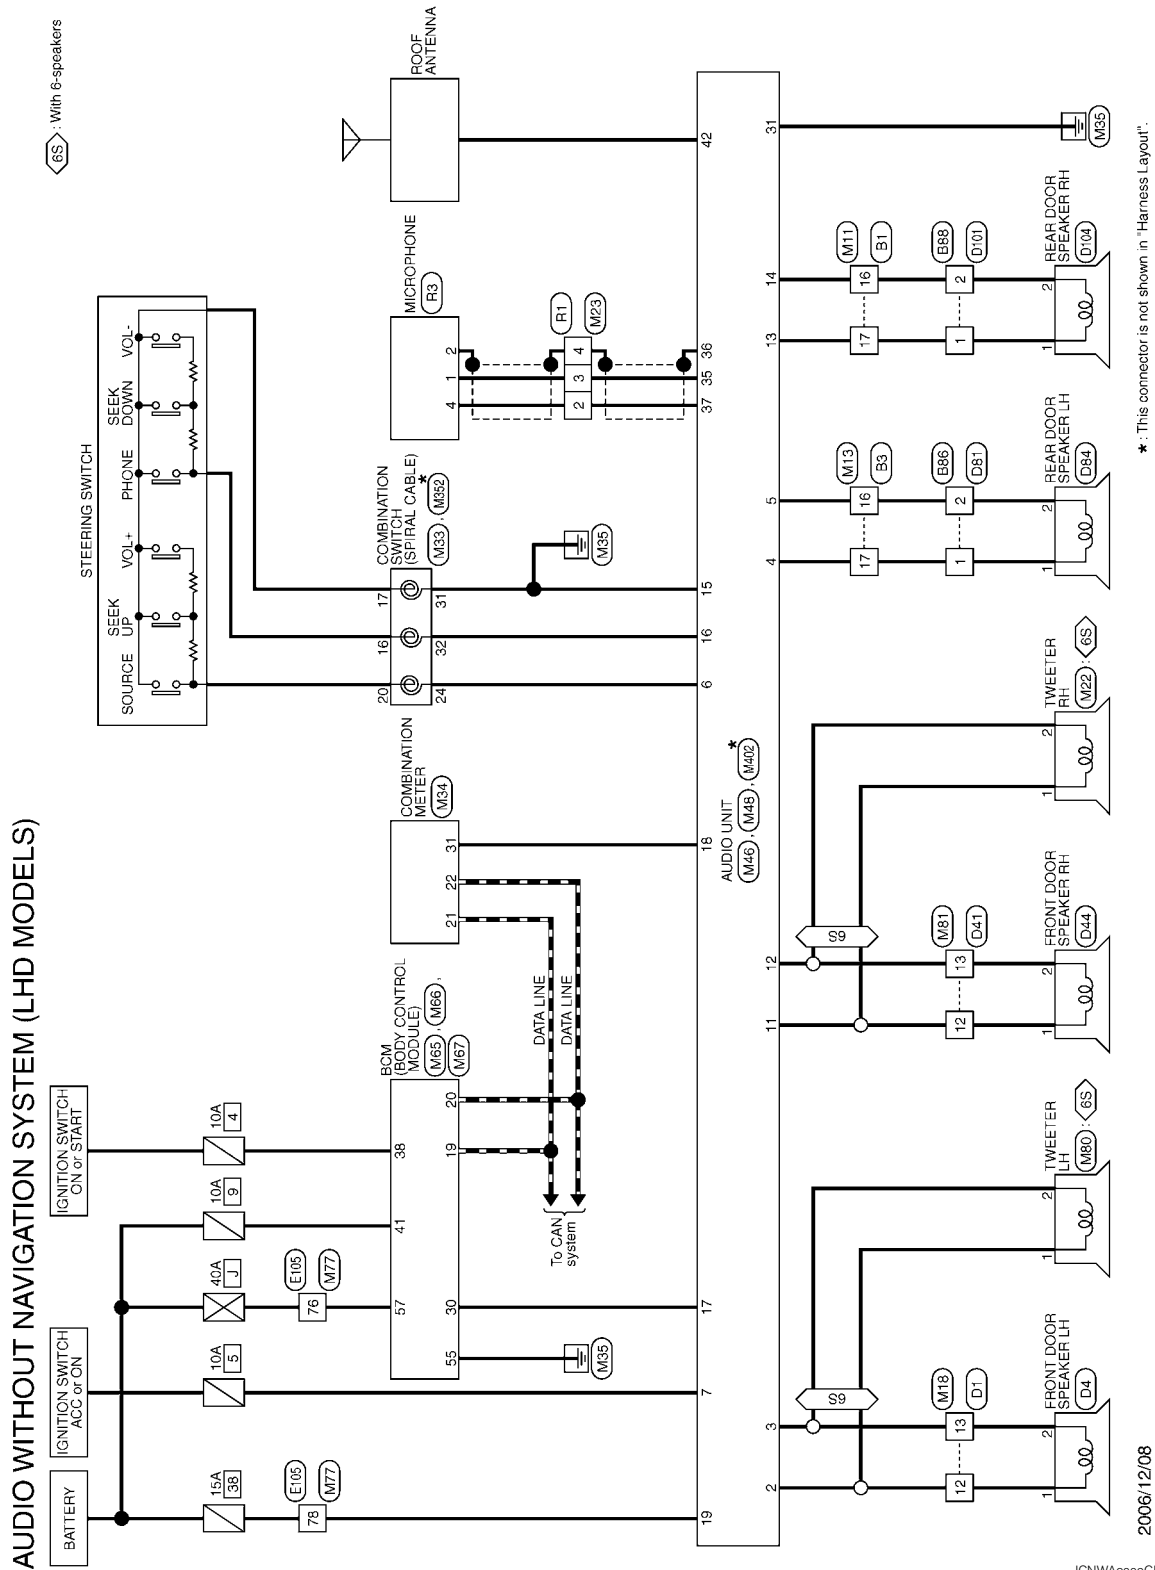

AUDIO WITHOUT NAVIGATION SYSTEM (LHD MODELS)

Connector No.	B1
Connector Name	WIRE TO WIRE
Connector Type	TH24MW



1	2	3	4	5	6	7	8	9	10	11	12
13	14	15	16	17	18	19	20	21	22	23	24



1	2	3	4	5	6	7	8	9	10	11	12
13	14	15	16	17	18	19	20	21	22	23	24

Connector No.	B86
Connector Name	WIRE TO WIRE
Connector Type	NS308MF-CS



1	2	3
4	5	6
7	8	

Connector No.	B83
Connector Name	WIRE TO WIRE
Connector Type	NS308MW-CS



1	2	3
4	5	6
7	8	

Terminal No.	Color of Wire	Signal Name [Specification]
16	V	-
17	O	-

Terminal No.	Color of Wire	Signal Name [Specification]
16	Y	-
17	LG	-

Terminal No.	Color of Wire	Signal Name [Specification]
1	LG	-
2	Y	-

Terminal No.	Color of Wire	Signal Name [Specification]
1	O	-
2	V	-

Connector No.	D1
Connector Name	WIRE TO WIRE
Connector Type	TK16FW



7	6	5	4
16	15	14	13
12	11	10	9
8			

Connector No.	D4
Connector Name	FRONT DOOR SPEAKER LH
Connector Type	NS02FW-CS



2	1
---	---

Connector No.	D41
Connector Name	WIRE TO WIRE
Connector Type	TK16FW



7	6	5	4
16	15	14	13
12	11	10	9
8			

Connector No.	D44
Connector Name	FRONT DOOR SPEAKER RH
Connector Type	NS02FW-CS



2	1
---	---

Terminal No.	Color of Wire	Signal Name [Specification]
12	L	-
13	G	-

Terminal No.	Color of Wire	Signal Name [Specification]
1	L	-
2	G	-

Terminal No.	Color of Wire	Signal Name [Specification]
12	BR	-
13	P	-

Terminal No.	Color of Wire	Signal Name [Specification]
1	BR	-
2	P	-

JCNWA0230GB

AUDIO WITHOUT NAVIGATION SYSTEM (LHD MODELS)

Connector No.	D81
Connector Name	WIRE TO WIRE
Connector Type	NS08FW-CS



3	2	1
8	7	6
5	4	

Connector No.	D84
Connector Name	REAR DOOR SPEAKER LH
Connector Type	NS02FW-CS



2	1
---	---

Connector No.	D101
Connector Name	WIRE TO WIRE
Connector Type	NS08FW-CS



3	2	1
8	7	6
5	4	

Connector No.	D104
Connector Name	REAR DOOR SPEAKER RH
Connector Type	NS02FW-CS



2	1
---	---

Terminal No.	Color of Wire	Signal Name [Specification]
1	LG	-
2	Y	-

Terminal No.	Color of Wire	Signal Name [Specification]
1	LG	-
2	Y	-

Terminal No.	Color of Wire	Signal Name [Specification]
1	O	-
2	V	-

Terminal No.	Color of Wire	Signal Name [Specification]
1	O	-
2	V	-

Connector No.	E105
Connector Name	WIRE TO WIRE
Connector Type	TH00MW-NS16-TM4



1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24

Connector No.	M11
Connector Name	WIRE TO WIRE
Connector Type	TH24FW



1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24

Connector No.	M13
Connector Name	WIRE TO WIRE
Connector Type	TH24FW



1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24

Connector No.	M16
Connector Name	WIRE TO WIRE
Connector Type	TK16MW



1	2	3	4	5	6	7
8	9	10	11	12	13	14
15	16					

Terminal No.	Color of Wire	Signal Name [Specification]
76	Y	-
78	LG	-

Terminal No.	Color of Wire	Signal Name [Specification]
16	V	-
17	O	-

Terminal No.	Color of Wire	Signal Name [Specification]
16	Y	-
17	LG	-

Terminal No.	Color of Wire	Signal Name [Specification]
12	L	-
13	G	-

AUDIO WITHOUT NAVIGATION SYSTEM (LHD MODELS)

Connector No.	M22
Connector Name	TWEETER RH
Connector Type	FCI 211FC023S9017



Terminal No.	Color of Wire	Signal Name [Specification]
1	BR	-
2	P	-

Connector No.	M23
Connector Name	WIRE TO WIRE
Connector Type	TK10FW-NS8




Terminal No.	Color of Wire	Signal Name [Specification]
2	W	-
3	B	-
4	SHIELD	-

Connector No.	M33
Connector Name	COMBINATION SWITCH (SPIRAL CABLE)
Connector Type	TK08FGV-TV




Terminal No.	Color of Wire	Signal Name [Specification]
24	R	-
31	B	-
32	Y	-

Connector No.	M34
Connector Name	COMBINATION METER
Connector Type	SAB10FW

 

Terminal No.	Color of Wire	Signal Name [Specification]
21	L	CAN-H
22	P	CAN-L
31	Y	VEHICLE SPEED (8-PULSE)

Connector No.	M46
Connector Name	AUDIO UNIT
Connector Type	TH18FW-GS2

 

Terminal No.	Color of Wire	Signal Name [Specification]
2	L	SOUND SIGNAL FRONT LH (+)
3	G	SOUND SIGNAL FRONT LH (-)
4	LG	SOUND SIGNAL REAR LH (+)
5	Y	SOUND SIGNAL REAR RH (-)
6	R	STRG SW A
7	R	ACC
11	BR	SOUND SIGNAL FRONT RH (+)
12	P	SOUND SIGNAL FRONT RH (-)
13	O	SOUND SIGNAL REAR RH (+)
14	V	SOUND SIGNAL REAR RH (-)
15	B	STRG SW GND

16	Y	STRG SW B
17	SB	IMMOBILIZER
18	Y	VEHICLE SPEED (8-PULSE)
19	LG	BATTERY

Connector No.	M48
Connector Name	AUDIO UNIT
Connector Type	TH12FW



Terminal No.	Color of Wire	Signal Name [Specification]
31	B	CONTROL SIGNAL (Without navigation system)
35	B/W	MICROPHONE SIGNAL
36	SHIELD	MICROPHONE GND
37	L	MICROPHONE VCC(Without navigation system)

Connector No.	M65
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	JAB40FB



Terminal No.	Color of Wire	Signal Name [Specification]
19	L	CAN-H
20	P	CAN-L
30	SB	AUDIO LINK
38	W/L	IGN SW


AUDIO WITHOUT NAVIGATION SYSTEM (LHD MODELS)

Connector No.	M86
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	FCI 211PC122S1017




Terminal No.	Color of Wire	Signal Name [Specification]
41	V	BAT(FUSE)

Connector No.	M87
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	FCI 211PC083S017

 

Terminal No.	Color of Wire	Signal Name [Specification]
55	B	GND(POWER)
57	Y	BAT(F/L)

Connector No.	M77
Connector Name	WIRE TO WIRE
Connector Type	TH60FW-NS1E-TM4

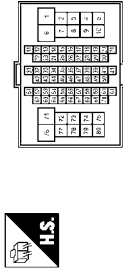

Terminal No.	Color of Wire	Signal Name [Specification]
76	Y	—
78	LG	—

Connector No.	M80
Connector Name	TWEETER LH
Connector Type	FCI 211PC023S9017



Terminal No.	Color of Wire	Signal Name [Specification]
1	L	—
2	G	—

Connector No.	M81
Connector Name	WIRE TO WIRE
Connector Type	TK16MW



Terminal No.	Color of Wire	Signal Name [Specification]
12	BR	—
13	P	—

Connector No.	M352
Connector Name	COMBINATION SWITCH (SPIRAL CABLE)
Connector Type	TK08MG1-X




Terminal No.	Color of Wire	Signal Name [Specification]
16	—	—
17	—	—
20	—	—

Connector No.	M02
Connector Name	AUDIO UNIT
Connector Type	G13 S1-2 S1S-HU



Terminal No.	Color of Wire	Signal Name [Specification]
42	—	ANTENNA

Connector No.	R1
Connector Name	WIRE TO WIRE
Connector Type	TK10MP-NS8

 

Terminal No.	Color of Wire	Signal Name [Specification]
2	B	—
3	W	—
4	SHIELD	—

AUDIO WITHOUT NAVIGATION SYSTEM (LHD MODELS)

Connector No.	R3
Connector Name	MICROPHONE
Connector Type	TKMF1



Terminal No.	Color of Wire	Signal Name (Specification)
1	W	MICROPHONE SIGNAL
2	SHIELD	MICROPHONE GND
4	B	MICROPHONE VCC

 
JCNWA0234GB

AV

A
B
C
D
E
F
G
H
I
J
K
L
M
O
P

cardiagn.com

INFOID:0000000001111175



AUDIO WITHOUT NAVIGATION SYSTEM (RHD MODELS)

Connector No.	B1
Connector Name	WIRE TO WIRE
Connector Type	TH24MW



1	2	3	4	5	6	7	8	9	10	11	12
13	14	15	16	17	18	19	20	21	22	23	24



1	2	3	4	5	6	7	8	9	10	11	12
13	14	15	16	17	18	19	20	21	22	23	24

Connector No.	B3
Connector Name	WIRE TO WIRE
Connector Type	TH24MW



1	2	3	4	5	6	7	8	9	10	11	12
13	14	15	16	17	18	19	20	21	22	23	24

Connector No.	B87
Connector Name	WIRE TO WIRE
Connector Type	NS308MF-CS



1	2	3
4	5	6
7	8	

Connector No.	B89
Connector Name	WIRE TO WIRE
Connector Type	NS308MW-CS



1	2	3
4	5	6
7	8	

Terminal No.	Color of Wire	Signal Name [Specification]
16	V	-
17	O	-

Terminal No.	Color of Wire	Signal Name [Specification]
16	Y	-
17	LG	-

Terminal No.	Color of Wire	Signal Name [Specification]
1	LG	-
2	Y	-

Terminal No.	Color of Wire	Signal Name [Specification]
1	O	-
2	V	-

Connector No.	D21
Connector Name	WIRE TO WIRE
Connector Type	TK16FW



7	6	5	4
16	15	14	13
12	11	10	9
8			

Connector No.	D24
Connector Name	FRONT DOOR SPEAKER RH
Connector Type	NS02FW-CS



2	1
---	---

Connector No.	D61
Connector Name	WIRE TO WIRE
Connector Type	TK16FW



7	6	5	4
16	15	14	13
12	11	10	9
8			

Connector No.	D84
Connector Name	FRONT DOOR SPEAKER LH
Connector Type	NS02FW-CS



2	1
---	---

Terminal No.	Color of Wire	Signal Name [Specification]
12	BR	-
13	P	-

Terminal No.	Color of Wire	Signal Name [Specification]
1	BR	-
2	P	-

Terminal No.	Color of Wire	Signal Name [Specification]
12	L	-
13	G	-

Terminal No.	Color of Wire	Signal Name [Specification]
1	L	-
2	G	-

AUDIO WITHOUT NAVIGATION SYSTEM (RHD MODELS)

Connector No.	D91
Connector Name	WIRE TO WIRE
Connector Type	NS30FW-CS



3	2	1
8	7	6
5	4	

Connector No.	D94
Connector Name	REAR DOOR SPEAKER RH
Connector Type	NS32FW-CS



2	1
---	---

Connector No.	D111
Connector Name	WIRE TO WIRE
Connector Type	NS30FW-CS



3	2	1
8	7	6
5	4	

Connector No.	D114
Connector Name	REAR DOOR SPEAKER LH
Connector Type	NS32FW-CS



2	1
---	---

Terminal No.	Color of Wire	Signal Name [Specification]
1	O	-
2	V	-

Terminal No.	Color of Wire	Signal Name [Specification]
1	O	-
2	V	-

Terminal No.	Color of Wire	Signal Name [Specification]
1	LG	-
2	Y	-

Terminal No.	Color of Wire	Signal Name [Specification]
1	LG	-
2	Y	-

Connector No.	E105
Connector Name	WIRE TO WIRE
Connector Type	TH60MW-NS16-TM4



1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59	60	61	62	63	64	65	66	67	68	69	70	71	72	73	74	75	76	77	78	79	80	81	82	83	84	85	86	87	88	89	90	91	92	93	94	95	96	97	98	99	100
---	---	---	---	---	---	---	---	---	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	-----

Connector No.	M11
Connector Name	WIRE TO WIRE
Connector Type	TH24FW



12	11	10	9	8	7	6	5	4	3	2	1
24	23	22	21	20	19	18	17	16	15	14	13

Connector No.	M13
Connector Name	WIRE TO WIRE
Connector Type	TH24FW



12	11	10	9	8	7	6	5	4	3	2	1
24	23	22	21	20	19	18	17	16	15	14	13

Connector No.	M20
Connector Name	WIRE TO WIRE
Connector Type	TK16MW



1	2	3	4	5	6	7
8	9	10	11	12	13	14
15	16					

Terminal No.	Color of Wire	Signal Name [Specification]
76	Y	-
78	LG	-

Terminal No.	Color of Wire	Signal Name [Specification]
16	V	-
17	O	-

Terminal No.	Color of Wire	Signal Name [Specification]
16	Y	-
17	LG	-

Terminal No.	Color of Wire	Signal Name [Specification]
12	BR	-
13	P	-


AUDIO WITHOUT NAVIGATION SYSTEM (RHD MODELS)

Connector No.	M22
Connector Name	TWEETER RH
Connector Type	FCI 211FC023S9017



Terminal No.	Color of Wire	Signal Name [Specification]
1	BR	-
2	P	-

Connector No.	M23
Connector Name	WIRE TO WIRE
Connector Type	TK10FW-NS8

 


Terminal No.	Color of Wire	Signal Name [Specification]
2	W	-
3	B	-
4	SHIELD	-

Connector No.	M33
Connector Name	COMBINATION SWITCH (SPIRAL CABLE)
Connector Type	TK08FGV-TV




Terminal No.	Color of Wire	Signal Name [Specification]
24	R	-
31	B	-
32	Y	-

Connector No.	M34
Connector Name	COMBINATION METER
Connector Type	SAB10FW

 

Terminal No.	Color of Wire	Signal Name [Specification]
21	L	CAN-H
22	P	CAN-L
31	Y	VEHICLE SPEED (8-PULSE)


Connector No.	M46
Connector Name	AUDIO UNIT
Connector Type	TH18FW-GS2

 

Terminal No.	Color of Wire	Signal Name [Specification]
2	L	SOUND SIGNAL FRONT LH (+)
3	G	SOUND SIGNAL FRONT LH (-)
4	LG	SOUND SIGNAL REAR LH (+)
5	Y	SOUND SIGNAL REAR RH (-)
6	R	STRG SW A
7	R	ACC
11	BR	SOUND SIGNAL FRONT RH (+)
12	P	SOUND SIGNAL FRONT RH (-)
13	O	SOUND SIGNAL REAR RH (+)
14	V	SOUND SIGNAL REAR RH (-)
15	B	STRG SW GND

16	Y	STRG SW B
17	SB	IMMOBILIZER
18	Y	VEHICLE SPEED (8-PULSE)
19	LG	BATTERY

Connector No.	M48
Connector Name	AUDIO UNIT
Connector Type	TH12FW

 

Terminal No.	Color of Wire	Signal Name [Specification]
31	B	CONTROL SIGNAL (Without navigation system)
35	B/W	MICROPHONE SIGNAL
36	SHIELD	MICROPHONE GND
37	L	MICROPHONE VCC(Without navigation system)

Connector No.	M65
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	JAB40FB



Terminal No.	Color of Wire	Signal Name [Specification]
19	L	CAN-H
20	P	CAN-L
30	SB	AUDIO LINK
38	W/L	IGN SW

AUDIO WITHOUT NAVIGATION SYSTEM (RHD MODELS)

Connector No.	M86
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	FCI 211PC122S1017



Terminal No.	Color of Wire	Signal Name [Specification]
41	V	BAT(FUSE)

Connector No.	M87
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	FCI 211PC083S017



Terminal No.	Color of Wire	Signal Name [Specification]
55	B	GND(POWER)
57	Y	BAT(F/L)

Connector No.	M77
Connector Name	WIRE TO WIRE
Connector Type	TH60FW-NS1E-TM4




Terminal No.	Color of Wire	Signal Name [Specification]
76	Y	—
78	LG	—

Connector No.	M80
Connector Name	TWEETER LH
Connector Type	FCI 211PC023S9017



Terminal No.	Color of Wire	Signal Name [Specification]
1	L	—
2	G	—

Connector No.	M83
Connector Name	WIRE TO WIRE
Connector Type	TK16MW

 


Terminal No.	Color of Wire	Signal Name [Specification]
12	L	—
13	G	—

Connector No.	M352
Connector Name	COMBINATION SWITCH (SPIRAL CABLE)
Connector Type	TK08MG1-X




Terminal No.	Color of Wire	Signal Name [Specification]
16	—	—
17	—	—
20	—	—

Connector No.	M02
Connector Name	AUDIO UNIT
Connector Type	G13 S1-2 S1S-HU

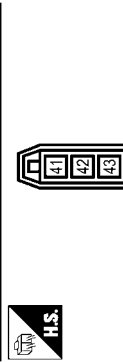

Terminal No.	Color of Wire	Signal Name [Specification]
42	—	ANTENNA

Connector No.	R1
Connector Name	WIRE TO WIRE
Connector Type	TK10MP-NS8

 

Terminal No.	Color of Wire	Signal Name [Specification]
2	B	—
3	W	—
4	SHIELD	—

JCNWA0239GB

AUDIO WITHOUT NAVIGATION SYSTEM (RHD MODELS)

Connector No.	R3
Connector Name	MICROPHONE
Connector Type	TKMF1



Terminal No.	Color of Wire	Signal Name (Specification)
1	W	MICROPHONE SIGNAL
2	SHIELD	MICROPHONE GND
4	B	MICROPHONE VCC

JCNWA0240GB

AV

A
B
C
D
E
F
G
H
I
J
K
L
M
O
P

cardiagn.com

SYMPTOM DIAGNOSIS

MULTI AV SYSTEM SYMPTOMS

Symptom Table

INFOID:000000000996467

RELATED TO AUDIO

Symptom	Check items	Possible malfunction location / Action to take
Audio sound is not heard.	No sound from all speakers	Audio unit (AV-33, "Exploded View")
	Sound is not heard only from the specific places (Front RH, rear RH, front LH and rear LH).	Sound signal circuit of suspect system

RELATED TO HANDS FREE PHONE

- Check that the cellular phone is corresponding type (Bluetooth® enabled) when the hands free related malfunction vehicle is in service before performing a diagnosis.
- There is a case that malfunction occurs due to the version change of the phone type, etc. even though it is a corresponding type. Therefore, confirm it by changing the cellular phone to another corresponding type phone, and check that it operates normally. It is necessary to distinguish whether the cause is the vehicle or cellular phone. Check to ensure the customers phone is supported by checking the phone compatibility for the hands free system.

Trouble diagnosis chart by symptom

Symptoms	Check items	Possible malfunction location / Action to take
Does not recognize cellular phone connection.	Repeat the registration of cellular phone.	Audio unit (AV-33, "Exploded View")
Hands free phone cannot be established.	• Hands free phone operation can be made, but the communication cannot be established. • Hands free phone operation can be performed, however, voice between each other cannot be heard during the conversation.	Audio unit (AV-33, "Exploded View")
The other party's voice cannot be heard by hands free phone.	No sound from all speakers	Audio unit (AV-33, "Exploded View")
	Sound is not heard only from the specific places (Front RH or front LH).	Sound signal circuit (TEL voice)
Originating sound is not heard by the other party with hands free phone communication.	Sound operation function is normal.	Audio unit (AV-33, "Exploded View")
	Sound operation function does not work.	Microphone signal circuit (AV-10, "Diagnosis Procedure")

RELATED TO STEERING SWITCH

Symptoms	Possible malfunction location / Action to take
All steering switches are not operated.	Steering switch signal ground circuit (AV-15, "Diagnosis Procedure")
Only specified switch cannot be operated.	Steering switch (AV-37, "Exploded View")
"MENU UP", "VOL UP" and "SOURCE" switches are not operated.	Steering switch signal A circuit (AV-11, "Diagnosis Procedure")
"  ", "MENU DOWN" and "VOL DOWN" switches are not operated.	Steering switch signal B circuit (AV-13, "Diagnosis Procedure")

NORMAL OPERATING CONDITION

< SYMPTOM DIAGNOSIS >

[AUDIO WITHOUT NAVIGATION]

NORMAL OPERATING CONDITION

Description

INFOID:0000000001000509

RELATED TO AUDIO

- The majority of the audio malfunctions are the result of outside causes (bad CD, electromagnetic interference, etc.). Check the symptoms below to diagnose the malfunction.
- The vehicle itself can be a source of noise if noise prevention parts or electrical equipment is malfunctioning. Check that noise is caused and/or changed by engine speed, ignition switch turned to each position, and operation of each piece of electrical equipment. Then determine the cause.

NOTE:

- CD-R is not guaranteed to play because they can contain compressed audio (MP3, WMA) or could be incorrectly mastered by the customer on a computer.
- Check that the CDs carry the Compact Disc Logo. If not, the disc is not mastered to the red book Compact Disc Standard and may not play.

Symptoms	Cause and Counter measure
Cannot play	Check that the CD was inserted correctly.
	Check that the CD is scratched or dirty.
	Check that there is condensation inside the player, and if there is, wait until the condensation is gone (about 1 hour) before using the player.
	The player will play correctly after it returns to the normal temperature if there is a temperature increase error.
	Only the music CD files (CD-DA data) will be played if there is a mixture of music CD files (CD-DA data) and MP3/WMA files on a CD.
	Files with extensions other than ".MP3", ".WMA", ".mp3", or ".wma" cannot be played.
	Check that the finalization process, such as session close and disc close, is done for the disc.
Poor sound quality	Check that the CD is scratched or dirty.
It takes a relatively long time before the music starts playing.	If there are many folder or file levels on the MP3/WMA CD, or if it is a multisession disc, some time may be required before the music starts playing.
The songs do not play back in the desired order.	The playback order is the order in which the files were written by the software, so the files might not play in the desired order.

Noise resulting from variations in field strength, such as fading noise and multi-path noise, or external noise from trains and other sources, is not a malfunction.

NOTE:

- Fading noise: This noise occurs because of variations in the field strength in a narrow range due to mountains or buildings blocking the signal.
- Multi-path noise: This noise results from a time difference between the broadcast waves directly from the station arriving at the antenna and the waves reflected by mountains or buildings.

RELATED TO TELEPHONE

Symptom	Possible cause	Possible solution
The system does not recognize the command. The system recognizes the command incorrectly.	The interior of the vehicle is too noisy.	Close the windows or have other occupants be quiet.
	The volume of the voice is too low.	Speak louder.
	Pronunciation is unclear.	Speak clearly.
	Voice recognition mode is not yet ready to speak.	Push the release "🔊" on the steering switch, and speak a command after the tone sounds.
	5 seconds or more have passed after pushed and released "🔊" on the steering switch.	Make sure to speak a command within 5seconds after push and release "🔊" on the steering switch.

PRECAUTION

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000001091326

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the SRS and SB section of this Service Manual.

WARNING:


- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SRS section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

ON-VEHICLE REPAIR

AUDIO UNIT

Exploded View

INFOID:000000000996482

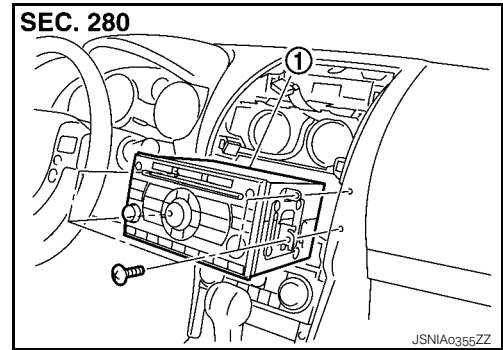

1. Audio unit

Removal and Installation

INFOID:000000000996483

REMOVAL

1. Remove cluster lid C. Refer to [IP-11, "Exploded View"](#).
2. Remove audio unit with bracket.

INSTALLATION

Install in the reverse order of removal.

A
B
C
D
E
F
G
H
I
J
K
L
M
O
P

AV

FRONT DOOR SPEAKER


< ON-VEHICLE REPAIR >

[AUDIO WITHOUT NAVIGATION]

FRONT DOOR SPEAKER

Exploded View

INFOID:000000000996488

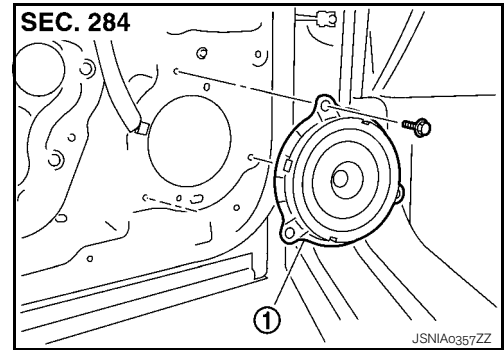

1. Front door speaker

Removal and Installation

INFOID:000000000996489

REMOVAL

1. Remove front door finisher. Refer to [INT-10, "FRONT DOOR FINISHER : Exploded View"](#).
2. Remove front door speaker.

INSTALLATION

Install in the reverse order of removal.

REAR DOOR SPEAKER


< ON-VEHICLE REPAIR >

[AUDIO WITHOUT NAVIGATION]

REAR DOOR SPEAKER

Exploded View

INFOID:000000000996490

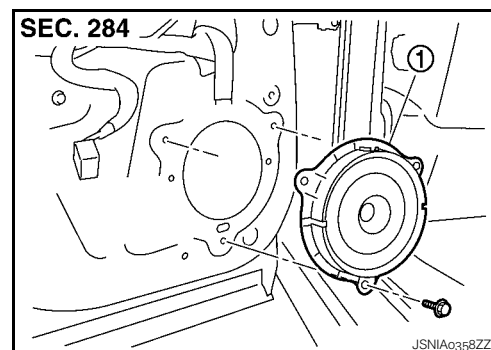

1. Rear door speaker

Removal and Installation

INFOID:000000000996491

REMOVAL

1. Remove rear door finisher. Refer to [INT-12. "REAR DOOR FINISHER : Exploded View"](#).
2. Remove rear door speaker.

INSTALLATION

Install in the reverse order of removal.

A

B

C

D

E

F

G

H

I

J

K

L

M

AV


O

P

TWEETER

Exploded View

INFOID:000000000996492

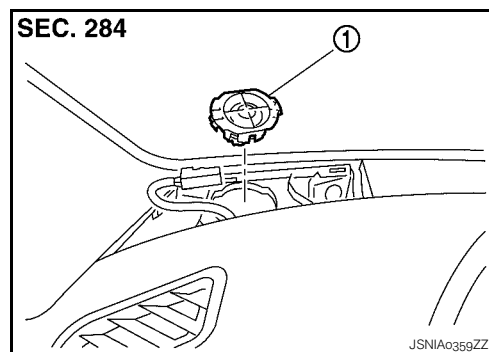

1. Tweeter

Removal and Installation

INFOID:000000000996493

REMOVAL

1. Remove tweeter grill. Refer to [IP-11, "Exploded View"](#).
2. Remove tweeter.

INSTALLATION

Install in the reverse order of removal.

STEERING SWITCH

Exploded View

INFOID:000000000996508

Refer to [ST-9, "Exploded View"](#).

Removal and Installation

INFOID:000000000996509

REMOVAL

Refer to [ST-9, "Removal and Installation"](#).

INSTALLATION

Install in the reverse order of removal.

A

B

C

D

E

F

G

H

I

J

K

L

M

AV

O

P

MICROPHONE


Exploded View

INFOID:000000000996514

REMOVAL

Refer to [INT-20, "Exploded View"](#).

DISASSEMBLY

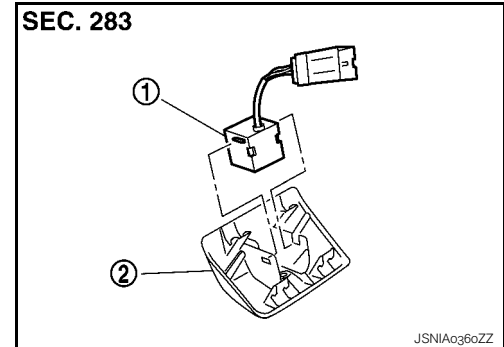

1. Microphone
2. Microphone cover

Removal and Installation

INFOID:000000000996515

REMOVAL

1. Remove microphone cover. Refer to [INT-20, "Exploded View"](#).
2. Remove microphone.


INSTALLATION

Install in the reverse order of removal.

RADIO ANTENNA

Exploded View

INFOID:0000000000996516

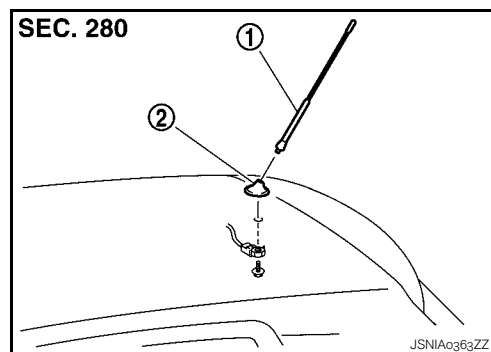

1. Antenna rod
2. Antenna base

Removal and Installation

INFOID:0000000000996517

REMOVAL

1. Remove headlining. Refer to [INT-20, "Exploded View"](#).
2. Remove antenna base and antenna rod.

INSTALLATION

Install in the reverse order of removal.

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

AV

ANTENNA FEEDER (RADIO)

< ON-VEHICLE REPAIR >


[AUDIO WITHOUT NAVIGATION]

ANTENNA FEEDER (RADIO)


Harness Layout

INFOID:000000000996531

SEC. 280

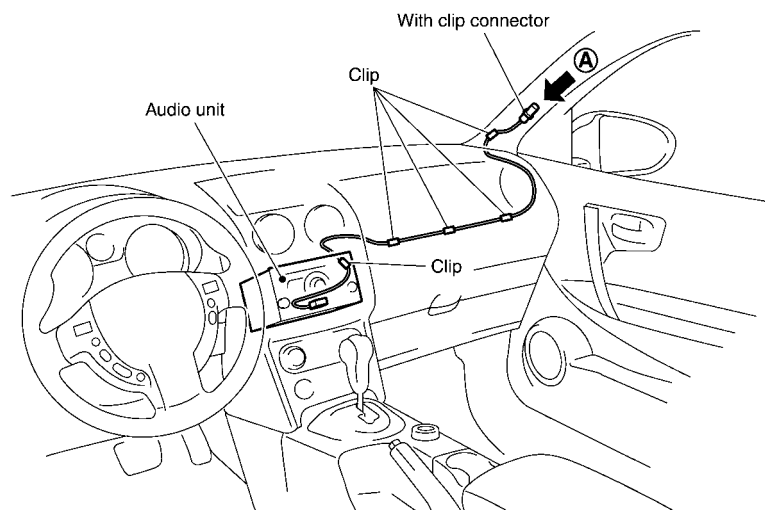

Instrument panel driver side

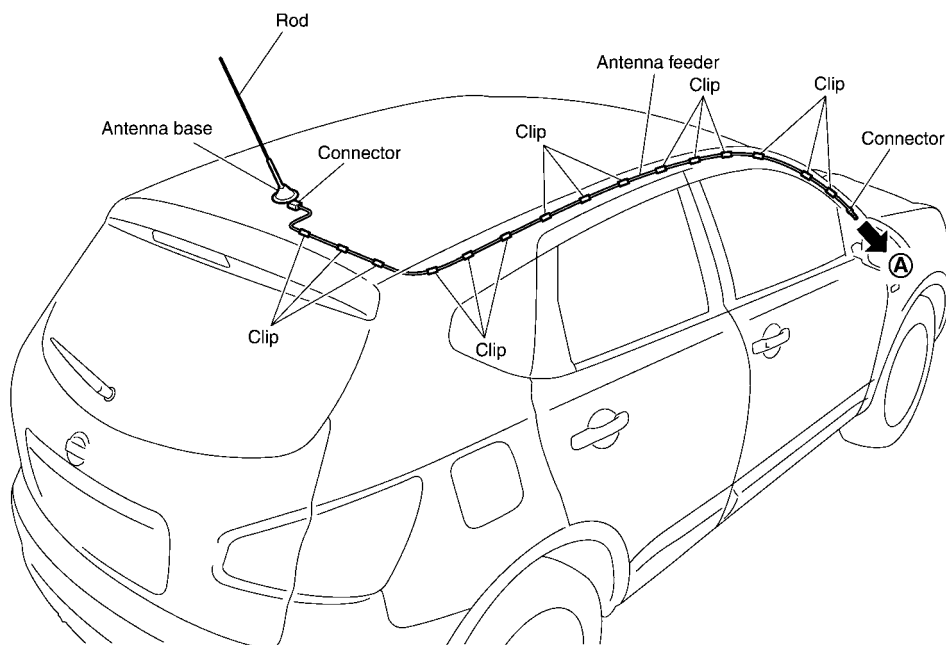

Rear view of vehicle

JPNIA0225GB


BASIC INSPECTION

DIAGNOSIS AND REPAIR WORKFLOW

Work Flow

INFOID:000000000946996

OVERALL SEQUENCE

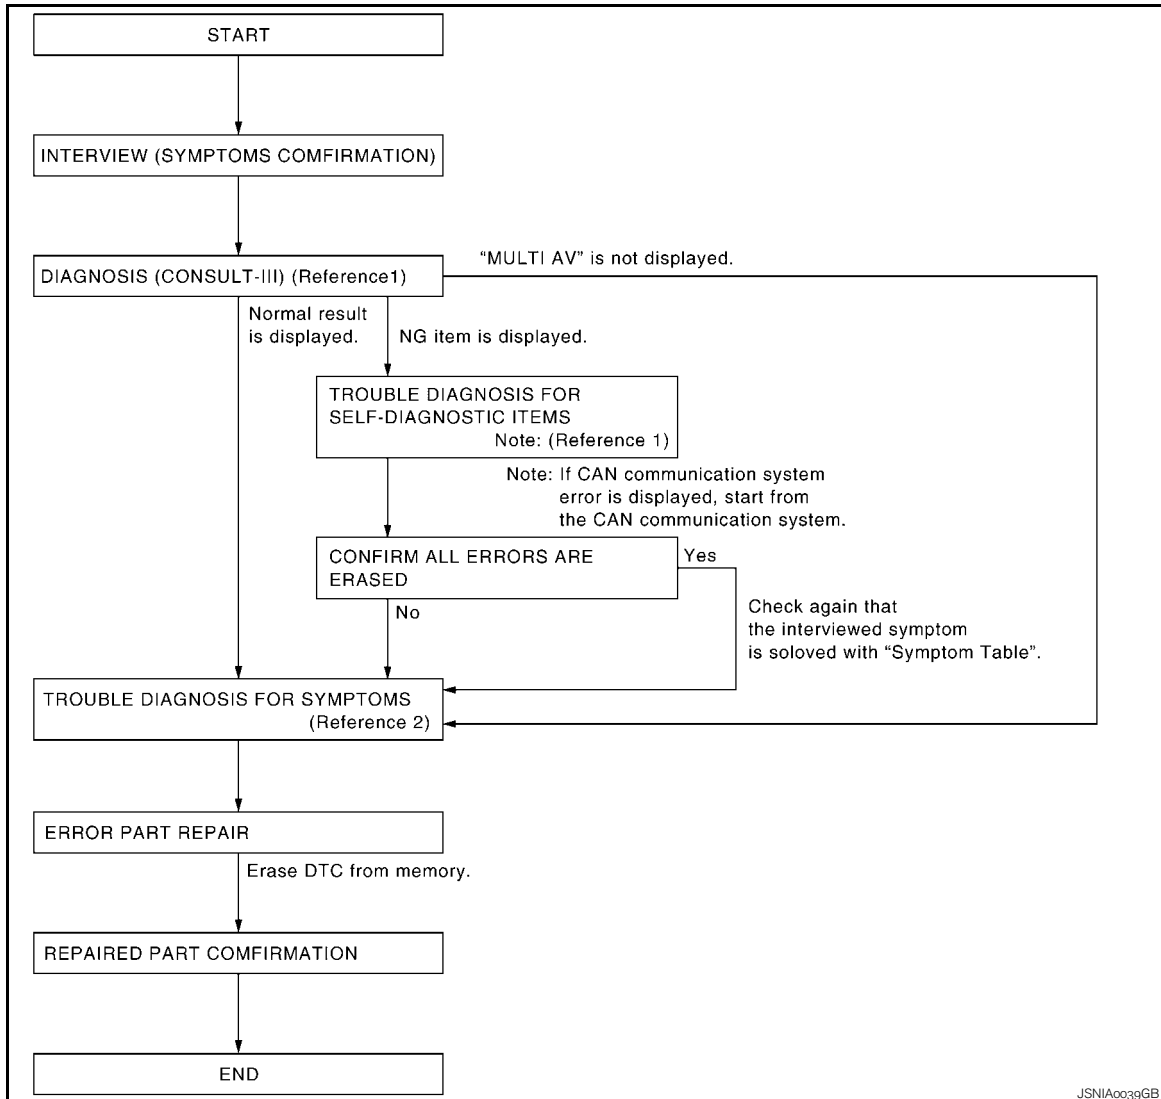

- Reference 1... Refer to [AV-65, "CONSULT - III Function \(MULTI AV\)".](#)
- Reference 2... Refer to [AV-189, "Symptom Table".](#)

DETAILED FLOW

1.CHECK SYMPTOM

Check the malfunction symptoms by performing the following items.

- Interview the customer to obtain the malfunction information (conditions and environment when the malfunction occurred).
- Check the symptom.

>> GO TO 2.

2.SELF-DIAGNOSIS (CONSULT-III)

1. Connect CONSULT-III and perform a self-diagnosis for "MULTI AV".

NOTE:

Skip to step 4 of the diagnosis procedure if "MULTI AV" is not displayed.

2. Check that any DTC No. is displayed in the self-diagnosis results.

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

[AUDIO WITH NAVIGATION]

Is any DTC No. displayed?

- YES >> GO TO 3.
- NO >> GO TO 4.

3.CHECK SELF-DIAGNOSIS RESULTS (CONSULT-III)

1. Check the DTC No. indicated in the self-diagnosis results.
2. Perform the relevant diagnosis referring to the DTC Index. Refer to [AV-137, "DTC Index"](#).

NOTE:

Start with the diagnosis for the CAN communication system if "CAN COMM CIRCUIT [U1000] and CONTROL UNIT CAN [U1010]" is displayed.

>> GO TO 5.

4.PERFORM DIAGNOSIS BY SYMPTOM

Perform the relevant diagnosis referring to the diagnosis chart by symptom. Refer to [AV-189, "Symptom Table"](#).

>> GO TO 5.

5.REPAIR OR REPLACE MALFUNCTIONING PARTS

Repair or replace the identified malfunctioning parts.

NOTE:

Erase the stored self-diagnosis results after repairing or replacing the relevant components if any DTC No. has been indicated in the self-diagnosis results.

>> GO TO 6.

6.CHECK AFTER REPAIR

1. Perform a self-diagnosis for "MULTI AV" with CONSULT-III after repairing or replacing the malfunctioning parts.
2. Check that any DTC No. is displayed in the self-diagnosis results.

Is any DTC No. displayed?

- YES >> GO TO 3.
- NO >> GO TO 7.

7.FINAL CHECK

Perform the operation to check that the malfunction symptom is solved or any other symptoms are present.


Is there any symptom?

- YES >> GO TO 4.
- NO >> INSPECTION END

FUNCTION DIAGNOSIS

MULTI AV SYSTEM

System Diagram

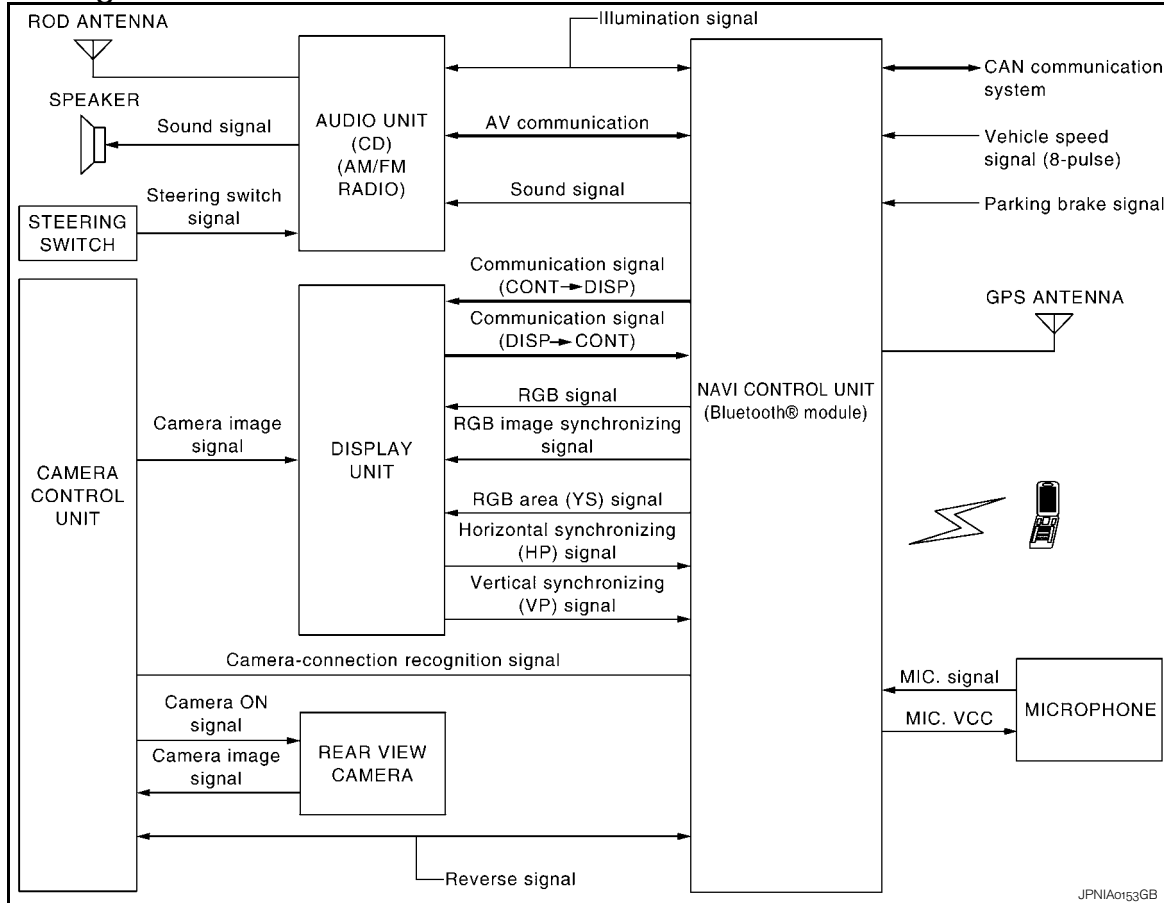

System Description

INFOID:0000000000947004

Multi AV system means that the following systems are integrated.

System name	System explanation
NAVIGATION SYSTEM	AV-47. "System Description"
AUDIO SYSTEM	AV-53. "System Description"
REAR VIEW MONITOR SYSTEM	AV-51. "System Description"
VEHICLE INFORMATION SYSTEM	- Status of audio, fuel economy, maintenance and navigation is displayed. - NAVI control unit displays the fuel consumption status and trip computer status while receiving data signal through CAN communication from ECM, combination meter and BCM.
HANDS-FREE PHONE SYSTEM	Refer to the following "HANDS-FREE PHONE SYSTEM".

- Two AV communication lines (H, L) connect between units that configure MULTI AV system. NAVI control unit controls by sending/receiving data one by one with each unit (slave unit) that configures them completely as a master unit.
- Two AV communication lines (H, L) adopt a twisted pair line that is resistant to noise.
- NAVI control unit is connected by CAN communication, and it receives data signal from ECM, combination meter. It computes and displays fuel economy information value with the obtained information. Sending/receiving of data signal is performed by BCM. Also, it sends the required signal of vehicle setting and receives the response signal.

- NAVI control unit is connected with display and serial communication, and it sends the required signal of display and display control and receives the response signal from front display. Also, it is connected with satellite radio by serial communication, and it sends the operating signal and receives the display signal.


NOTE:

NAVI control unit can perform CONSULT-III self-operating function and on board self-diagnosis.

- CONSULT-III self diagnosis: Refer to [AV-65. "CONSULT - III Function \(MULTI AV\)"](#).
- On board self diagnosis: Refer to [AV-55. "Diagnosis Description"](#).

HANDS-FREE PHONE SYSTEM

- Hands-free communication can be operated by connecting using Bluetooth® with cellular phone.
- Operation is performed by steering switch, and operating condition is indicated on display.
- Guide sound that is heard during operation is input from NAVI control unit to audio unit and is output from front speaker.

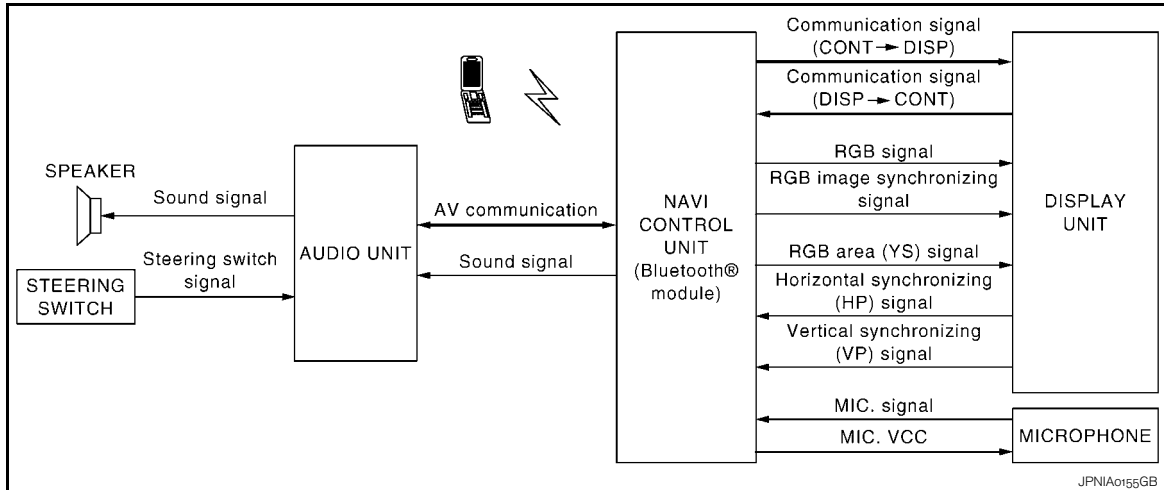

When a call is originated

Spoken voice sound output from the microphone (Mic. Signal) is input to NAVI control unit. NAVI control unit outputs to cellular phone with Bluetooth® communication as a TEL voice signal. Voice sound is then heard at the other party.

When receiving a call

Voice sound is input to own cellular phone from the other party. TEL voice signal is output to front speaker, and the signal is input to audio unit via NAVI control unit by establishing Bluetooth® communication from cellular phone.

Component Parts Location

INFOID:000000000947005


NOTE:

As for right-hand drive vehicles, install GPS antenna feeder between the center console and the instrument panel in the reverse of left-handle drive vehicles.

MULTI AV SYSTEM

< FUNCTION DIAGNOSIS >

[AUDIO WITH NAVIGATION]

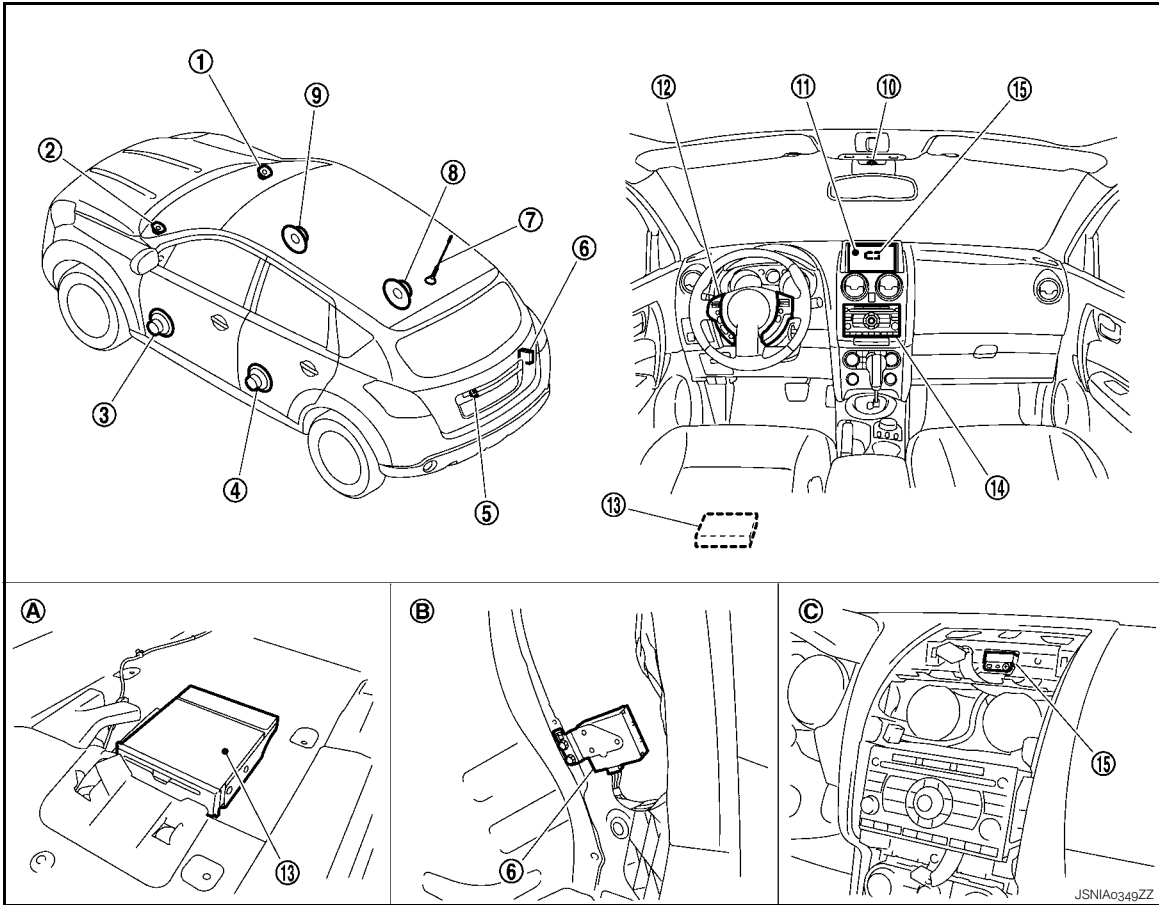

- | | | |
|--------------------------------|-------------------------|---------------------------|
| 1. Tweeter RH | 2. Tweeter LH | 3. Front door speaker LH |
| 4. Rear door speaker LH | 5. Rear view camera | 6. Camera control unit |
| 7. Radio antenna | 8. Rear door speaker RH | 9. Front door speaker RH |
| 10. Microphone | 11. Display unit | 12. Steering switch |
| 13. NAVI control unit | 14. Audio unit | 15. GPS antenna |
| A. A bottom of a front seat LH | B. Luggage side RH | C. Back of a display unit |

Component Description

INFOID:0000000000947006

Part name	Description
NAVI CONTORL UNIT	- Map data can be read from the Map DVD-ROM by installing Map DVD-ROM. - It is the master unit of the MULTI AV system, and it is connected to each control unit by means of communication. It operates each system according to communication signals from the NAVI control unit. - The NAVI control unit includes the audio, hands-free phone, navigation, and vehicle information functions. - It is connected to ECM and combination meter via CAN communication to obtain necessary information for the vehicle information function. - It inputs the illumination signals that are required for the display dimming control. - It inputs the signals for driving status recognition (vehicle speed, reverse and parking brake).
MAP DVD-ROM	A collection of Map data.
DISPLAY UNIT	- Display image is controlled by the serial communication from NAVI control unit. - RGB image signal is input from NAVI control unit (RGB, RGB area and RGB synchronizing). Camera image signal is input from camera control unit. - Synchronize signal (HP, VP) is output to NAVI control unit.

A
B
C
D
E
F
G
H
I
J
K
L

M

AV

O

P

MULTI AV SYSTEM


< FUNCTION DIAGNOSIS >

[AUDIO WITH NAVIGATION]

Part name	Description
AUDIO UNIT	- Operational switch of MULTI AV system is integrated. - NAVI control unit and AV communication are connected with Audio unit. Operating signals of the switch are sent to the NAVI control unit.
FRONT DOOR SPEAKER	- Outputs sound signal from audio unit. - Outputs high, mid and low range sounds.
REAR DOOR SPEAKER	- Outputs sound signal from audio unit. - Outputs high, mid and low range sounds.
TWEETER	- Outputs sound signal from audio unit. - Outputs high range sound.
CAMERA CONTROL UNIT	- Camera image signal is input from rear view camera, and camera image is indicated on the display. - Power (camera ON signal) is sent to rear view camera. - Controlled by AV communication sent from NAVI control unit. - NAVI control unit recognizes the presence of camera system with camera connection recognition signal.
REAR VIEW CAMERA	The image of vehicle rear view is sent to camera control unit.
STEERING SWITCH	- Operations for audio, hands-free phone, voice recognition and navigation, etc. are possible. - Steering switch signal (operation signal) is output to audio unit.
MICROPHONE	- Used for hands-free phone operation and voice recognition. - Mic. signal is sent to NAVI control unit. - Power (Mic. VCC) is supplied from NAVI control unit.
GPS ANTENNA	GPS signal is received and sent to NAVI control unit.
RADIO ANTENNA	Radio signal received by antenna is sent to audio unit.

NAVIGATION SYSTEM

System Diagram

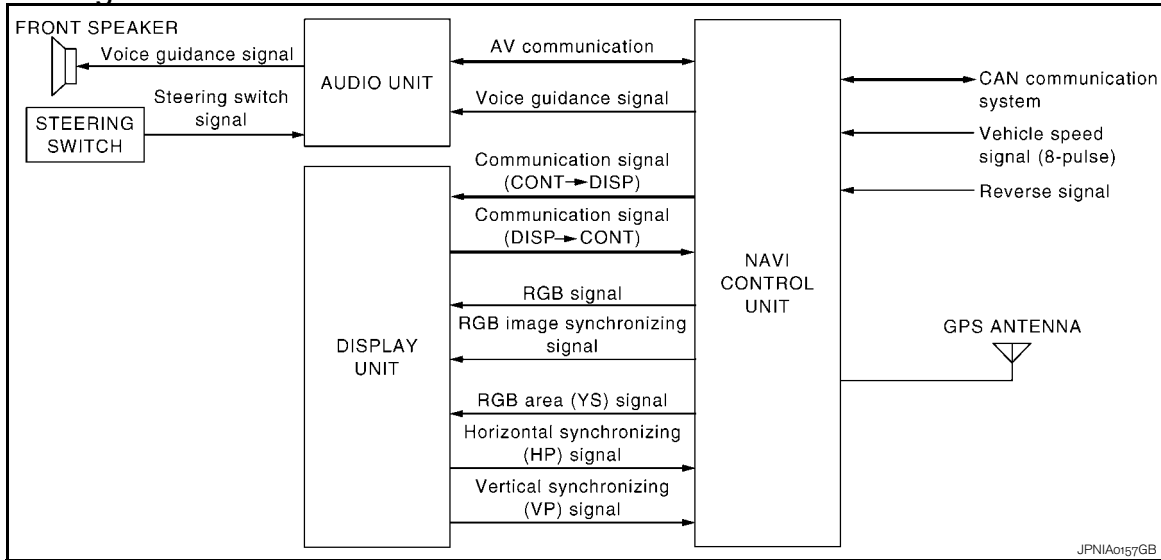

System Description

INFOID:0000000000947008


NAVIGATION SYSTEM

Location Detection Principle

The navigation system periodically calculates the vehicle's current position according to the following three signals:

- Travel distance of the vehicle as determined by the vehicle speed sensor
- Turning angle of the vehicle as determined by the gyroscope (angular velocity sensor)
- Direction of vehicle travel as determined by the GPS antenna (GPS information)

The current position of the vehicle is then identified by comparing the calculated vehicle position with map data read from the map DVD-ROM, which is stored in the DVD-ROM drive (map-matching), and indicated on the screen as a vehicle mark. More accurate data is judged and used by comparing vehicle position detection results found by the GPS with the result by map-matching.

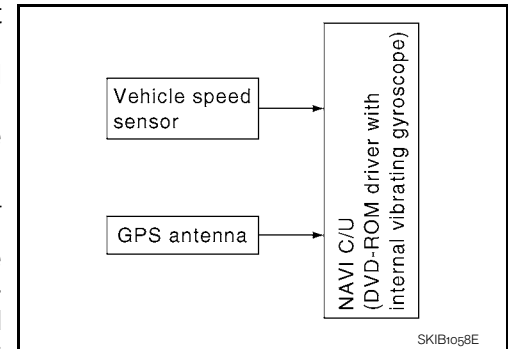


The current vehicle position will be calculated by detecting the distance the vehicle moved from the previous calculation point and its direction.

- Travel distance

Travel distance calculations are based on the vehicle speed sensor input signal. Therefore, the calculation may become incorrect as the tires wear down. To prevent this, an automatic distance correction function has been adopted.

- Travel direction

Change in the travel direction of the vehicle is calculated by a gyroscope (angular velocity sensor) and a GPS antenna (GPS information). They have both advantages and disadvantages.

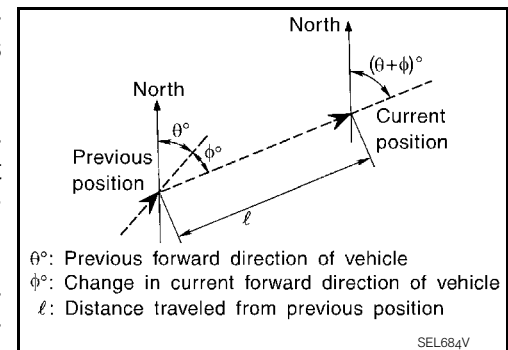

Type	Advantage	Disadvantage
Gyroscope (angular velocity sensor)	Can detect the vehicle's turning angle quite accurately.	Direction errors may accumulate when vehicle is driven for long distances without stopping.
GPS antenna (GPS information)	Can detect the vehicle's travel direction (North/South/East/West).	Correct direction cannot be detected when vehicle speed is low.


More accurate traveling direction is detected because priorities are set for the signals from these two devices according to the situation.

Map-Matching

Map-matching compares a current location detected by the method in the "Location Detection Principle" with a road map data from Map DVD-ROM stored in DVD-ROM drive.

NOTE:

The road map data is based on data stored in the map DVD-ROM.

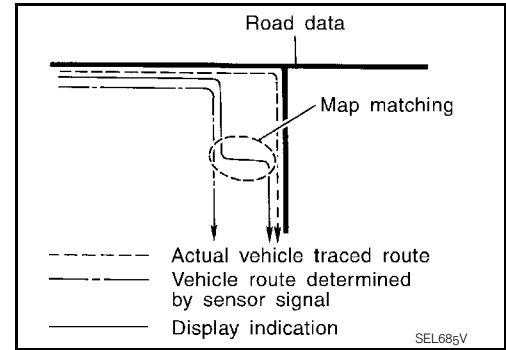


The vehicle position may not be corrected under the following circumstances and after driving for a certain time when GPS information is difficult to receive. In this case, the vehicle mark on the display must be corrected manually.

- In map-matching, alternative routes to reach the destination will be shown and prioritized, after the road on which the vehicle is currently driven has been judged and the vehicle mark has been repositioned.

Alternative routes will be shown in different order of priority, and the incorrect road can be avoided if there is an error in distance and/or direction.


They are of the same priority if two roads are running in parallel. Therefore, the vehicle mark may appear on either of them alternately, depending on maneuvering of the steering wheel and configuration of the road.

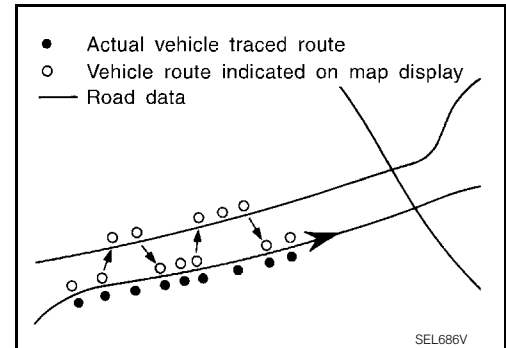

- Map-matching does not function correctly when a road on which the vehicle is driving is new and not recorded in the map DVD-ROM, or when road pattern stored in the map data and the actual road pattern are different due to repair.

The map-matching function may find another road and position the vehicle mark on it when driving on a road not present in the map. Then, the vehicle mark may change to it when the correct road is detected.

- Effective range for comparing the vehicle position and travel direction calculated by the distance and direction with the road data read from the map DVD-ROM is limited. Therefore, correction by map-matching is not possible when there is an excessive gap between current vehicle position and the position on the map.

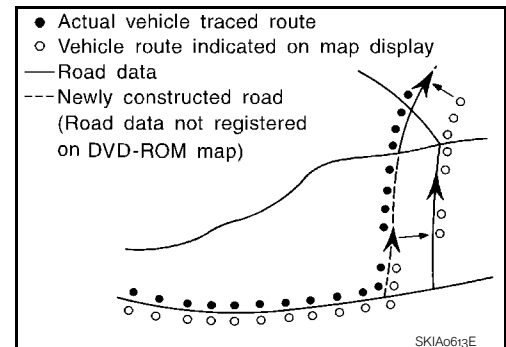

GPS (Global Positioning System)

NAVIGATION SYSTEM

< FUNCTION DIAGNOSIS >

[AUDIO WITH NAVIGATION]

GPS (Global Positioning System) was developed for and is controlled by the US Department of Defense. The system utilizes GPS satellites (NAVSTAR), sending out radio waves while flying on an orbit around the earth at an altitude of approximately 21,000 km (13,100miles).

The GPS receiver calculates the vehicle's position in three dimensions (latitude/longitude/altitude) according to the time lag of the radio waves received from four or more GPS satellites (three-dimensional positioning). The GPS receiver calculates the vehicle's position in two dimensions (latitude/longitude), utilizing the altitude data calculated previously with radio waves from four or more GPS satellites (two-dimensional positioning) if radio waves were received only from three GPS satellites.

Position correction by GPS is not available while the vehicle is stopped.

Accuracy of GPS will deteriorate under the following conditions:

- In two-dimensional positioning, GPS accuracy will deteriorate when altitude of the vehicle position changes.
- The accuracy can be even lower depending on the arrangement of the GPS satellites utilized for the positioning.
- Position detection is not possible when vehicle is in an area where radio waves from the GPS satellite do not reach, such as in a tunnel, parking lot in a building, and under an elevated highway. Radio waves from the GPS satellites may not be received when some object is located over the GPS antenna.

NOTE:

- Even a high-precision three dimensional positioning, the detection result has an error about 10 m (30ft).
- Because the signals of GPS satellite is controlled by the Tracking and Control Center in the United States, the accuracy may be degraded lower intentionally or the radio waves may stop.

Traffic Information (RDS-TMC)

NOTE:This system is built-in NAVI control unit.

The traffic information broadcast allows to you to avoid delays due to traffic incidents.

Traffic jams, roadwork, closed roads around your current location, etc. are represented graphically on the map by icons depicting the nature of the event.

Incidents on the route are automatically brought to your attention when they are approached.

The Traffic Information feature gives you the opportunity to forecast traffic incidents, determine how serious they are, via the guidance mode, and allows you to detour around traffic incidents.

The navigation system receives traffic information from best available sources and enables the RDS-TMC (Radio Data System-Traffic Information Channel) to inform and guide you.


The RDS-TMC broadcast is fed by a dedicated FM tuner so that you can still tune your radio station while Traffic Information is being broadcasted.

Component Parts Location

INFOID:0000000000984502

NOTE:

As for right-hand drive vehicles, install GPS antenna feeder between the center console and the instrument panel in the reverse of left-handle drive vehicles.

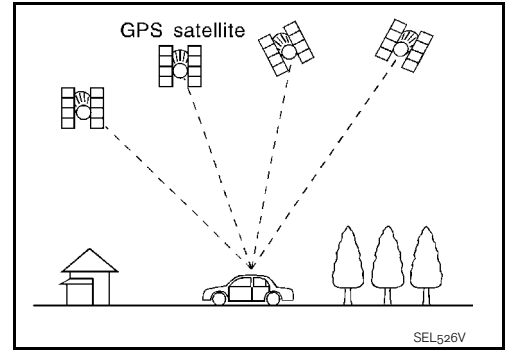


A
B
C
D
E
F
G
H
I
J
K
L
M
O
P

AV

NAVIGATION SYSTEM

< FUNCTION DIAGNOSIS >

[AUDIO WITH NAVIGATION]

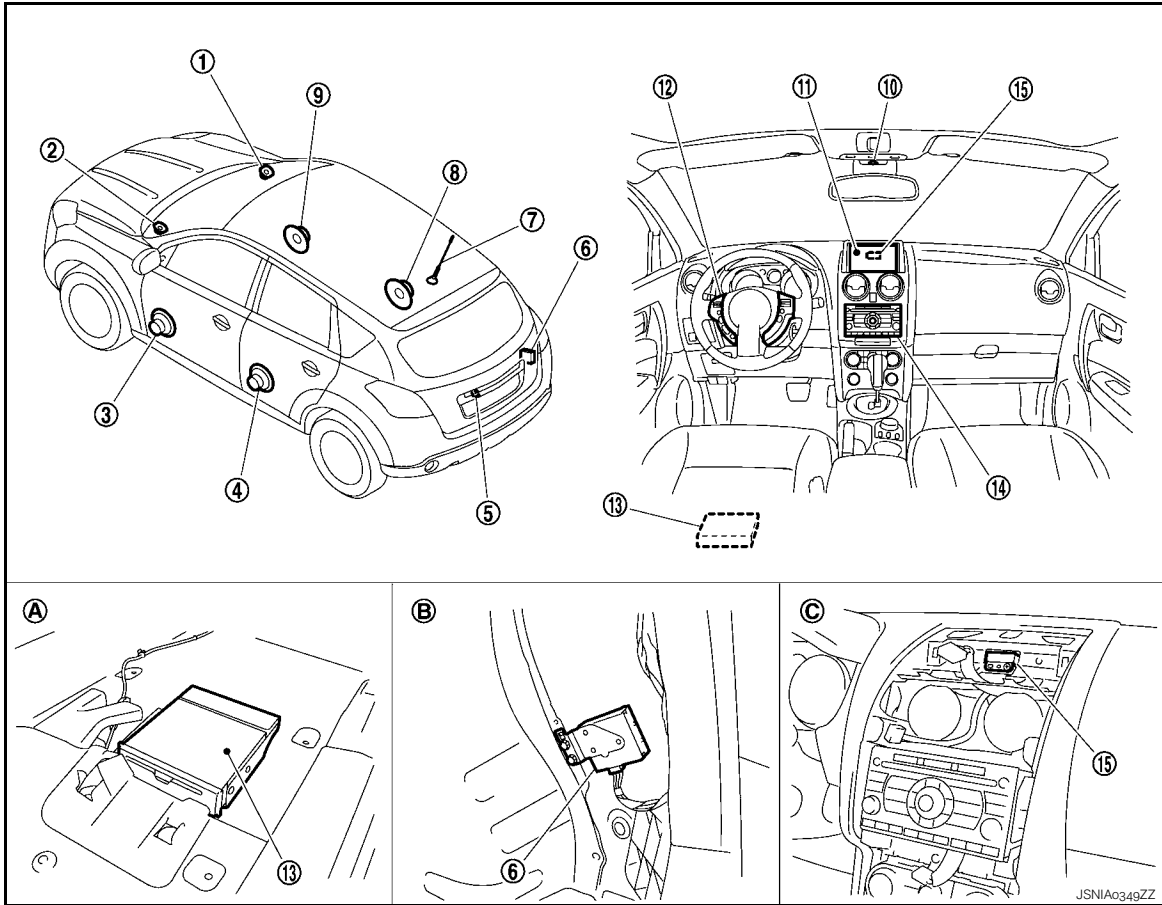

- | | | |
|--------------------------------|-------------------------|---------------------------|
| 1. Tweeter RH | 2. Tweeter LH | 3. Front door speaker LH |
| 4. Rear door speaker LH | 5. Rear view camera | 6. Camera control unit |
| 7. Radio antenna | 8. Rear door speaker RH | 9. Front door speaker RH |
| 10. Microphone | 11. Display unit | 12. Steering switch |
| 13. NAVI control unit | 14. Audio unit | 15. GPS antenna |
| A. A bottom of a front seat LH | B. Luggage side RH | C. Back of a display unit |


Component Description

INFOID:0000000000947010

Part name	Description
NAVI CONTORL UNIT	- The master unit controls each operation of the Navigation system. - Map data can be read from the Map DVD-ROM by installing Map DVD-ROM. - The RGB signal (map information) is output to the display. - The voice guidance signal is output to the audio unit.
MAP DVD-ROM	A collection of Map data
DISPLAY UNIT	Map image signal is input from NAVI control unit, and it map image indicated on the display.
AUDIO UNIT	- Voice guidance signal is input from NAVI control unit, and it is output to front LH/RH speakers. - Each operation of navigation can be performed.
FRONT DOOR SPEAKER	Voice guidance signal from audio unit is output.
TWEETER	
STEERING SWITCH	- Each operation of navigation, etc. can be performed. - Switch operating signal is output to NAVI control unit via audio unit with AV communication.
GPS ANTENNA	GPS signal is received and is output to NAVI control unit.

REAR VIEW MONITOR SYSTEM

System Diagram

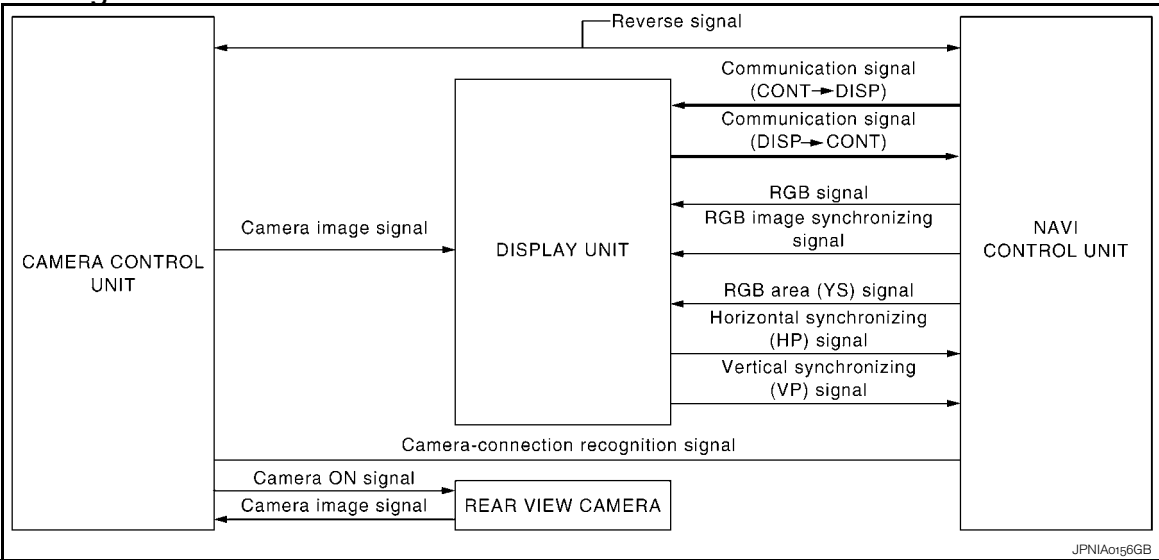

System Description

INFOID:0000000000947012

Camera image operation principle

- Power is supplied to rear view camera from camera control unit and outputs camera image signal to camera control unit when selector lever is set to R position and the reverse signal on camera control unit is input.
- Camera control unit synthesizes guide lines with camera image signal from rear view camera, and transmits camera image signal to the display. In this case, since the reverse signal is also input to NAVI control unit, the NAVI control unit recognizes the selector lever as in R position, and it switches communication signal between NAVI control unit and display unit, and image that is displayed on the display unit by RGB signal with rear view monitor image.
- The NAVI control unit determines whether rear view camera is equipped or not, based on the presence of camera connection recognition signal. It switches to rear view monitor image at the time of reverse signal input when it is not equipped.
- Warning message under the rear view monitor display is described by NAVI control unit.
- NAVI control unit is connected in communication with display unit, and it controls operation of rear view monitor system.

Component Parts Location

INFOID:0000000000984503


NOTE:

As for right-hand drive vehicles, install GPS antenna feeder between the center console and the instrument panel in the reverse of left-handle drive vehicles.

REAR VIEW MONITOR SYSTEM

< FUNCTION DIAGNOSIS >

[AUDIO WITH NAVIGATION]

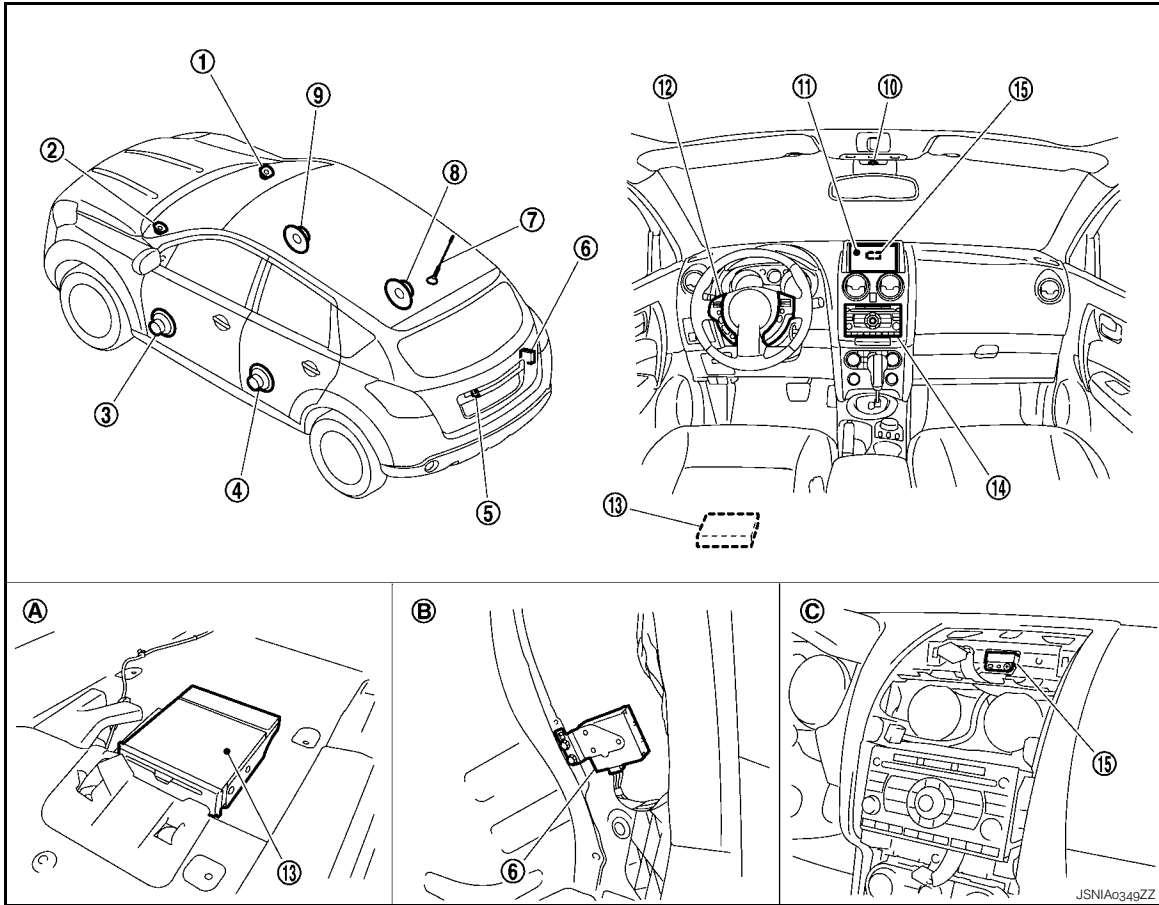

- | | | |
|--------------------------------|-------------------------|---------------------------|
| 1. Tweeter RH | 2. Tweeter LH | 3. Front door speaker LH |
| 4. Rear door speaker LH | 5. Rear view camera | 6. Camera control unit |
| 7. Radio antenna | 8. Rear door speaker RH | 9. Front door speaker RH |
| 10. Microphone | 11. Display unit | 12. Steering switch |
| 13. NAVI control unit | 14. Audio unit | 15. GPS antenna |
| A. A bottom of a front seat LH | B. Luggage side RH | C. Back of a display unit |


Component Description

INFOID:0000000000947014

Part name	Description
NAVI CONTORL UNIT	- Image on display is changed to rear view monitor with the communication for display unit. - Warning displayed in rear view monitor image is illustrated.
DISPLAY UNIT	- Camera image signal is sent from camera control unit, and RGB signal for warning display is sent from NAVI control unit. - Rear view monitor image is changed with the communication for NAVI control unit.
CAMERA CONTROL UNIT	- Camera image signal is input from rear view camera, and camera image is indicated on the display. - Power (camera ON signal) is sent to rear view camera. - NAVI control unit recognizes the presence of camera system with camera connection recognition signal.
REAR VIEW CAMERA	The image of vehicle rear view is sent to camera control unit.
STEERING ANGLE SENSOR	Steering signal necessary for possible route line control is sent to camera control unit.

AUDIO SYSTEM

System Diagram

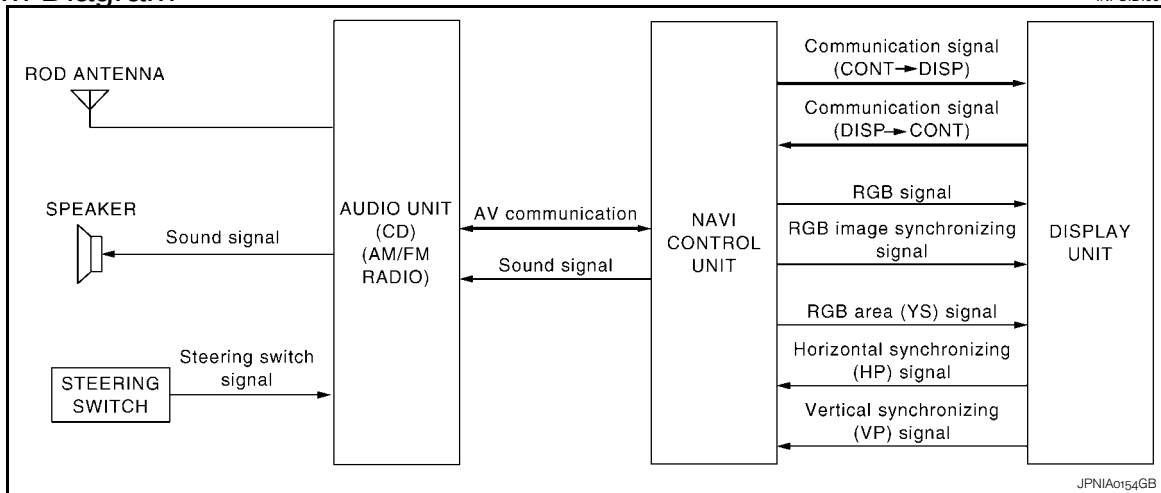

System Description

INFOID:0000000000947016

The audio system is equipped with following function. Each function is operated with audio switch or steering switch. Operation status of AUDIO is indicated at display.

Function
AM/FM radio
CD

Function description

Operating signal

Audio system operation can be performed with audio switch or steering switch.

Screen display

- Switching of display is performed with serial communication between display unit and NAVI control unit.
- The image signal to display operating condition is performed with RGB signal, RGB area signal and RGB image synchronizing signal.

AM/FM Radio Mode

- AM/FM radio tuner is built into audio unit.
- Audio signal is received by antenna, next it is amplified by antenna amp., and finally it is input to audio unit. Audio unit outputs the audio signal to each speaker.

CD Mode

- CD function is built into audio unit.
- Audio unit outputs audio signal to each speaker when CD is inserted to audio unit.

Component Parts Location

INFOID:0000000000984504


NOTE:

As for right-hand drive vehicles, install GPS antenna feeder between the center console and the instrument panel in the reverse of left-handle drive vehicles.

AUDIO SYSTEM

< FUNCTION DIAGNOSIS >

[AUDIO WITH NAVIGATION]

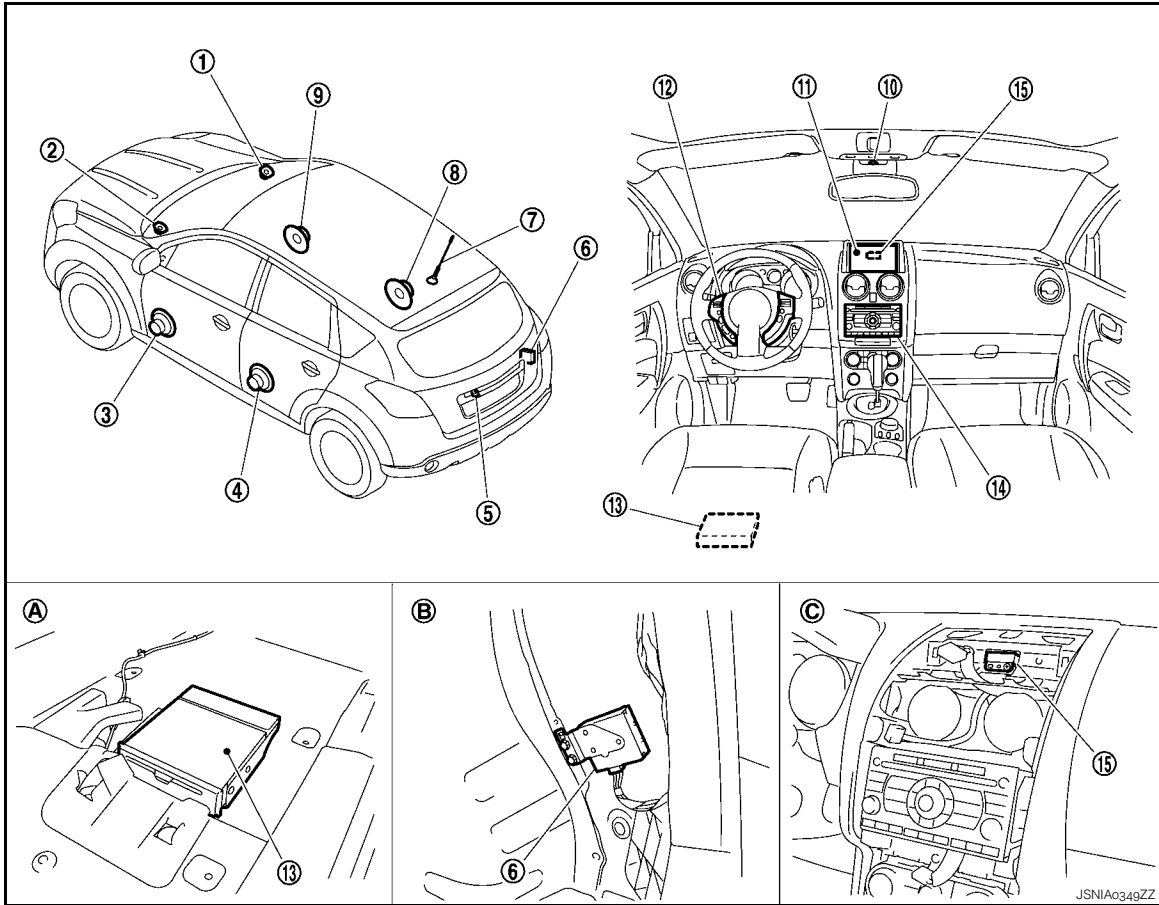

- | | | |
|--------------------------------|-------------------------|---------------------------|
| 1. Tweeter RH | 2. Tweeter LH | 3. Front door speaker LH |
| 4. Rear door speaker LH | 5. Rear view camera | 6. Camera control unit |
| 7. Radio antenna | 8. Rear door speaker RH | 9. Front door speaker RH |
| 10. Microphone | 11. Display unit | 12. Steering switch |
| 13. NAVI control unit | 14. Audio unit | 15. GPS antenna |
| A. A bottom of a front seat LH | B. Luggage side RH | C. Back of a display unit |

Component Description

INFOID:0000000000947018

Part name	Description
AUDIO UNIT	- Operational switch of audio system is integrated. - Receiving function of AM/FM radio, replaying function of CD are integrated. - Audio signals are output to each speaker.
DISPLAY UNIT	- Display image is controlled by the serial communication from NAVI control unit. - RGB image signal (audio operation condition) is input from NAVI control unit.
FRONT DOOR SPEAKER	- Outputs sound signal from audio unit. - Outputs high, mid and low range sounds.
REAR DOOR SPEAKER	- Outputs sound signal from audio unit. - Outputs high, mid and low range sounds.
TWEETER	- Outputs sound signal from audio unit. - Outputs high range sound.
STEERING SWITCH	- Each audio operation can be operated. - Steering switch signal (operation signal) is output to audio unit.
RADIO ANTENNA	Radio signal received by antenna is sent to audio unit.

DIAGNOSIS SYSTEM (NAVI CONTROL UNIT)

< FUNCTION DIAGNOSIS >

[AUDIO WITH NAVIGATION]

DIAGNOSIS SYSTEM (NAVI CONTROL UNIT)

Diagnosis Description

INFOID:000000000947019

MULTI AV SYSTEM on board diagnosis function

- The NAVI control unit diagnosis function starts up with audio switch operation and the NAVI control unit performs a diagnosis for each unit in the system during the on board diagnosis.
- Perform a CONSULT-III diagnosis if the on board diagnosis does not start, e.g., the screen does not display anything, the multifunction switch does not function. etc.

On board diagnosis

Description

- The trouble diagnosis function has a self-diagnosis mode for conducting trouble diagnosis automatically and a confirmation/adjustment mode for operating manually.
- The self-diagnosis mode performs diagnoses on the NAVI control unit, connections between system components as well as connections between NAVI control unit and GPS antenna. Then it displays the diagnosis results on the display.
- The confirmation/adjustment mode allows the technician to check, modify or adjust the vehicle signals and set values, as well as to monitor the system error records and system communication status. The check, modify or adjust actions generally require human intervention and judgment (the system cannot make judgment automatically).

On board diagnosis item

Mode		Description
Self Diagnosis		• NAVI control unit diagnosis • Diagnoses the connections across system components, between NAVI control unit and GPS antenna.
Confirmation/ Adjustment	Display Diagnosis	The following check functions are available: color tone check by color bar display, light and shade check by gray scale display.
	Vehicle Signals	Diagnosis of signals can be performed for vehicle speed, parking brake, lights, ignition switch, and reverse.
	Speaker Test	The connection of a speaker can be confirmed by test tone.
	Navigation	Steering Angle Adjustment A difference can be adjusted between the actual turning angle and the vehicle mark turning angle.
		Speed Calibration A difference can be adjusted between the current location mark and the actual location.
	Error History	The system malfunction and the frequency when occurred in the past are displayed. The time and place that the selected malfunction last occurred are displayed when the malfunctioning item is selected.
	Vehicle CAN Diagnosis	The transmitting/receiving of CAN communication can be monitored.
	AV COMM Diagnosis	The communication condition of each unit of Multi AV system can be monitored.
	Handsfree Phone	The received volume adjustment of hands-free phone, microphone speaker check, and erase memory can be performed.
	Bluetooth	The passkey and the device name can be checked and changed.
	Delete Unit Connection Log	Erase the connection history of unit and error history.
	Feature Restriction Setting	Operations of navigation system while driving can be restricted by using this function.

STARTING PROCEDURE


1. Start the engine.
2. Turn the audio system OFF.

DIAGNOSIS SYSTEM (NAVI CONTROL UNIT)


[AUDIO WITH NAVIGATION]

< FUNCTION DIAGNOSIS >

- Turn the volume control dial clockwise or counterclockwise for 40 clicks or more while pushing the "SETTING" button. (A short beep will be heard when the self-diagnosis mode is started.)
 - Shifting from current screen to previous screen is performed by pushing "BACK" button.

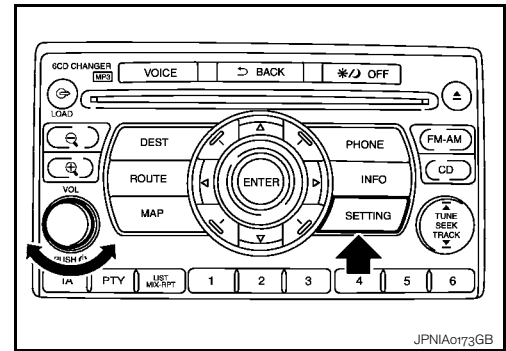


- The trouble diagnosis initial screen is displayed, and then the items of "Self Diagnosis" and "Confirmation / Adjustment" can be selected.

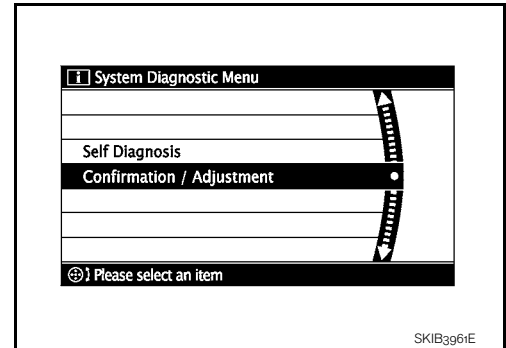

Self-diagnosis mode

- Start the self-diagnosis function. Then select "Self Diagnosis".
 - Self-diagnosis subdivision screen is displayed, and the self-diagnosis mode starts.
 - The bar graph visible on the center of the self-diagnosis subdivision screen indicates progress of the trouble diagnosis.

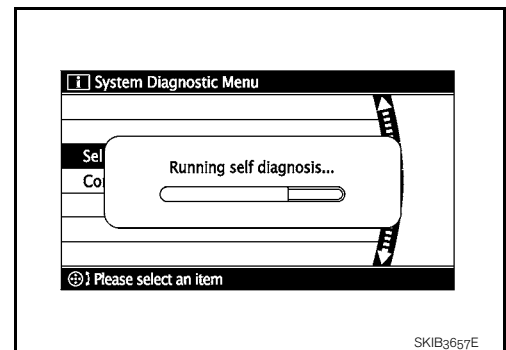


- Diagnosis results are displayed after the self-diagnosis is completed. The unit names and the connection lines are color-coded according to the diagnostic results.

Diagnosis results	Unit	Connection line
Normal	Green	Green
Connection malfunction	Gray	Yellow
DVD drive undiagnosed	Gray	Green
DVD-ROM and DVD-ROM drive malfunction	Yellow	Green
Unit malfunction ^{Note}	Red	Green

NOTE:

- Only the control unit (NAVI control unit) is displayed in red.
- The screen switch colors are determined according to the following order of priority: red > yellow > gray if multiple errors occur at the same time for a single unit.

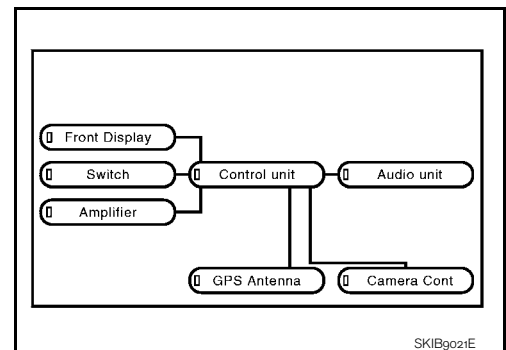


DIAGNOSIS SYSTEM (NAVI CONTROL UNIT)

< FUNCTION DIAGNOSIS >


[AUDIO WITH NAVIGATION]

- The comments of the self-diagnosis results can be viewed with a component in the diagnosis result screen.

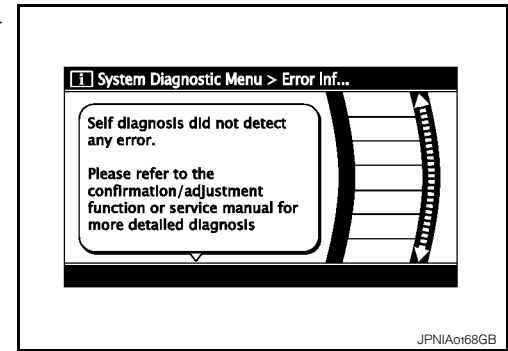

Detection range of self-diagnosis mode

- The self-diagnosis mode allows the technician to diagnose the connection in the communication line between NAVI control unit and each unit and the internal operation of the NAVI control unit.
- Because the start condition of diagnosis function is a switch operation, the on board diagnosis function cannot be started up if any malfunction is detected in a switch.

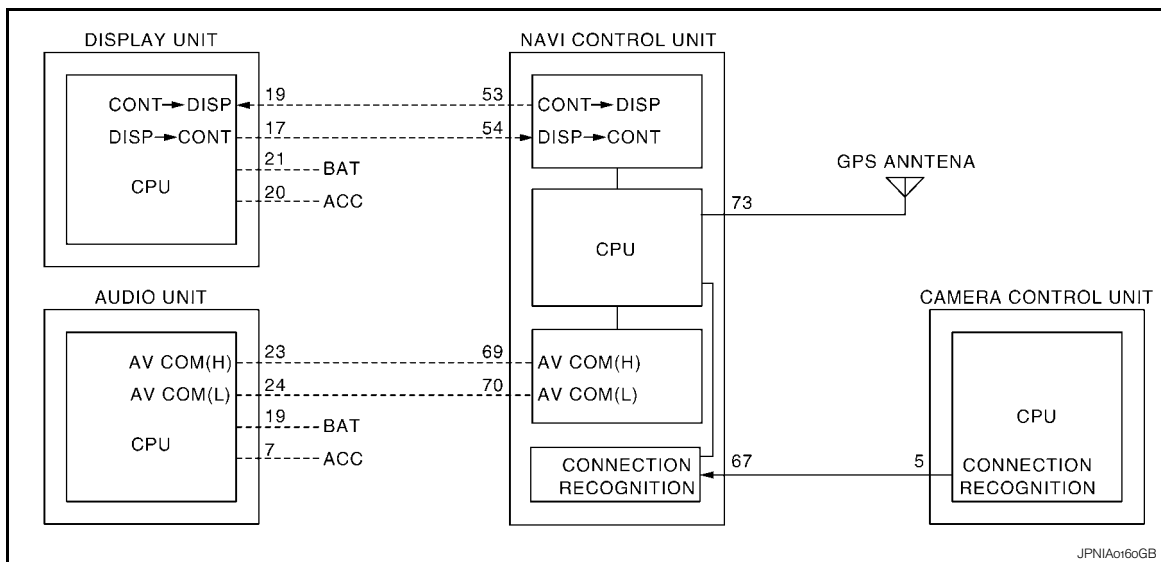

Self-diagnosis results

Check the applicable display at the following table, and then repair the malfunctioning parts.

Self-diagnosis result chart





A
B
C
D
E
F
G
H
I
J
K
L
M
O
P

AV

DIAGNOSIS SYSTEM (NAVI CONTROL UNIT)

< FUNCTION DIAGNOSIS >




[AUDIO WITH NAVIGATION]

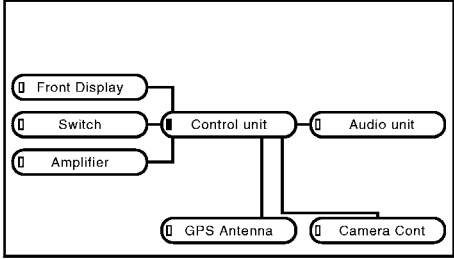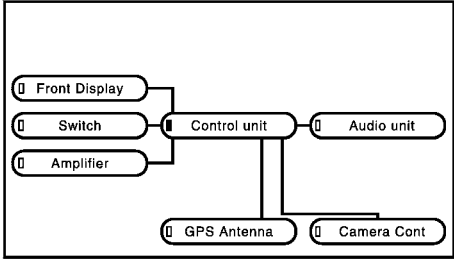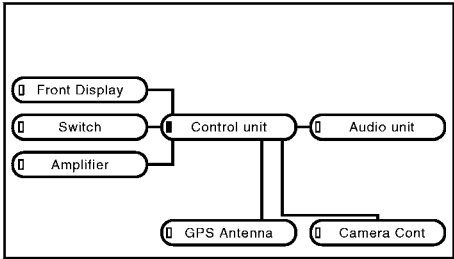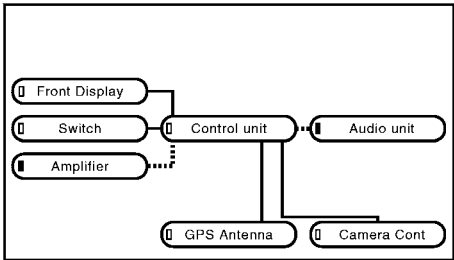Area with yellow connection lines	Description	Possible malfunction location / Action to take
 ■ : Red SKIB9022E	NAVI control unit malfunction is detected.	NAVI control unit
 ■ : Yellow JSNIA0391GB	- Malfunction is detected on DVD-ROM drive pickup lens in NAVI control unit. - There is dirt and damage on the map disc.	- Clean the DVD-ROM drive pickup lens in NAVI control unit using the specified cleaning disc. - Map disc - NAVI control unit
 ■ : Gray SKIB9024E	DVD-ROM not inserted is detected.	Insert map disc
 ■ : Gray : Yellow SKIB9025E	Malfunction is detected on communication signal between NAVI control unit and audio unit.	- NAVI control unit - Audio unit

DIAGNOSIS SYSTEM (NAVI CONTROL UNIT)


< FUNCTION DIAGNOSIS >

[AUDIO WITH NAVIGATION]

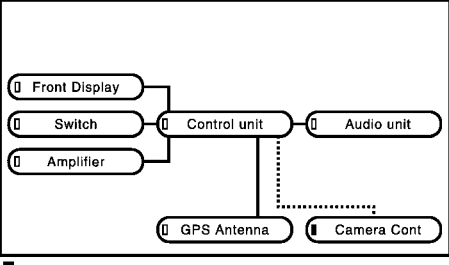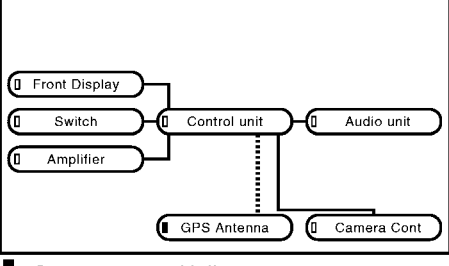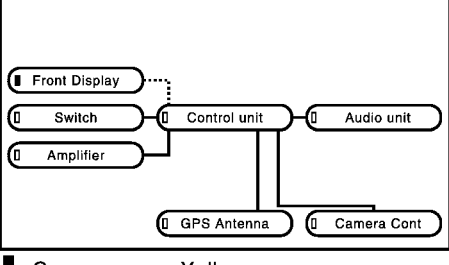Area with yellow connection lines	Description	Possible malfunction location / Action to take
 ■ : Gray : Yellow JSNIA0392GB	A malfunction is detected in Camera-connection recognition signal circuit.	Camera connection recognition signal circuit
 ■ : Gray : Yellow SKIB9028E	GPS antenna connection malfunction is detected.	• GPS antenna • GPS antenna feeder
 ■ : Gray : Yellow JSNIA0393GB	Malfunction is detected on communication signal between NAVI control unit and display unit.	• NAVI control unit • Display unit

CONFIRMATION/ADJUSTMENT MODE

1. Start the diagnosis function and select "Confirmation / Adjustment". The confirmation/adjustment mode indicates where each item can be checked or adjusted.
2. Select each switch on the "Confirmation / Adjustment Mode" screen to display the relevant trouble diagnosis screen. Press the "BACK" switch to return to the initial "Confirmation / Adjustment Mode" screen.

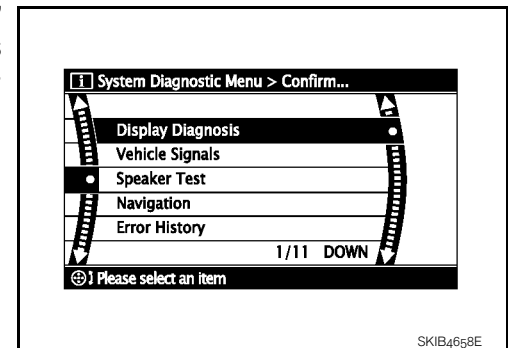


DIAGNOSIS SYSTEM (NAVI CONTROL UNIT)

< FUNCTION DIAGNOSIS >

[AUDIO WITH NAVIGATION]

Display Diagnosis

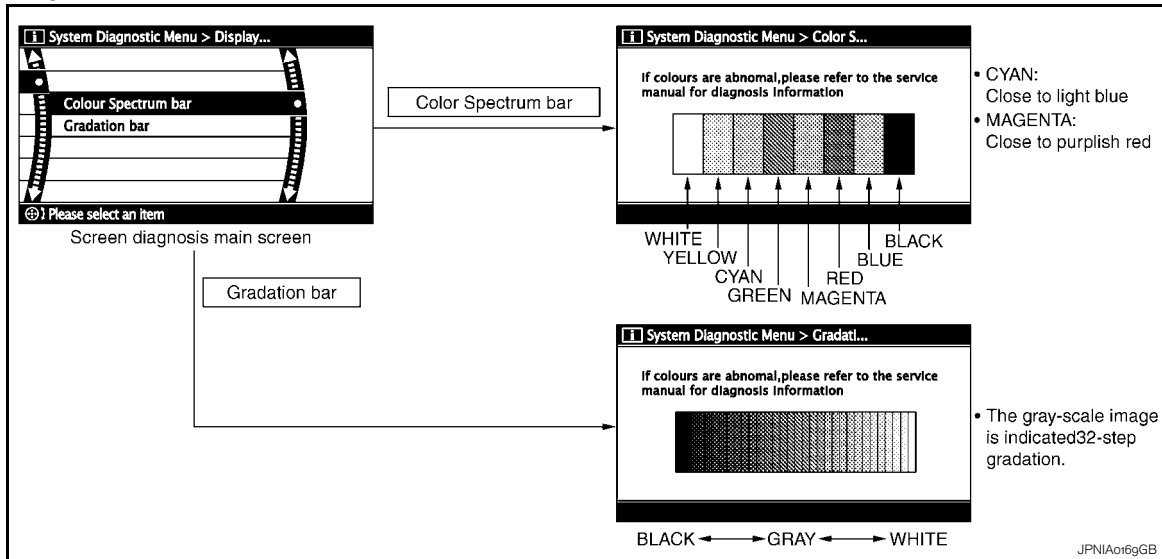


The tint of the color bar indication is as per the following list if RGB signal error is detected.

- R (red) signal error** : Light blue (Cyan) tint
- G (green) signal error** : Purple (Magenta) tint
- B (blue) signal error** : Yellow tint

Vehicle Signals

A comparison check can be made of each actual vehicle signal and the signals recognized by the system.

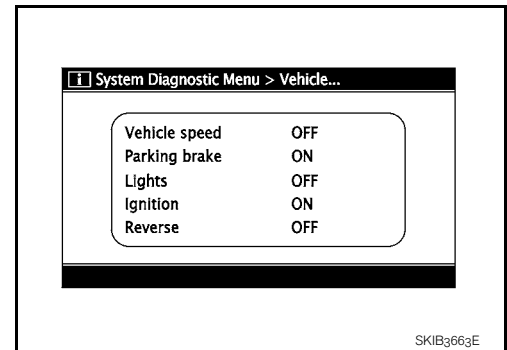

Diagnosis item	Display	Vehicle status	Remarks
Vehicle speed	ON	Vehicle speed > 0 km/h (0 MPH)	Changes in indication may be delayed by approximately 1.5 seconds. This is normal.
	OFF	Vehicle speed = 0 km/h (0 MPH)	
	—	Ignition switch ACC	
Parking brake	ON	Parking brake is applied.	
	OFF	Parking brake is released.	
Lights	ON	Light switch ON	—
	OFF	Light switch OFF	
Ignition	ON	Ignition switch ON	—
	OFF	Ignition switch in ACC position	
Reverse	ON	Selector lever in R position	Changes in indication may be delayed by approximately 1.5 seconds. This is normal.
	OFF	Selector lever in any position other than R	
	—	Ignition switch ACC	

Speaker Test

DIAGNOSIS SYSTEM (NAVI CONTROL UNIT)

< FUNCTION DIAGNOSIS >


[AUDIO WITH NAVIGATION]

Select "SPEAKER TEST" to display the Speaker Diagnosis screen. Press "START and NEXT" to generate a test tone in a speaker. Press "Start" to generate a test tone in the next speaker. Press "Stop" to stop the test tones.

NOTE:

The frequency of test tone emitted from each speaker is as follows.


Tweeter	: 3 kHz
Front door speaker	: 300 Hz
Rear door speaker	: 1 kHz

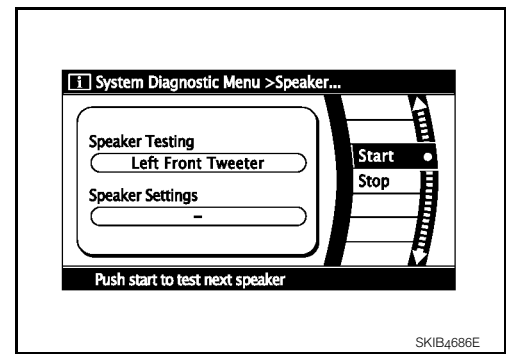

Navigation


STEERING ANGLE ADJUSTMENT

The steering angle output value detected with the gyroscope is adjusted.

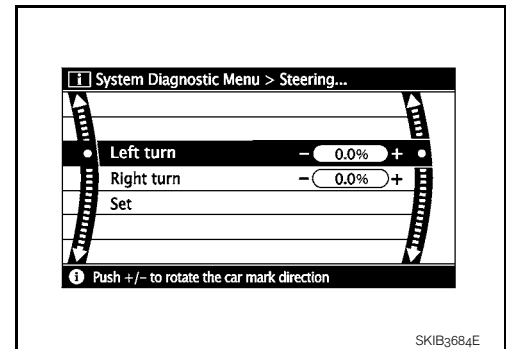

SPEED CALIBRATION

During normal driving, distance error caused by tire wear and tire pressure change is automatically adjusted for by the automatic distance correction function. This function, on the other hand, is for immediate adjustment, in cases such as driving with tire chain fitted on tires.

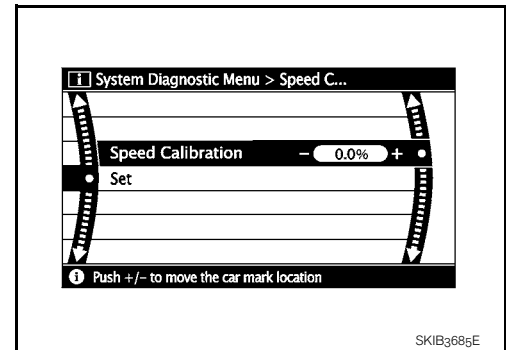

ERROR HISTORY

The diagnostic results of "Self-diagnosis" determine if any malfunction occurred between selecting "Self-diagnosis" and displaying "Self-diagnostic Results".

The trouble diagnosis result will be judged normal if an error occurred before the ignition switch was turned ON and does not occur again until "Self-diagnosis" is completed. Therefore, errors in the past which cannot be found by "Self-diagnosis", must be found by checking the "Error record".

The error history shows the error occurrence frequency in past. The frequency of occurrence is displayed by 2 types: the count down type and the count up type. Select either type according to the error item.

In "Error History" of models with NAVI, time and place that the selected error last occurred are displayed. Be careful about the following.


- The correct date of occurrence may not be able to be displayed if there is a malfunction with the GPS antenna circuit board in the NAVI control unit.
- Place of the error occurrence is represented by the position of the current location mark at the time an error occurred. If current location mark has deviated from the correct position, then the place of the error occurrence cannot be located correctly.

DIAGNOSIS SYSTEM (NAVI CONTROL UNIT)

< FUNCTION DIAGNOSIS >

[AUDIO WITH NAVIGATION]

Transition Screen

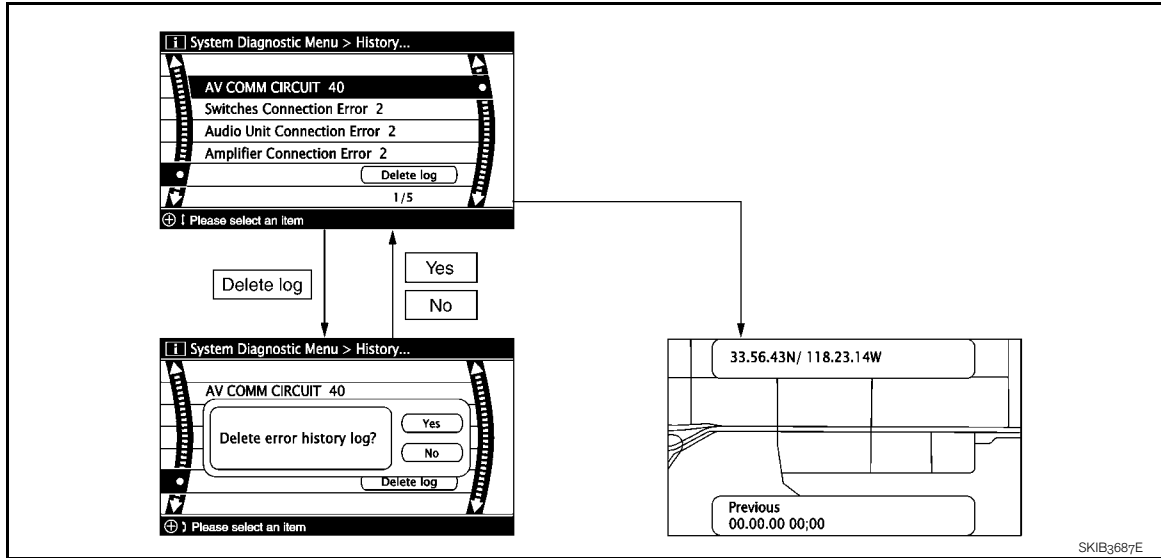

Count Down Type

- Set the counter to 40 when the error is detected. The counter decreases by 1 if the system is normal when turning the ignition switch ON.
- The lower limit of the counter is 1. It can be reset to 0 by “Delete log” switch or CONSULT-III.

Count Up Type

- The counter increases 1 when the ignition switch is turned ON and the error is detected. The counter does not decrease even if it is normal when the ignition switch is turned ON the next time.
- The upper limit of the counter is 50. 51 or more is displayed as 50. It can be reset to 0 by “Delete log” switch or CONSULT-III.

Display type of occurrence frequency	Error history display item
Count down type	CAN_COMM_CIRCUIT, CONTROL UNIT (CAN), AV COMM CIRCUIT, CONTROL UNIT (AV)
Count up type	Other than the above

Error Item

- Some error items may be displayed simultaneously according to the cause. The detection of the cause can be performed by the combination of display items if some error items are displayed simultaneously.

Error item	Description	Possible cause/Action to take
CAN_COMM_CIRCUIT	CAN communication malfunction is detected.	Perform the diagnosis using CONSULT-III, and then repair the malfunctioning parts based on diagnostic results. Refer to AV-65, "CONSULT - III Function (MULTI AV)" .
CONTROL UNIT (CAN)	CAN initial diagnosis malfunction is detected.	NAVI control unit
CONTROL UNIT (AV)	AV communication circuit initial diagnosis malfunction is detected.	NAVI control unit
• AV COMM CIRCUIT • Switches Connection Error • Audio Unit Connection Error • Amplifier Connection Error • RDS-TMC Error	• Audio unit power supply and ground circuit malfunction is detected. • Malfunction is detected on communication circuit between Audio unit and NAVI control unit. • Malfunction is detected on communication signal between audio unit and NAVI control unit.	• Audio unit power supply and ground circuit • Communication circuit between audio unit and NAVI control unit

DIAGNOSIS SYSTEM (NAVI CONTROL UNIT)

< FUNCTION DIAGNOSIS >

[AUDIO WITH NAVIGATION]

Error item	Description	Possible cause/Action to take
Front Display Connection Error	- Display unit power supply and ground circuit malfunction is detected. - Malfunction is detected on communication circuit between display unit and NAVI control unit. - Malfunction is detected on communication signal between display unit and NAVI control unit.	- Display unit power supply and ground circuit - Communication circuit between display unit and NAVI control unit
GPS Antenna Error	GPS antenna connection malfunction is detected.	- GPS antenna feeder - GPS antenna
Camera Control Unit Connection Error	Camera and connection recognition signal circuit malfunction is detected.	Camera-connection recognition signal circuit
FLASH-ROM Error Of Control Unit	NAVI control unit malfunction is detected.	NAVI control unit
Connection Of Gyro	NAVI control unit malfunction is detected.	NAVI control unit
GPS Communication Error	GPS malfunction is detected.	Intermittent malfunction caused by strong radio interference may be detected if the symptoms such as the GPS receipt malfunction occur. Replace NAVI control unit if the malfunction always occurs.
GPS ROM Error		
GPS RAM Error		
GPS RTC Error		
DVD-ROM Communication Error	- Malfunction is detected on DVD-ROM drive pickup lens in NAVI control unit. - There is dirt and damage on the map disc.	- Map disc - NAVI control unit
DVD-ROM Read Error		
DVD-ROM Disc Error		
DVD-ROM Mechanism not Detected		
DVD-ROM Mechanism Error		
DVD-ROM Focus Error		
DVD-ROM TOC Error		
DVD-ROM Seek Error		
DVD-ROM Error Correction Error		
DVD-ROM Data Transfer Error		
DVD-ROM Data Error		
DVD-ROM Time-out		
DVD-ROM Loading / Eject Error		
CAN Controller Memory Error	NAVI control unit malfunction is detected.	NAVI control unit
Bluetooth Module Connection Error		


Vehicle CAN Diagnosis

- CAN communication status and error counter is displayed.
- Error counter displays 0 if any malfunction is not detected in the past. It displays 40 if the malfunction is detected. It displays 39 when turning the ignition switch ON and it is normal. The lower limit of the counter is 1.
- The error counter displays 0 if it resets.

Items	Display (Current)	Malfunction counter (Past)
Rx (ECM)	OK / ???	0 – 40
Rx (Cluster)	OK / ???	0 – 40

NOTE:

“???” indicates UNKWN.

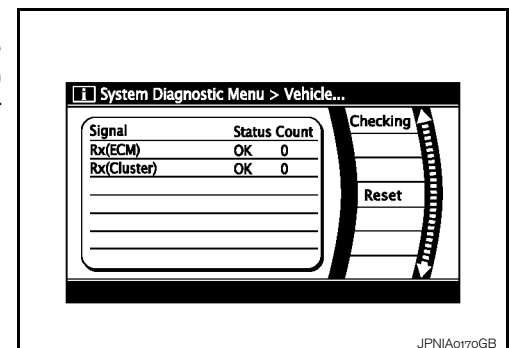

DIAGNOSIS SYSTEM (NAVI CONTROL UNIT)

< FUNCTION DIAGNOSIS >

[AUDIO WITH NAVIGATION]

AV COMM Diagnosis

- Displays the communication status between NAVI control unit (master unit) and each unit.
- The error counter displays 0 if any malfunction was not detected in the past. It displays 40 if the malfunction is detected. It displays 39 when turning the ignition switch ON and it is normal. The lower limit of the counter is 1.
- The error counter is erased if it resets.

Items	Status (Current)	Counter (Past)
C Tx(ITM-PrimarySW)	OK / ???	0 – 40
C Rx(PrimarySW-ITM)	OK / ???	0 – 40
C Rx(STRG SW-ITM)	OK / ???	0 – 40
C Rx (Audio-ITM)	OK / ???	0 – 40
C Rx(Amp-ITM)	OK / ???	0 – 40
C Rx(RearCamera-ITM)	OK / ???	0 – 40
C Rx(XM-ITM)	OK / ???	0 – 40
C Rx(Amp-Audio)	OK / ???	0 – 40
C Tx(Audio-ITM)	OK / ???	0 – 40


ITM: NAVI control unit

NOTE:


"???" indicates UNKWN.

Handsfree Phone

The hands-free phone reception volume adjustment, microphone and speaker test, and memory erase functions are also available.

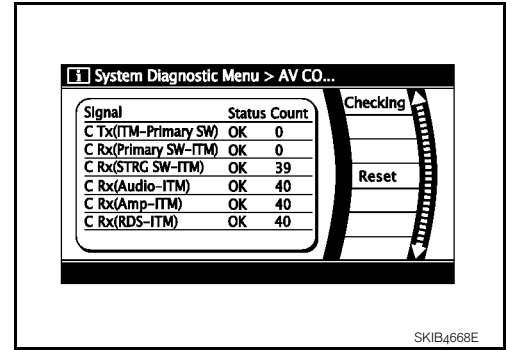

SKIB4668E

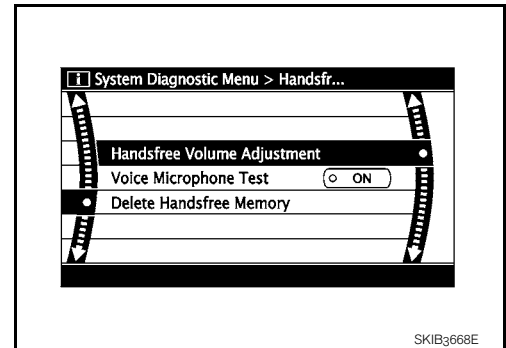


SKIB3668E

Bluetooth

Confirmation/Change Passkey

- The passkey of Bluetooth can be confirmed and changed.
- The passkey can be changed by four digits within 0 to 9.

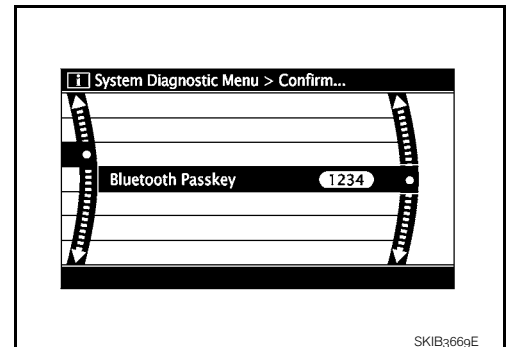

SKIB3669E


Confirmation/Change Device Name

DIAGNOSIS SYSTEM (NAVI CONTROL UNIT)

[AUDIO WITH NAVIGATION]


< FUNCTION DIAGNOSIS >

- The device name of Bluetooth can be confirmed and changed.
- The device name can be changed by sixteen digits within A to Z (small character can be used) and - (hyphen).

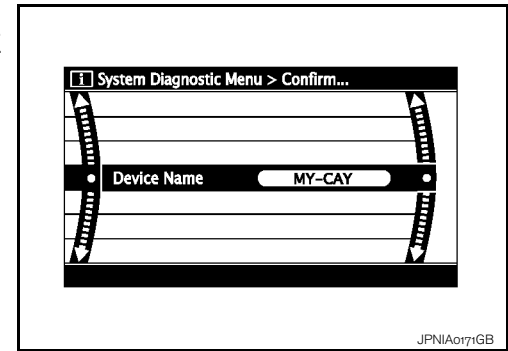

Delete Unit Connection Log

Deletes any unit connection records and error records from the NAVI control unit memory. (Clear the records of the unit that has been removed.)

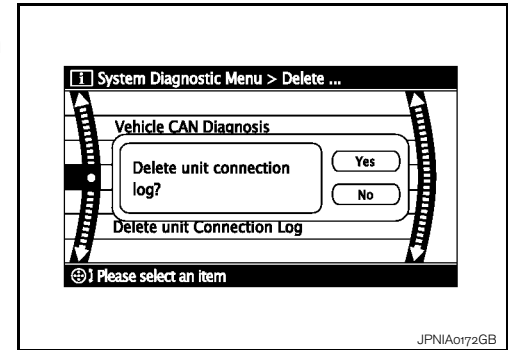


Feature Restriction Setting

Operations of navigation system that are performed while driving can be restricted by using this function.

CAUTION:

Once operational restrictions are imposed, they can not be cancelled even when the software is updated or the language-switching program is loaded.

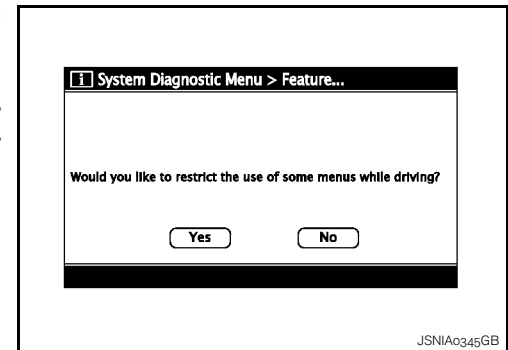

CONSULT - III Function (MULTI AV)

INFOID:000000000947020

CONSULT-III functions

CONSULT-III performs the following functions via the communication with the NAVI control unit.

Diagnosis mode	Description
SELF-DIAG RESULTS	Performs a diagnosis on the NAVI control unit and a connection diagnosis for the communication circuit of the Multi AV system, and displays the current and past malfunctions collectively.
DATA MONITOR	The diagnosis of vehicle signal that is input to the NAVI control unit can be performed.
AV COMM MONITOR	Allows the technician to monitor the status of the Multi AV system communication signals.
ECU PART NUMBER	The part number of NAVI control unit can be checked.

Self-diagnosis results


- In CONSULT-III self-diagnosis, self-diagnosis results and error history are displayed collectively.
- The current malfunction indicates "CRNT". The past malfunction indicates "PAST".
- The timing is displayed as "0" if any of the error codes [U1000], [U1010], [U1300] and [U1310] is detected. The counter increases by 1 if the condition is normal at the next ignition switch ON cycle.

DIAGNOSIS SYSTEM (NAVI CONTROL UNIT)

< FUNCTION DIAGNOSIS >

[AUDIO WITH NAVIGATION]

Self-diagnosis detection range

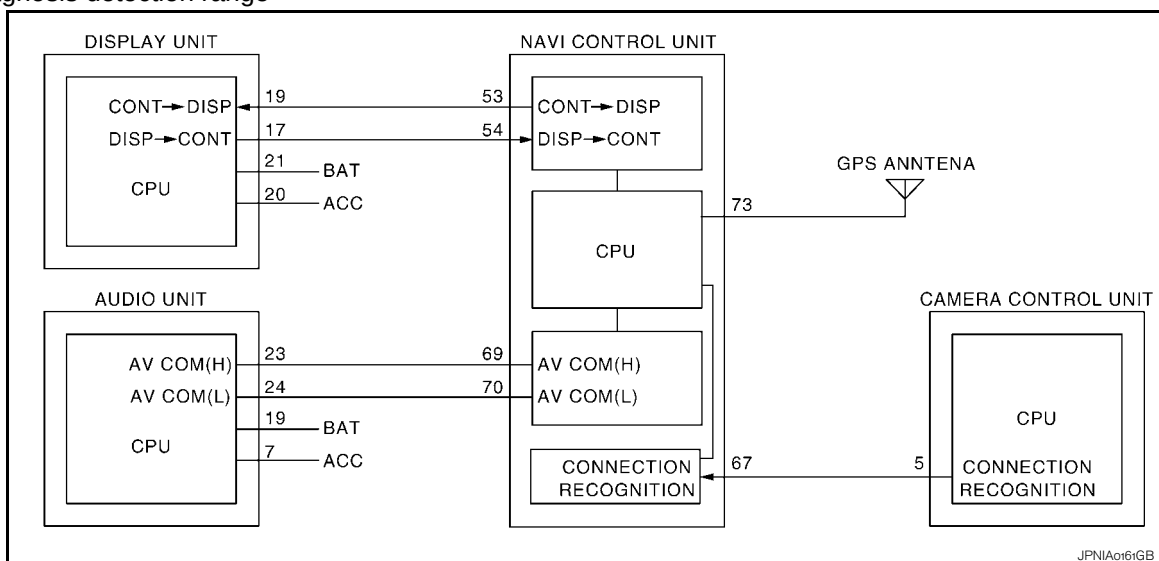

Self-diagnosis results display item

Error item	Description	Possible cause/Action to take
CAN COMM CIRCUIT[U1000]	CAN communication malfunction is detected.	Perform the diagnosis using CONSULT-III, and then repair the malfunctioning parts based on diagnostic results. Refer to AV-71, "Diagnosis Procedure" .
CONTROL UNIT (CAN) [U1010]	CAN initial diagnosis malfunction is detected.	NAVI control unit
CONTROL UNIT (AV) [U1310]	AV communication circuit initial diagnosis malfunction is detected.	NAVI control unit
- AV COMM CIRCUIT [U1300] - SWITCH CONN [U1240] - AUDIO H/U CONN [U1249] - AMP CONN [U124E] - RDS CONN [U124F]	- Audio unit power supply and ground circuit malfunction is detected. - Malfunction is detected on communication circuit between audio unit and NAVI control unit. - Malfunction is detected on communication signal between audio unit and NAVI control unit.	- Audio unit power supply and ground circuit - Communication circuit between audio unit and NAVI control unit
FRONT DISP CONN [U1243]	- Display unit power supply and ground circuit malfunction is detected. - Malfunction is detected on communication circuit between display unit and NAVI control unit. - Malfunction is detected on communication signal between display unit and NAVI control unit.	- Display unit power supply and ground circuit - Communication circuit between display unit and NAVI control unit
GPS ANTENNA CONN [U1244]	GPS antenna connection malfunction is detected.	- GPS antenna feeder - GPS antenna
CAMERA CONT. CONN [U1250]	Camera and connection recognition signal circuit malfunction is detected.	Camera-connection recognition signal circuit
Control Unit FLASH-ROM [U1200]	NAVI control unit malfunction is detected.	NAVI control unit
Gyro NO CONN [U1201]	NAVI control unit malfunction is detected.	NAVI control unit

DIAGNOSIS SYSTEM (NAVI CONTROL UNIT)

< FUNCTION DIAGNOSIS >

[AUDIO WITH NAVIGATION]

Error item	Description	Possible cause/Action to take
GPS COMM [U1204]	GPS malfunction is detected.	Intermittent malfunction caused by strong radio interference may be detected if the symptoms such as the GPS receipt malfunction occur. Replace NAVI control unit if the malfunction always occurs.
GPS ROM [U1205]		
GPS RAM [U1206]		
GPS RTC [U1207]		
DVD-ROM COMM [U1208]	- Malfunction is detected on DVD-ROM drive pickup lens in NAVI control unit. - There is dirt and damage on the map disc.	- Map disc - NAVI control unit
DVD-ROM READ [U1209]		
DVD-ROM DISC [U120A]		
DVD-ROM MECHA DETECT [U120C]		
DVD-ROM DRIVE MECHA [U120D]		
DVD-ROM FOCUS [U120E]		
DVD-ROM TOC [U120F]		
DVD-ROM SEEK [U1210]		
DVD-ROM ERR CORRECTION [U1211]		
DVD-ROM DATA FORWARD [U1212]		
DVD-ROM DATA [U1213]		
DVD-ROM TIMEOUT [U1214]		
DVD-ROM LOAD [U1215]		
CAN CONT [U1216]	NAVI control unit malfunction is detected.	NAVI control unit
BLUETOOTH CONN [U1217]		

DATA MONITOR

ALL SIGNALS

- Displays the status of the following vehicle signals inputted to the NAVI control unit.
- For each signal, actual signal can be compared with the condition recognized on the system.

Display Item	Display	Vehicle status	Remarks
VHCL SPD SIG	ON	Vehicle speed >0 km/h (0 MPH)	Changes in indication may be delayed. This is normal.
	OFF	Vehicle speed =0 km/h (0 MPH)	
PKB SIG	ON	Parking brake is applied.	Changes in indication may be delayed. This is normal.
	OFF	Parking brake is released.	
ILLUM SIG	ON	Lighting switch ON	—
	OFF	Lighting switch OFF	
IGN SIG	ON	Ignition switch ON	—
	OFF	Ignition switch in ACC position	
REV SIG	ON	Selector lever in R position	Changes in indication may be delayed. This is normal.
	OFF	Selector lever in any position other than R	

SELECTION FROM MENU

Allows the technician to select which vehicle signals should be displayed and displays the status of the selected vehicle signals.

DIAGNOSIS SYSTEM (NAVI CONTROL UNIT)

< FUNCTION DIAGNOSIS >

[AUDIO WITH NAVIGATION]

Item to be selected	Description
VHCL SPD SIG	The same as when "ALL SIGNALS" is selected.
PKB SIG	
ILLUM SIG	
IGN SIG	
REV SIG	

AV communication monitor

AV&NAVI C/U

- Displays the communication status from NAVI control unit to each unit as well as the error counter.
- The error counter displays "OK" if no malfunction was detected in the past and displays "0" if a malfunction is detected. It increases by 1 if the condition is normal at the next ignition switch ON cycle. The upper limit of the counter is 39.

Items	Display (Current)	Malfunction counter (Past)
TRANSMIT DIAG	OK / UNKWN	OK / 0 – 39
PANEL SWITCH	OK / UNKWN	OK / 0 – 39
SW SECONDARY	—	—
RR CONTROL SW	—	—
STEERING SW	OK / UNKWN	OK / 0 – 39
AUDIO	OK / UNKWN	OK / 0 – 39
SPEAKER AMP	OK / UNKWN	OK / 0 – 39
SIDE CAMERA	—	—
REAR CAMERA	—	—
TV TUNER	—	—
DVD PLAYER	—	—
VIDEO DIST	—	—
ETC	—	—
FM MULTI	OK / UNKWN	OK / 0 – 39
REMOTE CONT	—	—

AUDIO

- Displays the NAVI control unit communication status and the error counter.
- The error counter displays "OK" if no malfunction was detected in the past and displays "0" if a malfunction is detected. It increases by 1 if the condition is normal at the next ignition switch ON cycle. The upper limit of the counter is 39.

Items	Display (Current)	Malfunction counter (Past)
TRANSMIT DG	OK / UNKWN	OK / 0 – 39
SPEAKER AMP	—	—
TV TUNER	—	—
DVD PLAYER	—	—
MD DECK	—	—
CD CHANGER	—	—
MD CHANGER	—	—

DIAGNOSIS SYSTEM (NAVI CONTROL UNIT)

< FUNCTION DIAGNOSIS >

[AUDIO WITH NAVIGATION]

ECU PART NUMBER

The part number of NAVI control unit is displayed.

A

B

C

D

E

F

G

H

I

J

K

L

M

AV

O

P

DIAGNOSIS SYSTEM (CAMERA CONTROL UNIT)

< FUNCTION DIAGNOSIS >

[AUDIO WITH NAVIGATION]

DIAGNOSIS SYSTEM (CAMERA CONTROL UNIT)

CONSULT-III Function (REAR VIEW CAMERA)

INFOID:000000001096711

CONSULT-III can display each diagnostic item using the diagnostic test modes shown following.

Diagnosis part	Check Item, Diagnosis Mode	Description
REAR VIEW CAMERA	WORK SUPPORT	Adjusts the vehicle width and distance guiding lines that overlap camera image.
	DATA MONITOR	Displays input data for rear view camera control unit in real-time.
	ECU PART NUMBER	Displays rear view camera control unit part number.

WORK SUPPORT

Work item	Description
SELECT GUIDELINE PATTERN	The opening of the vehicle width and distance guiding lines can be selected from 2 patterns.
ADJ GUIDELINE POSITION	Adjusts the vehicle width and distance guiding lines upper/lower/left/right.

For details, refer to Refer to Service Manual.

DATA MONITOR

Monitor item	Content
R POSI SIG [ON/OFF]	"ON (selector lever R position)/OFF (other than R position)" status as judged from the reverse signal is displayed.

COMPONENT DIAGNOSIS

U1000 CAN COMM CIRCUIT

Description

INFOID:000000000947021

CAN (Controller Area Network) is a serial communication line for real time application. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Many electronic control units are equipped onto a vehicle, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN-H line, CAN-L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

CAN Communication Signal Chart. Refer to [LAN-59, "CAN Communication Signal Chart"](#).

DTC Logic

INFOID:000000000947022

DTC DETECTION LOGIC

DTC	Display contents of CONSULT-III	Diagnostic item is detected when...	Probable malfunction location
U1000	CAN COMM CIRCUIT [U1000]	NAVI control unit does not transmit or receive CAN communication signal for 2 seconds or more.	CAN communication system

Diagnosis Procedure

INFOID:000000000947023

1.PERFORM SELF DIAGNOSTIC

1. Turn ignition switch ON and wait for 2 second or more.
2. Check "Self Diagnostic Result" of "MULTI AV".

Is "CAN COMM CIRCUIT" displayed?

- YES >> Refer to "LAN system". Refer to [LAN-46, "Trouble Diagnosis Flow Chart"](#).
- NO >> Refer to GI section. Refer to [GI-39, "Intermittent Incident"](#).

U1010 CONTROL UNIT (CAN)

< COMPONENT DIAGNOSIS >

[AUDIO WITH NAVIGATION]

U1010 CONTROL UNIT (CAN)

Description

INFOID:000000000947024

Initial diagnosis of NAVI control unit.

DTC Logic

INFOID:000000000947025

DTC DETECTION LOGIC

DTC	Display contents of CONSULT-III	Diagnostic item is detected when...	Probable malfunction location
U1010	CONTROL UNIT (CAN) [U1010]	CAN initial diagnosis malfunction is detected.	NAVI control unit

Diagnosis Procedure

INFOID:000000000947026

1. REPLACE NAVI CONTROL UNIT

Replace NAVI control unit when DTC U1010 is detected.

>> INSPECTION END

U1310 NAVI CONTROL UNIT

< COMPONENT DIAGNOSIS >

[AUDIO WITH NAVIGATION]

U1310 NAVI CONTROL UNIT

Description

INFOID:000000000947027

Replace the NAVI control unit if this DTC is displayed. Refer to [AV-201. "Exploded View"](#).

Part name	Description
NAVI CONTORL UNIT	- Map data can be read from the map DVD-ROM by installing map DVD-ROM. - It is the master unit of the MULTI AV system, and it is connected to each control unit by means of communication. It operates each system according to communication signals from the NAVI control unit. - The NAVI control unit includes the audio, hands-free phone, navigation, and vehicle information functions. - It is connected to ECM and combination meter via CAN communication to obtain necessary information for the vehicle information function. - It inputs the illumination signals that are required for the display dimming control. - It inputs the signals for driving status recognition (vehicle speed, reverse and parking brake).

DTC Logic

INFOID:000000000947028

DTC	Display contents of CONSULT-III	DTC Detection Condition	Action to take
U1310	CONTROL UNIT (AV) [U1310]	An initial diagnosis error is detected in AV communication circuit.	Replace NAVI control unit.

A
B
C
D
E
F
G
H
I
J
K
L
M
O
P

AV

U1200 NAVI CONTROL UNIT

< COMPONENT DIAGNOSIS >

[AUDIO WITH NAVIGATION]

U1200 NAVI CONTROL UNIT

Description

INFOID:000000000954873

Replace the NAVI control unit if this DTC is displayed. Refer to [AV-201. "Exploded View"](#).

Part name	Description
NAVI CONTORL UNIT	• Map data can be read from the map DVD-ROM by installing map DVD-ROM. • It is the master unit of the MULTI AV system, and it is connected to each control unit by means of communication. It operates each system according to communication signals from the NAVI control unit. • The NAVI control unit includes the audio, hands-free phone, navigation, and vehicle information functions. • It is connected to ECM and combination meter via CAN communication to obtain necessary information for the vehicle information function. • It inputs the illumination signals that are required for the display dimming control. • It inputs the signals for driving status recognition (vehicle speed, reverse and parking brake).

DTC Logic

INFOID:000000000947030

DTC	Display contents of CONSULT-III	DTC Detection Condition	Action to take
U1200	Cont Unit FLASH- ROM [U1200]	An internal malfunction is detected in NAVI control unit (FLASH-ROM).	Replace NAVI control unit.

cardiagn.com

U1201 NAVI CONTROL UNIT

< COMPONENT DIAGNOSIS >

[AUDIO WITH NAVIGATION]

U1201 NAVI CONTROL UNIT

Description

INFOID:000000000954874

Replace the NAVI control unit if this DTC is displayed. Refer to [AV-201. "Exploded View"](#).

Part name	Description
NAVI CONTORL UNIT	• Map data can be read from the map DVD-ROM by installing map DVD-ROM. • It is the master unit of the MULTI AV system, and it is connected to each control unit by means of communication. It operates each system according to communication signals from the NAVI control unit. • The NAVI control unit includes the audio, hands-free phone, navigation, and vehicle information functions. • It is connected to ECM and combination meter via CAN communication to obtain necessary information for the vehicle information function. • It inputs the illumination signals that are required for the display dimming control. • It inputs the signals for driving status recognition (vehicle speed, reverse and parking brake).

DTC Logic

INFOID:000000000947032

DTC	Display contents of CONSULT-III	DTC Detection Condition	Action to take
U1201	GYRO NO CONN [U1201]	Internal malfunction of NAVI control unit (gyrocompass disconnection) is detected.	Replace NAVI control unit.

A
B
C
D
E
F
G
H
I
J
K
L
M
O
P

AV

U1216 NAVI CONTROL UNIT

< COMPONENT DIAGNOSIS >

[AUDIO WITH NAVIGATION]

U1216 NAVI CONTROL UNIT

Description

INFOID:000000000954875

Replace the NAVI control unit if this DTC is displayed. Refer to [AV-201. "Exploded View"](#).

Part name	Description
NAVI CONTORL UNIT	• Map data can be read from the map DVD-ROM by installing map DVD-ROM. • It is the master unit of the MULTI AV system, and it is connected to each control unit by means of communication. It operates each system according to communication signals from the NAVI control unit. • The NAVI control unit includes the audio, hands-free phone, navigation, and vehicle information functions. • It is connected to ECM and combination meter via CAN communication to obtain necessary information for the vehicle information function. • It inputs the illumination signals that are required for the display dimming control. • It inputs the signals for driving status recognition (vehicle speed, reverse and parking brake).

DTC Logic

INFOID:000000000947034

DTC	Display contents of CONSULT-III	DTC Detection Condition	Action to take
U1216	CAN CONT [U1216]	Internal malfunction of NAVI control unit (CAN controller) is detected.	Replace NAVI control unit.

U1217 NAVI CONTROL UNIT

< COMPONENT DIAGNOSIS >

[AUDIO WITH NAVIGATION]

U1217 NAVI CONTROL UNIT

Description

INFOID:000000000954876

Replace the NAVI control unit if this DTC is displayed. Refer to [AV-201. "Exploded View"](#).

Part name	Description
NAVI CONTORL UNIT	• Map data can be read from the map DVD-ROM by installing map DVD-ROM. • It is the master unit of the MULTI AV system, and it is connected to each control unit by means of communication. It operates each system according to communication signals from the NAVI control unit. • The NAVI control unit includes the audio, hands-free phone, navigation, and vehicle information functions. • It is connected to ECM and combination meter via CAN communication to obtain necessary information for the vehicle information function. • It inputs the illumination signals that are required for the display dimming control. • It inputs the signals for driving status recognition (vehicle speed, reverse and parking brake).

DTC Logic

INFOID:000000000947036

DTC	Display contents of CONSULT-III	DTC Detection Condition	Action to take
U1217	BLUETOOTH MODULE CONN [U1217]	Internal malfunction of NAVI control unit (Bluetooth module connection malfunction) is detected.	Replace NAVI control unit.

A
B
C
D
E
F
G
H
I
J
K
L
M
O
P

AV

U1204 GPS

Description

INFOID:000000000947056

An intermittent error caused by strong radio interference may be detected unless any symptoms (GPS reception error, etc.) occur. Replace the NAVI control unit if the malfunction occurs constantly. Refer to [AV-201](#), "Exploded View".

Part name	Description
NAVI CONTORL UNIT	- Map data can be read from the map DVD-ROM by installing map DVD-ROM. - It is the master unit of the MULTI AV system, and it is connected to each control unit by means of communication. It operates each system according to communication signals from the NAVI control unit. - The NAVI control unit includes the audio, hands-free phone, navigation, and vehicle information functions. - It is connected to ECM and combination meter via CAN communication to obtain necessary information for the vehicle information function. - It inputs the illumination signals that are required for the display dimming control. - It inputs the signals for driving status recognition (vehicle speed, reverse and parking brake).

DTC Logic

INFOID:000000000947057

DTC	Display contents of CONSULT-III	DTC Detection Condition	Action to take
U1204	GPS CONN [U1204]	Internal malfunction of NAVI control unit (GPS malfunction) is detected.	Replace NAVI control unit.

Diagnosis Procedure

INFOID:000000000947058

1.PERFORM THE SELF-DIAGNOSIS

- Delete the self-diagnosis results. Turn ignition switch OFF.
- Turn ignition switch ON. Perform the self-diagnosis again.
- Check that the DTC is detected again.

Is any DTC detected?

- YES >> Replace NAVI control unit.
- NO >> The intermittent malfunction caused by strong radio interference can be detected.

U1205 GPS

Description

INFOID:000000000954891

An intermittent error caused by strong radio interference may be detected unless any symptoms (GPS reception error, etc.) occur. Replace the NAVI control unit if the malfunction occurs constantly. Refer to [AV-201, "Exploded View"](#).

Part name	Description
NAVI CONTORL UNIT	- Map data can be read from the map DVD-ROM by installing map DVD-ROM. - It is the master unit of the MULTI AV system, and it is connected to each control unit by means of communication. It operates each system according to communication signals from the NAVI control unit. - The NAVI control unit includes the audio, hands-free phone, navigation, and vehicle information functions. - It is connected to ECM and combination meter via CAN communication to obtain necessary information for the vehicle information function. - It inputs the illumination signals that are required for the display dimming control. - It inputs the signals for driving status recognition (vehicle speed, reverse and parking brake).

DTC Logic

INFOID:000000000947060

DTC	Display contents of CONSULT-III	DTC Detection Condition	Action to take
U1205	GPS ROM [U1205]	Internal malfunction of NAVI control unit (GPS malfunction) is detected.	Replace NAVI control unit.

Diagnosis Procedure

INFOID:000000000954892

1.PERFORM THE SELF-DIAGNOSIS

- Delete the self-diagnosis results. Turn ignition switch OFF.
- Turn ignition switch ON. Perform the self-diagnosis again.
- Check that the DTC is detected again.

Is any DTC detected?

- YES >> Replace NAVI control unit.
 NO >> The intermittent malfunction caused by strong radio interference can be detected.

U1206 GPS

Description

INFOID:000000000954893

An intermittent error caused by strong radio interference may be detected unless any symptoms (GPS reception error, etc.) occur. Replace the NAVI control unit if the malfunction occurs constantly. Refer to [AV-201](#), "Exploded View".

Part name	Description
NAVI CONTORL UNIT	- Map data can be read from the map DVD-ROM by installing map DVD-ROM. - It is the master unit of the MULTI AV system, and it is connected to each control unit by means of communication. It operates each system according to communication signals from the NAVI control unit. - The NAVI control unit includes the audio, hands-free phone, navigation, and vehicle information functions. - It is connected to ECM and combination meter via CAN communication to obtain necessary information for the vehicle information function. - It inputs the illumination signals that are required for the display dimming control. - It inputs the signals for driving status recognition (vehicle speed, reverse and parking brake).

DTC Logic

INFOID:000000000947063

DTC	Display contents of CONSULT-III	DTC Detection Condition	Action to take
U1206	GPS RAM [U1206]	Internal malfunction of NAVI control unit (GPS malfunction) is detected.	Replace NAVI control unit.

Diagnosis Procedure

INFOID:000000000954894

1.PERFORM THE SELF-DIAGNOSIS

- Delete the self-diagnosis results. Turn ignition switch OFF.
- Turn ignition switch ON. Perform the self-diagnosis again.
- Check that the DTC is detected again.

Is any DTC detected?

- YES >> Replace NAVI control unit.
- NO >> The intermittent malfunction caused by strong radio interference can be detected.

U1207 GPS

Description

INFOID:000000000954897

An intermittent error caused by strong radio interference may be detected unless any symptoms (GPS reception error, etc.) occur. Replace the NAVI control unit if the malfunction occurs constantly. Refer to [AV-201, "Exploded View"](#).

Part name	Description
NAVI CONTORL UNIT	- Map data can be read from the map DVD-ROM by installing map DVD-ROM. - It is the master unit of the MULTI AV system, and it is connected to each control unit by means of communication. It operates each system according to communication signals from the NAVI control unit. - The NAVI control unit includes the audio, hands-free phone, navigation, and vehicle information functions. - It is connected to ECM and combination meter via CAN communication to obtain necessary information for the vehicle information function. - It inputs the illumination signals that are required for the display dimming control. - It inputs the signals for driving status recognition (vehicle speed, reverse and parking brake).

DTC Logic

INFOID:000000000947066

DTC	Display contents of CONSULT-III	DTC Detection Condition	Action to take
U1207	GPS RTC [U1207]	Internal malfunction of NAVI control unit (GPS malfunction) is detected.	Replace NAVI control unit.

Diagnosis Procedure

INFOID:000000000954898

1.PERFORM THE SELF-DIAGNOSIS

- Delete the self-diagnosis results. Turn ignition switch OFF.
- Turn ignition switch ON. Perform the self-diagnosis again.
- Check that the DTC is detected again.

Is any DTC detected?

- YES >> Replace NAVI control unit.
- NO >> The intermittent malfunction caused by strong radio interference can be detected.

U1208 NAVI CONTROL UNIT

Description

INFOID:000000000954914

Part name	Description
NAVI CONTORL UNIT	- Map data can be read from the map DVD-ROM by installing map DVD-ROM. - It is the master unit of the MULTI AV system, and it is connected to each control unit by means of communication. It operates each system according to communication signals from the NAVI control unit. - The NAVI control unit includes the audio, hands-free phone, navigation, and vehicle information functions. - It is connected to ECM and combination meter via CAN communication to obtain necessary information for the vehicle information function. - It inputs the illumination signals that are required for the display dimming control. - It inputs the signals for driving status recognition (vehicle speed, reverse and parking brake).
MAP DVD-ROM	A collection of map data

DTC Logic

INFOID:000000000954915

DTC	Display contents of CONSULT-III	DTC Detection Condition	Probable malfunction location
U1208	DVD-ROM COMM [U1208]	- Malfunction is detected on DVD-ROM drive pickup lens in NAVI control unit. - There is dirt and damage on the map disc.	- Map disc - NAVI control unit

Diagnosis Procedure

INFOID:000000000954916

1.PERFORM THE SELF-DIAGNOSIS

- Delete the self-diagnosis results. Turn ignition switch OFF.
- Turn ignition switch ON. Replace map DVD-ROM with a normal one.
- Perform the self-diagnosis again.
- Check that the DTC is detected again.

Is any DTC detected?

- YES >> Replace NAVI control unit.
 NO >> Replace Map disc.

U1209 NAVI CONTROL UNIT

Description

INFOID:000000000954923

Part name	Description
NAVI CONTORL UNIT	- Map data can be read from the map DVD-ROM by installing map DVD-ROM. - It is the master unit of the MULTI AV system, and it is connected to each control unit by means of communication. It operates each system according to communication signals from the NAVI control unit. - The NAVI control unit includes the audio, hands-free phone, navigation, and vehicle information functions. - It is connected to ECM and combination meter via CAN communication to obtain necessary information for the vehicle information function. - It inputs the illumination signals that are required for the display dimming control. - It inputs the signals for driving status recognition (vehicle speed, reverse and parking brake).
MAP DVD-ROM	A collection of map data

DTC Logic

INFOID:000000000954924

DTC	Display contents of CONSULT-III	DTC Detection Condition	Probable malfunction location
U1209	DVD-ROM READ [U1209]	- Malfunction is detected on DVD-ROM drive pickup lens in NAVI control unit. - There is dirt and damage on the map disc.	- Map disc - NAVI control unit

Diagnosis Procedure

INFOID:000000000954925

1.PERFORM THE SELF-DIAGNOSIS

- Delete the self-diagnosis results. Turn ignition switch OFF.
- Turn ignition switch ON. Replace map DVD-ROM with a normal one.
- Perform the self-diagnosis again.
- Check that the DTC is detected again.

Is any DTC detected?

- YES >> Replace NAVI control unit.
 NO >> Replace Map disc.

A
B
C
D
E
F
G
H
I
J
K
L
M
O
P

AV

U120A NAVI CONTROL UNIT

Description

INFOID:000000000954926

Part name	Description
NAVI CONTORL UNIT	- Map data can be read from the map DVD-ROM by installing map DVD-ROM. - It is the master unit of the MULTI AV system, and it is connected to each control unit by means of communication. It operates each system according to communication signals from the NAVI control unit. - The NAVI control unit includes the audio, hands-free phone, navigation, and vehicle information functions. - It is connected to ECM and combination meter via CAN communication to obtain necessary information for the vehicle information function. - It inputs the illumination signals that are required for the display dimming control. - It inputs the signals for driving status recognition (vehicle speed, reverse and parking brake).
MAP DVD-ROM	A collection of map data

DTC Logic

INFOID:000000000954927

DTC	Display contents of CONSULT-III	DTC Detection Condition	Probable malfunction location
U120A	DVD-ROM DISC [U120A]	- Malfunction is detected on DVD-ROM drive pickup lens in NAVI control unit. - There is dirt and damage on the map disc.	- Map disc - NAVI control unit

Diagnosis Procedure

INFOID:000000000954928

1.PERFORM THE SELF-DIAGNOSIS

- Delete the self-diagnosis results. Turn ignition switch OFF.
- Turn ignition switch ON. Replace map DVD-ROM with a normal one.
- Perform the self-diagnosis again.
- Check that the DTC is detected again.

Is any DTC detected?

- YES >> Replace NAVI control unit.
 NO >> Replace Map disc.

U120C NAVI CONTROL UNIT

< COMPONENT DIAGNOSIS >

[AUDIO WITH NAVIGATION]

U120C NAVI CONTROL UNIT

Description

INFOID:000000000954929

Part name	Description
NAVI CONTORL UNIT	- Map data can be read from the map DVD-ROM by installing map DVD-ROM. - It is the master unit of the MULTI AV system, and it is connected to each control unit by means of communication. It operates each system according to communication signals from the NAVI control unit. - The NAVI control unit includes the audio, hands-free phone, navigation, and vehicle information functions. - It is connected to ECM and combination meter via CAN communication to obtain necessary information for the vehicle information function. - It inputs the illumination signals that are required for the display dimming control. - It inputs the signals for driving status recognition (vehicle speed, reverse and parking brake).
MAP DVD-ROM	A collection of map data

DTC Logic

INFOID:000000000954930

DTC	Display contents of CONSULT-III	DTC Detection Condition	Probable malfunction location
U120C	DVD-ROM MECHA DETECT [U120C]	- Malfunction is detected on DVD-ROM drive pickup lens in NAVI control unit. - There is dirt and damage on the map disc.	- Map disc - NAVI control unit

Diagnosis Procedure

INFOID:000000000954931

1.PERFORM THE SELF-DIAGNOSIS

- Delete the self-diagnosis results. Turn ignition switch OFF.
- Turn ignition switch ON. Replace map DVD-ROM with a normal one.
- Perform the self-diagnosis again.
- Check that the DTC is detected again.

Is any DTC detected?

- YES >> Replace NAVI control unit.
NO >> Replace Map disc.

A
B
C
D
E
F
G
H
I
J
K
L
M
O
P

AV

U120D NAVI CONTROL UNIT

Description

INFOID:000000000954932

Part name	Description
NAVI CONTORL UNIT	- Map data can be read from the map DVD-ROM by installing map DVD-ROM. - It is the master unit of the MULTI AV system, and it is connected to each control unit by means of communication. It operates each system according to communication signals from the NAVI control unit. - The NAVI control unit includes the audio, hands-free phone, navigation, and vehicle information functions. - It is connected to ECM and combination meter via CAN communication to obtain necessary information for the vehicle information function. - It inputs the illumination signals that are required for the display dimming control. - It inputs the signals for driving status recognition (vehicle speed, reverse and parking brake).
MAP DVD-ROM	A collection of map data

DTC Logic

INFOID:000000000954933

DTC	Display contents of CONSULT-III	DTC Detection Condition	Probable malfunction location
U120D	DVD-ROM DRIVE MECHA [U120D]	- Malfunction is detected on DVD-ROM drive pickup lens in NAVI control unit. - There is dirt and damage on the map disc.	- Map disc - NAVI control unit

Diagnosis Procedure

INFOID:000000000954934

1.PERFORM THE SELF-DIAGNOSIS

- Delete the self-diagnosis results. Turn ignition switch OFF.
- Turn ignition switch ON. Replace map DVD-ROM with a normal one.
- Perform the self-diagnosis again.
- Check that the DTC is detected again.

Is any DTC detected?

- YES >> Replace NAVI control unit.
 NO >> Replace Map disc.

U120E NAVI CONTROL UNIT

Description

INFOID:000000000954935

Part name	Description
NAVI CONTORL UNIT	- Map data can be read from the map DVD-ROM by installing map DVD-ROM. - It is the master unit of the MULTI AV system, and it is connected to each control unit by means of communication. It operates each system according to communication signals from the NAVI control unit. - The NAVI control unit includes the audio, hands-free phone, navigation, and vehicle information functions. - It is connected to ECM and combination meter via CAN communication to obtain necessary information for the vehicle information function. - It inputs the illumination signals that are required for the display dimming control. - It inputs the signals for driving status recognition (vehicle speed, reverse and parking brake).
MAP DVD-ROM	A collection of map data

DTC Logic

INFOID:000000000954936

DTC	Display contents of CONSULT-III	DTC Detection Condition	Probable malfunction location
U120E	DVD-ROM FOCUS [U120E]	- Malfunction is detected on DVD-ROM drive pickup lens in NAVI control unit. - There is dirt and damage on the map disc.	- Map disc - NAVI control unit

Diagnosis Procedure

INFOID:000000000954937

1.PERFORM THE SELF-DIAGNOSIS

- Delete the self-diagnosis results. Turn ignition switch OFF.
- Turn ignition switch ON. Replace map DVD-ROM with a normal one.
- Perform the self-diagnosis again.
- Check that the DTC is detected again.

Is any DTC detected?

- YES >> Replace NAVI control unit.
 NO >> Replace Map disc.

U120F NAVI CONTROL UNIT

Description

INFOID:000000000954938

Part name	Description
NAVI CONTORL UNIT	- Map data can be read from the map DVD-ROM by installing map DVD-ROM. - It is the master unit of the MULTI AV system, and it is connected to each control unit by means of communication. It operates each system according to communication signals from the NAVI control unit. - The NAVI control unit includes the audio, hands-free phone, navigation, and vehicle information functions. - It is connected to ECM and combination meter via CAN communication to obtain necessary information for the vehicle information function. - It inputs the illumination signals that are required for the display dimming control. - It inputs the signals for driving status recognition (vehicle speed, reverse and parking brake).
MAP DVD-ROM	A collection of map data

DTC Logic

INFOID:000000000954939

DTC	Display contents of CONSULT-III	DTC Detection Condition	Probable malfunction location
U120F	DVD-ROM TOC [U120F]	- Malfunction is detected on DVD-ROM drive pickup lens in NAVI control unit. - There is dirt and damage on the map disc.	- Map disc - NAVI control unit

Diagnosis Procedure

INFOID:000000000954940

1.PERFORM THE SELF-DIAGNOSIS

- Delete the self-diagnosis results. Turn ignition switch OFF.
- Turn ignition switch ON. Replace map DVD-ROM with a normal one.
- Perform the self-diagnosis again.
- Check that the DTC is detected again.

Is any DTC detected?

- YES >> Replace NAVI control unit.
 NO >> Replace Map disc.

U1210 NAVI CONTROL UNIT

Description

INFOID:000000000954941

Part name	Description
NAVI CONTORL UNIT	- Map data can be read from the map DVD-ROM by installing map DVD-ROM. - It is the master unit of the MULTI AV system, and it is connected to each control unit by means of communication. It operates each system according to communication signals from the NAVI control unit. - The NAVI control unit includes the audio, hands-free phone, navigation, and vehicle information functions. - It is connected to ECM and combination meter via CAN communication to obtain necessary information for the vehicle information function. - It inputs the illumination signals that are required for the display dimming control. - It inputs the signals for driving status recognition (vehicle speed, reverse and parking brake).
MAP DVD-ROM	A collection of map data

DTC Logic

INFOID:000000000954942

DTC	Display contents of CONSULT-III	DTC Detection Condition	Probable malfunction location
U1210	DVD-ROM SEEK [U1210]	- Malfunction is detected on DVD-ROM drive pickup lens in NAVI control unit. - There is dirt and damage on the map disc.	- Map disc - NAVI control unit

Diagnosis Procedure

INFOID:000000000954943

1.PERFORM THE SELF-DIAGNOSIS

- Delete the self-diagnosis results. Turn ignition switch OFF.
- Turn ignition switch ON. Replace map DVD-ROM with a normal one.
- Perform the self-diagnosis again.
- Check that the DTC is detected again.

Is any DTC detected?

- YES >> Replace NAVI control unit.
 NO >> Replace Map disc.

A
B
C
D
E
F
G
H
I
J
K
L
M
O
P

AV

U1211 NAVI CONTROL UNIT

Description

INFOID:000000000954944

Part name	Description
NAVI CONTORL UNIT	- Map data can be read from the map DVD-ROM by installing map DVD-ROM. - It is the master unit of the MULTI AV system, and it is connected to each control unit by means of communication. It operates each system according to communication signals from the NAVI control unit. - The NAVI control unit includes the audio, hands-free phone, navigation, and vehicle information functions. - It is connected to ECM and combination meter via CAN communication to obtain necessary information for the vehicle information function. - It inputs the illumination signals that are required for the display dimming control. - It inputs the signals for driving status recognition (vehicle speed, reverse and parking brake).
MAP DVD-ROM	A collection of map data

DTC Logic

INFOID:000000000954945

DTC	Display contents of CONSULT-III	DTC Detection Condition	Probable malfunction location
U1211	DVD-ROM ERR CORRECTION [U1211]	- Malfunction is detected on DVD-ROM drive pickup lens in NAVI control unit. - There is dirt and damage on the map disc.	- Map disc - NAVI control unit

Diagnosis Procedure

INFOID:000000000954946

1.PERFORM THE SELF-DIAGNOSIS

- Delete the self-diagnosis results. Turn ignition switch OFF.
- Turn ignition switch ON. Replace map DVD-ROM with a normal one.
- Perform the self-diagnosis again.
- Check that the DTC is detected again.

Is any DTC detected?

- YES >> Replace NAVI control unit.
 NO >> Replace Map disc.

U1212 NAVI CONTROL UNIT

< COMPONENT DIAGNOSIS >

[AUDIO WITH NAVIGATION]

U1212 NAVI CONTROL UNIT

Description

INFOID:000000000954947

Part name	Description
NAVI CONTORL UNIT	• Map data can be read from the map DVD-ROM by installing map DVD-ROM. • It is the master unit of the MULTI AV system, and it is connected to each control unit by means of communication. It operates each system according to communication signals from the NAVI control unit. • The NAVI control unit includes the audio, hands-free phone, navigation, and vehicle information functions. • It is connected to ECM and combination meter via CAN communication to obtain necessary information for the vehicle information function. • It inputs the illumination signals that are required for the display dimming control. • It inputs the signals for driving status recognition (vehicle speed, reverse and parking brake).
MAP DVD-ROM	A collection of map data

DTC Logic

INFOID:000000000954948

DTC	Display contents of CONSULT-III	DTC Detection Condition	Probable malfunction location
U1212	DVD-ROM DATA FORWARD [U1212]	• Malfunction is detected on DVD-ROM drive pickup lens in NAVI control unit. • There is dirt and damage on the map disc.	• Map disc • NAVI control unit

Diagnosis Procedure

INFOID:000000000954949

1.PERFORM THE SELF-DIAGNOSIS

1. Delete the self-diagnosis results. Turn ignition switch OFF.
2. Turn ignition switch ON. Replace map DVD-ROM with a normal one.
3. Perform the self-diagnosis again.
4. Check that the DTC is detected again.

Is any DTC detected?

- YES >> Replace NAVI control unit.
NO >> Replace Map disc.

A
B
C
D
E
F
G
H
I
J
K
L
M
O
P

AV

U1213 NAVI CONTROL UNIT

Description

INFOID:000000000954950

Part name	Description
NAVI CONTORL UNIT	- Map data can be read from the map DVD-ROM by installing map DVD-ROM. - It is the master unit of the MULTI AV system, and it is connected to each control unit by means of communication. It operates each system according to communication signals from the NAVI control unit. - The NAVI control unit includes the audio, hands-free phone, navigation, and vehicle information functions. - It is connected to ECM and combination meter via CAN communication to obtain necessary information for the vehicle information function. - It inputs the illumination signals that are required for the display dimming control. - It inputs the signals for driving status recognition (vehicle speed, reverse and parking brake).
MAP DVD-ROM	A collection of map data

DTC Logic

INFOID:000000000954951

DTC	Display contents of CONSULT-III	DTC Detection Condition	Probable malfunction location
U1213	DVD-ROM DATA [U1213]	- Malfunction is detected on DVD-ROM drive pickup lens in NAVI control unit. - There is dirt and damage on the map disc.	- Map disc - NAVI control unit

Diagnosis Procedure

INFOID:000000000954952

1.PERFORM THE SELF-DIAGNOSIS

- Delete the self-diagnosis results. Turn ignition switch OFF.
- Turn ignition switch ON. Replace map DVD-ROM with a normal one.
- Perform the self-diagnosis again.
- Check that the DTC is detected again.

Is any DTC detected?

- YES >> Replace NAVI control unit.
 NO >> Replace Map disc.

U1214 NAVI CONTROL UNIT

< COMPONENT DIAGNOSIS >

[AUDIO WITH NAVIGATION]

U1214 NAVI CONTROL UNIT

Description

INFOID:000000000954954

Part name	Description
NAVI CONTORL UNIT	• Map data can be read from the map DVD-ROM by installing map DVD-ROM. • It is the master unit of the MULTI AV system, and it is connected to each control unit by means of communication. It operates each system according to communication signals from the NAVI control unit. • The NAVI control unit includes the audio, hands-free phone, navigation, and vehicle information functions. • It is connected to ECM and combination meter via CAN communication to obtain necessary information for the vehicle information function. • It inputs the illumination signals that are required for the display dimming control. • It inputs the signals for driving status recognition (vehicle speed, reverse and parking brake).
MAP DVD-ROM	A collection of map data

DTC Logic

INFOID:000000000954955

DTC	Display contents of CONSULT-III	DTC Detection Condition	Probable malfunction location
U1214	DVD-ROM TIMEOUT [U1214]	• Malfunction is detected on DVD-ROM drive pickup lens in NAVI control unit. • There is dirt and damage on the map disc.	• Map disc • NAVI control unit

Diagnosis Procedure

INFOID:000000000954956

1.PERFORM THE SELF-DIAGNOSIS

1. Delete the self-diagnosis results. Turn ignition switch OFF.
2. Turn ignition switch ON. Replace map DVD-ROM with a normal one.
3. Perform the self-diagnosis again.
4. Check that the DTC is detected again.

Is any DTC detected?

- YES >> Replace NAVI control unit.
NO >> Replace Map disc.

A
B
C
D
E
F
G
H
I
J
K
L
M
O
P

AV

U1215 NAVI CONTROL UNIT

Description

INFOID:000000000954957

Part name	Description
NAVI CONTORL UNIT	- Map data can be read from the map DVD-ROM by installing map DVD-ROM. - It is the master unit of the MULTI AV system, and it is connected to each control unit by means of communication. It operates each system according to communication signals from the NAVI control unit. - The NAVI control unit includes the audio, hands-free phone, navigation, and vehicle information functions. - It is connected to ECM and combination meter via CAN communication to obtain necessary information for the vehicle information function. - It inputs the illumination signals that are required for the display dimming control. - It inputs the signals for driving status recognition (vehicle speed, reverse and parking brake).
MAP DVD-ROM	A collection of map data

DTC Logic

INFOID:000000000954958

DTC	Display contents of CONSULT-III	DTC Detection Condition	Probable malfunction location
U1215	DVD-ROM LOAD [U1215]	- Malfunction is detected on DVD-ROM drive pickup lens in NAVI control unit. - There is dirt and damage on the map disc.	- Map disc - NAVI control unit

Diagnosis Procedure

INFOID:000000000954959

1.PERFORM THE SELF-DIAGNOSIS

- Delete the self-diagnosis results. Turn ignition switch OFF.
- Turn ignition switch ON. Replace map DVD-ROM with a normal one.
- Perform the self-diagnosis again.
- Check that the DTC is detected again.

Is any DTC detected?

- YES >> Replace NAVI control unit.
 NO >> Replace Map disc.

U1243 DISPLAY UNIT

Description

INFOID:000000000947068

Part name	Description
DISPLAY UNIT	- Display image is controlled by the serial communication from NAVI control unit. - RGB image signal is input from NAVI control unit (RGB, RGB area and RGB synchronizing). Camera image signal is input from camera control unit. - Synchronize signal (HP, VP) is output to NAVI control unit.

DTC Logic

INFOID:000000000947069

DTC	Display contents of CONSULT-III	DTC Detection Condition	Possible causes
U1243	FRONT DISP CONN [U1243]	- Display unit power supply and ground circuit malfunction is detected. - Malfunction is detected on communication circuit between display unit and NAVI control unit. - Malfunction is detected on communication signal between display unit and NAVI control unit.	- Display unit power supply and ground circuit - Communication circuit between display unit and NAVI control unit

Diagnosis Procedure

INFOID:000000000947070

1.CHECK DISPLAY UNIT POWER SUPPLY AND GROUND CIRCUIT

Check display unit power supply and ground circuit. Refer to [AV-101, "DISPLAY UNIT : Diagnosis Procedure"](#).

Is inspection result OK?

YES >> GO TO 2.

NO >> Repair malfunctioning parts.

2.CHECK CONTINUITY COMMUNICATION CIRCUIT

- Turn ignition switch OFF.
- Disconnect display unit connector and NAVI control unit connector.
- Check continuity between display unit harness connector terminals 17, 19 and NAVI control unit harness connector terminals 54, 53.

17 - 54 : Continuity should exist.

19 - 53 : Continuity should exist.

- Check continuity between display unit harness connector terminals 17, 19 and ground.

17, 19 - Ground : Continuity should not exist.

Is inspection result OK?

YES >> GO TO 3.

NO >> Repair harness or connector.


3.CHECK COMMUNICATION SIGNAL

- Connect display unit connector and NAVI control unit connector.
- Turn ignition switch ON.
- Check signal between display unit harness connector terminal 17 and ground.

U1243 DISPLAY UNIT

< COMPONENT DIAGNOSIS >

[AUDIO WITH NAVIGATION]

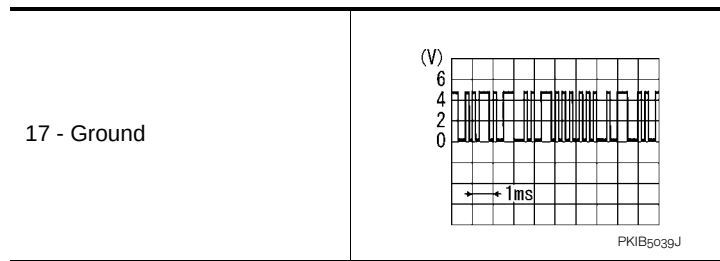


Is inspection result OK?

YES >> GO TO 4.

NO >> Replace NAVI control unit.

4.CHECK COMMUNICATION SIGNAL

Check signal between display unit harness connector terminal 19 and ground.

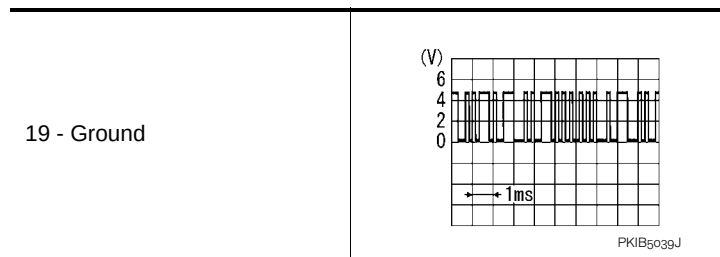

Is inspection result OK?

YES >> INSPECTION END

NO >> Replace display unit.

U1244 GPS ANTENNA

< COMPONENT DIAGNOSIS >

[AUDIO WITH NAVIGATION]

U1244 GPS ANTENNA

Description

INFOID:000000000947071

Part name	Description
GPS ANTENNA	GPS signal is received and sent to NAVI control unit.

DTC Logic

INFOID:000000000947072

DTC	Display contents of CONSULT-III	DTC Detection Condition	Possible causes
U1244	GPS ANTENNA CONN [U1244]	GPS antenna connection malfunction is detected.	GPS antenna disconnection

Diagnosis Procedure

INFOID:000000000947073

1.CHECK GPS ANTENNA

Visually check GPS antenna and antenna feeder.

Is inspection result OK?

YES >> GO TO 2.

NO >> Repair malfunctioning parts.

2.CHECK NAVI CONTROL UNIT VOLTAGE

1. Disconnect GPS antenna connector.
2. Turn ignition switch ON.
3. Check voltage between NAVI control unit terminal 73 and ground.

73 - Ground

: Approx. 5 V

Is inspection result OK?

YES >> INSPECTION END

NO >> Replace NAVI control unit.

A
B
C
D
E
F
G
H
I
J
K
L
M
O
P

AV

U1250 CAMERA CONTROL UNIT

< COMPONENT DIAGNOSIS >

[AUDIO WITH NAVIGATION]

U1250 CAMERA CONTROL UNIT

Description

INFOID:000000000947077

Part name	Description
CAMERA CONTROL UNIT	• Camera image signal is input from rear view camera, and camera image is indicated on the display. • Power (camera ON signal) is sent to rear view camera. • It is controlled by AV communication sent from NAVI control unit. • NAVI control unit recognizes the presence of camera system with camera connection recognition signal.

DTC Logic

INFOID:000000000947078

DTC	Display contents of CONSULT-III	DTC Detection Condition	Possible causes
U1250	CAMERA CONT. CONN [U1250]	A malfunction is detected in camera-connection recognition signal circuit.	Camera-connection recognition signal circuit

Diagnosis Procedure

INFOID:000000000947079

1.CHECK CAMERA-CONNECTION RECOGNITION SIGNAL CIRCUIT

1. Disconnect NAVI control unit connector and camera control unit connector.
2. Check continuity between NAVI control unit harness connector terminal 67 and camera control unit harness connector terminal 5.

67 - 5 : Continuity should exist.

Is inspection result OK?

YES >> GO TO 2.

NO >> Repair harness or connector.

2.CHECK NAVI CONTROL UNIT VOLTAGE

1. Connect NAVI control unit connector.
2. Turn ignition switch ON.
3. Check voltage between NAVI control unit harness connector terminal 67 and ground.

67 - Ground : Approx. 5 V

Is inspection result OK?

YES >> Replace camera control unit.

NO >> Replace NAVI control unit.

U1300 AV COMM CIRCUIT

Description

INFOID:000000000955002

U1300 is indicated when malfunction occurs in communication signal of multi AV system. It is indicated simultaneously, without fail, with the malfunction of control units connected to NAVI control unit with communication line. It determines the possible malfunction cause from the table below.

SELF-DIAGNOSIS RESULTS DISPLAY ITEM

DTC	Display contents of CONSULT-III	Description	Possible malfunction factor/Action to take
U1300 U1240 U1249 U124E U124F	- AV COMM CIRCUIT [U1300] - SWITCH CONN [U1240] - AUDIO H/U CONN [U1249] - AMP CONN [U124E] - RDS CONN [U124F]	- Audio unit power supply and ground circuit malfunction is detected. - Malfunction occurs in AV communication circuit between NAVI control unit and audio unit. - Malfunction is detected in AV communication signal between NAVI control unit and audio unit.	- Audio unit power supply and ground circuits Refer to AV-100, "AUDIO UNIT : Diagnosis Procedure". - AV communication circuit between NAVI control unit and audio unit

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

AV

POWER SUPPLY AND GROUND CIRCUIT

< COMPONENT DIAGNOSIS >

[AUDIO WITH NAVIGATION]

POWER SUPPLY AND GROUND CIRCUIT

NAVI CONTROL UNIT

NAVI CONTROL UNIT : Diagnosis Procedure

INFOID:000000000947084

1.CHECK FUSE

Check for blown fuses.

Power source	Fuse No.
Battery	38
Ignition switch ACC or ON	5
Ignition switch ON or START	4

Is inspection result OK?

YES >> GO TO 2.

NO >> Be sure to eliminate cause of malfunction before installing new fuse.

2.CHECK POWER SUPPLY CIRCUIT

Check voltage between NAVI control unit harness connectors and ground.

Signal name	Connector No.	Terminal No.	Ignition switch position	Value (Approx.)
Battery power supply	B95	2	OFF	12 V
ACC power supply	B95	5	ACC	12 V
Ignition signal	B96	63	ON	12 V

Is inspection result OK?

YES >> GO TO 3.

NO >> Check harness between NAVI control unit and fuse.

3.CHECK GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect NAVI control unit connectors.
3. Check continuity between NAVI control unit harness connector and ground.

Signal name	Connector No.	Terminal No.	Ignition switch position	Continuity
Ground	B95	1	OFF	Continuity should exist.

Is inspection result OK?

YES >> INSPECTION END

NO >> Repair harness or connector.

AUDIO UNIT

AUDIO UNIT : Diagnosis Procedure

INFOID:000000000954530

1.CHECK FUSE

Check for blown fuses.

Power source	Fuse No.
Battery	38
Ignition switch ACC or ON	5

Is inspection result OK?

YES >> GO TO 2.

NO >> Be sure to eliminate cause of malfunction before installing new fuse.

2.CHECK POWER SUPPLY CIRCUIT

Check voltage between audio unit harness connectors and ground.

POWER SUPPLY AND GROUND CIRCUIT

< COMPONENT DIAGNOSIS >

[AUDIO WITH NAVIGATION]

Signal name	Connector No.	Terminal No.	Ignition switch position	Value (Approx.)
Battery power supply	M46	19	OFF	12 V
ACC power supply	M46	7	ACC	12 V

Is inspection result OK?

YES >> GO TO 3.

NO >> Check harness between audio unit and fuse.

3.CHECK GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect audio unit connectors.
3. Check continuity between audio unit harness connector and ground.

Signal name	Connector No.	Terminal No.	Ignition switch position	Continuity
Ground	M46	8, 20	OFF	Continuity should exist.

Is inspection result OK?

YES >> INSPECTION END

NO >> Repair harness or connector.

DISPLAY UNIT

DISPLAY UNIT : Diagnosis Procedure

INFOID:000000000947085

1.CHECK FUSE

Check for blown fuses.

Power source	Fuse No.
Battery	38
Ignition switch ACC or ON	5

Is inspection result OK?

YES >> GO TO 2.

NO >> Be sure to eliminate cause of malfunction before installing new fuse.

2.CHECK POWER SUPPLY CIRCUIT

Check voltage between display unit harness connectors and ground.

Signal name	Connector No.	Terminal No.	Ignition switch position	Value (Approx.)
Battery power supply	M49	21	OFF	12 V
ACC power supply	M49	20	ACC	12 V

Is inspection result OK?

YES >> GO TO 3.

NO >> Check harness between display unit and fuse.

3.CHECK GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect display unit connector.
3. Check continuity between display unit harness connector and ground.

Signal name	Connector No.	Terminal No.	Ignition switch position	Continuity
Ground	M49	23	OFF	Continuity should exist.

Is inspection result OK?

YES >> INSPECTION END

NO >> Repair harness or connector.

CAMERA CONTROL UNIT

POWER SUPPLY AND GROUND CIRCUIT

< COMPONENT DIAGNOSIS >

[AUDIO WITH NAVIGATION]

CAMERA CONTROL UNIT : Diagnosis Procedure

INFOID:000000000947087

1.CHECK FUSE

Check for blown fuses.

Power source	Fuse No.
Battery	38
Ignition switch ACC or ON	5

Is inspection result OK?

YES >> GO TO 2.

NO >> Be sure to eliminate cause of malfunction before installing new fuse.

2.CHECK POWER SUPPLY CIRCUIT

Check voltage between camera control unit harness connectors and ground.

Signal name	Connector No.	Terminal No.	Ignition switch position	Value (Approx.)
Battery power supply	B60	1	OFF	12 V
ACC power supply	B60	2	ACC	12 V

Is inspection result OK?

YES >> GO TO 3.

NO >> Check harness between camera control unit and fuse.

3.CHECK GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect camera control unit connector.
3. Check continuity between camera control unit harness connector and ground.

Signal name	Connector No.	Terminal No.	Ignition switch position	Continuity
Ground	B60	3	OFF	Continuity should exist.

Is inspection result OK?

YES >> INSPECTION END

NO >> Repair harness or connector.

RGB (R: RED) SIGNAL CIRCUIT

Description

INFOID:000000000947090

Transmits the image displayed with NAVI control unit with RGB signal to the display unit.

Diagnosis Procedure

INFOID:000000000947091

1.CHECK CONTINUITY RGB (R: RED) SIGNAL CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect display unit connector and NAVI control unit connector.
3. Check continuity between display unit harness connector terminal 1 and NAVI control unit harness connector terminal 44.

1 - 44 : Continuity should exist.

4. Check continuity between display unit harness connector terminal 1 and ground.

1 - Ground : Continuity should not exist.


Is inspection result OK?

YES >> GO TO 2.

NO >> Repair harness or connector.

2.CHECK RGB (R: RED) SIGNAL

1. Connect display unit connector and NAVI control unit connector.
2. Turn ignition switch ON.
3. Start "Confirmation / Adjustment Mode", and then display color bar by selecting "Color Spectrum Bar" on DISPLAY DIAGNOSIS screen.
4. Check signal between display unit harness connector terminal 1 and 8.

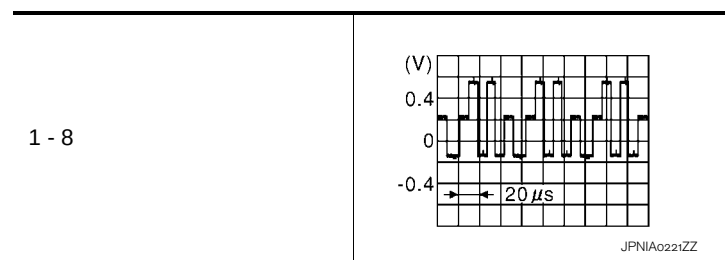

Is inspection result OK?

YES >> Replace display unit.

NO >> Replace NAVI control unit.

RGB (G: GREEN) SIGNAL CIRCUIT

Description

INFOID:000000000947092

Transmits the image displayed with NAVI control unit with RGB signal to the display unit.

Diagnosis Procedure

INFOID:000000000947093

1.CHECK CONTINUITY RGB (G: GREEN) SIGNAL CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect display unit connector and NAVI control unit connector.
3. Check continuity between display unit harness connector terminal 3 and NAVI control unit harness connector terminal 45.

3 - 45 : Continuity should exist.

4. Check continuity between display unit harness connector terminal 3 and ground.

3 - Ground : Continuity should not exist.


Is inspection result OK?

YES >> GO TO 2.

NO >> Repair harness or connector.

2.CHECK RGB (G: GREEN) SIGNAL

1. Connect display unit connector and NAVI control unit connector.
2. Turn ignition switch ON.
3. Start "Confirmation / Adjustment Mode", and then display color bar by selecting "Color Spectrum Bar" on DISPLAY DIAGNOSIS screen.
4. Check signal between display unit harness connector terminal 3 and 8.

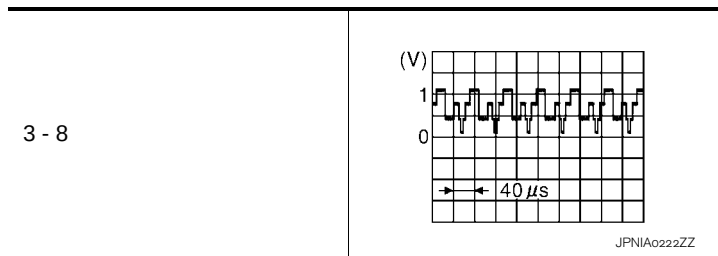

Is inspection result OK?

YES >> Replace display unit.

NO >> Replace NAVI control unit.

RGB (B: BLUE) SIGNAL CIRCUIT

Description

INFOID:000000000947094

Transmits the image displayed with NAVI control unit with RGB signal to the display unit.

Diagnosis Procedure

INFOID:000000000947095

1.CHECK CONTINUITY RGB (B: BLUE) SIGNAL CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect display unit connector and NAVI control unit connector.
3. Check continuity between display unit harness connector terminal 5 and NAVI control unit harness connector terminal 46.

5 - 46 : Continuity should exist.

4. Check continuity between display unit harness connector terminal 5 and ground.

5 - Ground : Continuity should not exist.


Is inspection result OK?

YES >> GO TO 2.

NO >> Repair harness or connector.

2.CHECK RGB (B: BLUE) SIGNAL

1. Connect display unit connector and NAVI control unit connector.
2. Turn ignition switch ON.
3. Start "Confirmation / Adjustment Mode", and then display color bar by selecting "Color Spectrum Bar" on DISPLAY DIAGNOSIS screen.
4. Check signal between display unit harness connector terminal 5 and 8.

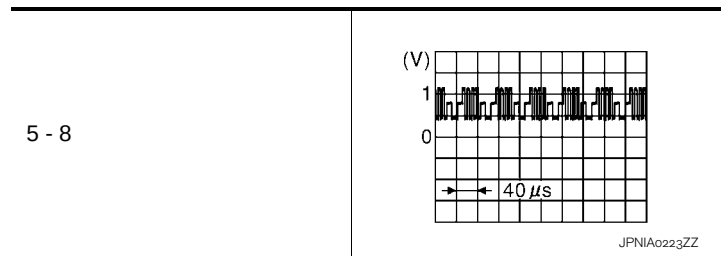

Is inspection result OK?

YES >> Replace display unit.

NO >> Replace NAVI control unit.

RGB SYNCHRONIZING SIGNAL CIRCUIT

< COMPONENT DIAGNOSIS >

[AUDIO WITH NAVIGATION]

RGB SYNCHRONIZING SIGNAL CIRCUIT

Description

INFOID:000000000947096

Transmits the RGB synchronizing signal to the display unit so as to synchronize the RGB image displayed with NAVI control unit.

Diagnosis Procedure

INFOID:000000000947097

1.CHECK CONTINUITY RGB SYNCHRONIZING SIGNAL CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect display unit connector and NAVI control unit connector.
3. Check continuity between display unit harness connector terminal 7 and NAVI control unit harness connector terminal 48.

7 - 48 : Continuity should exist.

4. Check continuity between display unit harness connector terminal 7 and ground.

7 - Ground : Continuity should not exist.


Is inspection result OK?

YES >> GO TO 2.

NO >> Repair harness or connector.

2.CHECK RGB SYNCHRONIZING SIGNAL

1. Connect display unit connector and NAVI control unit connector.
2. Turn ignition switch ON.
3. Check signal between display unit harness connector terminal 7 and ground.

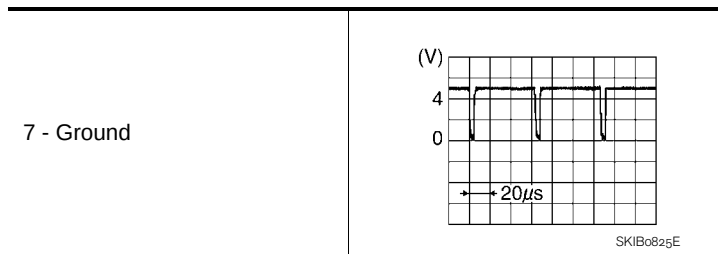

Is inspection result OK?

YES >> Replace display unit.

NO >> Replace NAVI control unit.

RGB AREA (YS) SIGNAL CIRCUIT

< COMPONENT DIAGNOSIS >

[AUDIO WITH NAVIGATION]

RGB AREA (YS) SIGNAL CIRCUIT

Description

INFOID:000000000947098

Transmits the display area of RGB image displayed by NAVI control unit with RGB area (YS) signal to display unit.

Diagnosis Procedure

INFOID:000000000947099

1.CHECK CONTINUITY RGB AREA (YS) SIGNAL CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect display unit connector and NAVI control unit connector.
3. Check continuity between display unit harness connector terminal 2 and NAVI control unit harness connector terminal 50.

2 - 50 : Continuity should exist.

4. Check continuity between display unit harness connector terminal 2 and ground.

2 - Ground : Continuity should not exist.


Is inspection result OK?

YES >> GO TO 2.

NO >> Repair harness or connector.

2.CHECK RGB SYNCHRONIZING SIGNAL

1. Connect display unit connector and NAVI control unit connector.
2. Turn ignition switch ON.
3. Check signal between display unit harness connector terminal 2 and ground.

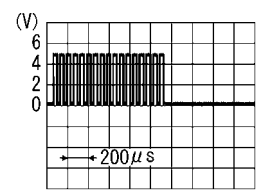	At RGB image displayed	: Approx. 5 V
2 - Ground	At rear view camera image displayed	

Is inspection result OK?

YES >> Replace display unit.

NO >> Replace NAVI control unit.

HORIZONTAL SYNCHRONIZING (HP) SIGNAL CIRCUIT

< COMPONENT DIAGNOSIS >

[AUDIO WITH NAVIGATION]

HORIZONTAL SYNCHRONIZING (HP) SIGNAL CIRCUIT

Description

INFOID:000000000947100

In composite image (camera image), it transmits the vertical synchronizing (VP) signal and horizontal synchronizing (HP) signal from display unit to NAVI control unit so as to synchronize the RGB images displayed with NAVI control unit such as the image quality adjusting menu, etc.

Diagnosis Procedure

INFOID:000000000947101

1. CHECK CONTINUITY HORIZONTAL SYNCHRONIZING (HP) SIGNAL CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect display unit connector and NAVI control unit connector.
3. Check continuity between display unit harness connector terminal 4 and NAVI control unit harness connector terminal 51.

4 - 51 : Continuity should exist.

4. Check continuity between display unit harness connector terminal 4 and ground.

4 - Ground : Continuity should not exist.


Is inspection result OK?

YES >> GO TO 2.

NO >> Repair harness or connector.

2. CHECK HORIZONTAL SYNCHRONIZING (HP) SIGNAL

1. Connect display unit connector and NAVI control unit connector.
2. Turn ignition switch ON.
3. Check signal between display unit harness connector terminal 4 and ground.

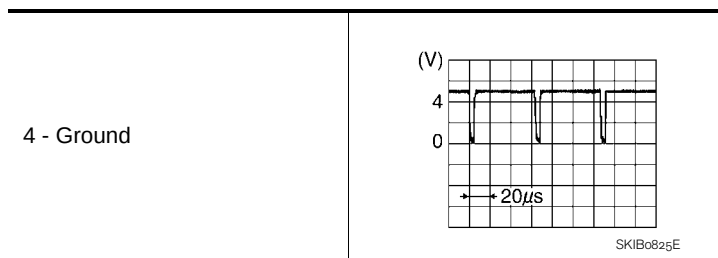

Is inspection result OK?

YES >> Replace NAVI control unit.

NO >> Replace display unit.

VERTICAL SYNCHRONIZING (VP) SIGNAL CIRCUIT

< COMPONENT DIAGNOSIS >

[AUDIO WITH NAVIGATION]

VERTICAL SYNCHRONIZING (VP) SIGNAL CIRCUIT

Description

INFOID:000000000947102

In composite image (camera image), it is transmits the vertical synchronizing (VP) signal and horizontal synchronizing (HP) signal from display unit to NAVI control unit so as to synchronize the RGB images displayed with NAVI control unit such as the image quality adjusting menu, etc.

Diagnosis Procedure

INFOID:000000000947103

1.CHECK CONTINUITY VERTICAL SYNCHRONIZING (VP) SIGNAL CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect display unit connector and NAVI control unit connector.
3. Check continuity between display unit harness connector terminal 6 and NAVI control unit harness connector terminal 52.

6 - 52 : Continuity should exist.

4. Check continuity between display unit harness connector terminal 6 and ground.

6 - Ground : Continuity should not exist.


Is inspection result OK?

YES >> GO TO 2.

NO >> Repair harness or connector.

2.CHECK VERTICAL SYNCHRONIZING (VP) SIGNAL

1. Connect display unit connector and NAVI control unit connector.
2. Turn ignition switch ON.
3. Check signal between display unit harness connector terminal 6 and ground.

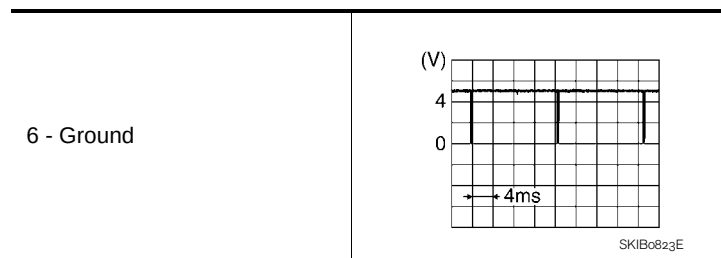

Is inspection result OK?

YES >> Replace NAVI control unit.

NO >> Replace display unit.

A
B
C
D
E
F
G
H
I
J
K
L
M
O
P

AV

MICROPHONE SIGNAL CIRCUIT

Description

INFOID:000000000947108

Supplies power from NAVI control unit to microphone. The microphone transmits the sound voice to the NAVI control unit.

Diagnosis Procedure

INFOID:000000000947109

1.CHECK CONTINUITY BETWEEN NAVI CONTROL UNIT AND MICROPHONE CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect NAVI control unit connector and microphone connector.
3. Check continuity between NAVI control unit harness connector terminals 6, 7, 8 and microphone harness connector terminals 4, 2, 1.

6 - 4 : Continuity should exist.

7 - 2 : Continuity should exist.

8 - 1 : Continuity should exist.

4. Check continuity between NAVI control unit harness connector terminals 6, 8 and ground.

6, 8 - Ground : Continuity should not exist.

Is inspection result OK?

YES >> GO TO 2.

NO >> Repair harness or connector.

2.CHECK VOLTAGE MICROPHONE VCC

1. Connect NAVI control unit connector.
2. Turn ignition switch ON.
3. Check voltage between NAVI control unit harness connector terminals 6 and 7.

6 - 7 : Approx. 5 V


Is inspection result OK?

YES >> GO TO 3.

NO >> Replace NAVI control unit.

3.CHECK MICROPHONE SIGNAL

1. Connect microphone connector.
2. Check signal between NAVI control unit harness connector terminals 8 and 7.

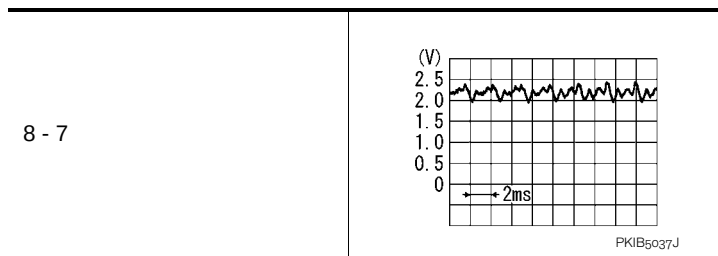

Is inspection result OK?

YES >> Replace NAVI control unit.

NO >> Replace microphone.

CAMERA IMAGE SIGNAL CIRCUIT (REAR VIEW CAMERA TO CAMERA CONTROL UNIT)

< COMPONENT DIAGNOSIS >

[AUDIO WITH NAVIGATION]

CAMERA IMAGE SIGNAL CIRCUIT (REAR VIEW CAMERA TO CAMERA CONTROL UNIT)

Description

INFOID:000000000947110

- Camera control unit outputs camera ON signal to rear view camera and inputs rear view camera image signal from rear view camera when the reverse signal is input.
- The camera control unit that inputs the camera image signal transmits the camera image signal to the display unit.

Diagnosis Procedure

INFOID:000000000947111

1.CHECK CONTINUITY CAMERA IMAGE SIGNAL CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect camera control unit connector and rear view camera connector.
3. Check continuity between camera control unit harness connector terminal 10 and rear view camera harness connector terminal 3.

10 - 3 : Continuity should exist.

4. Check continuity between camera control unit harness connector terminal 10 and ground.

10 - Ground : Continuity should not exist.


Is inspection result OK?

YES >> GO TO 2.

NO >> Repair harness or connector.

2.CHECK CAMERA IMAGE SIGNAL

1. Connect camera control unit connector and rear view camera connector.
2. Turn ignition switch ON.
3. Check signal between camera control unit harness connector terminal 10 and ground.

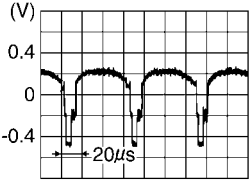10 - Ground	At rear view camera image displayed	 SKIB0827E
-------------	-------------------------------------	--

Is inspection result OK?

YES >> Replace camera control unit.

NO >> Replace rear view camera.

CAMERA IMAGE SIGNAL CIRCUIT (CAMERA CONTROL UNIT TO DISPLAY UNIT)

< COMPONENT DIAGNOSIS >

[AUDIO WITH NAVIGATION]

CAMERA IMAGE SIGNAL CIRCUIT (CAMERA CONTROL UNIT TO DISPLAY UNIT)

Description

INFOID:000000000947114

- Camera control unit outputs camera ON signal to rear view camera and inputs rear view camera image signal from rear view camera when the reverse signal is input.
- The camera control unit that inputs the camera image signal transmits the camera image signal to the display unit.

Diagnosis Procedure

INFOID:000000000947115

1.CHECK CONTINUITY CAMERA IMAGE SIGNAL CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect camera control unit connector and display unit connector.
3. Check continuity between camera control unit harness connector terminal 12, 11 and display unit harness connector terminal 11, 12.

12 - 11 : Continuity should exist.

11 - 12 : Continuity should exist.

4. Check continuity between camera control unit harness connector terminal 12 and ground.

12 - Ground : Continuity should not exist.


Is inspection result OK?

YES >> GO TO 2.

NO >> Repair harness or connector.

2.CHECK CAMERA IMAGE SIGNAL

1. Connect camera control unit connector and display unit connector.
2. Turn ignition switch ON.
3. Check signal between camera control unit harness connector terminal 12 and ground.

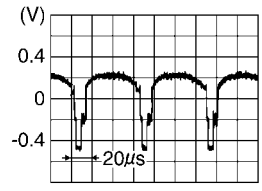12 - Ground	At rear view camera image displayed	 SKIB0827E
-------------	-------------------------------------	--

Is inspection result OK?

YES >> Replace display unit.

NO >> Replace camera control unit.

CAMERA ON SIGNAL CIRCUIT

Description

INFOID:000000000947112

- Camera control unit outputs camera ON signal to rear view camera and inputs rear view camera image signal from rear view camera when the reverse signal is input.
- The camera control unit that inputs the camera image signal transmits the camera image signal to the display unit.

Diagnosis Procedure

INFOID:000000000947113

1.CHECK CONTINUITY CAMERA ON SIGNAL CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect camera control unit connector and rear view camera connector.
3. Check continuity between camera control unit harness connector terminal 8 and rear view camera harness connector terminal 1.

8 - 1 : Continuity should exist.

4. Check continuity between camera control unit harness connector terminal 8 and ground.

8 - Ground : Continuity should not exist.Is inspection result OK?

YES >> GO TO 2.

NO >> Repair harness or connector.

2.CHECK VOLTAGE CAMERA ON SIGNAL

1. Connect camera control unit connector and rear view camera connector.
2. Turn ignition switch ON.
3. Shift the selector lever to "R" position.
4. Check signal between camera control unit harness connector terminal 8 and ground.

8 - Ground : Approx. 6 VIs inspection result OK?

YES >> Replace rear view camera.

NO >> Replace camera control unit.

A
B
C
D
E
F
G
H
I
J
K
L
M
O
P

AV

STEERING SWITCH SIGNAL A CIRCUIT

< COMPONENT DIAGNOSIS >

[AUDIO WITH NAVIGATION]

STEERING SWITCH SIGNAL A CIRCUIT

Description

INFOID:000000000947120

Transmits the steering switch signal to audio unit.

Diagnosis Procedure

INFOID:000000000947121

1.CHECK STEERING SWITCH SIGNAL A CIRCUIT

1. Disconnect audio unit connector and spiral cable connector.
2. Check continuity between audio unit harness connector terminal 6 and spiral cable harness connector terminal 24.

6 - 24 : Continuity should exist.

3. Check continuity between audio unit harness connector terminals 6 and ground.

6 - Ground : Continuity should not exist.

Is inspection result OK?

YES >> GO TO 2.

NO >> Repair harness or connector.

2.CHECK SPIRAL CABLE

Check spiral cable.

Is inspection result OK?

YES >> GO TO 3.

NO >> Replace spiral cable.

3.CHECK AUDIO UNIT VOLTAGE

1. Connect audio unit connector and spiral cable connector.
2. Turn ignition switch ON.
3. Check voltage between audio unit harness connector terminals 6 and 15.

6 - 15 : Approx. 5 V

Is inspection result OK?

YES >> GO TO 4.

NO >> Replace audio unit.

4.CHECK STEERING SWITCH

1. Turn ignition switch OFF.
2. Check steering switch. Refer to [AV-114, "Component Inspection"](#).

Is inspection result OK?

YES >> INSPECTION END

NO >> Replace steering switch.

Component Inspection

INFOID:000000000947122

Measure the resistance between the steering switch connector terminals 20 to 17 and 16 to 17.

STEERING SWITCH SIGNAL A CIRCUIT

< COMPONENT DIAGNOSIS >

[AUDIO WITH NAVIGATION]


Standard

Between terminals 20 and 17

ENTER switch ON : 990 – 1030 Ω
MENU DOWN switch ON : 324 – 336 Ω
MENU UP switch ON : 108 – 112 Ω
SOURCE switch ON : 0 Ω

Between terminals 16 and 17

↶ switch ON : 990 – 1030 Ω
⏮ switch ON : 324 – 336 Ω
VOL UP switch ON : 108 – 112 Ω
VOL DOWN switch ON : 0 Ω

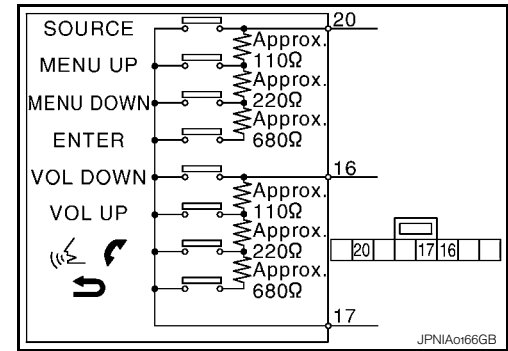

A

B

C

D

E

F

G

H

I

J

K

L

M

AV

O

P

STEERING SWITCH SIGNAL B CIRCUIT

< COMPONENT DIAGNOSIS >

[AUDIO WITH NAVIGATION]

STEERING SWITCH SIGNAL B CIRCUIT

Description

INFOID:000000000955225

Transmits the steering switch signal to audio unit.

Diagnosis Procedure

INFOID:000000000947124

1.CHECK STEERING SWITCH SIGNAL B CIRCUIT

1. Disconnect audio unit connector and spiral cable connector.
2. Check continuity between audio unit harness connector terminal 16 and spiral cable harness connector terminal 32.

16 - 32 : Continuity should exist.

3. Check continuity between audio unit harness connector terminal 16 and ground.

16 - Ground : Continuity should not exist.

Is inspection result OK?

YES >> GO TO 2.

NO >> Repair harness or connector.

2.CHECK SPIRAL CABLE

Check spiral cable.

Is inspection result OK?

YES >> GO TO 3.

NO >> Replace spiral cable.

3.CHECK AUDIO UNIT VOLTAGE

1. Connect audio unit connector and spiral cable connector.
2. Turn ignition switch ON.
3. Check voltage between audio unit harness connector terminals 16 and 15.

16 - 15 : Approx. 5 V

Is inspection result OK?

YES >> GO TO 4.

NO >> Replace audio unit.

4.CHECK STEERING SWITCH

1. Turn ignition switch OFF.
2. Check steering switch. Refer to [AV-116, "Component Inspection"](#).

Is inspection result OK?

YES >> INSPECTION END

NO >> Replace steering switch.

Component Inspection

INFOID:000000000955226

Measure the resistance between the steering switch connector terminals 20 to 17 and 16 to 17.

STEERING SWITCH SIGNAL B CIRCUIT

< COMPONENT DIAGNOSIS >

[AUDIO WITH NAVIGATION]


Standard

Between terminals 20 and 17

ENTER switch ON : 990 – 1030 Ω
MENU DOWN switch ON : 324 – 336 Ω
MENU UP switch ON : 108 – 112 Ω
SOURCE switch ON : 0 Ω

Between terminals 16 and 17

↶ switch ON : 990 – 1030 Ω
⏮ switch ON : 324 – 336 Ω
VOL UP switch ON : 108 – 112 Ω
VOL DOWN switch ON : 0 Ω

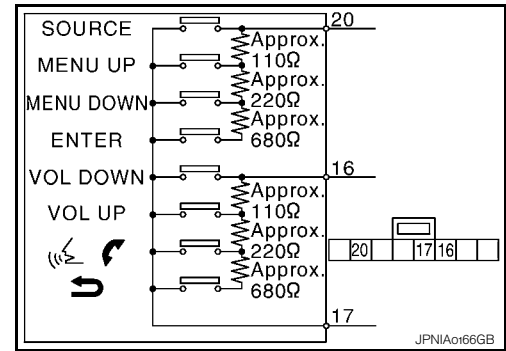

A

B

C

D

E

F

G

H

I

J

K

L

M

AV

O

P

STEERING SWITCH SIGNAL GND CIRCUIT

< COMPONENT DIAGNOSIS >

[AUDIO WITH NAVIGATION]

STEERING SWITCH SIGNAL GND CIRCUIT

Description

INFOID:000000000955227

Transmits the steering switch signal to audio unit.

Diagnosis Procedure

INFOID:000000000947127

1.CHECK STEERING SWITCH SIGNAL GND CIRCUIT

1. Disconnect audio unit connector and spiral cable connector.
2. Check continuity between audio unit harness connector terminal 15 and spiral cable harness connector terminal 31.

15 - 31 : Continuity should exist.

3. Connect audio unit connector.

Is inspection result OK?

YES >> GO TO 2.

NO >> Repair harness or connector.

2.CHECK SPIRAL CABLE

Check spiral cable.

Is inspection result OK?

YES >> GO TO 3.

NO >> Replace spiral cable.

3.CHECK GROUND CIRCUIT

1. Connect audio unit connector.
2. Check continuity between audio unit harness connector terminal 15 and ground.

15 - Ground : Continuity should exist.

Is inspection result OK?

YES >> GO TO 4.

NO >> Replace audio unit.

4.CHECK STEERING SWITCH

1. Turn ignition switch OFF.
2. Check steering switch. Refer to [AV-118. "Component Inspection"](#).

Is inspection result OK?

YES >> INSPECTION END

NO >> Replace steering switch.

Component Inspection

INFOID:000000000955228

Measure the resistance between the steering switch connector terminals 20 to 17 and 16 to 17.

Standard

Between terminals 20 and 17


ENTER switch ON : 990 – 1030 Ω

MENU DOWN switch ON : 324 – 336 Ω

MENU UP switch ON : 108 – 112 Ω

SOURCE switch ON : 0 Ω

Between terminals 16 and 17

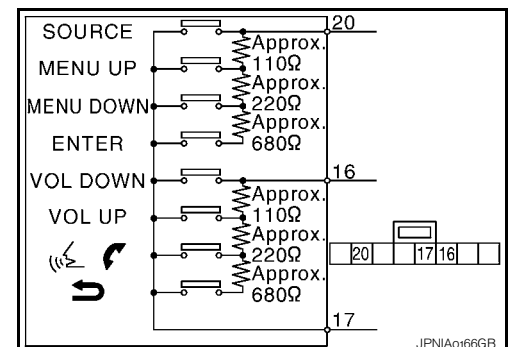

STEERING SWITCH SIGNAL GND CIRCUIT

< COMPONENT DIAGNOSIS >

[AUDIO WITH NAVIGATION]

 switch ON	: 990 – 1030 Ω
 switch ON	: 324 – 336 Ω
VOL UP switch ON	: 108 – 112 Ω
VOL DOWN switch ON	: 0 Ω

A

B

C

D

E

F

G

H

I

J

K

L

M

AV

O

P

ECU DIAGNOSIS

NAVI CONTROL UNIT

Reference Value


INFOID:000000000947129

VALUES ON THE DIAGNOSIS TOOL

CONSULT-III data monitor item

Display Item	Display	Vehicle status	Remarks
VHCL SPD SIG	ON	Vehicle speed >0 km/h (0 MPH)	Changes in indication may be delayed. This is normal.
	OFF	Vehicle speed =0 km/h (0 MPH)	
PKB SIG	ON	Parking brake is applied.	Changes in indication may be delayed. This is normal.
	OFF	Parking brake is released.	
ILLUM SIG	ON	Lighting switch ON	—
	OFF	Lighting switch OFF	
IGN SIG	ON	Ignition switch ON	—
	OFF	Ignition switch in ACC position	
REV SIG	ON	Selector lever in R position	Changes in indication may be delayed. This is normal.
	OFF	Selector lever in any position other than R	

TERMINAL LAYOUT

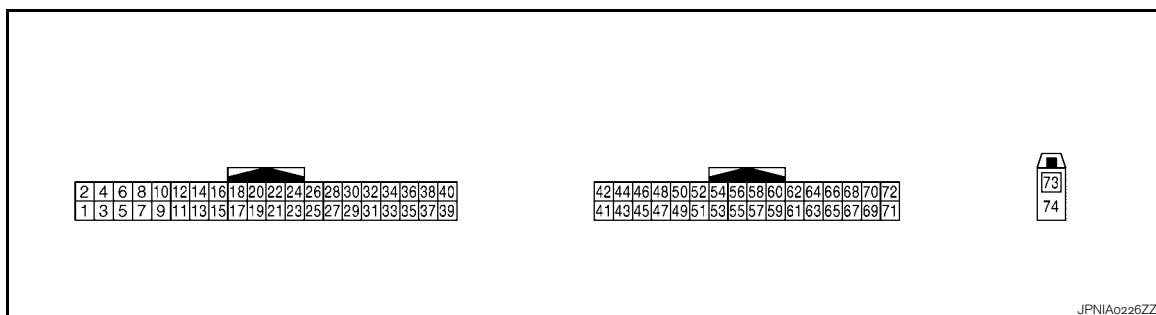







PHYSICAL VALUES

Terminal (Wire color)		Description		Condition		Reference value (Approx.)
+	—	Signal name	Input/ Output			
1 (B)	Ground	GND	—	Ignition switch ON	—	0 V
2 (LG)	Ground	Battery power supply	Input	Ignition switch OFF	—	Battery voltage
5 (R)	Ground	ACC power supply	Input	Ignition switch ACC	—	Battery voltage
6 (B)	7	Microphone VCC	Output	Ignition switch ON	—	5 V
7	Ground	Microphone GND	—	Ignition switch ON	—	0 V

NAVI CONTROL UNIT

< ECU DIAGNOSIS >

[AUDIO WITH NAVIGATION]

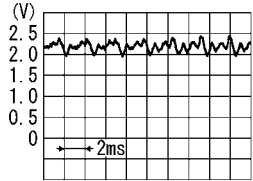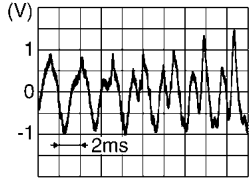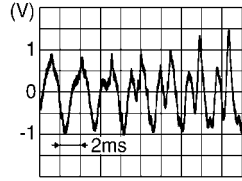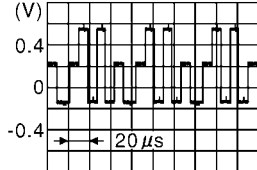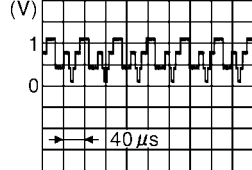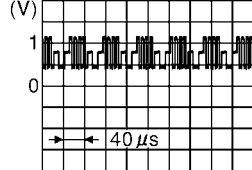Terminal (Wire color)		Description		Condition		Reference value (Approx.)
+	—	Signal name	Input/ Output			
8 (W)	7	Microphone signal	Input	Ignition switch ON	Sounds	 PKIB5037J
9	—	Shield	—	—	—	—
10 (W)	11 (O)	TEL voice signal	Output	Ignition switch ON	TEL voice output	 SKIB3609E
12 (O)	14 (W)	Voice guidance signal	Output	Ignition switch ON	Voice guidance output	 SKIB3609E
13	—	Shield	—	—	—	—
44 (G)	47 (B)	RGB signal (R: red)	Output	Ignition switch ON	Start "Confirmation / Adjust- ment Mode", and then dis- play color bar by selecting "Color Spectrum Bar" on DISPLAY DIAGNOSIS screen.	 JPNIA0221ZZ
45 (R)	47 (B)	RGB signal (G: green)	Output	Ignition switch ON	Start "Confirmation / Adjust- ment Mode", and then dis- play color bar by selecting "Color Spectrum Bar" on DISPLAY DIAGNO- SIS screen.	 JPNIA0222ZZ
46 (W)	47 (B)	RGB signal (B: blue)	Output	Ignition switch ON	Start "Confirmation / Adjust- ment Mode", and then dis- play color bar by selecting "Color Spectrum Bar" on DISPLAY DIAGNO- SIS screen.	 JPNIA0223ZZ
47 (B)	Ground	RGB ground	—	Ignition switch ON	—	0 V

A
B
C
D
E
F
G
H
I
J
K
L
M
O
P







AV

cardiagn.com

NAVI CONTROL UNIT

< ECU DIAGNOSIS >


[AUDIO WITH NAVIGATION]

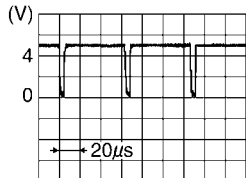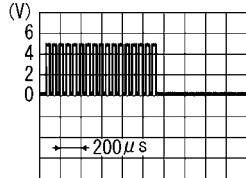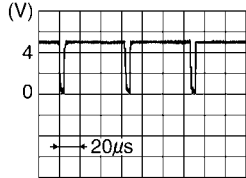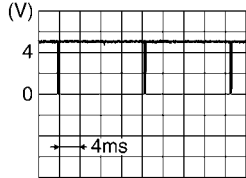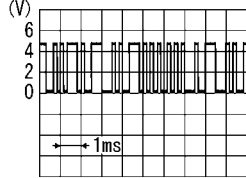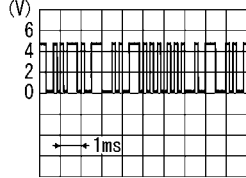Terminal (Wire color)		Description		Condition		Reference value (Approx.)
+	—	Signal name	Input/ Output			
48 (B)	Ground	RGB synchronizing signal	Output	Ignition switch ON	—	 SKIBo825E
49	Ground	Shield	—	—	—	—
50 (G)	Ground	RGB area (YS) signal	Output	Ignition switch ON	At RGB image displayed	5 V
					At rear view camera image displayed	 PKIB4948J
51 (R)	Ground	Horizontal synchronizing (HP) signal	Input	Ignition switch ON	—	 SKIBo825E
52 (W)	Ground	Vertical synchronizing (VP) signal	Input	Ignition switch ON	—	 SKIBo823E
53 (W)	Ground	Communication signal (CONT→DISP)	Output	Ignition switch ON	When adjusting display- brightness.	 PKIB5039J
54 (O)	Ground	Communication signal (DISP→CONT)	Input	Ignition switch ON	When adjusting display- brightness.	 PKIB5039J
55	—	Shield	—	—	—	—
61 (R/L)	Ground	Illumination signal	Input	OFF	Lighting switch is OFF.	0 V
					Lighting switch is ON.	12 V

NAVI CONTROL UNIT

< ECU DIAGNOSIS >

[AUDIO WITH NAVIGATION]

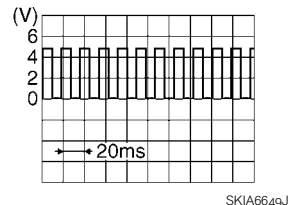Terminal (Wire color)		Description		Condition		Reference value (Approx.)
+	—	Signal name	Input/ Output			
63 (W)	Ground	Ignition signal	Input	Ignition switch ON	—	Battery voltage
64 (V)	Ground	Parking brake signal	Input	Ignition switch ON	Parking brake ON	0 V
					Parking brake OFF	12 V
65 (Y/G)	Ground	Reverse signal	Input	Ignition switch ON	R position	12 V
					Other than R position	0 V
66 (Y)	Ground	Vehicle speed signal (8-pulse)	Input	Ignition switch ON	When vehicle speed is approx. 40 km/h (25MPH)	
67 (Y)	Ground	Camera-connection recognition signal	Input	Ignition switch ON	Connected to camera control unit connector	0 V
					Not connected to camera control unit connector	5 V
69 (L)	—	AV communication signal (H)	Input/ Output	—	—	—
70 (P)	—	AV communication signal (L)	Input/ Output	—	—	—
71 (L)	—	CAN—H	Input/ Output	—	—	—
72 (P)	—	CAN—L	Input/ Output	—	—	—
73	Ground	GPS antenna signal	Input	Ignition switch ACC	Not connected to GPS antenna connector	5 V
74	—	Shield	—	—	—	—

A

B

C

D

E

F

G

H

I

J

K

L

 
M

AV

O


P

INFOID:0000000000947130



L : LHD models
R : RHD models


* : This connector is not shown in "Harness Layout".

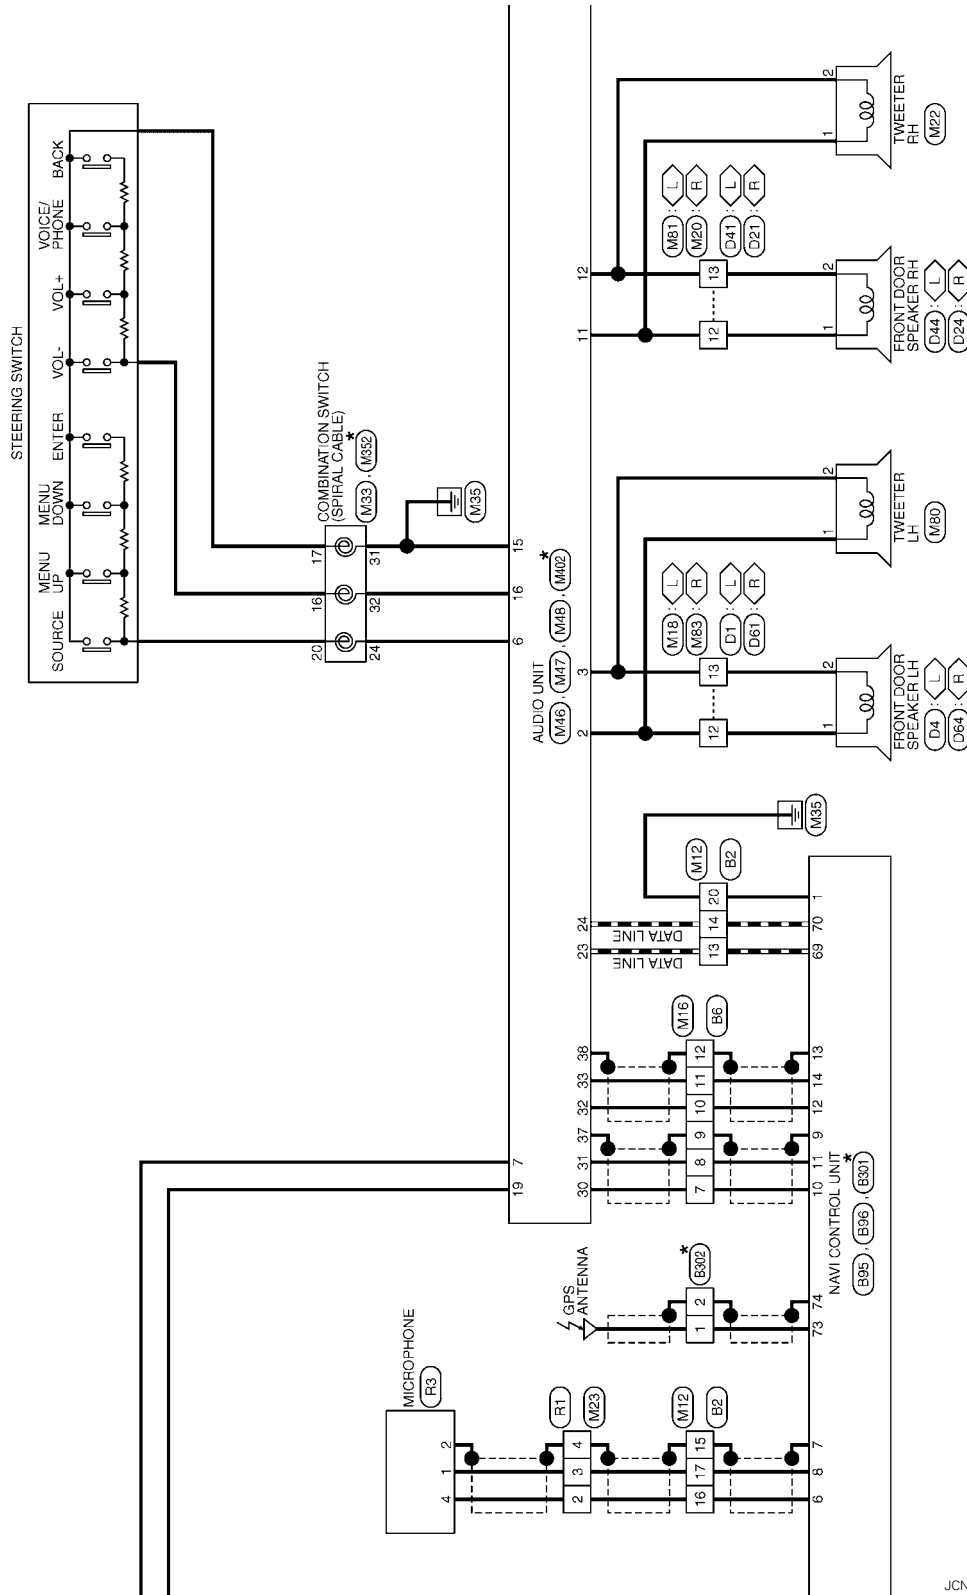

JCNWA0243GB

 : LHD models
 : RHD models

★: This connector is not shown in "Harness Layout".

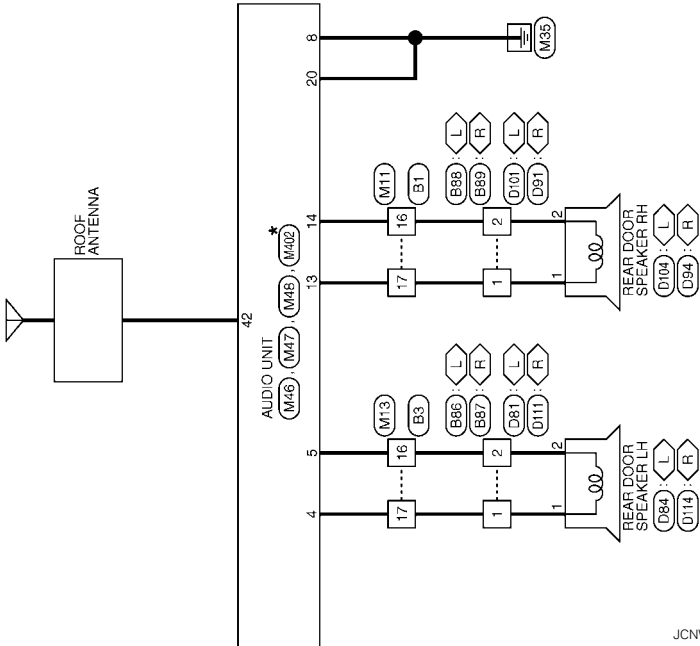

JCNWA0244GB


AUDIO WITH NAVIGATION SYSTEM

Connector No.	B1
Connector Name	WIRE TO WIRE
Connector Type	TH24MW



Terminal No.	Color of Wire	Signal Name [Specification]
11	Y/G	-
12	R	-
13	LG	-
16	V	-
17	O	-
18	R	-
19	SHIELD	-
23	Y	-

Connector No.	B5
Connector Name	WIRE TO WIRE
Connector Type	NS08MW-CS

 


Terminal No.	Color of Wire	Signal Name [Specification]
5	O	-

Connector No.	B2
Connector Name	WIRE TO WIRE
Connector Type	TH24MW



Terminal No.	Color of Wire	Signal Name [Specification]
1	B	-
2	G	-
3	R	-
4	W	-
5	SHIELD	-
6	B	-
7	G	-
8	R	-
9	W	-
10	SHIELD	-
11	W	-

Connector No.	B6
Connector Name	WIRE TO WIRE
Connector Type	TH12MW

 


Terminal No.	Color of Wire	Signal Name [Specification]
1	LG	-
2	R	-
4	W	-
5	V	-
6	Y	-
7	W	-
8	O	-
9	SHIELD	-
10	O	-
11	W	-
12	SHIELD	-

12	O	-
13	L	-
14	P	-
15	SHIELD	-
16	B	-
17	W	-
18	L	-
19	P	-
20	B	-
22	Y/G	-
23	Y	-
24	SHIELD	-


Terminal No.	Color of Wire	Signal Name [Specification]
16	Y	-
17	LG	-

Connector No.	B11
Connector Name	WIRE TO WIRE
Connector Type	TK10MW-NS8

 

Terminal No.	Color of Wire	Signal Name [Specification]
1	Y/G	-

Connector No.	B60
Connector Name	CAMERA CONTROL UNIT
Connector Type	TH16FW

 

Terminal No.	Color of Wire	Signal Name [Specification]
1	LG	BATTERY
2	R	ACC
3	B	GND
4	Y/G	REVERSE SIGNAL
5	V	CONNECTION RECOGNITION
6	O	DOL
8	V	CAMERA ON SIGNAL
9	SHIELD	SHIELD
10	W	CAMERA IMAGE SIGNAL
11	SHIELD	SHIELD
12	R	CAMERA IMAGE SIGNAL


AUDIO WITH NAVIGATION SYSTEM

Connector No.	M402
Connector Name	AUDIO UNIT
Connector Type	G13 SH-2.51S-HU



Terminal No.	Color of Wire	Signal Name [Specification]
42	---	ANTENNA

Connector No.	R1
Connector Name	WIRE TO WIRE
Connector Type	TK10MW-NS3

 

Terminal No.	Color of Wire	Signal Name [Specification]
2	B	-
3	W	-
4	SHIELD	-

Connector No.	R3
Connector Name	MICROPHONE
Connector Type	TK04FW



Terminal No.	Color of Wire	Signal Name [Specification]
1	W	MICROPHONE SIGNAL
2	SHIELD	MICROPHONE GND
4	B	MICROPHONE VCC

JCNWA0246GB

AUDIO WITH NAVIGATION SYSTEM

Connector No.	B74
Connector Name	REAR VIEW CAMERA
Connector Type	TH04MW



Terminal No.	Color of Wire	Signal Name [Specification]
1	V	CAMERA ON SIGNAL
2	B	GND
3	W	CAMERA IMAGE SIGNAL
4	SHIELD	SHIELD

Connector No.	B86
Connector Name	WIRE TO WIRE
Connector Type	NS08MW-CS



Terminal No.	Color of Wire	Signal Name [Specification]
1	LG	-
2	Y	-

Connector No.	B87
Connector Name	WIRE TO WIRE
Connector Type	NS08MW-CS




Terminal No.	Color of Wire	Signal Name [Specification]
1	LG	-
2	Y	-

Connector No.	B88
Connector Name	WIRE TO WIRE
Connector Type	NS08MW-CS




Terminal No.	Color of Wire	Signal Name [Specification]
1	O	-
2	V	-

Connector No.	B89
Connector Name	WIRE TO WIRE
Connector Type	NS08MW-CS

 

Terminal No.	Color of Wire	Signal Name [Specification]
1	O	-
2	V	-

Connector No.	B85
Connector Name	NAVI CONTROL UNIT
Connector Type	TH40FW

 

Terminal No.	Color of Wire	Signal Name [Specification]
1	B	GND
2	LG	BATTERY
3	R	ACC
4	B	MICROPHONE VCG
5	SHIELD	MICROPHONE GND
6	W	MICROPHONE SIGNAL
7	SHIELD	SHIELD
8	W	TEL VOICE SIGNAL (+)
9	W	TEL VOICE SIGNAL (-)
10	O	VOICE GUIDANCE SIGNAL (+)
11	O	VOICE GUIDANCE SIGNAL (-)
12	O	SHIELD
13	SHIELD	SHIELD

14	W	VOICE GUIDANCE SIGNAL (+)
----	---	---------------------------

AUDIO WITH NAVIGATION SYSTEM

Connector No.	B36
Connector Name	NAVI CONTROL UNIT
Connector Type	TH32FW



42	44	46	48	50	52	54	56	58	60	62	64	66	68	70	72
41	43	45	47	49	51	53	55	57	59	61	63	65	67	69	71

AUDIO WITH NAVIGATION SYSTEM

Connector No.	D41
Connector Name	WIRE TO WIRE
Connector Type	TK16FW



7	6	5	4	3	2	1
16	15	14	13	12	11	10
9	8					

Terminal No.	Color of Wire	Signal Name [Specification]
12	BR	-
13	P	-

Connector No.	D44
Connector Name	FRONT DOOR SPEAKER RH
Connector Type	NS02FW-CS



2	1
---	---

Terminal No.	Color of Wire	Signal Name [Specification]
1	BR	-
2	P	-

Connector No.	D61
Connector Name	WIRE TO WIRE
Connector Type	TK16FW



7	6	5	4	3	2	1
16	15	14	13	12	11	10
9	8					

Terminal No.	Color of Wire	Signal Name [Specification]
12	L	-
13	G	-

Connector No.	D84
Connector Name	FRONT DOOR SPEAKER LH
Connector Type	NS02FW-CS



2	1
---	---

Terminal No.	Color of Wire	Signal Name [Specification]
1	L	-
2	G	-

Connector No.	D81
Connector Name	WIRE TO WIRE
Connector Type	NS08FW-CS



3	2	1
8	7	6
5	4	

Terminal No.	Color of Wire	Signal Name [Specification]
1	LG	-
2	Y	-

Connector No.	D84
Connector Name	REAR DOOR SPEAKER LH
Connector Type	NS02FW-CS



2	1
---	---

Terminal No.	Color of Wire	Signal Name [Specification]
1	LG	-
2	Y	-

Connector No.	D81
Connector Name	WIRE TO WIRE
Connector Type	NS08FW-CS



3	2	1
8	7	6
5	4	

Terminal No.	Color of Wire	Signal Name [Specification]
1	O	-
2	V	-

Connector No.	D84
Connector Name	REAR DOOR SPEAKER RH
Connector Type	NS02FW-CS



2	1
---	---

Terminal No.	Color of Wire	Signal Name [Specification]
1	O	-
2	V	-


AUDIO WITH NAVIGATION SYSTEM

Connector No.	D101
Connector Name	WIRE TO WIRE
Connector Type	NS08FW-CS



Terminal No.	Color of Wire	Signal Name [Specification]
1	O	-
2	V	-

Connector No.	D104
Connector Name	REAR DOOR SPEAKER RH
Connector Type	NS02FW-CS

 

Terminal No.	Color of Wire	Signal Name [Specification]
1	O	-
2	V	-

Connector No.	D111
Connector Name	WIRE TO WIRE
Connector Type	NS08FW-CS




Terminal No.	Color of Wire	Signal Name [Specification]
1	LG	-
2	Y	-

Connector No.	D114
Connector Name	REAR DOOR SPEAKER LH
Connector Type	NS02FW-CS




Terminal No.	Color of Wire	Signal Name [Specification]
1	LG	-
2	Y	-

Connector No.	E6
Connector Name	WIRE TO WIRE
Connector Type	TK24MW-1V

 


Terminal No.	Color of Wire	Signal Name [Specification]
1	Y/G	-
21	R/B	-

Connector No.	E7
Connector Name	WIRE TO WIRE
Connector Type	NS16MW-CS

 


Terminal No.	Color of Wire	Signal Name [Specification]
3	Y/R	-

Connector No.	E11
Connector Name	IPDM E/INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM)
Connector Type	NS12FBR-CS

 

Terminal No.	Color of Wire	Signal Name [Specification]
14	R/B	-
16	Y/R	-

Connector No.	E101
Connector Name	WIRE TO WIRE
Connector Type	TK10FW-NSB

 


Terminal No.	Color of Wire	Signal Name [Specification]
1	Y/G	-

JCNWA0250GB

AUDIO WITH NAVIGATION SYSTEM

Connector No.	E105
Connector Name	WIRE TO WIRE
Connector Type	TH80MW-NS16-TM4

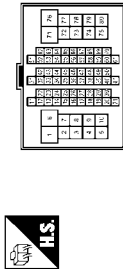

Terminal No.	Color of Wire	Signal Name [Specification]
78	LG	—

Connector No.	F21
Connector Name	PARK/NEUTRAL POSITION SWITCH
Connector Type	RK08FG



Terminal No.	Color of Wire	Signal Name [Specification]
5	Y/R	—
8	Y/G	—

Connector No.	F48
Connector Name	PARK/NEUTRAL POSITION SWITCH
Connector Type	FEA03FG




Terminal No.	Color of Wire	Signal Name [Specification]
1	Y/G	—
2	R/B	—

Connector No.	F51
Connector Name	BACK-UP LAMP SWITCH
Connector Type	RK02FB




Terminal No.	Color of Wire	Signal Name [Specification]
1	Y/G	—
2	R/B	—

Connector No.	F121
Connector Name	WIRE TO WIRE
Connector Type	NS16FW-CS

 


Terminal No.	Color of Wire	Signal Name [Specification]
3	Y/R	—

Connector No.	F123
Connector Name	WIRE TO WIRE
Connector Type	TK24FW-1V

 


Terminal No.	Color of Wire	Signal Name [Specification]
1	Y/G	—
21	R/B	—

Connector No.	M4
Connector Name	DATA LINK CONNECTOR
Connector Type	BD16FW

 

Terminal No.	Color of Wire	Signal Name [Specification]
6	L	—
7	O	—
14	P	—

Connector No.	M11
Connector Name	WIRE TO WIRE
Connector Type	TH24FW

 

Terminal No.	Color of Wire	Signal Name [Specification]
11	Y	—
12	R	—
13	LG	—
16	V	—
17	O	—
18	W	—
19	SHIELD	—
23	Y	—

AUDIO WITH NAVIGATION SYSTEM

Connector No.	M12
Connector Name	WIRE TO WIRE
Connector Type	TH24FW

12	11	10	9	8	7	6	5	4	3	2	1
24	23	22	21	20	19	18	17	16	15	14	13

Terminal No.	Color of Wire	Signal Name [Specification]
1	B	-
2	G	-
3	R	-
4	W	-
5	SHIELD	-
6	B	-
7	G	-
8	R	-
9	W	-
10	SHIELD	-
11	W	-

Connector No.	M16
Connector Name	WIRE TO WIRE
Connector Type	TH12FW

6	5	4	3	2	1
12	11	10	9	8	7

Terminal No.	Color of Wire	Signal Name [Specification]
1	LG	-
2	R	-
4	O	-
5	V	-
6	Y	-
7	W	-
8	O	-
9	SHIELD	-
10	O	-
11	W	-
12	SHIELD	-

12	O	-
13	L	-
14	P	-
15	SHIELD	-
16	W	-
17	B	-
18	L	-
19	P	-
20	B	-
22	Y	-
23	Y	-
24	SHIELD	-

Connector No.	M13
Connector Name	WIRE TO WIRE
Connector Type	TH24FW

12	11	10	9	8	7	6	5	4	3	2	1
24	23	22	21	20	19	18	17	16	15	14	13

Terminal No.	Color of Wire	Signal Name [Specification]
16	Y	-
17	LG	-

Connector No.	M20
Connector Name	WIRE TO WIRE
Connector Type	TK16MW

1	2	3	4	5	6	7
8	9	10	11	12	13	14
15	16	17	18	19	20	21

Terminal No.	Color of Wire	Signal Name [Specification]
12	BR	-
13	P	-

Connector No.	M15
Connector Name	WIRE TO WIRE
Connector Type	NS08FW-CS

3	2	1
8	7	6
5	4	1

Terminal No.	Color of Wire	Signal Name [Specification]
5	O	-

Connector No.	M22
Connector Name	TWEETER RH
Connector Type	FC121PC02S0017

1	2
---	---

Terminal No.	Color of Wire	Signal Name [Specification]
1	BR	-
2	P	-

AUDIO WITH NAVIGATION SYSTEM

Connector No.	M23
Connector Name	WIRE TO WIRE
Connector Type	TK10FW-MS8



10	9	8	7	6	5	4	3	2	1
18	17	16	15	14	13	12	11		

Terminal No.	Color of Wire	Signal Name [Specification]
2	W	-
3	B	-
4	SHIELD	-

Connector No.	M33
Connector Name	COMBINATION SWITCH (SPIRAL CABLE)
Connector Type	TK08FGY-IV



24	25	26	27
31	32	33	34

Terminal No.	Color of Wire	Signal Name [Specification]
24	R	-
31	B	-
32	Y	-

Connector No.	M34
Connector Name	COMBINATION METER
Connector Type	SAB40FW



1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40

Terminal No.	Color of Wire	Signal Name [Specification]
21	L	CAN-H
22	P	CAN-L
31	Y	VEHICLE SPEED (3-PULSE)

Connector No.	M46
Connector Name	AUDIO UNIT
Connector Type	TH18FW-CS2



1	2	3	4	5	6	7	8	9		
19	10	11	12	13	14	15	16	17	18	20

Terminal No.	Color of Wire	Signal Name [Specification]
2	L	SOUND SIGNAL FRONT LH (+)
3	G	SOUND SIGNAL FRONT LH (-)
4	LG	SOUND SIGNAL REAR LH (+)
5	Y	SOUND SIGNAL REAR LH (-)
6	R	STRG SW A
7	R	ACC
8	B	ACC
11	BR	SOUND SIGNAL FRONT RH (+)
12	P	SOUND SIGNAL FRONT RH (-)
13	O	SOUND SIGNAL REAR RH (+)
14	V	SOUND SIGNAL REAR RH (-)

Connector No.	M47
Connector Name	AUDIO UNIT
Connector Type	TH08FW



21	22	23	24
25	26	27	28

Terminal No.	Color of Wire	Signal Name [Specification]
23	L	AV COMM (H)
24	P	AV COMM (L)

Connector No.	M48
Connector Name	AUDIO UNIT
Connector Type	TH12FW



29	30	31	32	33	34
35	36	37	38	39	40

Terminal No.	Color of Wire	Signal Name [Specification]
30	W	TEL VOICE SIGNAL (-)
31	O	TEL VOICE SIGNAL (-) (With navigation system)
32	O	VOICE GUIDANCE (+)
33	W	VOICE GUIDANCE (-)
37	SHIELD	SHIELD (With navigation system)
38	SHIELD	SHIELD

AUDIO WITH NAVIGATION SYSTEM

Connector No.	M49
Connector Name	DISPLAY UNIT
Connector Type	TH24FW

Terminal No.	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
Signal Name [Specification]	RGB (RED) SIGNAL	RGB AREA (YS) SIGNAL	RGB (GREEN) SIGNAL	HP	RGB (BLUE) SIGNAL	YP	RGB SYNC	RGB GND	SHIELD	CAMERA IMAGE SIGNAL	SHIELD													



17	O	COMM (DISP->CONT)
18	SHIELD	
19	W	COMM (CONT->DISP)
20	R	ACC
21	LG	BATTERY
23	B	GND

Connector No.	M77
Connector Name	WIRE TO WIRE
Connector Type	TH60FW-NS16-TM4

Terminal No.	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
Signal Name [Specification]																								



Connector No.	M80
Connector Name	TWEETER LH
Connector Type	FC1 211PC023S9017

Terminal No.	1	2
Signal Name [Specification]		



Terminal No.	1	2	3	4	5	6	7	8	9	10	11	12
Signal Name [Specification]	RGB (RED) SIGNAL	RGB AREA (YS) SIGNAL	RGB (GREEN) SIGNAL	HP	RGB (BLUE) SIGNAL	YP	RGB SYNC	RGB GND	SHIELD	CAMERA IMAGE SIGNAL	SHIELD	

Connector No.	M81
Connector Name	WIRE TO WIRE
Connector Type	TK16MW

Terminal No.	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
Signal Name [Specification]																



Connector No.	M83
Connector Name	WIRE TO WIRE
Connector Type	TK16MW

Terminal No.	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
Signal Name [Specification]																



Connector No.	M103
Connector Name	PARKING BRAKE SWITCH
Connector Type	PR1FB-A

Terminal No.	1
Signal Name [Specification]	



Connector No.	M352
Connector Name	COMBINATION SWITCH (SPIRAL CABLE)
Connector Type	TK3BMGY-X

Terminal No.	14	15	16	17	18	19	20	21
Signal Name [Specification]								



Terminal No.	12	13
Signal Name [Specification]		

Terminal No.	12	13
Signal Name [Specification]		

Terminal No.	1
Signal Name [Specification]	

Terminal No.	16	17	20
Signal Name [Specification]			

DTC Index

Self-diagnosis results display item

DTC	Error item	Refer to
U1000	CAN COMM CIRCUIT [U1000]	AV-71, "Diagnosis Procedure"
U1010	CONTROL UNIT (CAN) [U1010]	AV-72, "Diagnosis Procedure"

NAVI CONTROL UNIT

< ECU DIAGNOSIS >

[AUDIO WITH NAVIGATION]


DTC	Error item	Refer to
U1310	CONTROL UNIT (AV) [U1310]	AV-73, "DTC Logic"
U1300 U1240 U1249 U124E U124F	AV COMM CIRCUIT [U1300] SWITCH CONN [U1240] AUDIO H/U CONN [U1249] AMP CONN [U124E] RDS CONN [U124F]	AV-99, "Description"
U1243	FRONT DISP CONN [U1243]	AV-95, "Diagnosis Procedure"
U1244	GPS ANTENNA CONN [U1244]	AV-97, "Diagnosis Procedure"
U1250	CAMERA CONT. CONN [U1250]	AV-98, "Diagnosis Procedure"
U1200	Control Unit FLASH-ROM [U1200]	AV-74, "DTC Logic"
U1201	Gyro NO CONN [U1201]	AV-75, "DTC Logic"
U1204	GPS COMM [U1204]	AV-78, "Diagnosis Procedure"
U1205	GPS ROM [U1205]	AV-79, "Diagnosis Procedure"
U1206	GPS RAM [U1206]	AV-80, "Diagnosis Procedure"
U1207	GPS RTC [U1207]	AV-81, "Diagnosis Procedure"
U1208	DVD-ROM COMM [U1208]	AV-82, "Diagnosis Procedure"
U1209	DVD-ROM READ [U1209]	AV-83, "Diagnosis Procedure"
U120A	DVD-ROM DISC [U120A]	AV-84, "Diagnosis Procedure"
U120C	DVD-ROM MECHA DETECT [U120C]	AV-85, "Diagnosis Procedure"
U120D	DVD-ROM DRIVE MECHA [U120D]	AV-86, "Diagnosis Procedure"
U120E	DVD-ROM FOCUS [U120E]	AV-87, "Diagnosis Procedure"
U120F	DVD-ROM TOC [U120F]	AV-88, "Diagnosis Procedure"
U1210	DVD-ROM SEEK [U1210]	AV-89, "Diagnosis Procedure"
U1211	DVD-ROM ERR CORRECTION [U1211]	AV-90, "Diagnosis Procedure"
U1212	DVD-ROM DATA FORWARD [U1212]	AV-91, "Diagnosis Procedure"
U1213	DVD-ROM DATA [U1213]	AV-92, "Diagnosis Procedure"
U1214	DVD-ROM TIMEOUT [U1214]	AV-93, "Diagnosis Procedure"
U1215	DVD-ROM LOAD [U1215]	AV-94, "Diagnosis Procedure"
U1216	CAN CONT [U1216]	AV-76, "DTC Logic"
U1217	BLUETOOTH CONN [U1217]	AV-77, "DTC Logic"

AUDIO UNIT



Reference Value

INFOID:000000000955824

TERMINAL LAYOUT

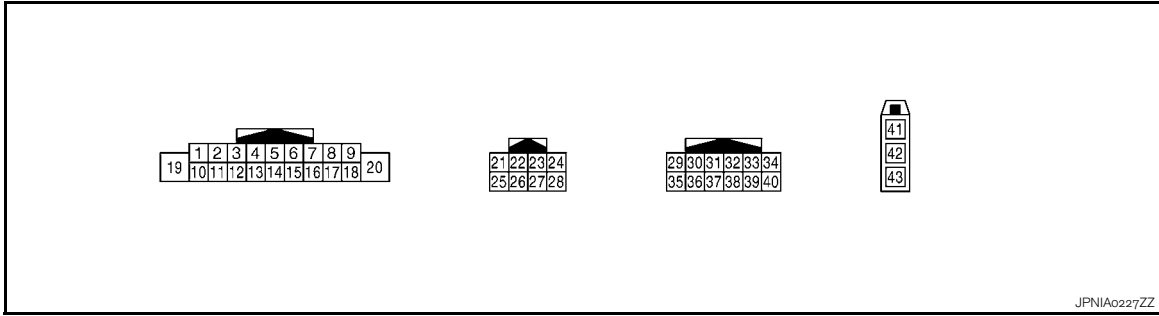





PHYSICAL VALUES

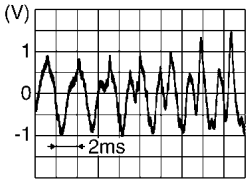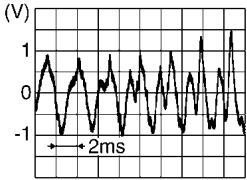Terminal (Wire color)		Description		Condition		Reference value (Approx.)
+	–	Signal name	Input/ Output			
2 (L)	3 (G)	Sound signal front LH	Output	Ignition switch ON	Voice output	 SKIB360gE
4 (LG)	5 (Y)	Sound signal rear LH	Output	Ignition switch ON	Voice output	 SKIB360gE
6 (R)	15 (B)	Steering switch signal A	Input	Ignition switch ON	Keep pressing SOURCE switch.	0 V
					Keep pressing MENU UP switch.	1.2 V
					Keep pressing MENU DOWN switch.	2.5 V
					Keep pressing ENTER switch.	3.7 V
					Except for above.	5 V
7 (R)	Ground	ACC power supply	Input	Ignition switch ACC	–	Battery voltage
8 (B)	Ground	GND	—	Ignition switch ON	—	0 V
9 (R)	Ground	Illumination signal	Input	OFF	Lighting switch is OFF.	0 V
					Lighting switch is ON.	12 V

AUDIO UNIT

< ECU DIAGNOSIS >

[AUDIO WITH NAVIGATION]

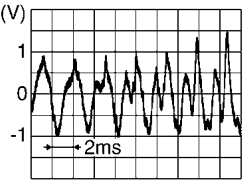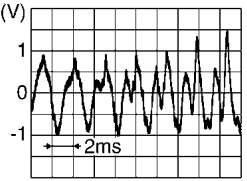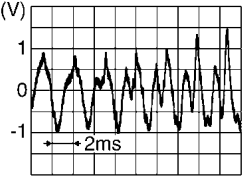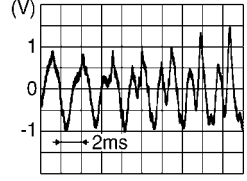Terminal (Wire color)		Description		Condition		Reference value (Approx.)
+	—	Signal name	Input/ Output			
11 (BR)	12 (P)	Sound signal front RH	Output	Ignition switch ON	Voice output	 SKIB3609E
13 (O)	14 (V)	Sound signal rear RH	Output	Ignition switch ON	Voice output	 SKIB3609E
15 (B)	Ground	Steering switch signal GND	—	Ignition switch ON	—	0 V
16 (Y)	15 (B)	Steering switch signal B	Input	Ignition switch ON	Keep pressing VOL DOWN switch.	0 V
					Keep pressing VOL UP switch.	1.2 V
					Keep pressing  switch.	2.5 V
					Keep pressing  switch.	3.7 V
					Except for above.	5 V
19 (LG)	Ground	Battery power supply	Input	Ignition switch OFF	—	Battery voltage
20 (B)	Ground	GND	—	Ignition switch ON	—	0 V
23 (L)	—	AV communication signal (H)	Input/ Output	—	—	—
24 (P)	—	AV communication signal (L)	Input/ Output	—	—	—
30 (W)	31 (O)	TEL voice signal	Input	Ignition switch ON	TEL voice output	 SKIB3609E
32 (O)	33 (W)	Voice guidance signal	Input	Ignition switch ON	Voice guidance output	 SKIB3609E

AUDIO UNIT

< ECU DIAGNOSIS >

[AUDIO WITH NAVIGATION]

Terminal (Wire color)		Description		Condition		Reference value (Approx.)
+	—	Signal name	Input/ Output			
37	—	Shield	—	—	—	—
38	—	Shield	—	—	—	—
42	—	Antenna signal	Input	—	—	—

A

B

C

D

E

F

G

H

I

J

K

L

M


AV

O

P

Wiring Diagram - AUDIO WITH NAVIGATION SYSTEM -


INFOID:0000000000955707

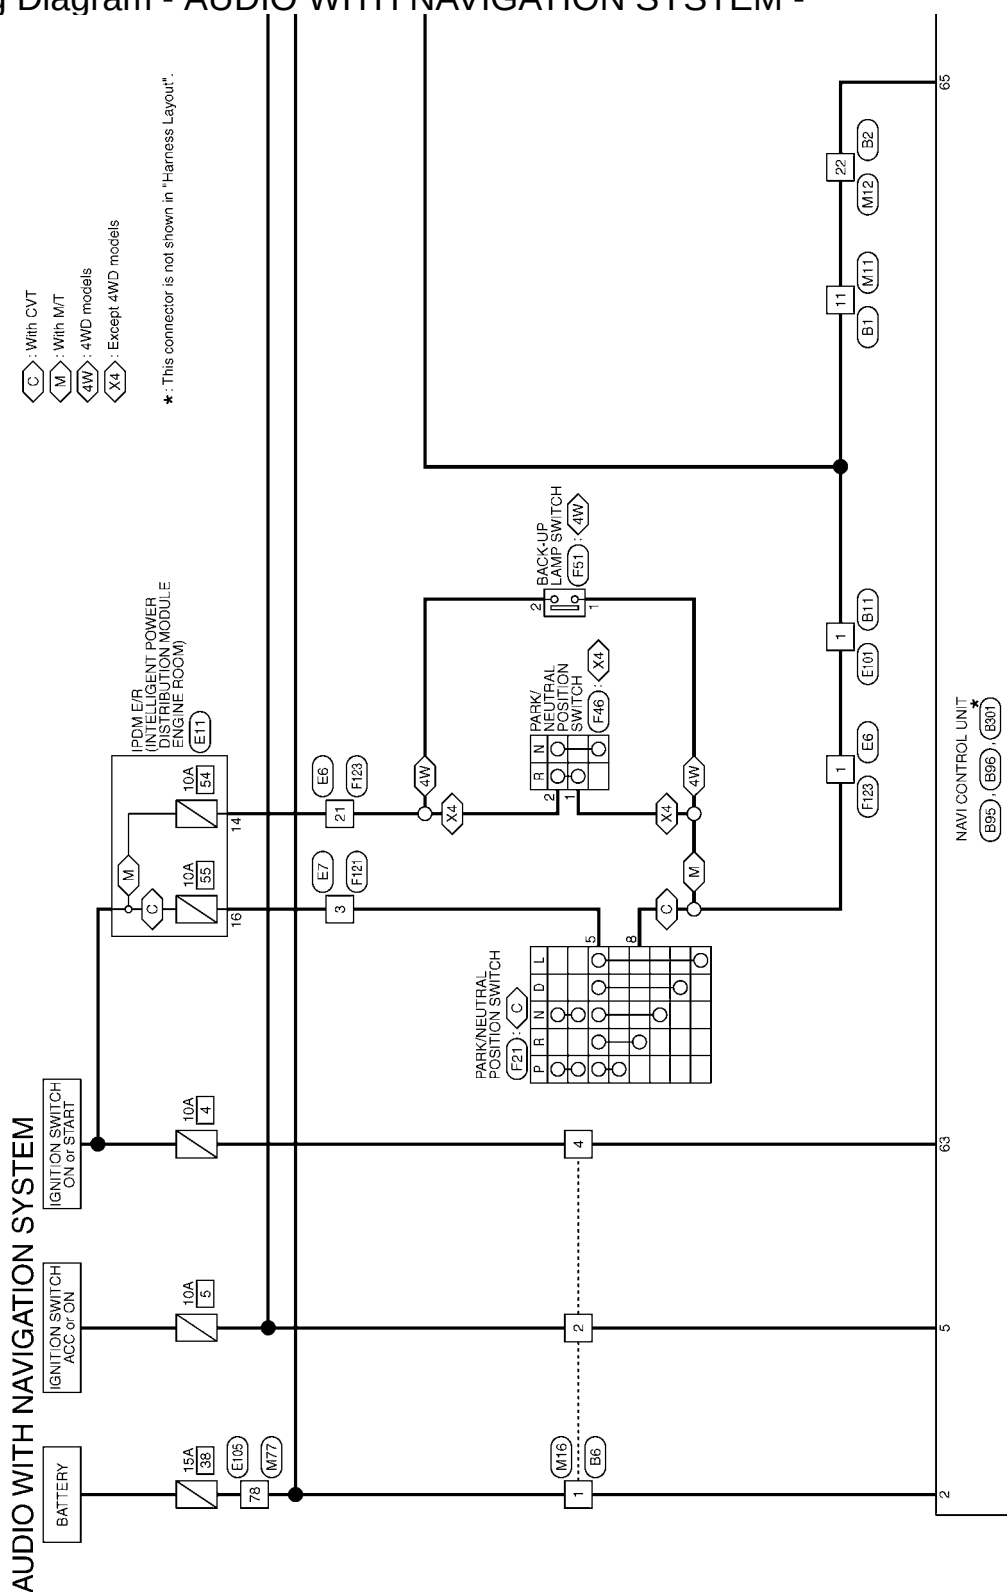

2006/12/08

JCNWA0241GB


★: This connector is not shown in "Harness Layout".

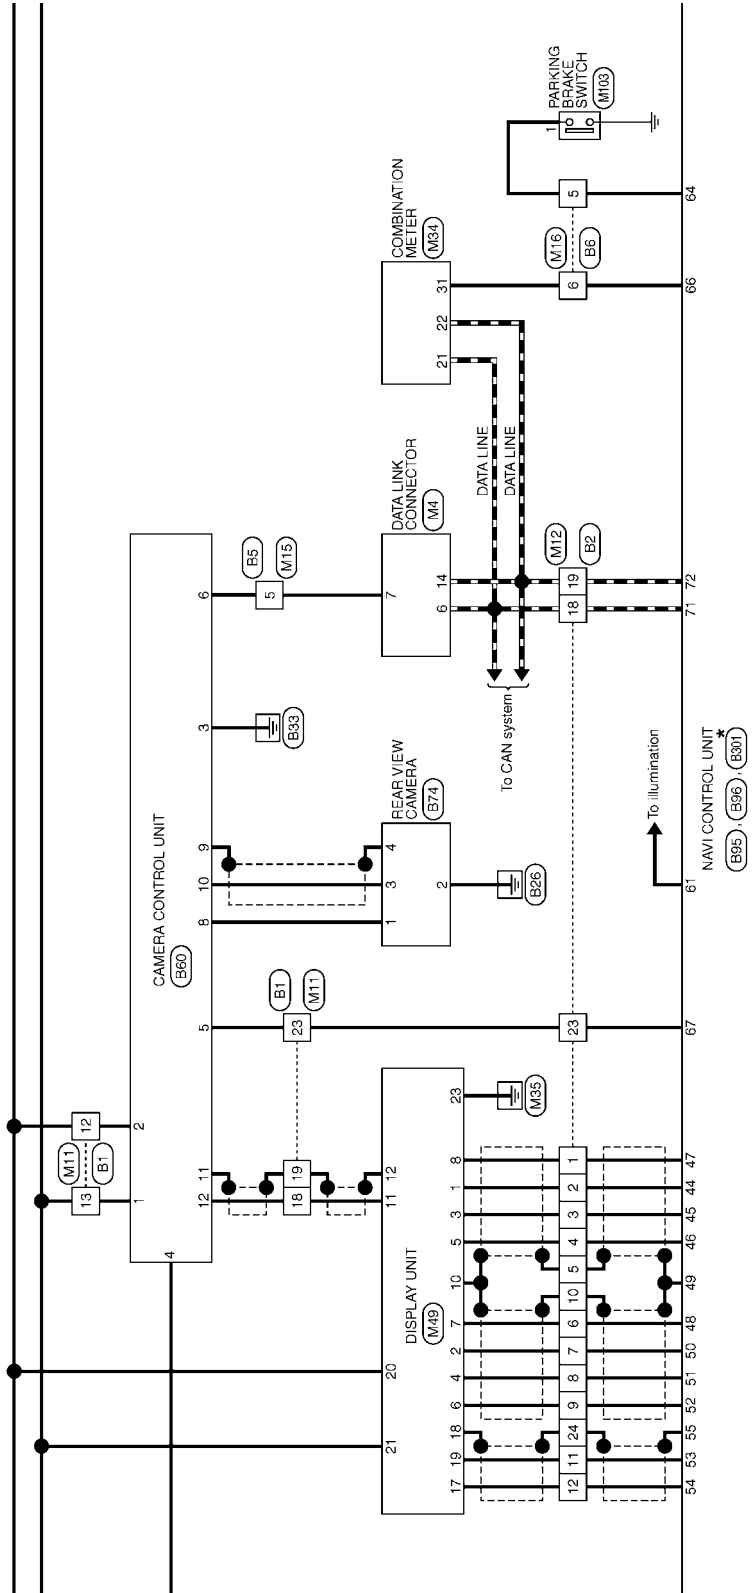


JCNWA0242GB

L : LHD models
R : RHD models

* : This connector is not shown in "Harness Layout".

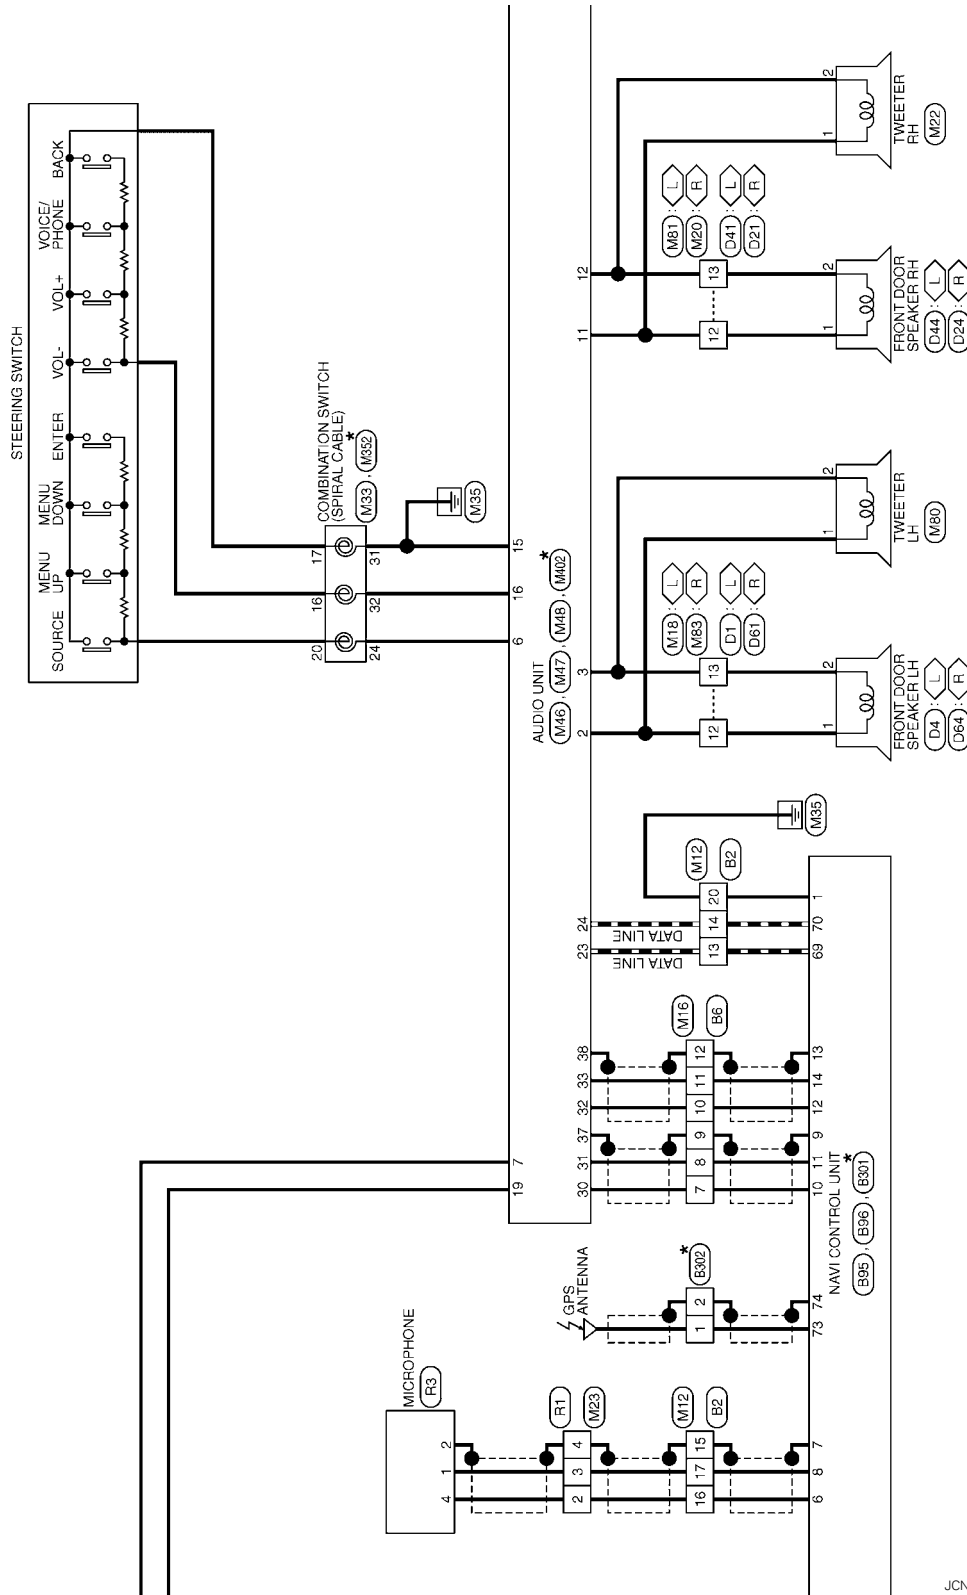

JCNWA0243GB

 


AUDIO WITH NAVIGATION SYSTEM

Connector No.	B1
Connector Name	WIRE TO WIRE
Connector Type	TH24MW



Terminal No.	Color of Wire	Signal Name [Specification]
11	Y/G	-
12	R	-
13	LG	-
16	V	-
17	O	-
18	R	-
19	SHIELD	-
23	Y	-

Connector No.	B5
Connector Name	WIRE TO WIRE
Connector Type	NS08MW-CS

 


Terminal No.	Color of Wire	Signal Name [Specification]
5	O	-

Connector No.	B2
Connector Name	WIRE TO WIRE
Connector Type	TH24MW



Terminal No.	Color of Wire	Signal Name [Specification]
1	B	-
2	G	-
3	R	-
4	W	-
5	SHIELD	-
6	B	-
7	G	-
8	R	-
9	W	-
10	SHIELD	-
11	W	-

Connector No.	B6
Connector Name	WIRE TO WIRE
Connector Type	TH12MW

 


Terminal No.	Color of Wire	Signal Name [Specification]
1	LG	-
2	R	-
4	W	-
5	V	-
6	Y	-
7	W	-
8	O	-
9	SHIELD	-
10	O	-
11	W	-
12	SHIELD	-

12	O	-
13	L	-
14	P	-
15	SHIELD	-
16	B	-
17	W	-
18	L	-
19	P	-
20	B	-
22	Y/G	-
23	Y	-
24	SHIELD	-


Terminal No.	Color of Wire	Signal Name [Specification]
16	Y	-
17	LG	-

Connector No.	B11
Connector Name	WIRE TO WIRE
Connector Type	TK10MW-NS8

 

Terminal No.	Color of Wire	Signal Name [Specification]
1	Y/G	-

Connector No.	B60
Connector Name	CAMERA CONTROL UNIT
Connector Type	TH16FW

 

Terminal No.	Color of Wire	Signal Name [Specification]
1	LG	BATTERY
2	R	ACC
3	B	GND
4	Y/G	REVERSE SIGNAL
5	V	CONNECTION RECOGNITION
6	O	DOL
8	V	CAMERA ON SIGNAL
9	SHIELD	SHIELD
10	W	CAMERA IMAGE SIGNAL
11	SHIELD	SHIELD
12	R	CAMERA IMAGE SIGNAL


AUDIO WITH NAVIGATION SYSTEM

Connector No.	M402
Connector Name	AUDIO UNIT
Connector Type	G13 SH-2 51S-HU



Terminal No.	Color of Wire	Signal Name [Specification]
42	---	ANTENNA

Connector No.	R1
Connector Name	WIRE TO WIRE
Connector Type	TK10MF-NS3

 

Terminal No.	Color of Wire	Signal Name [Specification]
2	B	-
3	W	-
4	SHIELD	-

Connector No.	R3
Connector Name	MICROPHONE
Connector Type	TK04FW



Terminal No.	Color of Wire	Signal Name [Specification]
1	W	MICROPHONE SIGNAL
2	SHIELD	MICROPHONE GND
4	B	MICROPHONE VCC

JCNWA0246GB

AUDIO WITH NAVIGATION SYSTEM

Connector No.	B74
Connector Name	REAR VIEW CAMERA
Connector Type	TH04MW



Terminal No.	Color of Wire	Signal Name [Specification]
1	V	CAMERA ON SIGNAL
2	B	GND
3	W	CAMERA IMAGE SIGNAL
4	SHIELD	SHIELD

Connector No.	B86
Connector Name	WIRE TO WIRE
Connector Type	NS08MW-CS



Terminal No.	Color of Wire	Signal Name [Specification]
1	LG	-
2	Y	-

Connector No.	B87
Connector Name	WIRE TO WIRE
Connector Type	NS08MW-CS



Terminal No.	Color of Wire	Signal Name [Specification]
1	LG	-
2	Y	-

Connector No.	B88
Connector Name	WIRE TO WIRE
Connector Type	NS08MW-CS




Terminal No.	Color of Wire	Signal Name [Specification]
1	O	-
2	V	-

Connector No.	B89
Connector Name	WIRE TO WIRE
Connector Type	NS08MW-CS



Terminal No.	Color of Wire	Signal Name [Specification]
1	O	-
2	V	-

Connector No.	B85
Connector Name	NAVI CONTROL UNIT
Connector Type	TH40FW

 

Terminal No.	Color of Wire	Signal Name [Specification]
1	B	GND
2	LG	BATTERY
3	R	ACC
4	B	MICROPHONE VCG
5	SHIELD	MICROPHONE GND
6	W	MICROPHONE SIGNAL
7	SHIELD	SHIELD
8	W	TEL VOICE SIGNAL (+)
9	SHIELD	TEL VOICE SIGNAL (-)
10	W	VOICE GUIDANCE SIGNAL (+)
11	O	VOICE GUIDANCE SIGNAL (-)
12	O	SHIELD
13	SHIELD	SHIELD

14	W	VOICE GUIDANCE SIGNAL (+)
----	---	---------------------------

AUDIO WITH NAVIGATION SYSTEM

Connector No.	B36
Connector Name	NAVI CONTROL UNIT
Connector Type	TH32FW



12	14	16	18	20	22	24	26	28	30	32	34	36	38	40	42	44	46	48	50	52	54	56	58	60	62	64	66	68	70	72	74	76	78	80	82	84	86	88	90	92	94	96	98	100
----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	-----

Terminal No.	Color of Wire	Signal Name [Specification]
44	G	RGB (RED) SIGNAL
45	R	RGB (GREEN) SIGNAL
46	W	RGB (BLUE) SIGNAL
47	B	RGB GND
48	B	RGB SYNC
49	SHIELD	SHIELD
50	G	RGB AREA (YS) SIGNAL
51	R	HP
52	W	VP
53	W	COMM (CONT->DISP)
54	O	COMM (DISP->CONT)

Connector No.	D1
Connector Name	WIRE TO WIRE
Connector Type	TK16FW



7	6	5	4	3	2	1
16	15	14	13	12	11	10
9	8					

Terminal No.	Color of Wire	Signal Name [Specification]
12	L	-
13	G	-

55	SHIELD	SHIELD
61	R/L	ILLUMINATION
63	W	IGNITION
64	V	PARKING BRAKE
65	Y/G	REVERSE SIGNAL
66	Y	VEHICLE SPEED (8-PULSE)
67	Y	CONNECTION RECOGNITION
69	L	AV COMM (AV)
70	P	AV COMM (L)
71	L	CAN-H
72	P	CAN-L

Terminal No.	Color of Wire	Signal Name [Specification]
73	-	GPS ANTENNA
74	SHIELD	SHIELD

Connector No.	B301
Connector Name	NAVI CONTROL UNIT
Connector Type	GT5S-PP-HU



73	74
----	----

Terminal No.	Color of Wire	Signal Name [Specification]
1	-	-
2	SHIELD	-

Connector No.	B302
Connector Name	GPS ANTENNA
Connector Type	GT5S-PP-HU



1	2
---	---

Connector No.	D21
Connector Name	WIRE TO WIRE
Connector Type	TK16FW



7	6	5	4	3	2	1
16	15	14	13	12	11	10
9	8					

Terminal No.	Color of Wire	Signal Name [Specification]
12	BR	-
13	P	-

Connector No.	D24
Connector Name	FRONT DOOR SPEAKER RH
Connector Type	NS02FW-OS



2	1
---	---

Terminal No.	Color of Wire	Signal Name [Specification]
1	BR	-
2	P	-

AUDIO WITH NAVIGATION SYSTEM

Connector No.	D41
Connector Name	WIRE TO WIRE
Connector Type	TK16FW



Terminal No.	Color of Wire	Signal Name [Specification]
12	BR	-
13	P	-

Connector No.	D44
Connector Name	FRONT DOOR SPEAKER RH
Connector Type	NS02FW-CS



Terminal No.	Color of Wire	Signal Name [Specification]
1	BR	-
2	P	-

Connector No.	D61
Connector Name	WIRE TO WIRE
Connector Type	TK16FW




Terminal No.	Color of Wire	Signal Name [Specification]
12	L	-
13	G	-

Connector No.	D84
Connector Name	FRONT DOOR SPEAKER LH
Connector Type	NS02FW-CS



Terminal No.	Color of Wire	Signal Name [Specification]
1	L	-
2	G	-

Connector No.	D81
Connector Name	WIRE TO WIRE
Connector Type	NS08FW-CS

 


Terminal No.	Color of Wire	Signal Name [Specification]
1	LG	-
2	Y	-

Connector No.	D84
Connector Name	REAR DOOR SPEAKER LH
Connector Type	NS02FW-CS



Terminal No.	Color of Wire	Signal Name [Specification]
1	LG	-
2	Y	-

Connector No.	D81
Connector Name	WIRE TO WIRE
Connector Type	NS08FW-CS

 

Terminal No.	Color of Wire	Signal Name [Specification]
1	O	-
2	V	-

Connector No.	D84
Connector Name	REAR DOOR SPEAKER RH
Connector Type	NS02FW-CS



Terminal No.	Color of Wire	Signal Name [Specification]
1	O	-
2	V	-


AUDIO WITH NAVIGATION SYSTEM

Connector No.	D101
Connector Name	WIRE TO WIRE
Connector Type	NS08FW-CS



Terminal No.	Color of Wire	Signal Name [Specification]
1	O	-
2	V	-

Connector No.	D104
Connector Name	REAR DOOR SPEAKER RH
Connector Type	NS02FW-CS

 

Terminal No.	Color of Wire	Signal Name [Specification]
1	O	-
2	V	-

Connector No.	D111
Connector Name	WIRE TO WIRE
Connector Type	NS08FW-CS




Terminal No.	Color of Wire	Signal Name [Specification]
1	LG	-
2	Y	-

Connector No.	D114
Connector Name	REAR DOOR SPEAKER LH
Connector Type	NS02FW-CS




Terminal No.	Color of Wire	Signal Name [Specification]
1	LG	-
2	Y	-

Connector No.	E6
Connector Name	WIRE TO WIRE
Connector Type	TK24MW-1V

 


Terminal No.	Color of Wire	Signal Name [Specification]
1	Y/G	-
21	R/B	-

Connector No.	E7
Connector Name	WIRE TO WIRE
Connector Type	NS16MW-CS

 


Terminal No.	Color of Wire	Signal Name [Specification]
3	Y/R	-

Connector No.	E11
Connector Name	IPDM E/INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM)
Connector Type	NS12FBR-CS

 

Terminal No.	Color of Wire	Signal Name [Specification]
14	R/B	-
16	Y/R	-


Connector No.	E101
Connector Name	WIRE TO WIRE
Connector Type	TK10FW-NSB

 

Terminal No.	Color of Wire	Signal Name [Specification]
1	Y/G	-

AUDIO WITH NAVIGATION SYSTEM

Connector No.	E105
Connector Name	WIRE TO WIRE
Connector Type	TH80MW-NS16-TM4

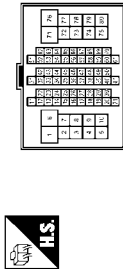

Terminal No.	Color of Wire	Signal Name [Specification]
78	LG	—

Connector No.	F21
Connector Name	PARK/NEUTRAL POSITION SWITCH
Connector Type	RK08FG



Terminal No.	Color of Wire	Signal Name [Specification]
5	Y/R	—
8	Y/G	—

Connector No.	F48
Connector Name	PARK/NEUTRAL POSITION SWITCH
Connector Type	FEA03FG




Terminal No.	Color of Wire	Signal Name [Specification]
1	Y/G	—
2	R/B	—

Connector No.	F51
Connector Name	BACK-UP LAMP SWITCH
Connector Type	RK02FB




Terminal No.	Color of Wire	Signal Name [Specification]
1	Y/G	—
2	R/B	—

Connector No.	F121
Connector Name	WIRE TO WIRE
Connector Type	NS16FW-CS

 


Terminal No.	Color of Wire	Signal Name [Specification]
3	Y/R	—

Connector No.	F123
Connector Name	WIRE TO WIRE
Connector Type	TK24FW-1V

 


Terminal No.	Color of Wire	Signal Name [Specification]
1	Y/G	—
21	R/B	—

Connector No.	M4
Connector Name	DATA LINK CONNECTOR
Connector Type	BD16FW

 

Terminal No.	Color of Wire	Signal Name [Specification]
6	L	—
7	O	—
14	P	—

Connector No.	M11
Connector Name	WIRE TO WIRE
Connector Type	TH24FW

 

Terminal No.	Color of Wire	Signal Name [Specification]
11	Y	—
12	R	—
13	LG	—
16	V	—
17	O	—
18	W	—
19	SHIELD	—
23	Y	—

AUDIO WITH NAVIGATION SYSTEM

Connector No.	M12
Connector Name	WIRE TO WIRE
Connector Type	TH24FW



12	11	10	9	8	7	6	5	4	3	2	1
----	----	----	---	---	---	---	---	---	---	---	---

Terminal No.	Color of Wire	Signal Name [Specification]
1	B	-
2	G	-
3	R	-
4	W	-
5	SHIELD	-
6	B	-
7	G	-
8	R	-
9	W	-
10	SHIELD	-
11	W	-

Connector No.	M16
Connector Name	WIRE TO WIRE
Connector Type	TH12FW



6	5	4	3	2	1
---	---	---	---	---	---

Terminal No.	Color of Wire	Signal Name [Specification]
1	LG	-
2	R	-
4	O	-
5	V	-
6	Y	-
7	W	-
8	O	-
9	SHIELD	-
10	O	-
11	W	-
12	SHIELD	-

12	O	-
13	L	-
14	P	-
15	SHIELD	-
16	W	-
17	B	-
18	L	-
19	P	-
20	B	-
22	Y	-
23	Y	-
24	SHIELD	-



12	11	10	9	8	7	6	5	4	3	2	1
----	----	----	---	---	---	---	---	---	---	---	---

Terminal No.	Color of Wire	Signal Name [Specification]
16	Y	-
17	LG	-

Connector No.	M20
Connector Name	WIRE TO WIRE
Connector Type	TK16MW



1	2	3	4	5	6	7
---	---	---	---	---	---	---

Terminal No.	Color of Wire	Signal Name [Specification]
12	BR	-
13	P	-

Connector No.	M15
Connector Name	WIRE TO WIRE
Connector Type	NS08FW-CS



3	2	1
---	---	---

Terminal No.	Color of Wire	Signal Name [Specification]
5	O	-

Connector No.	M22
Connector Name	TWEETER RH
Connector Type	FC121PC02S0017



1	2
---	---

Terminal No.	Color of Wire	Signal Name [Specification]
1	BR	-
2	P	-

AUDIO WITH NAVIGATION SYSTEM

Connector No.	M23
Connector Name	WIRE TO WIRE
Connector Type	TK10FW-MS8



10	9	8	7	6	5	4	3	2	1
18	17	16	15	14	13	12	11		

Terminal No.	Color of Wire	Signal Name [Specification]
2	W	-
3	B	-
4	SHIELD	-

Connector No.	M33
Connector Name	COMBINATION SWITCH (SPIRAL CABLE)
Connector Type	TK08FGY-IV



24	25	26	27
31	32	33	34

Terminal No.	Color of Wire	Signal Name [Specification]
24	R	-
31	B	-
32	Y	-

Connector No.	M34
Connector Name	COMBINATION METER
Connector Type	SAB40FW



1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40

Terminal No.	Color of Wire	Signal Name [Specification]
21	L	CAN-H
22	P	CAN-L
31	Y	VEHICLE SPEED (3-PULSE)

Connector No.	M46
Connector Name	AUDIO UNIT
Connector Type	TH18FW-CS2



Terminal No.	Color of Wire	Signal Name [Specification]
2	L	SOUND SIGNAL FRONT LH (+)
3	G	SOUND SIGNAL FRONT LH (-)
4	LG	SOUND SIGNAL REAR LH (+)
5	Y	SOUND SIGNAL REAR LH (-)
6	R	STRG SW A
7	R	ACC
8	B	ACC
11	BR	SOUND SIGNAL FRONT RH (+)
12	P	SOUND SIGNAL FRONT RH (-)
13	O	SOUND SIGNAL REAR RH (+)
14	V	SOUND SIGNAL REAR RH (-)

Connector No.	M47
Connector Name	AUDIO UNIT
Connector Type	TH08FW



21	22	23	24
25	26	27	28

Terminal No.	Color of Wire	Signal Name [Specification]
23	L	AV COMM (H)
24	P	AV COMM (L)

Connector No.	M48
Connector Name	AUDIO UNIT
Connector Type	TH12FW




29	30	31	32	33	34
35	36	37	38	39	40

Terminal No.	Color of Wire	Signal Name [Specification]
30	W	TEL VOICE SIGNAL (-)
31	O	TEL VOICE SIGNAL (-) (With navigation system)
32	O	VOICE GUIDANCE (+)
33	W	VOICE GUIDANCE (-)
37	SHIELD	SHIELD (With navigation system)
38	SHIELD	SHIELD


AUDIO WITH NAVIGATION SYSTEM

Connector No.	M49
Connector Name	DISPLAY UNIT
Connector Type	TH24FW

 


Terminal No.	Color of Wire	Signal Name [Specification]
1	G	RGB (RED) SIGNAL
2	G	RGB AREA (YS) SIGNAL
3	R	RGB (GREEN) SIGNAL
4	R	HP
5	W	RGB (BLUE) SIGNAL
6	W	YP
7	B	RGB SYNC
8	B	RGB GND
10	SHIELD	SHIELD
11	R	CAMERA IMAGE SIGNAL
12	SHIELD	SHIELD

Connector No.	M81
Connector Name	WIRE TO WIRE
Connector Type	TK16MW

 

Terminal No.	Color of Wire	Signal Name [Specification]
12	BR	-
13	P	-

17	O	COMM (DISP->CONT)
18	SHIELD	SHIELD
19	W	COMM (CONT->DISP)
20	R	ACC
21	LG	BATTERY
23	B	GND

 

Terminal No.	Color of Wire	Signal Name [Specification]
78	LG	-

Connector No.	M77
Connector Name	WIRE TO WIRE
Connector Type	TH40FW-NS16-TM4



Connector No.	M80
Connector Name	TWEETER LH
Connector Type	FC1 211PC023S9017



Terminal No.	Color of Wire	Signal Name [Specification]
1	L	-
2	G	-

Connector No.	M352
Connector Name	COMBINATION SWITCH (SPIRAL CABLE)
Connector Type	TK03MGY-X



Terminal No.	Color of Wire	Signal Name [Specification]
16	-	-
17	-	-
20	-	-

Connector No.	M103
Connector Name	PARKING BRAKE SWITCH
Connector Type	P01FB-A




Terminal No.	Color of Wire	Signal Name [Specification]
1	V	-

DISPLAY UNIT

Reference Value

INFOID:000000000947132

TERMINAL LAYOUT

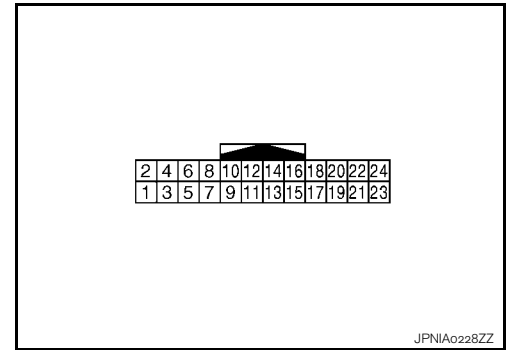






PHYSICAL VALUES

Terminal (Wire color)		Description		Condition		Reference value (Approx.)
+	–	Signal name	Input/ Output			
1 (G)	8 (B)	RGB signal (R: red)	Input	Ignition switch ON	Start "Confirmation / Adjust- ment Mode", and then dis- play color bar by selecting "Color Spectrum Bar" on DISPLAY DIAGNO- SIS screen.	JPNIA0221ZZ
2 (G)	Ground	RGB area (YS) signal	Input	Ignition switch ON	At RGB image displayed	5 V
					At rear view camera image displayed	PKIB4948J
3 (R)	8 (B)	RGB signal (G: green)	Input	Ignition switch ON	Start "Confirmation / Adjust- ment Mode", and then dis- play color bar by selecting "Color Spectrum Bar" on DISPLAY DIAGNO- SIS screen.	JPNIA0222ZZ
4 (R)	Ground	Horizontal synchronizing (HP) signal	Output	Ignition switch ON	—	SKIB0825E

DISPLAY UNIT

< ECU DIAGNOSIS >

[AUDIO WITH NAVIGATION]

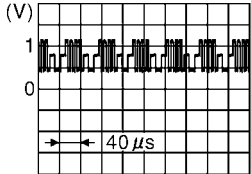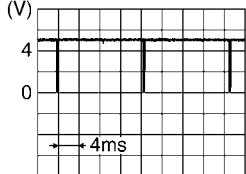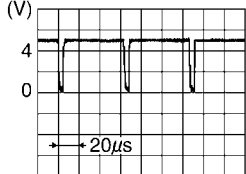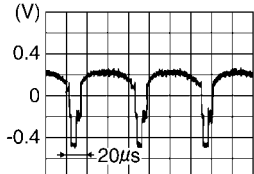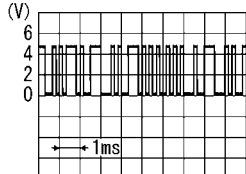Terminal (Wire color)		Description		Condition		Reference value (Approx.)
+	—	Signal name	Input/ Output			
5 (W)	8 (B)	RGB signal (B: blue)	Input	Ignition switch ON	Start "Confirmation / Adjust- ment Mode", and then dis- play color bar by selecting "Color Spectrum Bar" on DISPLAY DIAGNO- SIS screen.	 JPNIAo223ZZ
6 (W)	Ground	Vertical synchronizing (VP) signal	Output	Ignition switch ON	—	 SKIBo823E
7 (B)	Ground	RGB synchronizing signal	Input	Ignition switch ON	—	 SKIBo825E
8 (B)	Ground	RGB ground	—	Ignition switch ON	—	0 V
10	Ground	Shield	—	Ignition switch ON	—	0 V
11 (R)	Ground	Camera image signal	Input	Ignition switch ON	At rear view camera image displayed	 SKIBo827E
12	—	Shield	—	—	—	—
17 (O)	Ground	Communication signal (DISP→CONT)	Output	Ignition switch ON	When adjusting display- brightness.	 PKIB5039J
18	—	Shield	—	—	—	—


A
B
C
D
E
F
G
H
I
J
K
L
M
AV
O
P

cardiagn.com

DISPLAY UNIT


< ECU DIAGNOSIS >

[AUDIO WITH NAVIGATION]

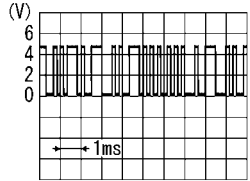Terminal (Wire color)		Description		Condition		Reference value (Approx.)
+	—	Signal name	Input/ Output			
19 (W)	Ground	Communication signal (CONT→DISP)	Input	Ignition switch ON	When adjusting display- brightness.	
20 (R)	Ground	ACC power supply	Input	Ignition switch ACC	—	Battery voltage
21 (LG)	Ground	Battery power supply	Input	Ignition switch OFF	—	Battery voltage
23 (B)	Ground	GND	—	Ignition switch ON	—	0 V

Wiring Diagram - AUDIO WITH NAVIGATION SYSTEM -


INFOID:0000000000955708

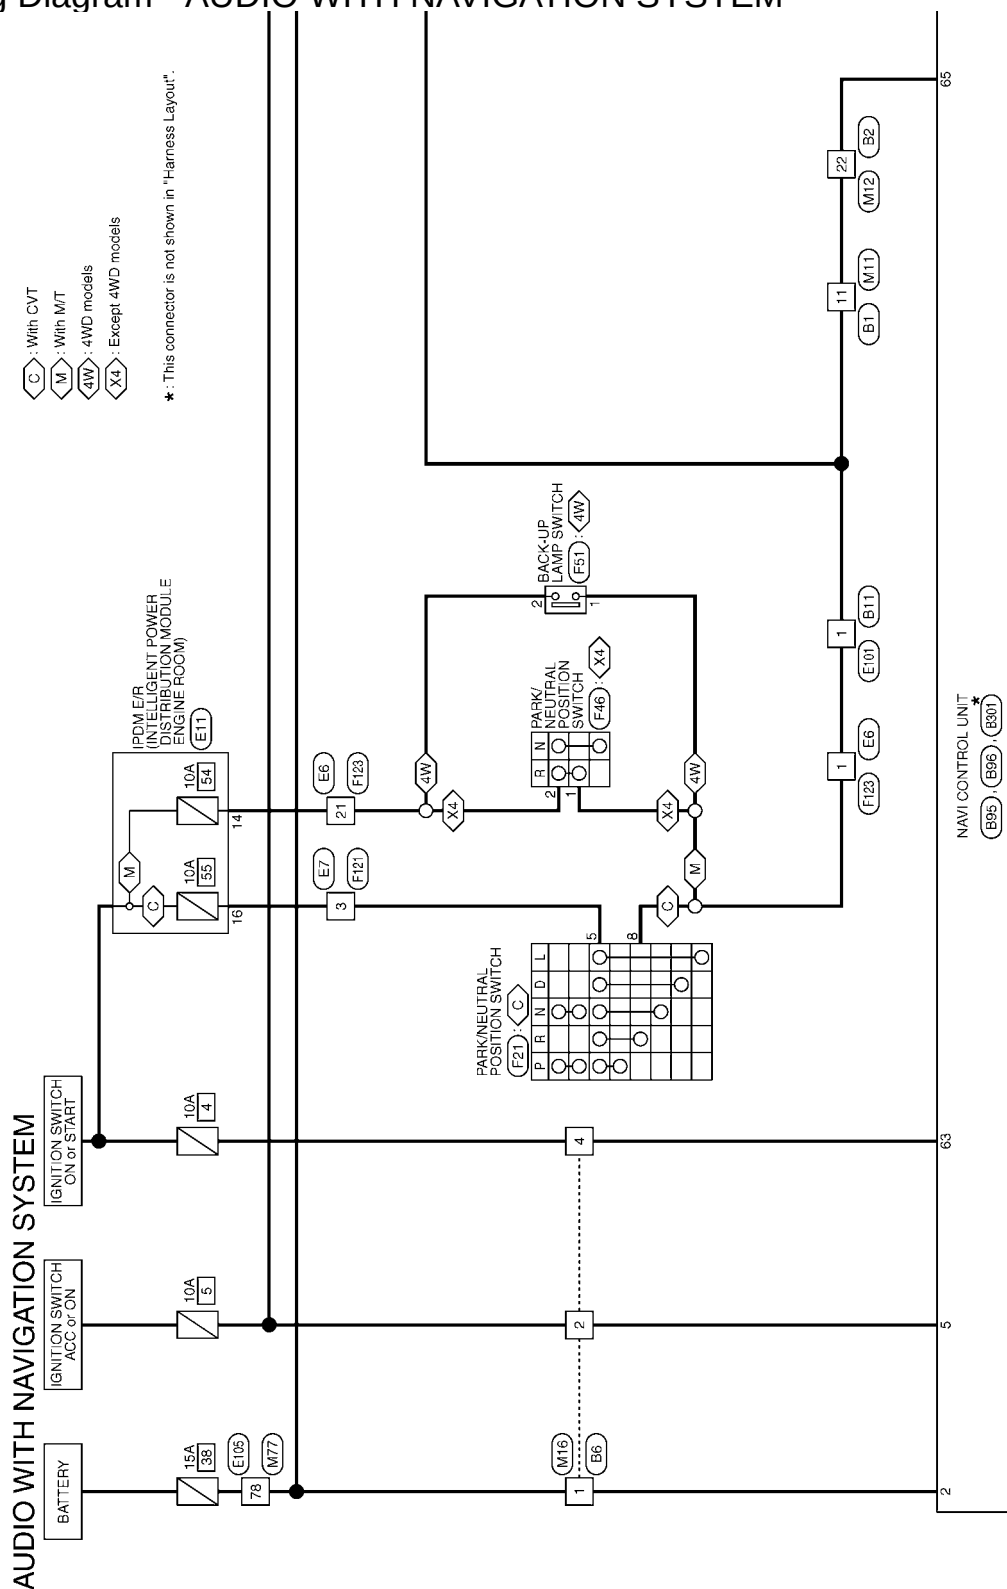

2006/12/08

JCNWA0241GB

★: This connector is not shown in "Harness Layout".

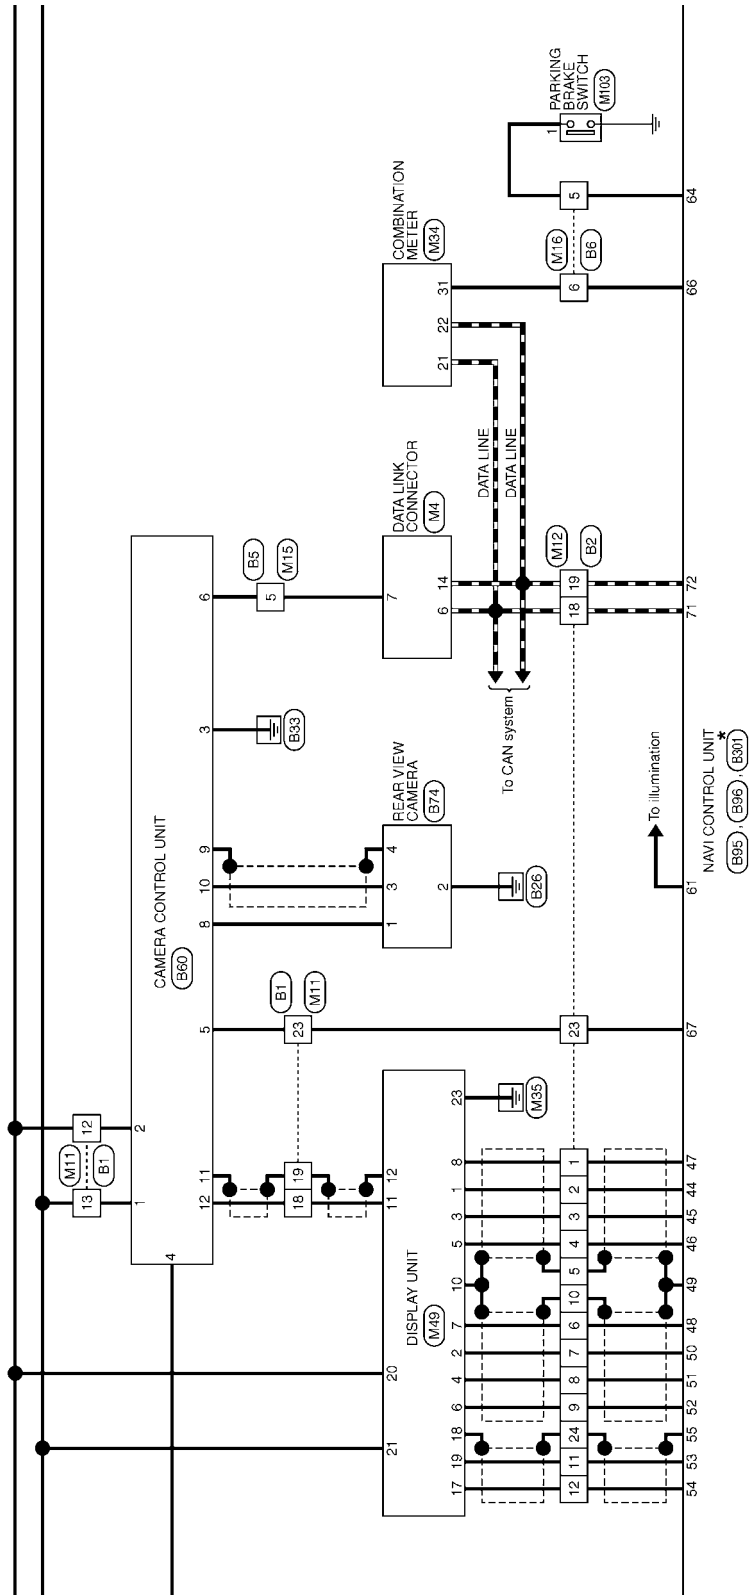

JCNWA0242GB


DISPLAY UNIT

< ECU DIAGNOSIS >

[AUDIO WITH NAVIGATION]

L : LHD models
R : RHD models


* : This connector is not shown in "Harness Layout".

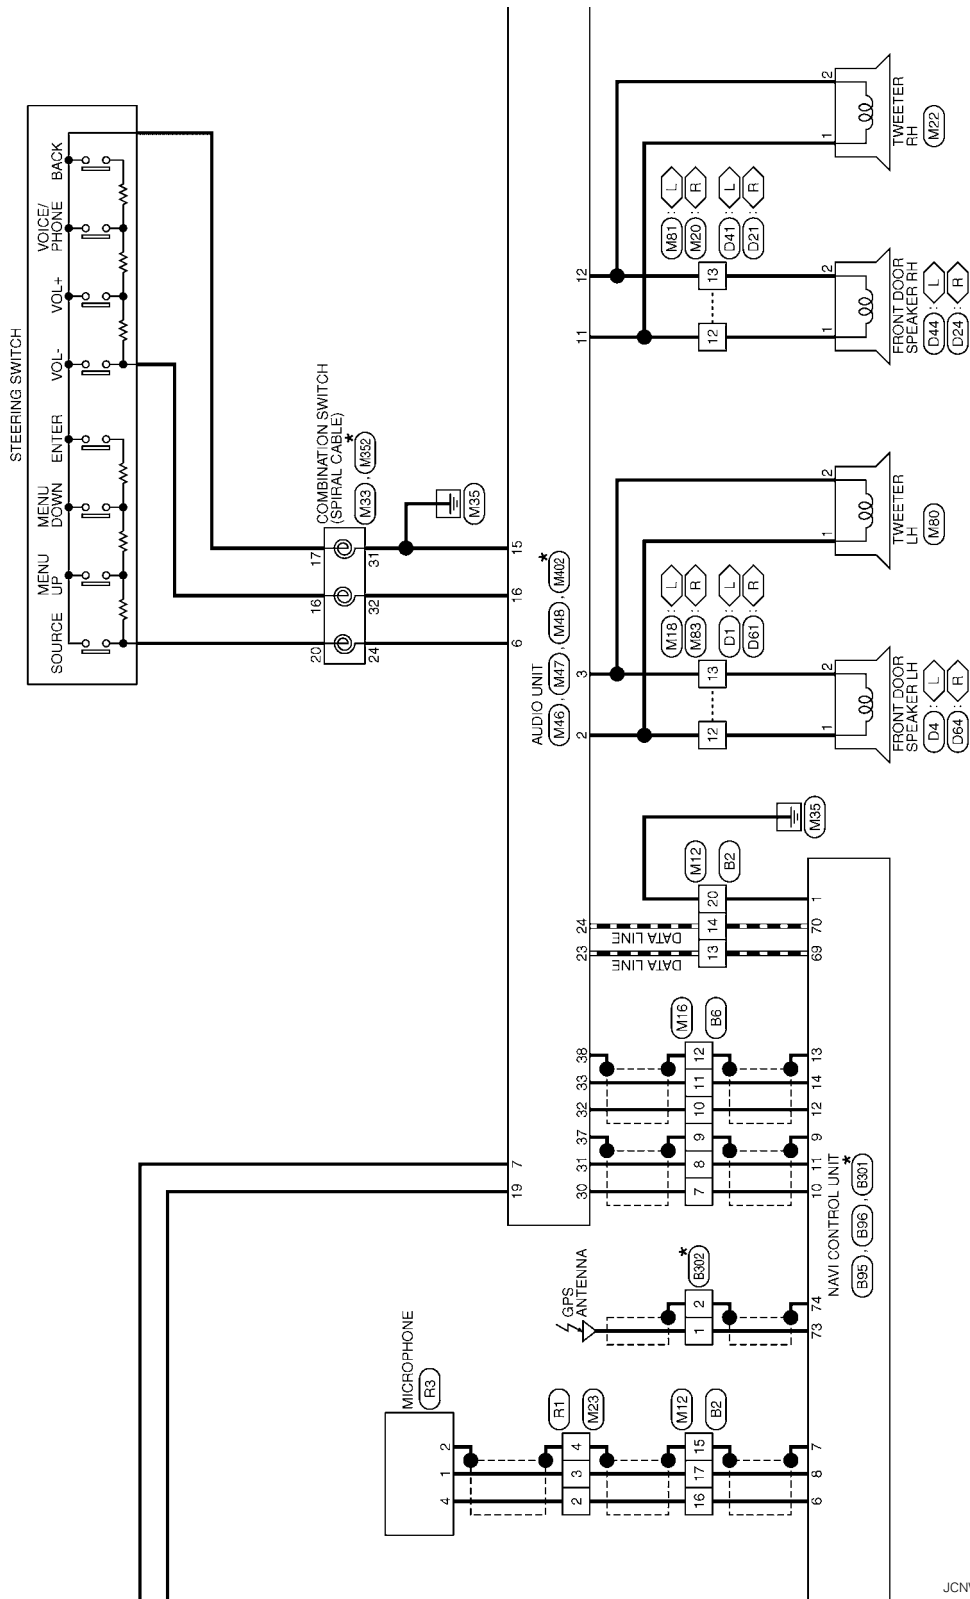

JCNWA0243GB

◁ L ▷ : LHD models
◁ R ▷ : RHD models

★ : This connector is not shown in "Harness Layout".

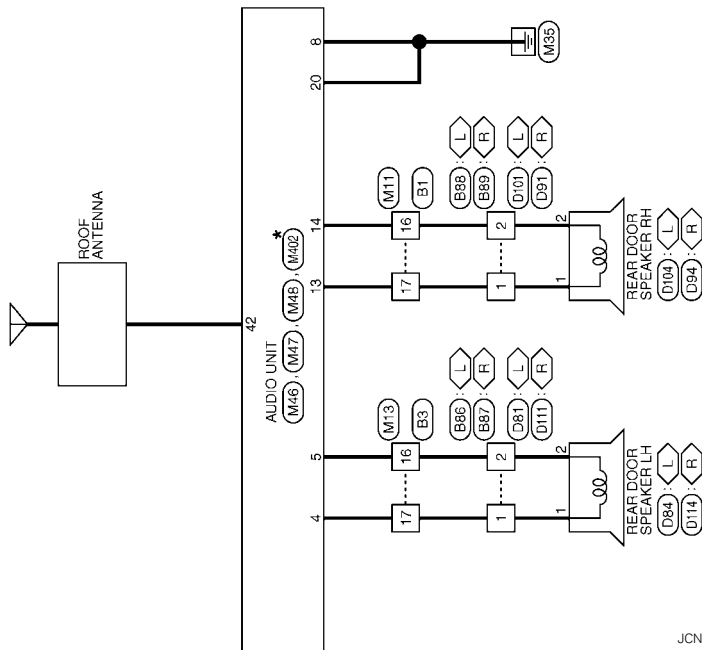

JCNWA0244GB

AUDIO WITH NAVIGATION SYSTEM

Connector No.	B1
Connector Name	WIRE TO WIRE
Connector Type	TH24MW



1	2	3	4	5	6	7	8	9	10	11	12
13	14	15	16	17	18	19	20	21	22	23	24

Terminal No.	Color of Wire	Signal Name [Specification]
11	Y/G	-
12	R	-
13	LG	-
16	V	-
17	O	-
18	R	-
19	SHIELD	-
23	Y	-

Connector No.	B5
Connector Name	WIRE TO WIRE
Connector Type	INS08MW-GS



1	2	3
4	5	6
7	8	

Terminal No.	Color of Wire	Signal Name [Specification]
5	O	-

Connector No.	B2
Connector Name	WIRE TO WIRE
Connector Type	TH24MW



1	2	3	4	5	6	7	8	9	10	11	12
13	14	15	16	17	18	19	20	21	22	23	24

Terminal No.	Color of Wire	Signal Name [Specification]
1	B	-
2	G	-
3	R	-
4	W	-
5	SHIELD	-
6	B	-
7	G	-
8	R	-
9	W	-
10	SHIELD	-
11	W	-

Connector No.	B6
Connector Name	WIRE TO WIRE
Connector Type	TH12MW



1	2	3	4	5	6
7	8	9	10	11	12

Terminal No.	Color of Wire	Signal Name [Specification]
1	LG	-
2	R	-
4	W	-
5	V	-
6	Y	-
7	W	-
8	O	-
9	SHIELD	-
10	O	-
11	W	-
12	SHIELD	-

12	O	-
13	L	-
14	P	-
15	SHIELD	-
16	B	-
17	W	-
18	L	-
19	P	-
20	B	-
22	Y/G	-
23	Y	-
24	SHIELD	-

Terminal No.	Color of Wire	Signal Name [Specification]
16	Y	-
17	LG	-

Connector No.	B11
Connector Name	WIRE TO WIRE
Connector Type	TR10MW-N6S



1	2	3	4	5	6	7	8	9	10
11	12	13	14	15	16	17	18		

Terminal No.	Color of Wire	Signal Name [Specification]
1	Y/G	-

Connector No.	B3
Connector Name	WIRE TO WIRE
Connector Type	TH24MW



1	2	3	4	5	6	7	8	9	10	11	12
13	14	15	16	17	18	19	20	21	22	23	24

Terminal No.	Color of Wire	Signal Name [Specification]
16	Y	-
17	LG	-

Connector No.	B60
Connector Name	CAMERA CONTROL UNIT
Connector Type	TH16FW



2	4	6	8	10	12	14	16
1	3	5	7	9	11	13	15

Terminal No.	Color of Wire	Signal Name [Specification]
1	LG	BATTERY
2	R	ACC
3	B	IGN
4	Y/G	REVERSE SIGNAL
5	Y	CONNECTION RECOGNITION
6	O	DOL
8	V	CAMERA ON SIGNAL
9	SHIELD	SHIELD
10	W	CAMERA IMAGE SIGNAL
11	SHIELD	SHIELD
12	R	CAMERA IMAGE SIGNAL

AUDIO WITH NAVIGATION SYSTEM

Connector No.	IM402
Connector Name	AUDIO UNIT
Connector Type	G13 SH-2.5IS-HU



Terminal No.	Color of Wire	Signal Name [Specification]
42	-	ANTENNA

Connector No.	R1
Connector Name	WIRE TO WIRE
Connector Type	TK10MF-NS3



Terminal No.	Color of Wire	Signal Name [Specification]
2	B	-
3	W	-
4	SHIELD	-

Connector No.	R3
Connector Name	MICROPHONE
Connector Type	TK04PW



Terminal No.	Color of Wire	Signal Name [Specification]
1	W	MICROPHONE SIGNAL
2	SHIELD	MICROPHONE GND
4	B	MICROPHONE VCC

AUDIO WITH NAVIGATION SYSTEM

Connector No.	B74
Connector Name	REAR VIEW CAMERA
Connector Type	TH04MW



Terminal No.	Color of Wire	Signal Name [Specification]
1	V	CAMERA ON SIGNAL
2	B	GND
3	W	CAMERA IMAGE SIGNAL
4	SHIELD	SHIELD

Connector No.	B86
Connector Name	WIRE TO WIRE
Connector Type	NS08MW-CS



Terminal No.	Color of Wire	Signal Name [Specification]
1	LG	-
2	Y	-

Connector No.	B87
Connector Name	WIRE TO WIRE
Connector Type	NS08MW-CS




Terminal No.	Color of Wire	Signal Name [Specification]
1	LG	-
2	Y	-

Connector No.	B88
Connector Name	WIRE TO WIRE
Connector Type	NS08MW-CS




Terminal No.	Color of Wire	Signal Name [Specification]
1	O	-
2	V	-

Connector No.	B89
Connector Name	WIRE TO WIRE
Connector Type	NS08MW-CS

 

Connector No.	B85
Connector Name	NAVI CONTROL UNIT
Connector Type	TH40FW

 

14	W	VOICE GUIDANCE SIGNAL (-)
----	---	---------------------------

Terminal No.	Color of Wire	Signal Name [Specification]
1	O	-
2	V	-

Terminal No.	Color of Wire	Signal Name [Specification]
1	B	GND
2	LG	BATTERY
3	R	ACC
4	B	MICROPHONE VCC
5	R	MICROPHONE GND
6	W	MICROPHONE SIGNAL
7	SHIELD	SHIELD
8	W	TEL VOICE SIGNAL (+)
9	SHIELD	SHIELD
10	W	TEL VOICE SIGNAL (-)
11	O	VOICE GUIDANCE SIGNAL (+)
12	O	VOICE GUIDANCE SIGNAL (-)
13	SHIELD	SHIELD

AUDIO WITH NAVIGATION SYSTEM

Connector No.	B96
Connector Name	NAVI CONTROL UNIT
Connector Type	TK32FW



12	14	16	18	20	22	24	26	28	30	32	34	36	38	40	42	44	46	48	50	52	54	56	58	60	62	64	66	68	70	72
----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----

Terminal No.	Color of Wire	Signal Name [Specification]
44	G	RGB (RED) SIGNAL
45	R	RGB (GREEN) SIGNAL
46	W	RGB (BLUE) SIGNAL
47	B	RGB GND
48	B	RGB SYNC
49	SHIELD	SHIELD
50	G	RGB AREA (Y/S) SIGNAL
51	R	HP
52	W	VP
53	W	COMM (CONT->DISP)
54	O	COMM (DISP->CONT)

Connector No.	D1
Connector Name	WIRE TO WIRE
Connector Type	TK16FW



7	6	5	4	3	2	1
16	15	14	13	12	11	10
9	8					

Terminal No.	Color of Wire	Signal Name [Specification]
12	L	-
13	G	-

55	SHIELD	SHIELD
61	R/L	ILLUMINATION
63	W	IGNITION
64	V	PARKING BRAKE
65	Y/G	REVERSE SIGNAL
66	Y	VEHICLE SPEED (8-PULSE)
67	Y	CONNECTION RECOGNITION
69	L	AV COMM (H)
70	P	AV COMM (L)
71	L	CON-H
72	P	CON-L

Terminal No.	Color of Wire	Signal Name [Specification]
73	-	GPS ANTENNA
74	SHIELD	SHIELD

Connector No.	B301
Connector Name	NAVI CONTROL UNIT
Connector Type	GT35-PP-HU



73	74
----	----

Terminal No.	Color of Wire	Signal Name [Specification]
1	-	-
2	SHIELD	-

Connector No.	B302
Connector Name	GPS ANTENNA
Connector Type	GT35-PP-HU



1	2
---	---

Connector No.	D21
Connector Name	WIRE TO WIRE
Connector Type	TK16FW



7	6	5	4	3	2	1
16	15	14	13	12	11	10
9	8					

Terminal No.	Color of Wire	Signal Name [Specification]
12	BR	-
13	P	-

Connector No.	D24
Connector Name	FRONT DOOR SPEAKER RH
Connector Type	NS02FW-CS



2	1
---	---

Terminal No.	Color of Wire	Signal Name [Specification]
1	BR	-
2	P	-

AUDIO WITH NAVIGATION SYSTEM

Connector No.	D41
Connector Name	WIRE TO WIRE
Connector Type	TK16FW



7	6	5	4	3	2	1
16	15	14	13	12	11	10
9	8					

Terminal No.	Color of Wire	Signal Name [Specification]
12	BR	-
13	P	-

Connector No.	D44
Connector Name	FRONT DOOR SPEAKER RH
Connector Type	NS02FW-CS



2	1
---	---

Terminal No.	Color of Wire	Signal Name [Specification]
1	BR	-
2	P	-

Connector No.	D81
Connector Name	WIRE TO WIRE
Connector Type	TK16FW



7	6	5	4	3	2	1
16	15	14	13	12	11	10
9	8					

Terminal No.	Color of Wire	Signal Name [Specification]
12	L	-
13	G	-

Connector No.	D84
Connector Name	FRONT DOOR SPEAKER LH
Connector Type	NS02FW-CS



2	1
---	---

Terminal No.	Color of Wire	Signal Name [Specification]
1	L	-
2	G	-

Connector No.	D81
Connector Name	WIRE TO WIRE
Connector Type	NS08FW-CS



3	2	1
8	7	6
5	4	

Terminal No.	Color of Wire	Signal Name [Specification]
1	LG	-
2	Y	-

Connector No.	D84
Connector Name	REAR DOOR SPEAKER LH
Connector Type	NS02FW-CS



2	1
---	---

Terminal No.	Color of Wire	Signal Name [Specification]
1	LG	-
2	Y	-

Connector No.	D81
Connector Name	WIRE TO WIRE
Connector Type	NS08FW-CS



3	2	1
8	7	6
5	4	

Terminal No.	Color of Wire	Signal Name [Specification]
1	O	-
2	V	-

Connector No.	D84
Connector Name	REAR DOOR SPEAKER RH
Connector Type	NS02FW-CS



2	1
---	---

Terminal No.	Color of Wire	Signal Name [Specification]
1	O	-
2	V	-

AUDIO WITH NAVIGATION SYSTEM

Connector No.	D101
Connector Name	WIRE TO WIRE
Connector Type	NS308FW-CS



Terminal No.	Color of Wire	Signal Name [Specification]
1	O	-
2	V	-

Connector No.	D104
Connector Name	REAR DOOR SPEAKER RH
Connector Type	NS327FW-CS



Terminal No.	Color of Wire	Signal Name [Specification]
1	O	-
2	V	-

Connector No.	D111
Connector Name	WIRE TO WIRE
Connector Type	NS308FW-CS




Terminal No.	Color of Wire	Signal Name [Specification]
1	LG	-
2	Y	-

Connector No.	D114
Connector Name	REAR DOOR SPEAKER LH
Connector Type	NS302FW-CS




Terminal No.	Color of Wire	Signal Name [Specification]
1	LG	-
2	Y	-

Connector No.	E6
Connector Name	WIRE TO WIRE
Connector Type	TK24MW-1V

 


Terminal No.	Color of Wire	Signal Name [Specification]
1	Y/G	-
21	R/B	-

Connector No.	E7
Connector Name	WIRE TO WIRE
Connector Type	NS16MW-CS

 


Terminal No.	Color of Wire	Signal Name [Specification]
3	Y/R	-

Connector No.	E11
Connector Name	IPSM E/R INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM)
Connector Type	NS12FBR-CS

 

Terminal No.	Color of Wire	Signal Name [Specification]
14	R/E	-
16	Y/R	-


Connector No.	E101
Connector Name	WIRE TO WIRE
Connector Type	TK10FW-NSB

 

Terminal No.	Color of Wire	Signal Name [Specification]
1	Y/G	-

AUDIO WITH NAVIGATION SYSTEM

Connector No.	E105
Connector Name	WIRE TO WIRE
Connector Type	TH60MW-NS16-TM4

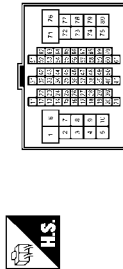

Terminal No.	Color of Wire	Signal Name [Specification]
78	LG	-

Connector No.	F21
Connector Name	PARK/NEUTRAL POSITION SWITCH
Connector Type	RK08FG



Terminal No.	Color of Wire	Signal Name [Specification]
3	Y/R	-
8	Y/G	-

Connector No.	F46
Connector Name	PARK/NEUTRAL POSITION SWITCH
Connector Type	FEA03FG




Terminal No.	Color of Wire	Signal Name [Specification]
1	Y/G	-
2	R/B	-

Connector No.	F51
Connector Name	BACK-UP LAMP SWITCH
Connector Type	RK02FE




Terminal No.	Color of Wire	Signal Name [Specification]
1	Y/G	-
2	R/B	-

Connector No.	F121
Connector Name	WIRE TO WIRE
Connector Type	NS10FW-GS

 


Terminal No.	Color of Wire	Signal Name [Specification]
3	Y/R	-

Connector No.	F123
Connector Name	WIRE TO WIRE
Connector Type	TK24FW-IV

 


Terminal No.	Color of Wire	Signal Name [Specification]
1	Y/G	-
21	R/B	-

Connector No.	M4
Connector Name	DATA LINK CONNECTOR
Connector Type	BD16FW

 

Terminal No.	Color of Wire	Signal Name [Specification]
6	L	-
7	O	-
14	P	-

Connector No.	M11
Connector Name	WIRE TO WIRE
Connector Type	TH24FW

 

Terminal No.	Color of Wire	Signal Name [Specification]
11	Y	-
12	R	-
13	LG	-
16	V	-
17	O	-
18	W	-
19	SHIELD	-
23	Y	-

JCNWA0251GB

AUDIO WITH NAVIGATION SYSTEM

Connector No.	IM12
Connector Name	WIRE TO WIRE
Connector Type	TH24FW

12	11	10	9	8	7	6	5	4	3	2	1
24	23	22	21	20	19	18	17	16	15	14	13

Terminal No.	Color of Wire	Signal Name [Specification]
1	B	-
2	G	-
3	R	-
4	W	-
5	SHIELD	-
6	B	-
7	G	-
8	R	-
9	W	-
10	SHIELD	-
11	W	-

Connector No.	IM16
Connector Name	WIRE TO WIRE
Connector Type	TH12PW

6	5	4	3	2	1
12	11	10	9	8	7

Terminal No.	Color of Wire	Signal Name [Specification]
1	LG	-
2	R	-
4	O	-
5	V	-
6	Y	-
7	W	-
8	O	-
9	SHIELD	-
10	O	-
11	W	-
12	SHIELD	-

12	O	-
13	L	-
14	P	-
15	SHIELD	-
16	W	-
17	B	-
18	L	-
19	P	-
20	B	-
22	Y	-
23	Y	-
24	SHIELD	-

Connector No.	IM13
Connector Name	WIRE TO WIRE
Connector Type	TH24FW

12	11	10	9	8	7	6	5	4	3	2	1
24	23	22	21	20	19	18	17	16	15	14	13

Terminal No.	Color of Wire	Signal Name [Specification]
16	Y	-
17	LG	-

Connector No.	M20
Connector Name	WIRE TO WIRE
Connector Type	TK18MW

1	2	3	4	5	6	7
8	9	10	11	12	13	14
15	16					

Terminal No.	Color of Wire	Signal Name [Specification]
12	BR	-
13	P	-

Connector No.	IM15
Connector Name	WIRE TO WIRE
Connector Type	NS08FW-CS

3	2	1
8	7	6
5	4	

Terminal No.	Color of Wire	Signal Name [Specification]
5	O	-

Connector No.	M22
Connector Name	TWEETER RH
Connector Type	FC121PC020S0017

1	2
---	---

Terminal No.	Color of Wire	Signal Name [Specification]
1	BR	-
2	P	-

AUDIO WITH NAVIGATION SYSTEM

Connector No.	M23
Connector Name	WIRE TO WIRE
Connector Type	TK0FW-MS8



10	9	8	7	6	5	4	3	2	1
18	17	16	15	14	13	12	11		

Terminal No.	Color of Wire	Signal Name [Specification]
2	W	-
3	B	-
4	SHIELD	-

Connector No.	M33
Connector Name	COMBINATION SWITCH (SPIRAL CABLE)
Connector Type	TK08FGY-IV



24	25	26	27
31	32	33	34

Terminal No.	Color of Wire	Signal Name [Specification]
24	R	-
31	B	-
32	Y	-

Connector No.	M34
Connector Name	COMBINATION METER
Connector Type	SAB40FW



1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40

Terminal No.	Color of Wire	Signal Name [Specification]
21	L	CAN-H
22	P	CAN-L
31	Y	VEHICLE SPEED (3-PULSE)

Connector No.	M46
Connector Name	AUDIO UNIT
Connector Type	TH18FW-GS2



--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--

Terminal No.	Color of Wire	Signal Name [Specification]
2	L	SOUND SIGNAL FRONT LH (+)
3	G	SOUND SIGNAL FRONT LH (-)
4	LG	SOUND SIGNAL REAR LH (+)
5	Y	SOUND SIGNAL REAR RH (+)
6	R	STRG SW A
7	R	ACC
8	B	GND
11	BR	SOUND SIGNAL FRONT RH (+)
12	P	SOUND SIGNAL FRONT RH (-)
13	O	SOUND SIGNAL REAR RH (+)
14	V	SOUND SIGNAL REAR RH (-)

15	B	STRG SW GND
16	Y	STRG SW B
19	LG	BATTERY
20	B	GND

Connector No.	M47
Connector Name	AUDIO UNIT
Connector Type	TH188FW



21	22	23	24
25	26	27	28

Terminal No.	Color of Wire	Signal Name [Specification]
23	L	AV COMM (H)
24	P	AV COMM (L)

Connector No.	M48
Connector Name	AUDIO UNIT
Connector Type	TH12FW



29	30	31	32	33	34
35	36	37	38	39	40

Terminal No.	Color of Wire	Signal Name [Specification]
30	W	TEL VOICE SIGNAL (+)
31	O	TEL VOICE SIGNAL (-) (JMB navigation system)
32	O	VOICE GUIDANCE (+)
33	W	VOICE GUIDANCE (-)
37	SHIELD	SHIELD (With navigation system)
38	SHIELD	SHIELD

AUDIO WITH NAVIGATION SYSTEM

Connector No.	M49
Connector Name	DISPLAY UNIT
Connector Type	TH24FW

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
H.S.																							

Terminal No.	Color of Wire	Signal Name [Specification]
1	G	RGB (RED) SIGNAL
2	G	RGB AREA (YS) SIGNAL
3	R	RGB (GREEN) SIGNAL
4	R	HP
5	W	RGB (BLUE) SIGNAL
6	W	YP
7	B	RGB SYNC
8	B	RGB GND
10	SHIELD	SHIELD
11	R	CAMERA IMAGE SIGNAL
12	SHIELD	SHIELD

Connector No.	M81
Connector Name	WIRE TO WIRE
Connector Type	TK16MW

1	2	3	4	5	6	7		
8	9	10	11	12	13	14	15	16

 H.S.

Terminal No.	Color of Wire	Signal Name [Specification]
12	BR	-
13	P	-

17	O	COMM (DISP->CONT)
18	SHIELD	SHIELD
19	W	COMM (CONT->DISP)
20	R	ACC
21	LG	BATTERY
23	B	GND

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
H.S.																							

Terminal No.	Color of Wire	Signal Name [Specification]
78	LG	-

Connector No.	M77
Connector Name	WIRE TO WIRE
Connector Type	TH60FW-NS1E-TM4

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
H.S.																							

Terminal No.	Color of Wire	Signal Name [Specification]
1	L	-
2	G	-

Connector No.	M80
Connector Name	TWEETER LH
Connector Type	FC1 211PC023S9017

1	2
H.S.	

Connector No.	M103
Connector Name	PARKING BRAKE SWITCH
Connector Type	P01FB-A

	
---	---

Terminal No.	Color of Wire	Signal Name [Specification]
1	V	-

Connector No.	M352
Connector Name	COMBINATION SWITCH (SPIRAL CABLE)
Connector Type	TK03MGY-X

14	15	16	17	18	19	20	21
H.S.							

Terminal No.	Color of Wire	Signal Name [Specification]
16	-	-
17	-	-
20	-	-

CAMERA CONTROL UNIT

< ECU DIAGNOSIS >


[AUDIO WITH NAVIGATION]

CAMERA CONTROL UNIT

Reference Value

INFOID:000000000947136

TERMINAL LAYOUT

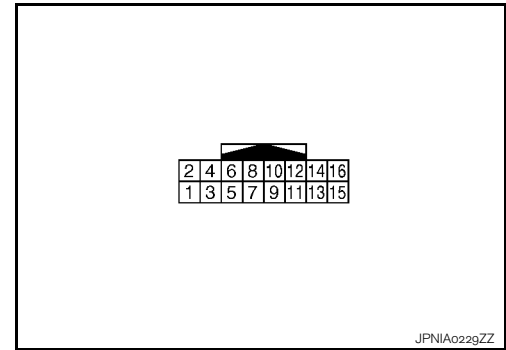


PHYSICAL VALUES

Terminal (Wire color)		Description		Condition		Reference value (Approx.)
+	—	Signal name	Input/ Output			
1 (LG)	Ground	Battery power supply	Input	Ignition switch OFF	—	Battery voltage
2 (R)	Ground	ACC power supply	Input	Ignition switch ACC	—	Battery voltage
3 (B)	Ground	GND	—	Ignition switch ON	—	0 V
4 (Y/G)	Ground	Reverse signal	Input	Ignition switch ON	R position	12 V
					Other than R position	0 V
5 (Y)	Ground	Camera-connection recog- nition signal	—	Ignition switch ON	Connected to camera con- trol unit connector	0 V
					Not connected to camera control unit connector	5 V
6 (O)	—	Data transmit/receive sig- nal	—	—	—	—
8 (V)	Ground	Camera ON signal	Output	Ignition switch ON	R position	6 V
					Other than R position	0 V
9	—	Shield	—	—	—	—
10 (W)	Ground	Camera image signal	Input	Ignition switch ON	At rear view camera image displayed	SKIB0827E

CAMERA CONTROL UNIT


< ECU DIAGNOSIS >

[AUDIO WITH NAVIGATION]

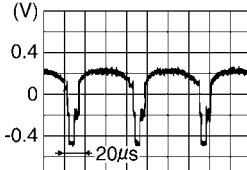Terminal (Wire color)		Description		Condition		Reference value (Approx.)
+	—	Signal name	Input/ Output			
11	—	Shield	—	—	—	—
12 (R)	Ground	Camera image signal	Output	Ignition switch ON	At rear view camera image displayed	 SKIB0827E



★: This connector is not shown in "Harness Layout".

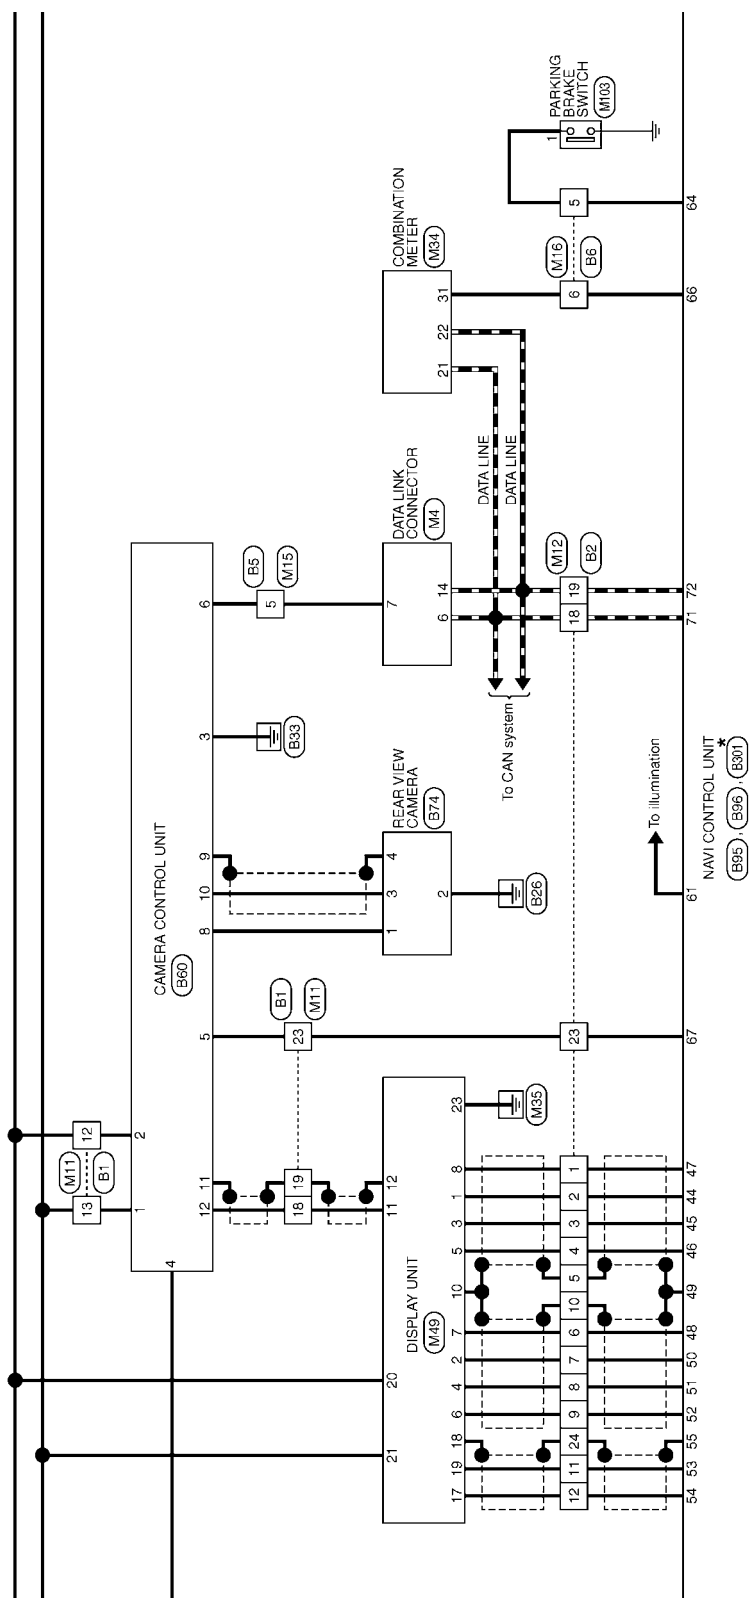

JCNWA0242GB


CAMERA CONTROL UNIT

< ECU DIAGNOSIS >

[AUDIO WITH NAVIGATION]

◁ L ▷ : LHD models
 ▷ R ◁ : RHD models


* : This connector is not shown in "Harness Layout".

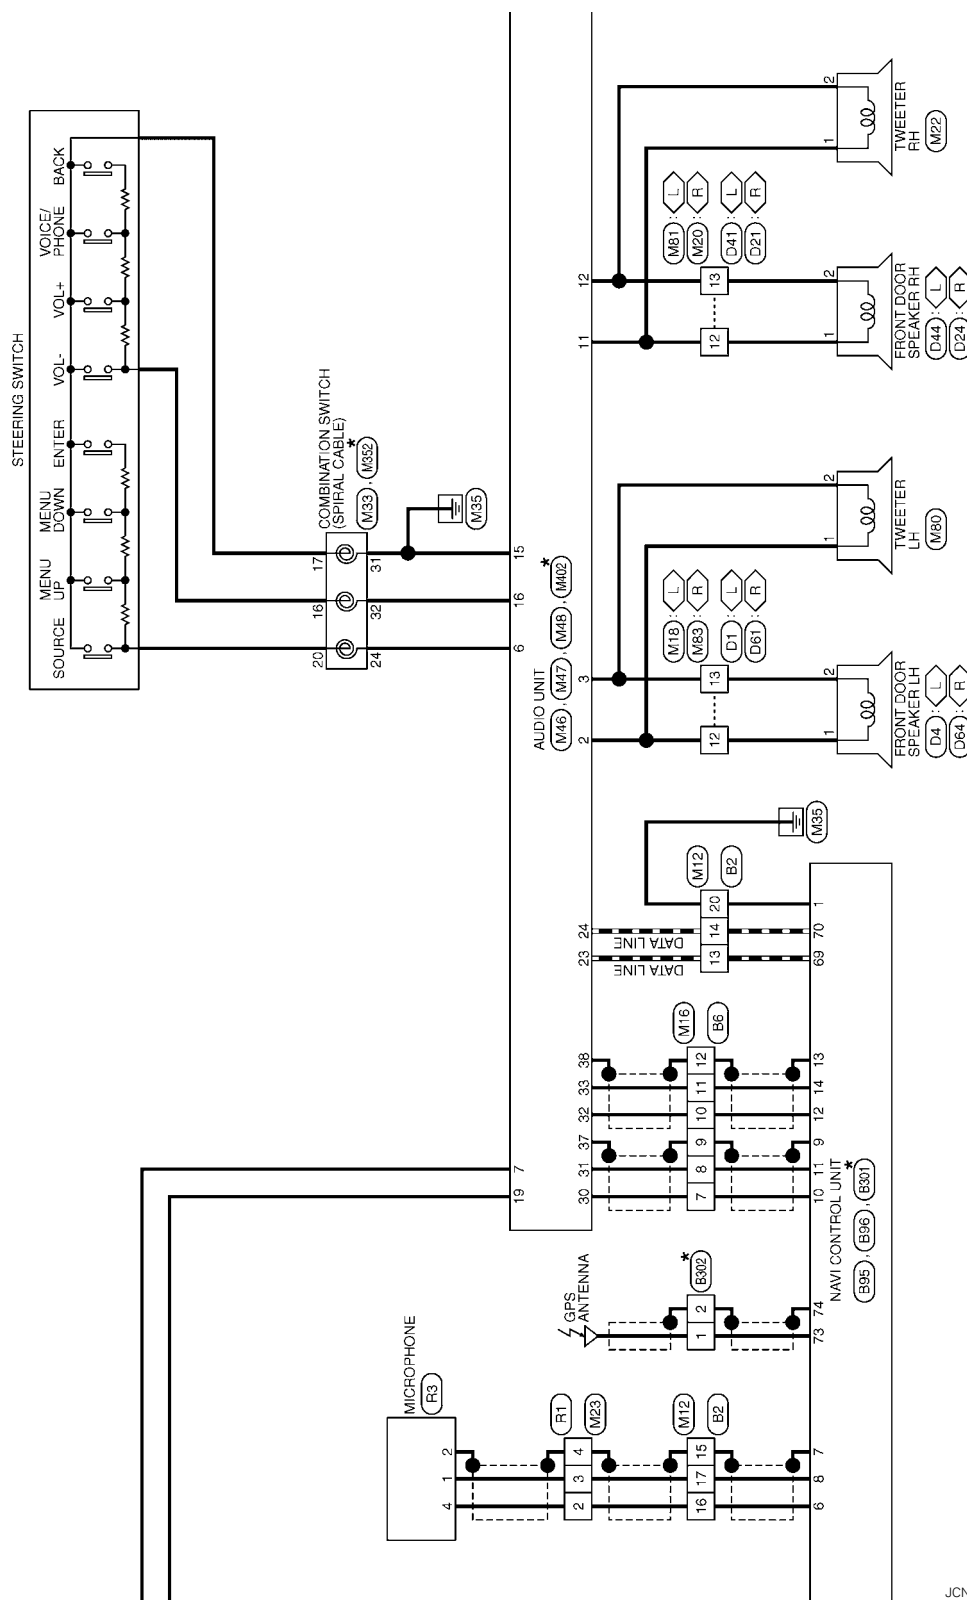

JCNWA0243GB

◁ L ▷ : LHD models
◁ R ▷ : RHD models

★ : This connector is not shown in "Harness Layout".

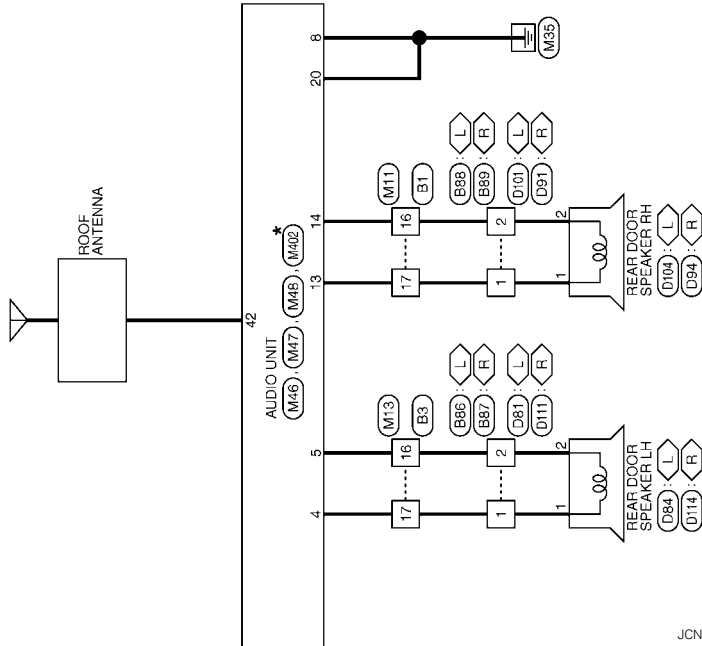

JCNWA0244GB

AUDIO WITH NAVIGATION SYSTEM

Connector No.	B1
Connector Name	WIRE TO WIRE
Connector Type	TH24MW



1	2	3	4	5	6	7	8	9	10	11	12
13	14	15	16	17	18	19	20	21	22	23	24

Terminal No.	Color of Wire	Signal Name [Specification]
11	Y/G	-
12	R	-
13	LG	-
16	V	-
17	O	-
18	R	-
19	SHIELD	-
23	Y	-

Connector No.	B2
Connector Name	WIRE TO WIRE
Connector Type	TH24MW



1	2	3	4	5	6	7	8	9	10	11	12
13	14	15	16	17	18	19	20	21	22	23	24

Terminal No.	Color of Wire	Signal Name [Specification]
1	B	-
2	G	-
3	R	-
4	W	-
5	SHIELD	-
6	B	-
7	G	-
8	R	-
9	W	-
10	SHIELD	-
11	W	-

Connector No.	B5
Connector Name	WIRE TO WIRE
Connector Type	INS08MW-GS



1	2	3
4	5	6
7	8	

Terminal No.	Color of Wire	Signal Name [Specification]
5	O	-

Connector No.	B11
Connector Name	WIRE TO WIRE
Connector Type	TR10MW-N6S



1	2	3	4	5
6	7	8	9	10
11	12	13	14	15
16	17	18		

Terminal No.	Color of Wire	Signal Name [Specification]
1	Y/G	-

Connector No.	B3
Connector Name	WIRE TO WIRE
Connector Type	TH24MW



1	2	3	4	5	6	7	8	9	10	11	12
13	14	15	16	17	18	19	20	21	22	23	24

Terminal No.	Color of Wire	Signal Name [Specification]
16	Y	-
17	LG	-

Connector No.	B60
Connector Name	CAMERA CONTROL UNIT
Connector Type	TH16FW



2	4	6	8	10	12	14	16
1	3	5	7	9	11	13	15

Terminal No.	Color of Wire	Signal Name [Specification]
1	LG	BATTERY
2	R	ACC
3	B	IGN
4	Y/G	REVERSE SIGNAL
5	Y	CONNECTION RECOGNITION
6	O	DOL
8	V	CAMERA ON SIGNAL
9	SHIELD	SHIELD
10	W	CAMERA IMAGE SIGNAL
11	SHIELD	SHIELD
12	R	CAMERA IMAGE SIGNAL


AUDIO WITH NAVIGATION SYSTEM

Connector No.	IM402
Connector Name	AUDIO UNIT
Connector Type	G13 SH-2.5IS-HU



Terminal No.	Color of Wire	Signal Name [Specification]
42	-	ANTENNA

Connector No.	R1
Connector Name	WIRE TO WIRE
Connector Type	TK10MF-NS3

 

Terminal No.	Color of Wire	Signal Name [Specification]
2	B	-
3	W	-
4	SHIELD	-

Connector No.	R3
Connector Name	MICROPHONE
Connector Type	TK04FW



Terminal No.	Color of Wire	Signal Name [Specification]
1	W	MICROPHONE SIGNAL
2	SHIELD	MICROPHONE GND
4	B	MICROPHONE VCC

AUDIO WITH NAVIGATION SYSTEM

Connector No.	B74
Connector Name	REAR VIEW CAMERA
Connector Type	TH04MW



Terminal No.	Color of Wire	Signal Name [Specification]
1	V	CAMERA ON SIGNAL
2	B	GND
3	W	CAMERA IMAGE SIGNAL
4	SHIELD	SHIELD

Connector No.	B86
Connector Name	WIRE TO WIRE
Connector Type	NS08MW-CS



Terminal No.	Color of Wire	Signal Name [Specification]
1	LG	-
2	Y	-

Connector No.	B87
Connector Name	WIRE TO WIRE
Connector Type	NS08MW-CS




Terminal No.	Color of Wire	Signal Name [Specification]
1	LG	-
2	Y	-

Connector No.	B88
Connector Name	WIRE TO WIRE
Connector Type	NS08MW-CS



Terminal No.	Color of Wire	Signal Name [Specification]
1	O	-
2	V	-

Connector No.	B89
Connector Name	WIRE TO WIRE
Connector Type	NS08MW-CS

 

Connector No.	B85
Connector Name	NAVI CONTROL UNIT
Connector Type	TH40FW



Terminal No.	Color of Wire	Signal Name [Specification]
1	O	-
2	V	-

Terminal No.	Color of Wire	Signal Name [Specification]
1	B	GND
2	LG	BATTERY
5	R	ACC
8	B	MICROPHONE VCC
7	SHIELD	MICROPHONE GND
8	W	MICROPHONE SIGNAL
9	SHIELD	SHIELD
10	W	TEL VOICE SIGNAL (+)
11	O	TEL VOICE SIGNAL (-)
12	O	VOICE GUIDANCE SIGNAL (+)
13	SHIELD	SHIELD

14	W	VOICE GUIDANCE SIGNAL (-)
----	---	---------------------------

AUDIO WITH NAVIGATION SYSTEM

Connector No.	B96
Connector Name	NAVI CONTROL UNIT
Connector Type	TK32FW



42	44	46	48	50	52	54	56	58	60	62	64	66	68	70	72
41	43	45	47	49	51	53	55	57	59	61	63	65	67	69	71

Terminal No.	Color of Wire	Signal Name [Specification]
44	G	RGB (RED) SIGNAL
45	R	RGB (GREEN) SIGNAL
46	W	RGB (BLUE) SIGNAL
47	B	RGB GND
48	B	RGB SYNC
49	SHIELD	SHIELD
50	G	RGB AREA (Y/S) SIGNAL
51	R	HP
52	W	VP
53	W	COMM (CONT->DISP)
54	O	COMM (DISP->CONT)

Connector No.	D1
Connector Name	WIRE TO WIRE
Connector Type	TK16FW



7	6	5	4	3	2	1
16	15	14	13	12	11	10
9	8					

Terminal No.	Color of Wire	Signal Name [Specification]
12	L	-
13	G	-

55	SHIELD	SHIELD
61	R/L	ILLUMINATION
63	W	IGNITION
64	V	PARKING BRAKE
65	Y/G	REVERSE SIGNAL
66	Y	VEHICLE SPEED (8-PUL/SE)
67	Y	CONNECTION RECOGNITION
69	L	AV COMM (H)
70	P	AV COMM (L)
71	L	CON-H
72	P	CON-L

Connector No.	B301
Connector Name	NAVI CONTROL UNIT
Connector Type	GT35-PP-HU



73	74
----	----

Terminal No.	Color of Wire	Signal Name [Specification]
73	-	GPS ANTENNA
74	SHIELD	SHIELD

Connector No.	D21
Connector Name	WIRE TO WIRE
Connector Type	TK16FW



7	6	5	4	3	2	1
16	15	14	13	12	11	10
9	8					

Terminal No.	Color of Wire	Signal Name [Specification]
12	BR	-
13	P	-

Connector No.	B302
Connector Name	GPS ANTENNA
Connector Type	GT35-PP-HU



1	2
---	---

Terminal No.	Color of Wire	Signal Name [Specification]
1	-	-
2	SHIELD	-

Connector No.	D24
Connector Name	FRONT DOOR SPEAKER RH
Connector Type	NS02FW-CS



2	1
---	---

Terminal No.	Color of Wire	Signal Name [Specification]
1	BR	-
2	P	-

AUDIO WITH NAVIGATION SYSTEM

Connector No.	D41
Connector Name	WIRE TO WIRE
Connector Type	TK16FW



7	6	5	4	3	2	1
16	15	14	13	12	11	10
9	8					

Terminal No.	Color of Wire	Signal Name [Specification]
12	BR	-
13	P	-

Connector No.	D44
Connector Name	FRONT DOOR SPEAKER RH
Connector Type	NS02FW-CS



2	1
---	---

Terminal No.	Color of Wire	Signal Name [Specification]
1	BR	-
2	P	-

Connector No.	D81
Connector Name	WIRE TO WIRE
Connector Type	TK16FW



7	6	5	4	3	2	1
16	15	14	13	12	11	10
9	8					

Terminal No.	Color of Wire	Signal Name [Specification]
12	L	-
13	G	-

Connector No.	D84
Connector Name	FRONT DOOR SPEAKER LH
Connector Type	NS02FW-CS



2	1
---	---

Terminal No.	Color of Wire	Signal Name [Specification]
1	L	-
2	G	-

Connector No.	D81
Connector Name	WIRE TO WIRE
Connector Type	NS08FW-CS



3	2	1
8	7	6
5	4	

Terminal No.	Color of Wire	Signal Name [Specification]
1	LG	-
2	Y	-

Connector No.	D84
Connector Name	REAR DOOR SPEAKER LH
Connector Type	NS02FW-CS



2	1
---	---

Terminal No.	Color of Wire	Signal Name [Specification]
1	LG	-
2	Y	-

Connector No.	D81
Connector Name	WIRE TO WIRE
Connector Type	NS08FW-CS



3	2	1
8	7	6
5	4	

Terminal No.	Color of Wire	Signal Name [Specification]
1	O	-
2	V	-

Connector No.	D84
Connector Name	REAR DOOR SPEAKER RH
Connector Type	NS02FW-CS



2	1
---	---

Terminal No.	Color of Wire	Signal Name [Specification]
1	O	-
2	V	-

AUDIO WITH NAVIGATION SYSTEM

Connector No.	D101
Connector Name	WIRE TO WIRE
Connector Type	NS30FW-CS



Terminal No.	Color of Wire	Signal Name [Specification]
1	O	-
2	V	-

Connector No.	D104
Connector Name	REAR DOOR SPEAKER RH
Connector Type	NS32FW-CS



Terminal No.	Color of Wire	Signal Name [Specification]
1	O	-
2	V	-

Connector No.	D111
Connector Name	WIRE TO WIRE
Connector Type	NS30FW-CS




Terminal No.	Color of Wire	Signal Name [Specification]
1	LG	-
2	Y	-

Connector No.	D114
Connector Name	REAR DOOR SPEAKER LH
Connector Type	NS32FW-CS




Terminal No.	Color of Wire	Signal Name [Specification]
1	LG	-
2	Y	-

Connector No.	E6
Connector Name	WIRE TO WIRE
Connector Type	TK24MW-1V

 


Terminal No.	Color of Wire	Signal Name [Specification]
1	Y/G	-
21	R/B	-

Connector No.	E7
Connector Name	WIRE TO WIRE
Connector Type	NS16MW-CS

 


Terminal No.	Color of Wire	Signal Name [Specification]
3	Y/R	-

Connector No.	E11
Connector Name	IPSM E/R INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM)
Connector Type	NS12FBR-CS

 

Terminal No.	Color of Wire	Signal Name [Specification]
14	R/E	-
16	Y/R	-

Connector No.	E101
Connector Name	WIRE TO WIRE
Connector Type	TK10FW-NSB

 

Terminal No.	Color of Wire	Signal Name [Specification]
1	Y/G	-

AUDIO WITH NAVIGATION SYSTEM

Connector No.	E105
Connector Name	WIRE TO WIRE
Connector Type	TH60MW-NS16-TM4



Terminal No.	Color of Wire	Signal Name [Specification]
78	LG	-

Connector No.	F21
Connector Name	PARK/NEUTRAL POSITION SWITCH
Connector Type	RK08FG



Terminal No.	Color of Wire	Signal Name [Specification]
3	Y/R	-
8	Y/G	-

Connector No.	F46
Connector Name	PARK/NEUTRAL POSITION SWITCH
Connector Type	FEA03FG



Terminal No.	Color of Wire	Signal Name [Specification]
1	Y/G	-
2	R/B	-

Connector No.	F51
Connector Name	BACK-UP LAMP SWITCH
Connector Type	RK02FE



Terminal No.	Color of Wire	Signal Name [Specification]
1	Y/G	-
2	R/B	-

Connector No.	F121
Connector Name	WIRE TO WIRE
Connector Type	NS10FW-GS




Terminal No.	Color of Wire	Signal Name [Specification]
3	Y/R	-

Connector No.	F123
Connector Name	WIRE TO WIRE
Connector Type	TK24FW-IV



Terminal No.	Color of Wire	Signal Name [Specification]
1	Y/G	-
21	R/B	-

Connector No.	M4
Connector Name	DATA LINK CONNECTOR
Connector Type	BD16FW

 

Terminal No.	Color of Wire	Signal Name [Specification]
6	L	-
7	O	-
14	P	-

Connector No.	M11
Connector Name	WIRE TO WIRE
Connector Type	TH24FW



Terminal No.	Color of Wire	Signal Name [Specification]
11	Y	-
12	R	-
13	LG	-
16	V	-
17	O	-
18	W	-
19	SHIELD	-
23	Y	-

AUDIO WITH NAVIGATION SYSTEM

Connector No.	IM12
Connector Name	WIRE TO WIRE
Connector Type	TH24FW

12	11	10	9	8	7	6	5	4	3	2	1
24	23	22	21	20	19	18	17	16	15	14	13

Terminal No.	Color of Wire	Signal Name [Specification]
1	B	-
2	G	-
3	R	-
4	W	-
5	SHIELD	-
6	B	-
7	G	-
8	R	-
9	W	-
10	SHIELD	-
11	W	-

Connector No.	IM16
Connector Name	WIRE TO WIRE
Connector Type	TH12PW

6	5	4	3	2	1
12	11	10	9	8	7

Terminal No.	Color of Wire	Signal Name [Specification]
1	LG	-
2	R	-
4	O	-
5	V	-
6	Y	-
7	W	-
8	O	-
9	SHIELD	-
10	O	-
11	W	-
12	SHIELD	-

12	O	-
13	L	-
14	P	-
15	SHIELD	-
16	W	-
17	B	-
18	L	-
19	P	-
20	B	-
22	Y	-
23	Y	-
24	SHIELD	-

Terminal No.	Color of Wire	Signal Name [Specification]
16	Y	-
17	LG	-

Connector No.	IM13
Connector Name	WIRE TO WIRE
Connector Type	TH24FW

12	11	10	9	8	7	6	5	4	3	2	1
24	23	22	21	20	19	18	17	16	15	14	13

Terminal No.	Color of Wire	Signal Name [Specification]
5	O	-

Connector No.	IM15
Connector Name	WIRE TO WIRE
Connector Type	NS08FW-CS

3	2	1
8	7	6
5	4	

Connector No.	M20
Connector Name	WIRE TO WIRE
Connector Type	TK18MW

1	2	3	4	5	6	7
8	9	10	11	12	13	14
15	16					

Terminal No.	Color of Wire	Signal Name [Specification]
12	BR	-
13	P	-

Connector No.	M22
Connector Name	TWEETER RH
Connector Type	FC121PC020S0017

1	2
---	---

Terminal No.	Color of Wire	Signal Name [Specification]
1	BR	-
2	P	-

AUDIO WITH NAVIGATION SYSTEM

Connector No.	M23
Connector Name	WIRE TO WIRE
Connector Type	TK0FW-MS8



10	9	8	7	6	5	4	3	2	1
18	17	16	15	14	13	12	11		

Terminal No.	Color of Wire	Signal Name [Specification]
2	W	-
3	B	-
4	SHIELD	-

Connector No.	M33
Connector Name	COMBINATION SWITCH (SPIRAL CABLE)
Connector Type	TK08FGY-IV



24	25	26	27
31	32	33	34

Terminal No.	Color of Wire	Signal Name [Specification]
24	R	-
31	B	-
32	Y	-

Connector No.	M34
Connector Name	COMBINATION METER
Connector Type	SAB40FW



1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40

Terminal No.	Color of Wire	Signal Name [Specification]
21	L	CAN-H
22	P	CAN-L
31	Y	VEHICLE SPEED (3-PULSE)

Connector No.	M46
Connector Name	AUDIO UNIT
Connector Type	TH18FW-GS2



1	2	3	4	5	6	7	8	9		
19	10	11	12	13	14	15	16	17	18	20

Terminal No.	Color of Wire	Signal Name [Specification]
2	L	SOUND SIGNAL FRONT LH (+)
3	G	SOUND SIGNAL FRONT LH (-)
4	LG	SOUND SIGNAL REAR LH (+)
5	Y	SOUND SIGNAL REAR RH (+)
6	R	STRG SW A
7	R	ACC
8	B	GND
11	BR	SOUND SIGNAL FRONT RH (+)
12	P	SOUND SIGNAL FRONT RH (-)
13	O	SOUND SIGNAL REAR RH (+)
14	V	SOUND SIGNAL REAR RH (-)

Connector No.	M47
Connector Name	AUDIO UNIT
Connector Type	TH188FW



21	22	23	24
25	26	27	28

Terminal No.	Color of Wire	Signal Name [Specification]
23	L	AV COMM (H)
24	P	AV COMM (L)

Connector No.	M48
Connector Name	AUDIO UNIT
Connector Type	TH12FW




29	30	31	32	33	34
35	36	37	38	39	40

Terminal No.	Color of Wire	Signal Name [Specification]
30	W	TEL VOICE SIGNAL (+)
31	O	TEL VOICE SIGNAL (-) (with navigation system)
32	O	VOICE GUIDANCE (+)
33	W	VOICE GUIDANCE (-)
37	SHIELD	SHIELD (with navigation system)
38	SHIELD	SHIELD

JCNWA0253GB


AUDIO WITH NAVIGATION SYSTEM

Connector No.	M49
Connector Name	DISPLAY UNIT
Connector Type	TH24FW

 


Terminal No.	Color of Wire	Signal Name [Specification]
1	G	RGB (RED) SIGNAL
2	G	RGB AREA (YS) SIGNAL
3	R	RGB (GREEN) SIGNAL
4	R	HP
5	W	RGB (BLUE) SIGNAL
6	W	VP
7	B	RGB SYNC
8	B	RGB GND
10	SHIELD	SHIELD
11	R	CAMERA IMAGE SIGNAL
12	SHIELD	SHIELD

Connector No.	M81
Connector Name	WIRE TO WIRE
Connector Type	TK16MW

 

Terminal No.	Color of Wire	Signal Name [Specification]
12	BR	-
13	P	-

17	O	COMM (DISP->CONT)
18	SHIELD	SHIELD
19	W	COMM (CONT->DISP)
20	R	ACC
21	LG	BATTERY
23	B	GND

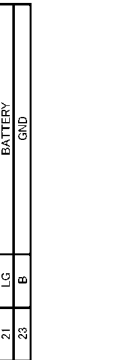


Terminal No.	Color of Wire	Signal Name [Specification]
78	LG	-

Connector No.	M77
Connector Name	WIRE TO WIRE
Connector Type	TH60FW-NS1E-TM4




Connector No.	M103
Connector Name	PARKING BRAKE SWITCH
Connector Type	P01FB-A

 


Terminal No.	Color of Wire	Signal Name [Specification]
1	V	-

Connector No.	M80
Connector Name	TWEETER LH
Connector Type	FC1 211PC023S9017

 

Terminal No.	Color of Wire	Signal Name [Specification]
1	L	-
2	G	-

Connector No.	M352
Connector Name	COMBINATION SWITCH (SPIRAL CABLE)
Connector Type	TK03MGY-X

 

Terminal No.	Color of Wire	Signal Name [Specification]
16	-	-
17	-	-
20	-	-

SYMPTOM DIAGNOSIS

MULTI AV SYSTEM SYMPTOMS

Symptom Table

INFOID:000000000947140

RELATED TO NAVIGATION

NOTE:

Combined part of AV switch and audio unit.

Symptoms	Check items	Possible malfunction location/Action to take
AV switch cannot be operated. (All switches cannot be operated.)	"MULTI AV" is displayed on "SELECT SYSTEM" screen of CONSULT-III.	Perform the self-diagnosis using CONSULT-III. (AV-65, "CONSULT - III Function (MULTI AV)")
	"MULTI AV" is not displayed on "SELECT SYSTEM" screen of CONSULT-III.	• NAVI control unit power supply and ground circuit (AV-100, "NAVI CONTROL UNIT : Diagnosis Procedure") • Perform CAN diagnosis when "Please wait" is indicated on the screen for approximately 120 seconds after ignition switch ON.
AV switch cannot be operated. (Only specified switch cannot be operated.)	CONSULT-III self-diagnosis detects a malfunction.	Perform the self-diagnosis using CONSULT-III. (AV-65, "CONSULT - III Function (MULTI AV)")
	CONSULT-III self-diagnosis does not detect a malfunction.	Audio unit (AV-202, "Exploded View")
Map screen is not displayed. (RGB image other than map is normal.)	—	Perform the self-diagnosis using CONSULT-III. (AV-65, "CONSULT - III Function (MULTI AV)")
Fuel economy information display is malfunctioning.	—	NAVI control unit power supply and ground circuit (Ignition signal) (AV-100, "NAVI CONTROL UNIT : Diagnosis Procedure")
Voice guidance is not heard.	—	Voice guidance signal circuit
Traffic information (RDS-TMC) is not received.	Radio broadcasts are received.	Audio unit (AV-202, "Exploded View")
	Radio broadcasts are not received.	• Radio antenna (AV-209, "Exploded View") • Antenna feeder (AV-216, "Harness Layout")

RELATED TO REAR VIEW MONITOR

Symptoms	Check items	Possible malfunction location/Action to take
Warning message under the display is not displayed at rear view monitor image.	—	• Horizontal synchronizing (HP) signal circuit (AV-108, "Diagnosis Procedure") • Vertical synchronizing (VP) signal circuit (AV-109, "Diagnosis Procedure") • RGB area (YS) signal circuit (AV-107, "Diagnosis Procedure")
Camera image is not shown. (Only warning message under the display is displayed.)	"REAR VIEW CAMERA" is displayed on "SELECT SYSTEM" screen of CONSULT-III.	• Camera image signal circuit (positive circuit) (Between camera control unit and display unit) (AV-112, "Diagnosis Procedure") • Camera ON signal circuit (AV-113, "Diagnosis Procedure") • Camera image signal circuit (Between rear view camera and camera control unit) (AV-111, "Diagnosis Procedure")
	"REAR VIEW CAMERA" is not displayed on "SELECT SYSTEM" screen of CONSULT-III.	Camera control unit power supply and ground circuit (AV-102, "CAMERA CONTROL UNIT : Diagnosis Procedure")
Camera image is rolling.	—	Camera image signal circuit (negative circuit) (Between camera control unit and display unit) (AV-112, "Diagnosis Procedure")

MULTI AV SYSTEM SYMPTOMS

< SYMPTOM DIAGNOSIS >

[AUDIO WITH NAVIGATION]

Symptoms	Check items	Possible malfunction location/Action to take
It cannot be switched to rear view monitor.	CONSULT-III self-diagnosis detects a malfunction.	Perform the self-diagnosis using CONSULT-III (MULTI AV) (AV-65, "CONSULT - III Function (MULTI AV)").
	CONSULT-III self-diagnosis does not detect a malfunction.	NAVI control unit reverse signal circuit

RELATED TO AUDIO

Symptom	Check items	Possible malfunction location / Action to take
Audio sound is not heard.	No sound from all speakers	Audio unit (AV-202, "Exploded View")
	Sound is not heard only from the specific places (Front RH, rear RH, front LH and rear LH).	Sound signal circuit of suspect system

RELATED TO RGB IMAGE

Symptoms	Check items	Possible malfunction location/Action to take
Color of RGB image is not proper.	Light blue (Cyan) tint	RGB signal (R: red) circuit (AV-103, "Diagnosis Procedure")
	Purple (Magenta) tint and image is rolling.	RGB signal (G: green) circuit (AV-104, "Diagnosis Procedure")
	Screen looks yellowish.	RGB signal (B: blue) circuit (AV-105, "Diagnosis Procedure")
- RGB image is too dark. - RGB image is too fuzzy.	—	RGB ground circuit
RGB image is not displayed. (Nothing is displayed on the screen.)	"MULTI AV" is displayed on "SELECT SYSTEM" screen of CONSULT-III.	Perform the self-diagnosis using CONSULT-III (AV-65, "CONSULT - III Function (MULTI AV)").
	"MULTI AV" is not displayed on "SELECT SYSTEM" screen of CONSULT-III.	NAVI control unit power supply and ground circuit (AV-100, "NAVI CONTROL UNIT : Diagnosis Procedure")

RELATED TO VOICE ACTIVATED CONTROL

Symptoms	Check items	Possible malfunction location/Action to take
The voice cannot be controlled even if the voice control screen is displayed.	Voice sounds at "Speaker Test" and "Voice Microphone Test" of "Confirmation / Adjustment Mode".	NAVI control unit (AV-201, "Exploded View")
	Voice does not sound at "Speaker Test" and "Voice Microphone Test" of "Confirmation / Adjustment Mode".	- MIC. power supply circuit (AV-110, "Diagnosis Procedure") - Shield (MIC.) circuit (AV-110, "Diagnosis Procedure") - MIC. signal circuit (AV-110, "Diagnosis Procedure")
The voice cannot be controlled. (Voice control screen is not displayed.)	TEL operation screen is displayed by pressing and holding "⏮" switch of steering wheel switch.	NAVI control unit (AV-201, "Exploded View")
	- TEL operation screen is not displayed by pressing and holding "⏮" switch of steering wheel switch. - Other steering wheel switches are normal.	Steering switch (AV-207, "Exploded View")
	"BACK", "VOL UP", "VOL DOWN" and "⏮" switches of steering wheel switch are not operated.	Steering switch signal B circuit AV-116, "Diagnosis Procedure" (AV-201, "Exploded View")
	All steering switches are not operated.	Steering switch signal ground circuit (AV-118, "Diagnosis Procedure")

RELATED TO HANDS FREE PHONE

MULTI AV SYSTEM SYMPTOMS

< SYMPTOM DIAGNOSIS >

[AUDIO WITH NAVIGATION]

- Check that the cellular phone is corresponding type (Bluetooth® enabled) when the hands free related malfunction vehicle is in service before performing a diagnosis.
- There is a case that malfunction occurs due to the version change of the phone type, etc. even though it is a corresponding type. Therefore, confirm it by changing the cellular phone to another corresponding type phone, and check that it operates normally. It is necessary to distinguish whether the cause is the vehicle or cellular phone. Check to ensure the customers phone is supported by checking the phone compatibility for the hands free system.

Trouble diagnosis chart by symptom

Symptoms	Check items	Possible malfunction location/Action to take
Does not recognize cellular phone connection.	Repeat the registration of cellular phone.	NAVI control unit (AV-201, "Exploded View")
Hands free phone cannot be established.	• Hands free phone operation can be made, but the communication cannot be established. • Hands free phone operation can be performed, however, voice between each other cannot be heard during the conversation.	NAVI control unit (AV-201, "Exploded View")
The other party's voice cannot be heard by hands free phone.	Check the "microphone speaker "in Inspection & Adjustment Mode if sound is heard.	NAVI control unit (AV-65, "CONSULT - III Function (MULTI AV)")
	Check the "microphone speaker "in Inspection & Adjustment Mode if sound is not heard.	TEL voice signal circuit
Originating sound is not heard by the other party with hands free phone communication.	Sound operation function is normal.	NAVI control unit (AV-201, "Exploded View")
	Sound operation function does not work.	Microphone signal circuit (AV-110, "Diagnosis Procedure")

RELATED TO STEERING WHEEL SWITCH

Symptoms	Possible malfunction location/Action to take
All steering switches are not operated.	Steering switch signal ground circuit (AV-118, "Diagnosis Procedure")
Only specified switch cannot be operated.	Steering switch (AV-207, "Exploded View")
"ENTER", "MENU UP", "MENU DOWN" and "SOURCE" switches are not operated.	Steering switch signal A circuit (AV-114, "Diagnosis Procedure")
"BACK", "⏮", "VOL UP" and "VOL DOWN" switches are not operated.	Steering switch signal B circuit (AV-116, "Diagnosis Procedure")

AV

NORMAL OPERATING CONDITION

< SYMPTOM DIAGNOSIS >

[AUDIO WITH NAVIGATION]

NORMAL OPERATING CONDITION

Description

INFOID:000000000972595

BASIC OPERATION

Symptoms	Possible cause	Possible solution
No image is displayed.	The brightness is at the lowest setting.	Adjust the brightness of the display.
	The display is turned off.	Push and hold to turn on the display.
No voice guidance is available. The volume is too high or too low.	The volume is not set correctly, or it is turned off.	Adjust the volume of voice guidance.
	Volume guidance is not provided for narrow streets (roads displayed in gray).	This is not a malfunction.
No map is displayed on the screen.	The map DVD-ROM is not inserted, or it is inserted upside down.	Insert the map DVD-ROM correctly.
	A screen other than map screen is displayed.	Push "MAP".
The screen is too dim. The movement is slow.	The temperature in the interior of the vehicle is low.	Wait until the interior of the vehicle has warmed up.
Some pixels in the display are dark- er or brighter than others.	This condition is an inherent characteristic of liquid crystal displays.	This is not a malfunction.
Some menu items cannot be selected.	Some menu items become unavailable while the vehicle is driven.	Park the vehicle in a safe location, and then operate the navigation system.

NOTE:

Locations stored in the Address Book and other memory functions may be lost if the vehicle's battery is disconnected or becomes discharged. Service the vehicle's battery as necessary and re-enter the information in the Address Book if this occurs.

VEHICLE ICON

Symptoms	Possible cause	Possible solution
Names of roads and locations differ between Plan view and Birdview™.	This is because the quantity of the displayed information is reduced so that the screen does not become too crowded. There is also a chance that names of the roads or locations may be displayed multiple times, and the names appearing on the screen may be different because of a processing procedure.	This is not a malfunction.
The vehicle icon is not displayed in the correct position.	The vehicle was transported after the ignition switch was turned off, for example, by a ferry or car transporter.	Drive the vehicle for a while on a road where GPS can be received.
	The position and direction of the vehicle may be incorrect depending on the driving environments and the levels of positioning accuracy of the navigation system.	This is not a malfunction. Drive the vehicle for a while to automatically correct the position and direction of the vehicle icon.
When the vehicle is traveling on a new road, the vehicle icon is located on another road nearby.	Because the new road is not stored in the map data, the system automatically places the vehicle icon on the nearest road available.	Updated road information will be included in the next version of the map DVD-ROM.
The screen does not switch to the night screen even after turning on the headlights.	The daytime screen was set the last time the headlights were turned on.	Set the screen to the night screen mode using when turning on the headlights.
The map does not scroll even when the vehicle is moving.	The current location map screen is not displayed.	Push "MAP".
The vehicle icon is not displayed.	The current location map screen is not displayed.	Push "MAP".

NORMAL OPERATING CONDITION

< SYMPTOM DIAGNOSIS >

[AUDIO WITH NAVIGATION]

Symptoms	Possible cause	Possible solution
The GPS indicator on the screen remains gray.	GPS signals cannot be received depending on the vehicle location, such as in a parking garage, on a road that has numerous tall buildings, etc.	Drive on an open, straight road for a while.
	GPS signals cannot be received because objects are placed on top of the display.	Remove the objects from top of the display.
	A sufficient amount of GPS satellites are not available.	Wait for the satellites to move locations available for navigation system.
The location of vehicle icon is misaligned from the actual position.	Speed calculations based on the speed sensor may be incorrect when using tire chains or replacing the tires.	Drive the vehicle for a while (at approximately 30 km/h (19 MPH) for about 30 minutes) to automatically correct the vehicle icon position. Contact an NISSAN / INFINITI dealer if this does not correct the vehicle icon position.
	The map data has mistake or is incomplete (the vehicle icon position is always misaligned in the same area).	Updated road information will be included in the next version of the map DVD-ROM.

MAP DVD-ROM

Symptom	Possible cause	Possible solution
The message "Error" appears.	Map DVD-ROM is dirty or partially damaged.	Check the DVD-ROM and wipe it clean with a soft cloth.
		Replace the DVD-ROM if there is any damage.

ROUTE CALCULATION AND VISUAL GUIDANCE

Symptoms	Possible cause	Possible solution
In the auto reroute calculation, waypoints are not included.	Waypoints already passed are not included in the auto reroute calculation.	In case of going to that waypoints again, edit the route.
Route information is not displayed.	Route calculation has not yet been performed.	Set the destination and perform route calculation.
	The vehicle is not driven on the suggested route.	Drive on the suggested route.
	Route guidance is set to off.	Turn on route guidance.
	Route information is not provided for narrow streets (roads displayed in gray).	This is not a malfunction.
The auto reroute calculation (or detour calculation) suggests the same route as the one previously suggested.	Route calculation took priority conditions into consideration, but the same route was calculated.	This is not a malfunction.
A waypoint cannot be added.	Five waypoints are already set on the route, including ones that already passed.	A maximum of 5 waypoints can be set on the route. In case of going to 6 or more waypoints, perform route calculations multiple times as necessary.
The suggested route is not displayed.	Roads near the destination cannot be calculated.	Reset the destination to a main or ordinary road, and recalculate the route.
	The starting point and destination are too close.	Set a more distant destination.
	The starting point and destination are too far away.	Divide the way by selecting one or two intermediate destinations, and perform route calculations multiple times.
	There are time restricted roads (by day of week, by time) near the current vehicle location or destination.	Set Use Time Restricted Roads to off.
A part of the route is not displayed.	The suggested route includes narrow streets (roads displayed in gray).	This is not a malfunction.

NORMAL OPERATING CONDITION

< SYMPTOM DIAGNOSIS >

[AUDIO WITH NAVIGATION]

Symptoms	Possible cause	Possible solution
The part of the route already passed is deleted.	A route is managed by sections between waypoints. The section between the starting point and the waypoint is deleted if you passed the first waypoint. (It may not be deleted depending on the area.)	This is not a malfunction.
An indirect route is suggested.	The system may suggest an indirect route if there are restrictions (such as one way streets) on roads close to the starting point or destination.	Adjust the location of the starting point or destination.
	The system may suggest an indirect route because route calculation does not take into consideration some areas such as narrow streets (gray roads).	Reset the destination to a main or ordinary road, and recalculate the route.
The landmark information does not correspond to the actual information.	This may be caused by insufficient or incorrect data on the DVD-ROM.	This is not a malfunction.
The suggested route does not exactly connect to the starting point, waypoints, or destination.	There is no data for route calculation closer to these locations.	Set the starting point, waypoints and destination on main road, and perform route calculation.

VOICE GUIDANCE

Symptoms	Possible cause	Possible solution
The voice guidance is not available.	Voice guidance is only available at certain intersections. In some cases, voice guidance is not available even when the vehicle should make a turn.	This is not a malfunction.
	The vehicle has deviated from the suggested route.	Go back to the suggested route or request route calculation again.
	Voice guidance is set to off.	Turn on the voice guidance.
	Route guidance is set to off.	Turn on the voice guidance.
The guidance content does not correspond to the actual condition.	The content of the voice guidance may vary, depending on the types of intersections at which turns are made.	Follow all traffic rules and regulations.

VOICE RECOGNITION

Symptom	Possible cause	Possible solution
The system does not recognize the command. The system recognizes the command incorrectly.	The interior of the vehicle is too noisy.	Close the windows or have other occupants be quiet.
	The volume of the voice is too low.	Speak louder.
	Pronunciation is unclear.	Speak clearly.
	Voice recognition mode is not yet ready to speak.	Push the release "🔊" on the steering switch, and speak a command after the tone sounds.
	5 seconds or more have passed after pushed and released "🔊" on the steering switch.	Make sure to speak a command within 5 seconds after push and release "🔊" on the steering switch.
	Only a limited range of voice commands is usable for each screen.	Use a correct voice command appropriate for the current screen.

REAR VIEW MONITOR

Symptoms	Possible cause	Possible solution
Rear view monitor image is not displayed	Shift lever (M/T models) or selector lever (CVT models) is not in R position.	Shift lever (M/T models) or selector lever (CVT models) is in R position.

NORMAL OPERATING CONDITION


< SYMPTOM DIAGNOSIS >

[AUDIO WITH NAVIGATION]

Symptoms	Possible cause	Possible solution
Rear view monitor image is not clear	Front glass of camera lens is dirty.	Dip a soft cloth into water and wipe the glass softly.
	There are raindrops, snow, etc.	Wipe it with a soft cloth softly.
	The sunlight or the headlight of following vehicle is shining directly to the camera lens.	It returns to the original condition if the light applied to the lens disappears.

EXAMPLES OF CURRENT LOCATION MARK DISPLACEMENT







It calculates vehicle travel by reading travel distance and turn angle. Therefore, a mistake will occur in the current location display if the vehicle is driven in the following manner. Perform location correction if correct location has not been restored after driving the vehicle normally.

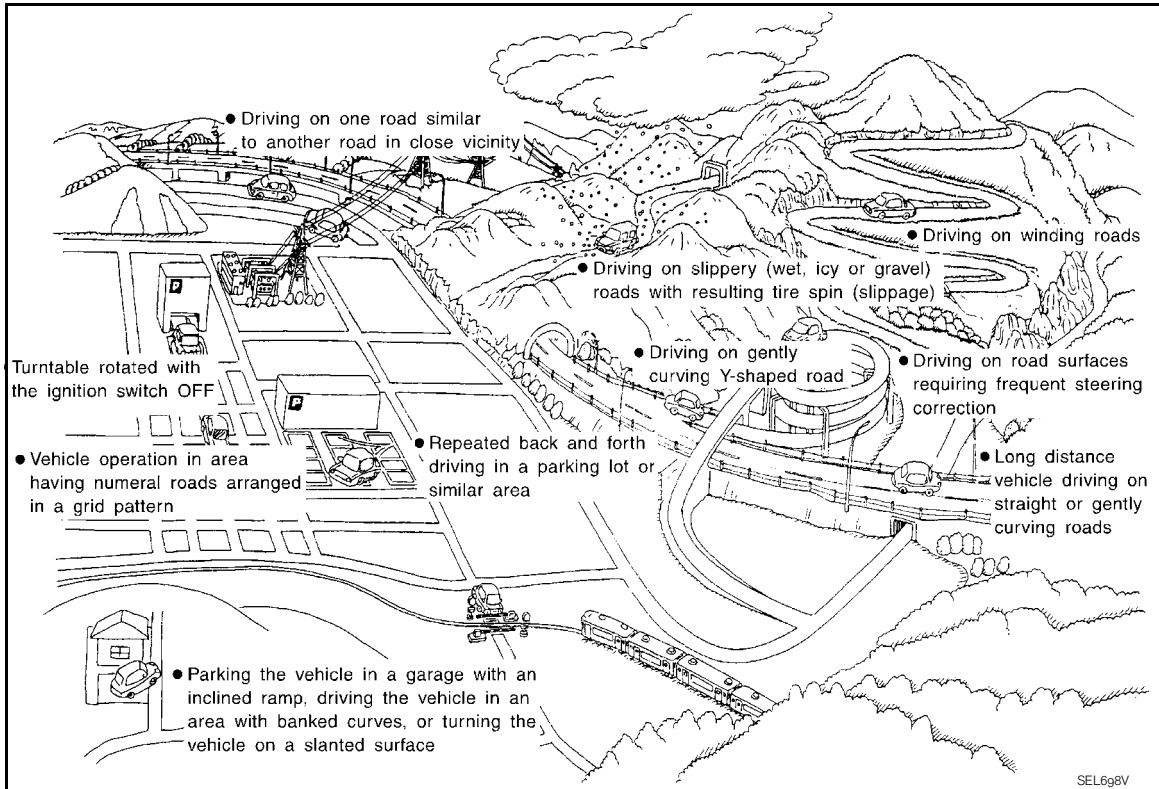

NORMAL OPERATING CONDITION

< SYMPTOM DIAGNOSIS >





[AUDIO WITH NAVIGATION]

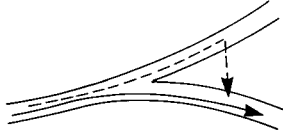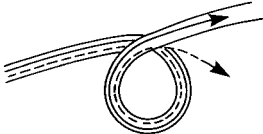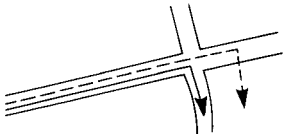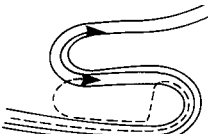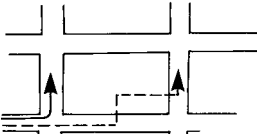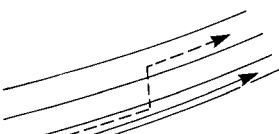	Cause (condition)	Driving condition	Remarks (correction, etc.)
Road pattern	Y-intersections  ELK0192D	At a Y intersection or similar gradual division of roads, errors in the direction of travel deduced by the sensor may result in the current location mark appearing on the wrong road.	Perform location correction and, if necessary, direction correction if the correct location has not been restored after traveling about 10 km/h (6 MPH).
	Spiral roads  ELK0193D	Turning angle errors accumulate and vehicle mark may deviate from the correct location when driving on a large, continuous spiral road (such as loop bridge).	
	Straight roads  ELK0194D	Map-matching does not work effectively enough and distance errors may accumulate when driving on a long, straight, slowly curving road without stopping. As a result, the vehicle mark may deviate from the correct location when the vehicle turns at a corner.	
	Switchback turns  ELK0195D	The map may be matched to other roads in a similar direction nearby at every turn, and the vehicle mark may deviate from the correct location when driving on a zigzag road.	
	Grid pattern roads  ELK0196D	The map may be matched to them by mistake and the vehicle mark may deviate from the correct location when driving in a location where roads are laid out in a grid pattern, where many roads are running in the similar direction nearby.	
	Parallel roads  ELK0197D	The map may be matched to the other road by mistake and the vehicle mark may deviate from the correct location when two roads are running in parallel (such as highway and sideways).	

NORMAL OPERATING CONDITION

< SYMPTOM DIAGNOSIS >


 
[AUDIO WITH NAVIGATION]

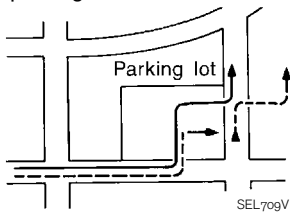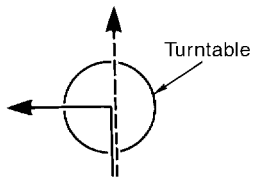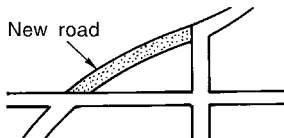	Cause (condition)	Driving condition	Remarks (correction, etc.)
Place	In a parking lot  SEL709V	Matching may place the vehicle mark on a nearby road when driving in a parking lot, or other locations where there are no roads on the map. The vehicle mark may have deviated from the correct location when the vehicle returns to the road. Direction errors accumulate, and the vehicle mark may deviate from the correct location when driving in circle or turning the steering wheel repeatedly.	
	Turntable  SEL710V	The navigation system cannot receive the signal from the gyroscope (angular speed sensor) when the ignition switch is OFF. Therefore, the displayed direction may be incorrect and the correct road may not be easily returned to after rotating the vehicle on a turntable with the ignition OFF.	
	Slippery roads	On snow, wet roads, gravel, or other roads where tires may slip easily, accumulated mileage errors may cause the vehicle mark to deviate from the correct road.	
	Slopes	An error in the turning angle will occur, and the vehicle mark may deviate from the road when parking in sloped garages, when traveling on banked roads, or in other cases where the vehicle turns when tilted.	
Map data	Roads not displayed on the map screen  SEL699V	Map matching does not function correctly and matches the location to a nearby road when driving on new roads or other roads not displayed on the map screen. The vehicle mark may deviate from the correct road when the vehicle returns to a road which is on the map.	
	Different road pattern (Changed due to repair)  ELK0201D	Map matching does not function correctly and matches the location to a nearby road if the road pattern stored in the map data and the actual road pattern are different. The vehicle mark may deviate from the correct road.	

NORMAL OPERATING CONDITION

< SYMPTOM DIAGNOSIS >

[AUDIO WITH NAVIGATION]

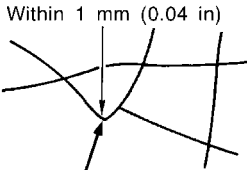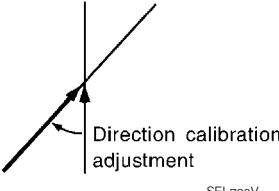	Cause (condition)	Driving condition	Remarks (correction, etc.)
Vehicle	Use of tire chains	The vehicle mark may deviate from the correct road.	Drive the vehicle for a while. Adjust it with the distance adjustment function if distance still deviates. (Recover the original value if tire chains are removed.)
	Use of tires other than the specified size		Replace all tires with the specified size tire.
	Malfunctioning air pressure of tire		Adjust all tires to the specified air pressure.
	Replace tire		Drive the vehicle for a while. It adjusts with the distance adjustment function if the distance is still not in the correct location.
Driving manner	Just after the engine is started	The vehicle can be shown in the incorrect direction and may deviate from the correct location if vehicle is driven off just after the engine is started when gyroscope (angular speed sensor) correction is not completed.	Wait for a short while before driving after starting the engine.
	Continuous driving without stopping	Direction errors may accumulate, and the current location mark may deviate from the correct road when driving long distances without stopping.	Stop and adjust orientation.
	Abusive driving	Spinning the wheels or engaging in other kinds of abusive driving may result in the system being unable perform correct detection, and may cause the vehicle mark to deviate from the correct road.	Perform location correction and, if necessary, direction correction if after traveling about 10 km/h (6 MPH) the correct location has not been restored.
Position correction method	Position correction accuracy Within 1 mm (0.04 in)  SEL701V	Accuracy may be reduced when correct road cannot be found, particularly in places where there are many roads if accuracy of location settings is poor.	From the roads displayed on the screen, input a position within an accuracy of 1mm (0.04 in). CAUTION: When correcting, use the most detailed map possible.
	Direction when location is corrected  SEL702V	Accuracy may be reduced afterwards if accuracy of location settings during correction is poor.	Perform direction correction.

THE CURRENT POSITION MARK SHOWS A POSITION THAT IS COMPLETELY INCORRECT.

In the following cases, the current location mark may be displayed in a completely incorrect location. If so, perform position/direction correction.

- When location correction has not been done
 - It may shift to a completely unexpected location and not return unless location correction is performed if GPS satellite reception is poor and the current location mark slips out of place. The position will be corrected if a GPS signal can be received.
- When vehicle is traveled by ferry, or when vehicle is towed.
 - Because calculation of the current location cannot be done when traveling with the ignition OFF, for example when traveling by ferry or when being towed, the location before travel is displayed. The location will be corrected if the precise location can be detected with GPS.

NORMAL OPERATING CONDITION

< SYMPTOM DIAGNOSIS >

[AUDIO WITH NAVIGATION]

THE CURRENT POSITION MARK JUMPS.

In the following cases, the current location mark may appear to jump as a result of automatic correction of the current location.

- When map matching has been done
 - The current location mark may seem to jump if current location and the current location mark are different when map matching is done. At this time, the location may be “corrected” to the incorrect road or to a location which is not on a road.
- When GPS location correction has been done
 - The current location mark may seem to jump if current location and the current location mark are different when location is corrected using GPS measurements. At this time, the location may be “corrected” to a location which is not on a road.

THE CURRENT LOCATION MARK IS IN A RIVER OR THE SEA.

The navigation system moves the current location mark with no distinction between land and rivers or sea. It may appear that the vehicle is driving in a river or the sea if the location mark is somehow out of place.

CURRENT LOCATION MARK ROTATES WITHOUT OPERATION

The rotating condition is recorded as the stop condition if the ignition switch is turned ON with the turntable rotating. Therefore, the current location mark might rotate when actually stopping.

WHEN DRIVING ON THE SAME ROAD, SOMETIMES THE CURRENT LOCATION MARK IS IN THE CORRECT PLACE AND SOMETIMES IT IS IN THE INCORRECT PLACE.

The conditions of the GPS antenna (GPS data) and gyroscope (angular speed sensor) change gradually. Depending on the road traveled and operation of the steering wheel, the location detection results will be different. Therefore, even on a road on which the location has never been incorrect, conditions may cause the vehicle mark to deviate.

LOCATION CORRECTION BY MAP MATCHING IS SLOW.

- The map matching function needs to refer to the data of the surrounding area. It is necessary to drive some distance for the function to work.
- Because of the way map matching operates, when there are many roads running in similar directions in the surrounding area a matching determination may be impossible. The location will remain uncorrected until some special feature is found.

ALTHOUGH THE GPS RECEIVING DISPLAY IS GREEN, THE VEHICLE MARK DOES NOT RETURN TO THE CORRECT LOCATION.

- GPS accuracy has a malfunction range of about 10 m (30 ft). In some cases the current location mark may not be on the correct street, even when GPS location correction is done.
- The navigation system compares the results of GPS location detection with the results from map-matching location detection. The one that is determined to have higher accuracy is used.
- Position correction by GPS is not available while the vehicle is stopped.

THE NAME OF THE CURRENT PLACE IS NOT DISPLAYED.

The current place name might not be displayed when there is no name of place information in the map screen.

THE DISPLAY IS DIFFERENT BETWEEN BIRDVIEW[®] AND (FLAT) MAP DISPLAY.

The following is different at Birdview[®].

- The current place name displays names that are primarily in the direction of vehicle travel.
- The amount of time before the vehicle travel or turn angle is updated on the screen is longer than for the (flat) map display.
- The conditions for display of place names, roads, and other data are different for nearby areas and for more distant areas.
- Some trimming of the character data is done to prevent the display from becoming too complex. In some cases and in some locations, the display contents may differ.
- The same place name, street name, etc. may be displayed multiple times.

PRECAUTION

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000001091324

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the SRS and SB section of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SRS section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

Precaution for Trouble Diagnosis

INFOID:000000000947143

AV COMMUNICATION SYSTEM


- Do not apply voltage of 7.0 V or higher to the measurement terminals.
- Use the tester with its open terminal voltage being 7.0 V or less.
- Be sure to turn ignition switch OFF and disconnect the battery cable from the negative terminal before checking the circuit.

Precaution for Harness Repair


INFOID:000000000947144

AV COMMUNICATION SYSTEM

- Solder the repaired parts, and wrap with tape. [Frays of twisted line must be within 110 mm (4.33 in).]

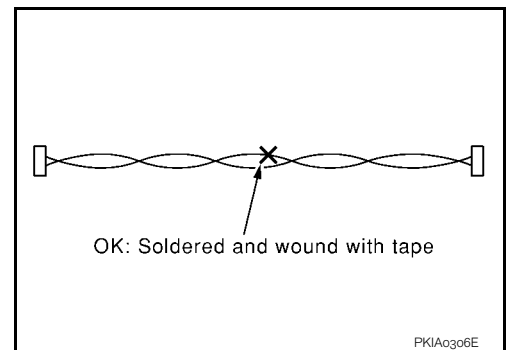

- Do not perform bypass wire connections for the repair parts. (The spliced wire will become separated and the characteristics of twisted line will be lost.)

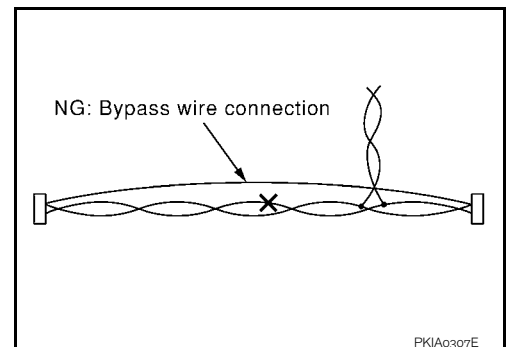


ON-VEHICLE REPAIR

NAVI CONTROL UNIT

Exploded View

INFOID:000000000947146

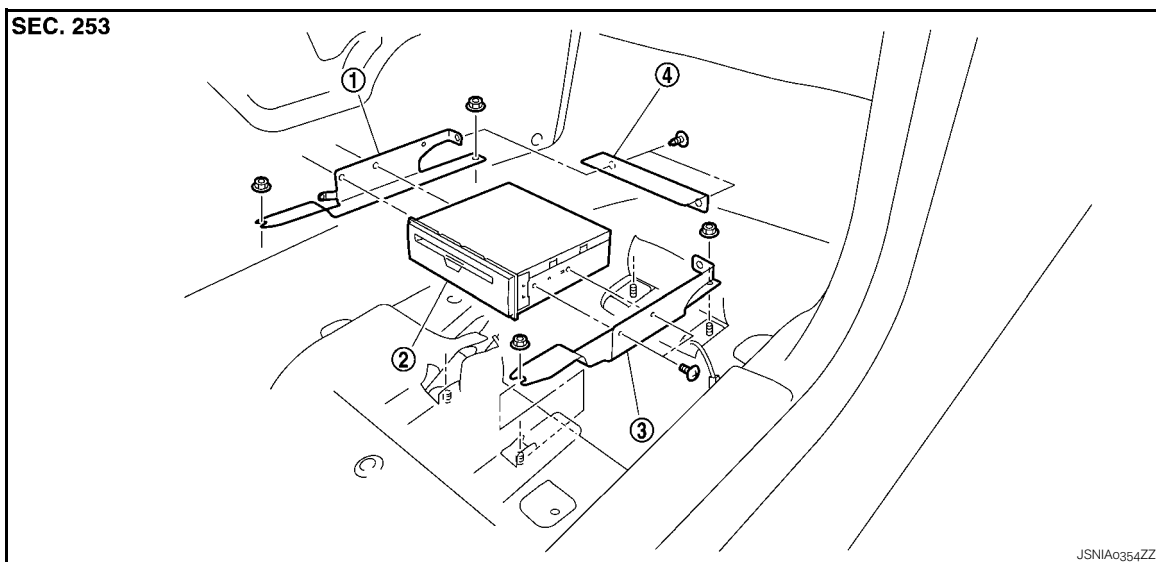

1. Bracket RH
4. Bracket rear

2. NAVI control unit

3. Bracket LH

Removal and Installation

INFOID:000000000947147

REMOVAL

1. Remove bracket nuts, and then remove NAVI control unit with bracket.
2. Remove bracket screws and clips, and then remove NAVI control unit.


INSTALLATION

Install in the reverse order of removal.

AUDIO UNIT

Exploded View

INFOID:000000000954534

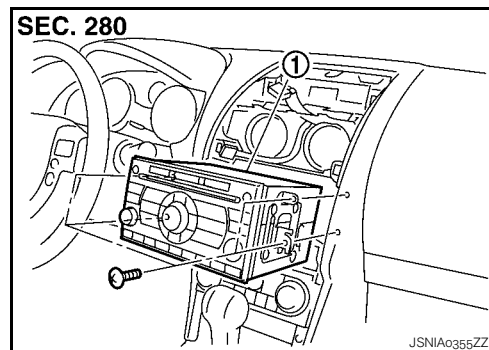

1. Audio unit

Removal and Installation

INFOID:000000000954535

REMOVAL

1. Remove cluster lid C. Refer to [JP-11, "Exploded View"](#).
2. Remove audio unit with bracket.


INSTALLATION

Install in the reverse order of removal.

DISPLAY UNIT

Exploded View

INFOID:000000000947148

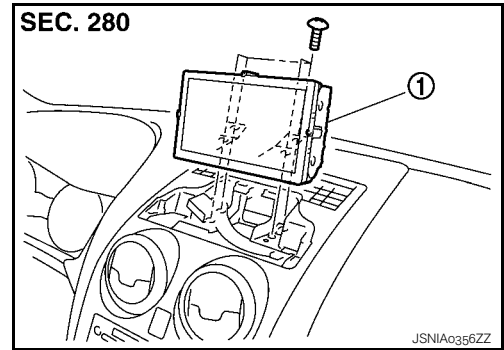

1. Display unit

Removal and Installation

INFOID:000000000947149

REMOVAL

1. Remove display unit cover. Refer to [JP-11. "Exploded View"](#).
2. Remove display unit with bracket.

INSTALLATION

Install in the reverse order of removal.


A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

AV

FRONT DOOR SPEAKER

Exploded View

INFOID:000000000947152

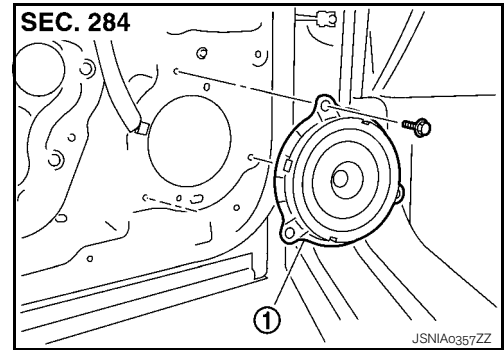

1. Front door speaker

Removal and Installation

INFOID:000000000947153

REMOVAL

1. Remove front door finisher. Refer to [INT-10, "FRONT DOOR FINISHER : Exploded View"](#).
2. Remove front door speaker.


INSTALLATION

Install in the reverse order of removal.

REAR DOOR SPEAKER

Exploded View

INFOID:000000000947154

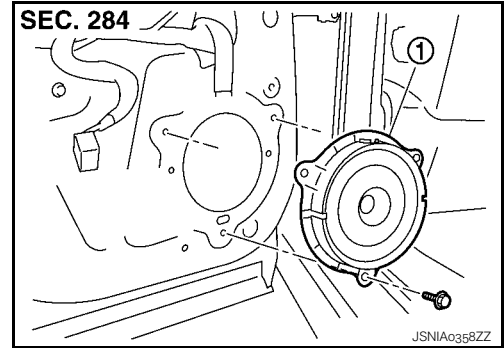

1. Rear door speaker

Removal and Installation

INFOID:000000000947155

REMOVAL

1. Remove rear door finisher. Refer to [INT-12. "REAR DOOR FINISHER : Exploded View"](#).
2. Remove rear door speaker.

INSTALLATION

Install in the reverse order of removal.


A
B
C
D
E
F
G
H
I
J
K
L
M
O
P

AV

TWEETER

Exploded View

INFOID:000000000947156

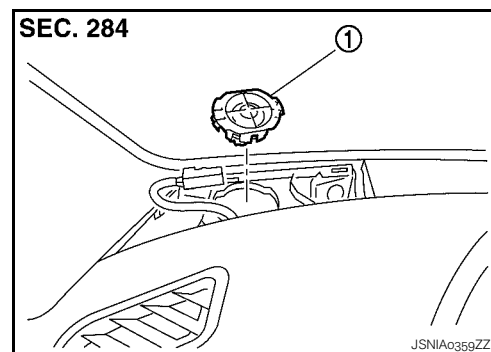

1. Tweeter

Removal and Installation

INFOID:000000000947157

REMOVAL

1. Remove tweeter grill. Refer to [IP-11, "Exploded View"](#).
2. Remove tweeter.

INSTALLATION

Install in the reverse order of removal.

STEERING SWITCH

Exploded View

INFOID:000000000947172

Refer to [ST-9, "Exploded View"](#).

Removal and Installation

INFOID:000000000947173

REMOVAL

Refer to [ST-9, "Removal and Installation"](#).

INSTALLATION

Install in the reverse order of removal.

A

B

C

D

E

F

G

H

I

J

K

L

M

AV

O

P

MICROPHONE


Exploded View

INFOID:000000000947178

REMOVAL

Refer to [INT-20, "Exploded View"](#).

DISASSEMBLY

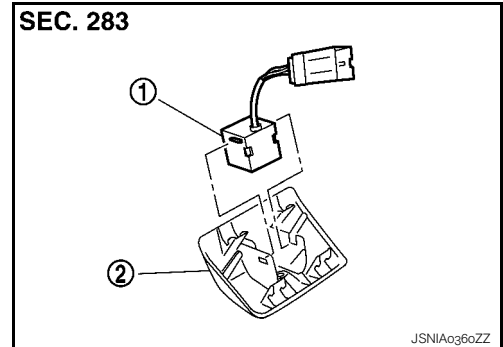

1. Microphone
2. Microphone cover

Removal and Installation

INFOID:000000000947179

REMOVAL

1. Remove microphone cover. Refer to [INT-20, "Exploded View"](#).
2. Remove microphone.


INSTALLATION

Install in the reverse order of removal.

RADIO ANTENNA

Exploded View

INFOID:0000000000967694

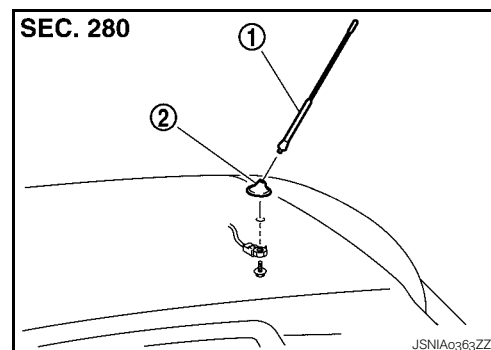

1. Rod antenna
2. Antenna base

Removal and Installation

INFOID:0000000000967695

REMOVAL

1. Remove headlining. Refer to [INT-20, "Exploded View"](#).
2. Remove antenna base and antenna rod.

INSTALLATION

Install in the reverse order of removal.

A
B
C
D
E
F
G
H
I
J
K
L
M
O
P

AV


GPS ANTENNA

Harness Layout

INFOID:000000000947181

NOTE:

As for right-hand drive vehicles, install GPS antenna feeder between the center console and the instrument panel in the reverse of left-handle drive vehicles.

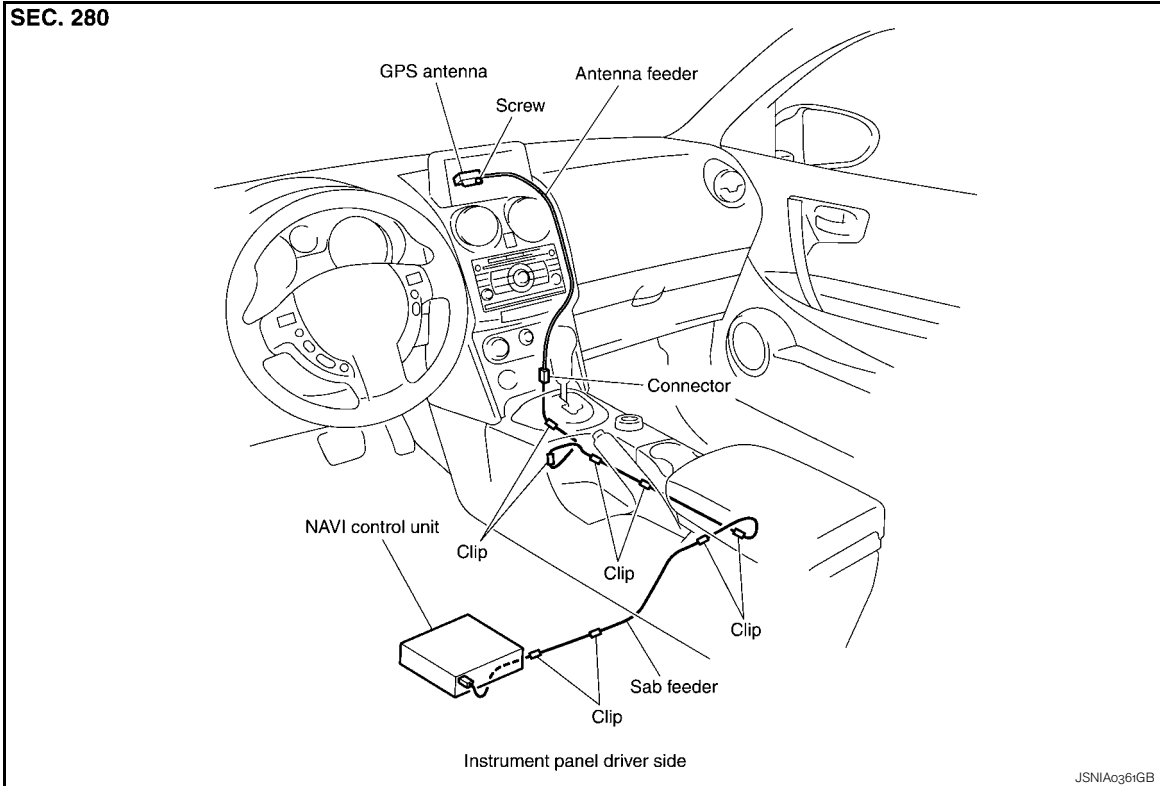

Removal and Installation

INFOID:000000000947182

REMOVAL

1. Remove display unit. Refer to [AV-203, "Exploded View"](#).
2. Remove audio unit. Refer to [AV-202, "Exploded View"](#).


GPS ANTENNA

< ON-VEHICLE REPAIR >

[AUDIO WITH NAVIGATION]

3. Remove instrument lower panel RH. Then remove GPS antenna connector (2). Refer to [IP-11, "Exploded View"](#).
4. Remove GPS antenna (1).

SEC. 280

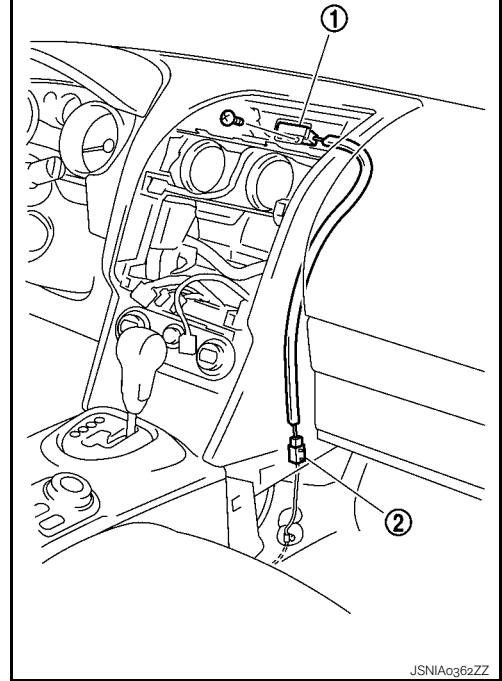

INSTALLATION

Install in the reverse order of removal.


A
B
C
D
E
F
G
H
I
J
K
L
M
O
P

AV

CAMERA CONTROL UNIT

Exploded View

INFOID:000000000947183

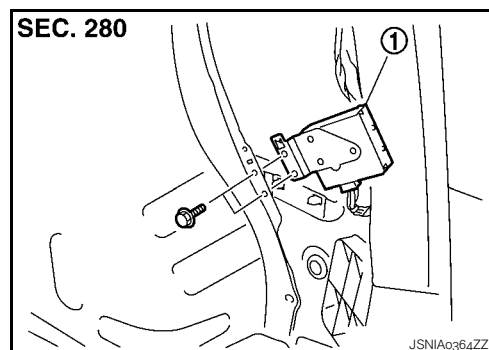

1. Camera control unit

Removal and Installation

INFOID:000000000947184

REMOVAL

1. Remove luggage side lower finisher (RH). Refer to [INT-24, "Exploded View"](#).
2. Remove camera control unit.

INSTALLATION

Install in the reverse order of removal.

REAR VIEW CAMERA


Exploded View

INFOID:000000000947186

REMOVAL

Refer to [EXT-31, "Exploded View"](#).

DISASSEMBLY

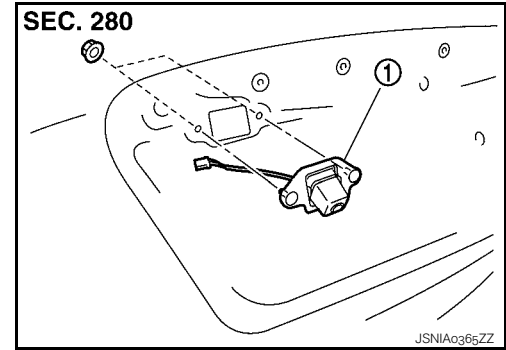

1. Rear view camera

Removal and Installation

INFOID:000000000947187

REMOVAL

1. Remove back door finisher. Refer to [EXT-31, "Exploded View"](#).
2. Remove back door trim finisher lower. Refer to [INT-26, "Exploded View"](#).
3. Remove rear view camera.

INSTALLATION

Install in the reverse order of removal.

Adjustment

INFOID:000000000970728

DESCRIPTION

CONSULT-III is used to modify the guideline position that shows the width of vehicle and the distance from rear end of vehicle on the rear view monitor. These can be caused by condition variations of body assembly and camera installation.

VEHICLE WIDTH AND DISTANCE GUIDING LINE CORRECTION PROCEDURE

A
B
C
D
E
F
G
H
I
J
K
L
M
O
P


AV

REAR VIEW CAMERA

< ON-VEHICLE REPAIR >

[AUDIO WITH NAVIGATION]

1. Create a correction line to modify the guiding lines inside monitors. Draw lines on the rearward area of the vehicle passing through the following points: 250 mm (9.84 in) from both sides of the vehicle, and 0.5 m (1.64 ft), 1 m (3.28 ft), 2 m (6.56 ft), and 3 m (9.84 ft) from the rear end of the bumper.

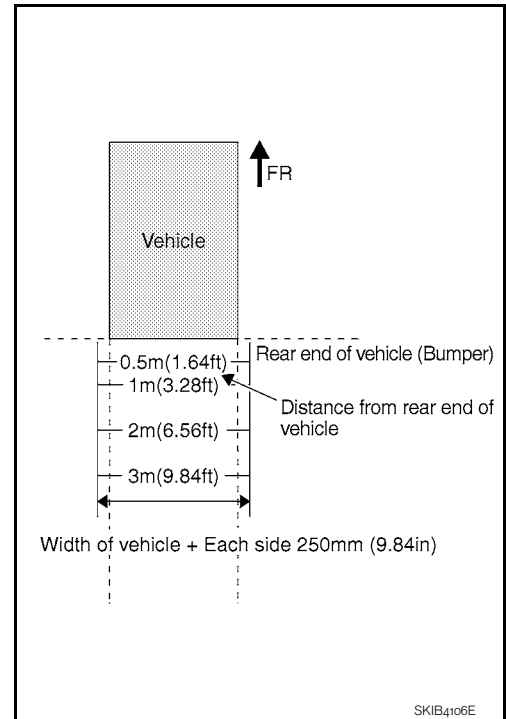


2. Connect CONSULT-III. Then touch "REAR VIEW CAMERA" on "SELECT SYSTEM" screen.

CAUTION:

Correct the guiding line with the engine stopped for safety.

3. Shift selector lever to R position.

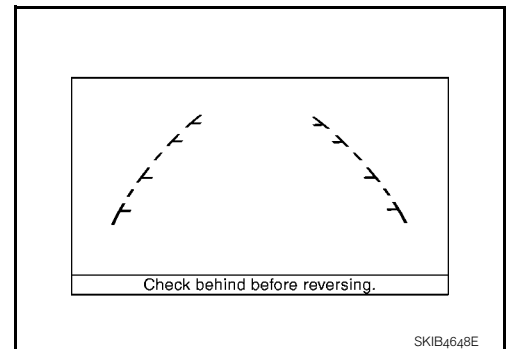

4. Touch "ADJ GUIDELINE POSITION" on "SELECT WORK ITEM" screen.

CAUTION:

Vehicle width guiding lines may move horizontally when starting "ADJ GUIDELINE POSITION" mode. It is normal.

5. Touch "X UP", "X DOWN", "Y UP", and "Y DOWN" so as to align with a correction line created, and then adjust the guiding lines.

Adjustment direction	ADJUST MONITOR	
LEFT/RIGHT	X VALUE ADJ	- 8 - 8
UP/DOWN	Y VALUE ADJ	- 8 - 8

6. Touch "SAVE" so as to fix the lines if the guiding lines align with the correction lines. Then end the correction by touching "END". GO TO 7 if the guiding lines do not align with the correction lines.
7. Touch "SELECT GUIDELINE PATTERN" on "SELECT WORK ITEM" screen.
8. Change the pattern of the guiding lines by touching "UP" or "DOWN". [Select from among 2 patterns ("PATTERN NO. 0" or "1") of the guiding lines.]
9. Fix the pattern of the guiding lines by touching "SAVE".

10. End the correction by touching "END".

CAUTION:

The change is not reflected at the next starting if "SAVE" is not touched if the setting value is changed on "SELECT GUIDELINE PATTERN" and "ADJ GUIDELINE POSITION".

A

B

C

D

E

F

G

H

I

J

K

L

M

AV

O

P

ANTENNA FEEDER (RADIO)

< ON-VEHICLE REPAIR >

[AUDIO WITH NAVIGATION]


ANTENNA FEEDER (RADIO)

Harness Layout

INFOID:000000000947192

NOTE:

As for right-hand drive vehicles, install GPS antenna feeder between the center console and the instrument panel in the reverse of left-handle drive vehicles.

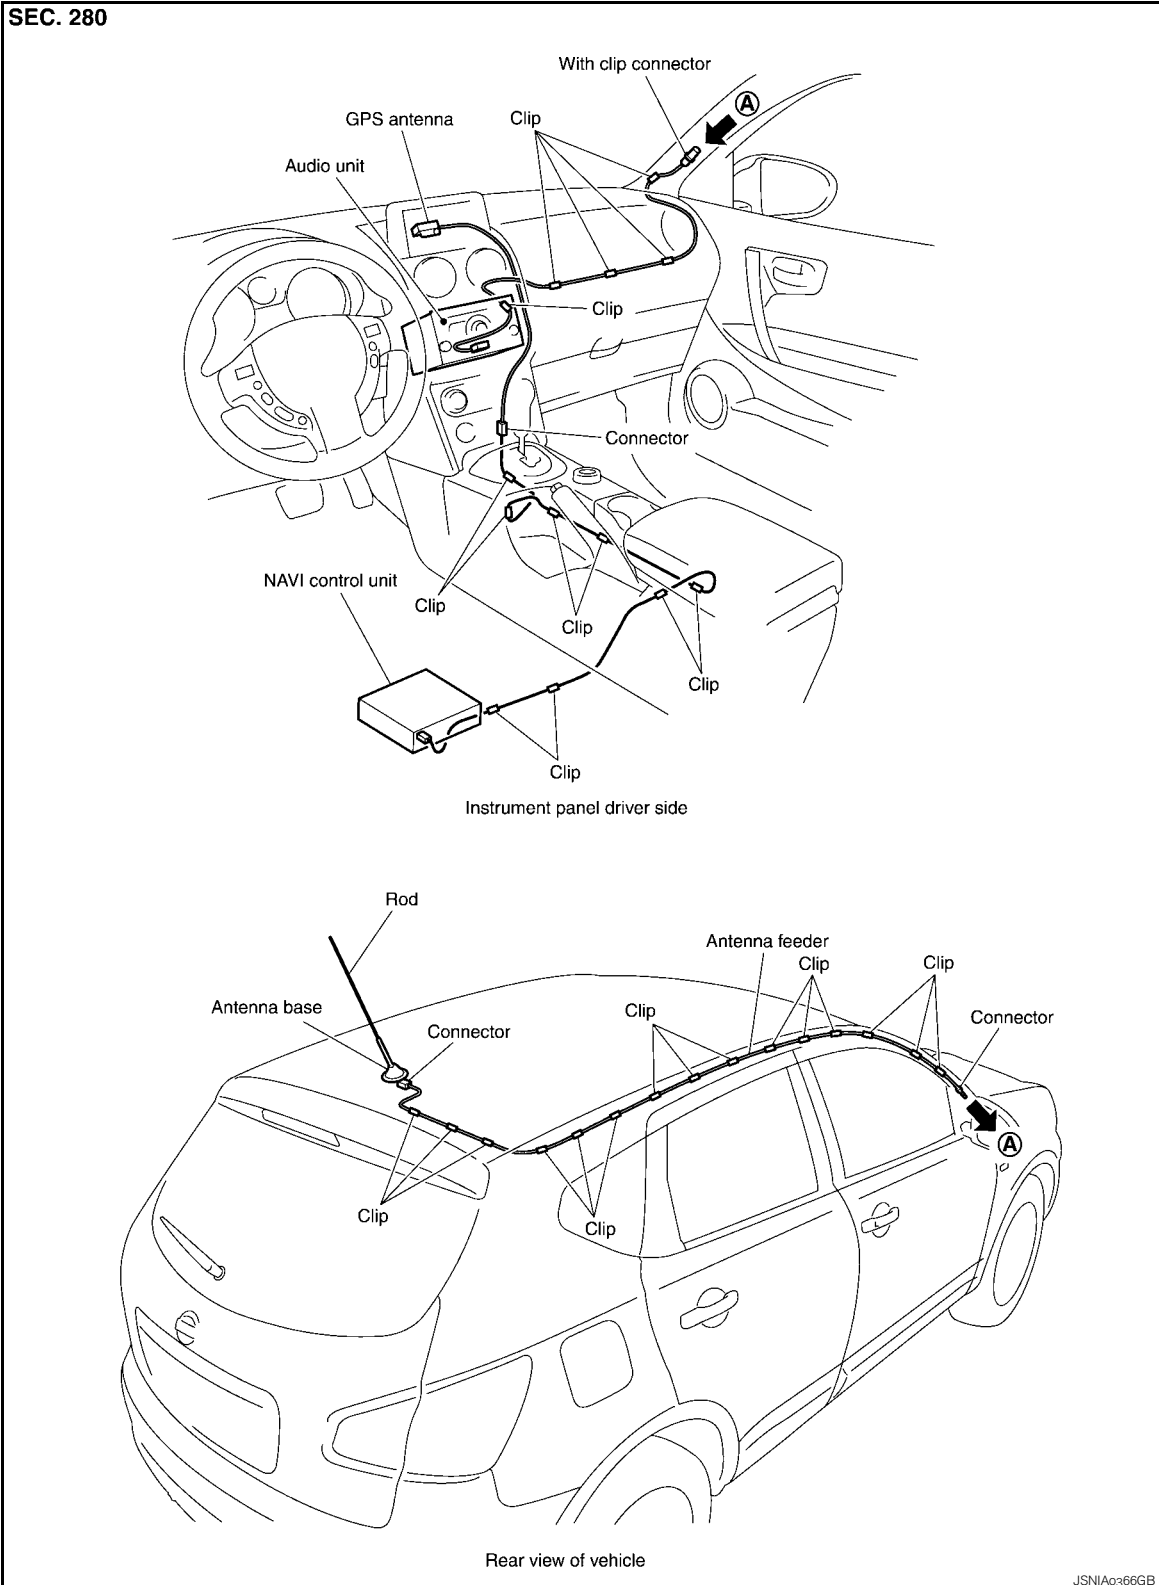

ANTENNA FEEDER (GPS)


Harness Layout

INFOID:000000000971220

NOTE:

As for right-hand drive vehicles, install GPS antenna feeder between the center console and the instrument panel in the reverse of left-handle drive vehicles.

SEC. 280

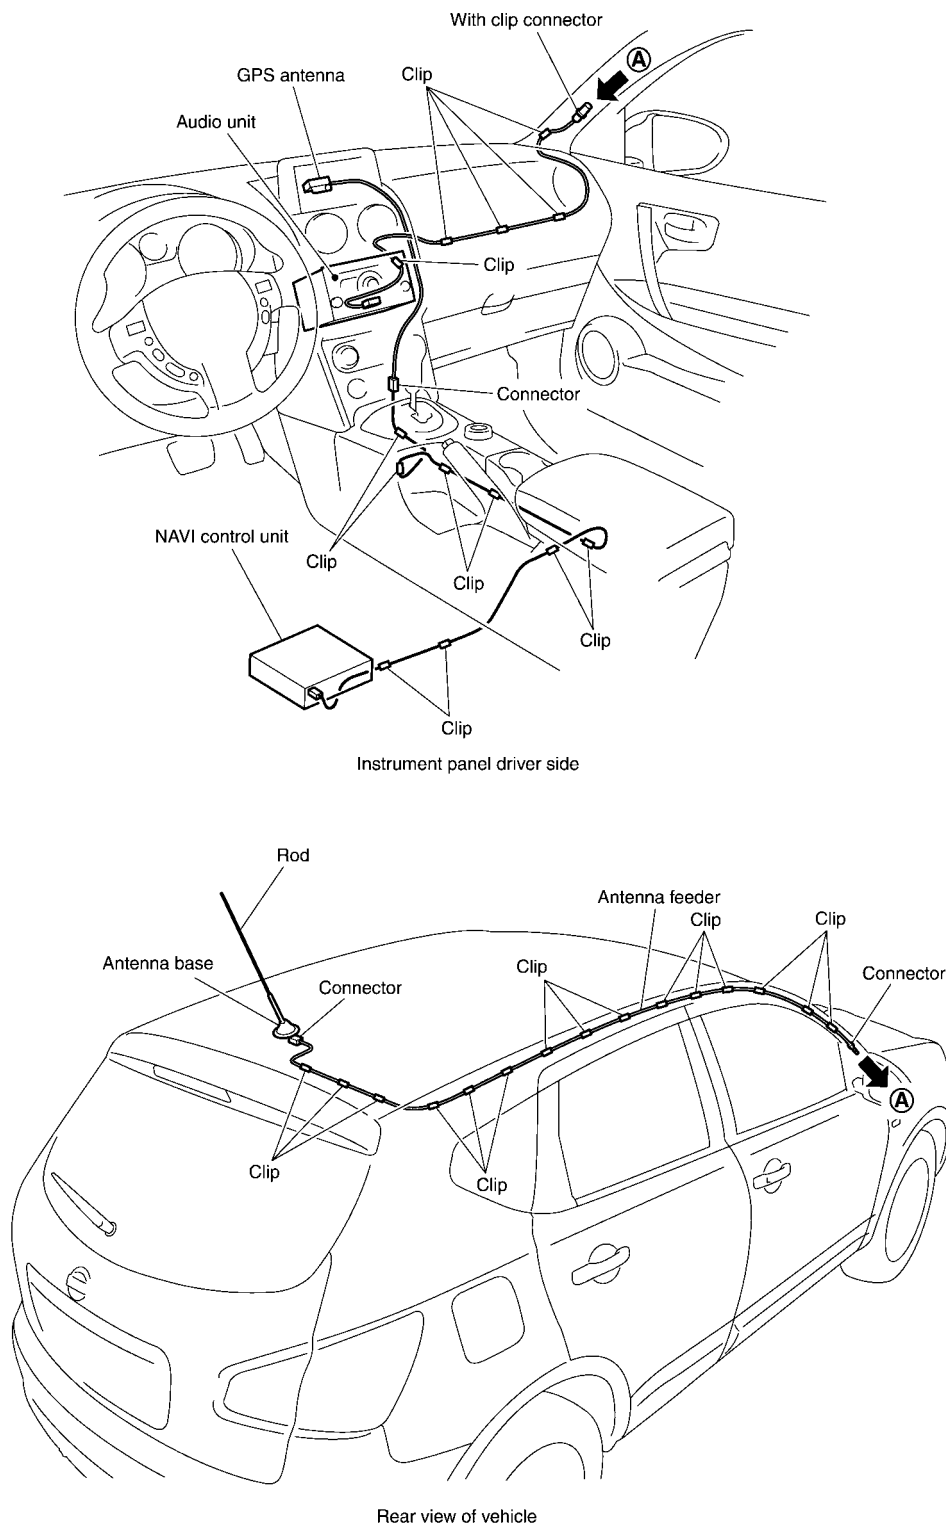

JSNIA0366GB