

SECTION MA

MAINTENANCE

CONTENTS

PREPARATION	4	AIR CLEANER FILTER : Removal and Installation	28
PREPARATION	4	ENGINE OIL	28
Special Service Tool	4	ENGINE OIL : Draining	28
Commercial Service Tool	4	ENGINE OIL : Refilling	29
Pre-Delivery Inspection Item	4	OIL FILTER	29
ON-VEHICLE MAINTENANCE	6	OIL FILTER : Removal and Installation	29
GENERAL MAINTENANCE	6	OIL FILTER : Inspection	30
General Maintenance	6	SPARK PLUG	30
PERIODIC MAINTENANCE	7	SPARK PLUG : Removal and Installation	30
Periodic Maintenance	7	SPARK PLUG : Inspection	30
RECOMMENDED FLUIDS AND LUBRICANTS	21	EVAP VAPOR LINES	31
Fluids and Lubricants	21	EVAP VAPOR LINES : Inspection	31
SAE Viscosity Number	21	ENGINE MAINTENANCE (MR20DE)	32
Engine Coolant Mixture Ratio	22	DRIVE BELTS	32
ENGINE MAINTENANCE (HR16DE)	24	DRIVE BELTS : Exploded View	32
DRIVE BELTS	24	DRIVE BELTS : Checking	32
DRIVE BELTS : Checking	24	DRIVE BELTS : Tension Adjustment	32
DRIVE BELTS : Tension Adjustment	24	ENGINE COOLANT	32
ENGINE COOLANT	25	ENGINE COOLANT : Inspection	32
ENGINE COOLANT : Inspection	25	ENGINE COOLANT : Draining	33
ENGINE COOLANT : Draining	25	ENGINE COOLANT : Refilling	33
ENGINE COOLANT : Refilling	26	ENGINE COOLANT : Flushing	34
ENGINE COOLANT : Flushing	27	RADIATOR CAP	35
RADIATOR CAP	27	RADIATOR CAP : Inspection	35
RADIATOR CAP : Inspection	27	RADIATOR	35
RADIATOR	27	RADIATOR : Inspection	35
RADIATOR : Inspection	27	FUEL LINES	35
FUEL LINES	28	FUEL LINES : Inspection	35
FUEL LINES : Inspection	28	AIR CLEANER FILTER	35
AIR CLEANER FILTER	28	AIR CLEANER FILTER : Removal and Installation	35

ENGINE OIL	36	HEADLAMP AIMING ADJUSTMENT (HALOGEN TYPE - LHD)	49
ENGINE OIL : Draining	36	HEADLAMP AIMING ADJUSTMENT (HALOGEN TYPE - LHD) : Description	49
ENGINE OIL : Refilling	36	HEADLAMP AIMING ADJUSTMENT (HALOGEN TYPE - LHD) : Aiming Adjustment Procedure	51
OIL FILTER	37	HEADLAMP AIMING ADJUSTMENT (HALOGEN TYPE - RHD)	52
OIL FILTER : Removal and Installation	37	HEADLAMP AIMING ADJUSTMENT (HALOGEN TYPE - RHD) : Description	52
OIL FILTER : Inspection	37	HEADLAMP AIMING ADJUSTMENT (HALOGEN TYPE - RHD) : Aiming Adjustment Procedure	53
SPARK PLUG	37	EXHAUST SYSTEM	54
SPARK PLUG : Removal and Installation	38	EXHAUST SYSTEM : Inspection	54
SPARK PLUG : Inspection	38	CVT FLUID	55
EVAP VAPOR LINES	38	CVT FLUID : Inspection	55
EVAP VAPOR LINES : Inspection	38	CVT FLUID : Changing	56
ENGINE MAINTENANCE (K9K)	39	GEAR OIL: RS5F92R	57
DRIVE BELTS	39	GEAR OIL: RS5F92R : Inspection	57
DRIVE BELTS : Exploded View	39	GEAR OIL: RS5F92R : Draining	57
DRIVE BELTS : Inspection and Adjustment	39	GEAR OIL: RS5F92R : Refilling	57
ENGINE COOLANT	39	GEAR OIL: RS6F94R	57
ENGINE COOLANT : Inspection	39	GEAR OIL: RS6F94R : Inspection	57
ENGINE COOLANT : Draining	40	GEAR OIL: RS6F94R : Draining	58
ENGINE COOLANT : Refilling	40	GEAR OIL: RS6F94R : Refilling	58
ENGINE COOLANT : Flushing	41	GEAR OIL: RS6F52A	58
RADIATOR CAP	41	GEAR OIL: RS6F52A : Inspection	58
RADIATOR CAP : Inspection	41	GEAR OIL: RS6F52A : Draining	59
RADIATOR	42	GEAR OIL: RS6F52A : Refilling	59
RADIATOR : Inspection	42	CLUTCH FLUID	59
FUEL LINES	42	CLUTCH FLUID : Inspection	59
FUEL LINES : Inspection	42	TRANSFER OIL	60
AIR CLEANER FILTER	42	TRANSFER OIL : Inspection	60
AIR CLEANER FILTER : Removal and Installation	42	TRANSFER OIL : Draining	60
ENGINE OIL	43	TRANSFER OIL : Refilling	60
ENGINE OIL : Draining	43	REAR PROPELLER SHAFT	61
ENGINE OIL : Refilling	43	REAR PROPELLER SHAFT : Inspection	61
OIL FILTER	43	REAR DIFFERENTIAL GEAR OIL	61
OIL FILTER : Replacement	43	REAR DIFFERENTIAL GEAR OIL : Inspection	61
CHASSIS MAINTENANCE	45	REAR DIFFERENTIAL GEAR OIL : Draining	62
HEADLAMP AIMING ADJUSTMENT (XENON TYPE - LHD)	45	REAR DIFFERENTIAL GEAR OIL : Refilling	62
HEADLAMP AIMING ADJUSTMENT (XENON TYPE - LHD) : Description	45	WHEELS (BONDING WEIGHT TYPE)	62
HEADLAMP AIMING ADJUSTMENT (XENON TYPE - LHD) : Aiming Adjustment Procedure	46	WHEELS (BONDING WEIGHT TYPE) : Adjustment	62
HEADLAMP AIMING ADJUSTMENT (XENON TYPE - RHD)	47	BRAKE FLUID LEVEL AND LEAKS	63
HEADLAMP AIMING ADJUSTMENT (XENON TYPE - RHD) : Description	47	BRAKE FLUID LEVEL AND LEAKS : Inspection	63
HEADLAMP AIMING ADJUSTMENT (XENON TYPE - RHD) : Aiming Adjustment Procedure	48	BRAKE LINES AND CABLES	63
		BRAKE LINES AND CABLES : Inspection	63
		BRAKE FLUID	

BRAKE FLUID : Changing	63	DRIVE BELTS (MR20DE)	68
DISC BRAKE	63	DRIVE BELTS (MR20DE) : Drive Belt	68
DISC BRAKE : Inspection	63	DRIVE BELTS (K9K)	68
DISC BRAKE : Front Disc Brake	64	DRIVE BELTS (K9K) : Drive Belt	68
DISC BRAKE : Rear Disc Brake	64	ENGINE COOLANT (HR16DE)	68
STEERING GEAR AND LINKAGE	64	ENGINE COOLANT (HR16DE) : Periodical Main- tenance Specification	68
STEERING GEAR AND LINKAGE : Inspection	64	ENGINE COOLANT (MR20DE)	69
AXLE AND SUSPENSION PARTS	65	ENGINE COOLANT (MR20DE) : Periodical Main- tenance Specification	69
AXLE AND SUSPENSION PARTS : Inspection	65	ENGINE COOLANT (K9K)	69
DRIVE SHAFT	65	ENGINE COOLANT (K9K) : Periodical Maintenance Specification	69
DRIVE SHAFT : Inspection	65	ENGINE OIL (HR16DE)	69
BODY MAINTENANCE	66	ENGINE OIL (HR16DE) : Periodical Maintenance Specification	69
LOCKS, HINGES AND HOOD LATCH	66	ENGINE OIL (MR20DE)	69
LOCKS, HINGES AND HOOD LATCH : Lubricat- ing	66	ENGINE OIL (MR20DE) : Periodical Maintenance Specification	69
SEAT BELT, BUCKLES, RETRACTORS, AN- CHORS AND ADJUSTERS	66	ENGINE OIL (K9K)	69
SEAT BELT, BUCKLES, RETRACTORS, AN- CHORS AND ADJUSTERS : Inspection	66	ENGINE OIL (K9K) : Periodical Maintenance Specification	69
BODY CORROSION	66	SPARK PLUG (HR16DE)	69
BODY CORROSION : Checking Body Corrosion...	66	SPARK PLUG (HR16DE) : Spark Plug	69
SERVICE DATA AND SPECIFICATIONS (SDS)	68	SPARK PLUG (MR20DE)	70
SERVICE DATA AND SPECIFICATIONS (SDS)	68	SPARK PLUG (MR20DE) : Spark Plug	70
DRIVE BELTS (HR16DE)	68	ROAD WHEEL	70
DRIVE BELTS (HR16DE) : Drive Belts	68	ROAD WHEEL : Road Wheel	70

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O

PREPARATION




< PREPARATION >

PREPARATION

PREPARATION


Special Service Tool

INFOID:000000001080771

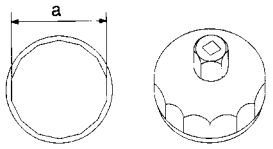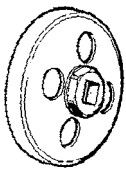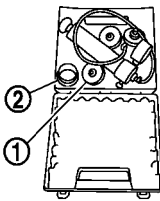Tool number (RENAULT Tool number) Tool name		Description
KV10115801 (—) Oil filter wrench	 S-NT375	Removing and installing oil filter (HR16DE and MR20DE engine models) a: 64.3 mm (2.531 in)
KV113C0010 (Mot.1329) Oil filter wrench	 MBIBo36gE	Removing and installing oil filter (K9K engine models)
— (M.S. 554-07) Reservoir tank cap tester 1. Adapter A — (M.S. 554-01) 2. Adapter B — (M.S. 554-06)	 E1BIA0058ZZ	Leak checking Checking reservoir tank cap

Commercial Service Tool

INFOID:000000001080772

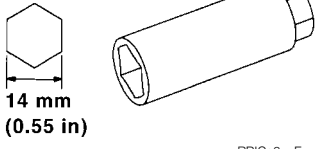Tool name		Description
Spark plug wrench	 PBIC3874E	Removing and installing spark plug (HR16DE and MR20DE engine models)

Pre-Delivery Inspection Item

INFOID:000000001080773

Shown below are Pre-delivery Inspection Items required for the new vehicle. It is recommended that necessary items other than those listed here be added, paying due regard to the conditions in each country.

PREPARATION

< PREPARATION >

Perform applicable items on each model. Consult text of this section for specifications.



NEW CAR PRE-DELIVERY INSPECTION

Customer name:	Model:	
Address:	VIN:	
	Engine code & no.:	
	Registration number:	Delivery date:
Dealer name:	Key no.:	
Code:	Radio code:	

No.	Operation	No.	Operation
1	☐ Install vehicle protection kit		
Where applicable:			
2	☐ Fit all accessories ordered (e.g. towbar, audio, navigation, air conditioner, styling kit)		
UNDER HOOD		ROAD TEST	
3	☐ Check coolant level and cooling system for leaks	38	☐ Check clutch operation
4	☐ Charge battery and check terminals for condition	39	☐ Check foot brake operation
5	☐ Check drive belts tension	40	☐ Check parking brake operation
6	☐ Check fuel filter for water or dust (diesel only) and fuel system for leaks	41	☐ Check steering operation, self-centering and steering wheel alignment
7	☐ Check engine oil level and for oil leaks	42	☐ Check engine performance
8	☐ Check brake and clutch fluid levels and fluid lines for leaks	43	☐ Check for squeaks, rattles and noise from interior, suspension and brakes
9	☐ Check and top up washer reservoirs	44	☐ Check heating, ventilation and air conditioning operation
Where applicable:		45	☐ Check Audio and Navigation system operation
10	☐ Check power steering fluid level and fluid lines for leaks	46	☐ Check odometer and trip meter operation and cancelling
11	☐ Check air conditioning system for gas leaks	47	☐ Check instruments for operation
INSIDE AND OUTSIDE		Where applicable:	
12	☐ Install transit fuse if removed for vehicle storage and perform initialization of disabled electrical systems	48	☐ Check automatic transmission/ transaxle/ CVT shift pattern and kickdown operation
13	☐ Check instruments, gauges, lamps, horn and accessories for operation	49	☐ Check cruise control and navigation system operation
14	☐ Check wipers and washers for operation and adjustment	WITH ENGINE AT OPERATING TEMPERATURE	
15	☐ Check interior and door mirrors and sun visors for operation	50	☐ Check idle speed
16	☐ Set radio code and set clock	Where applicable:	
17	☐ Check parking brake adjustment	51	☐ Check automatic transmission/ transaxle/ CVT oil level
18	☐ Check clutch pedal adjustment	FINAL INSPECTION - TECHNICIAN	
19	☐ Check steering lock operation	52	☐ Remove vehicle protection kit
20	☐ Check seat adjusters and seat belts for operation	53	☐ Fit interior mats and wheel covers
21	☐ Check electric window operation and alignment, including 1 touch up and down (if applicable). Perform initialization if required	54	☐ Check for interior and exterior metal and paint damage
22	☐ Check mouldings, trim and fittings for fit and alignment	55	☐ Wash, clean interior and exterior
23	☐ Check weatherstrips for fit and adhesion	The above checks have been completed, any faults found have been corrected as necessary and the vehicle passed fit for delivery	
24	☐ Check hood, trunk lid, door panels and fuel lid for fit and alignment	Date: _____ Job no.: _____	
25	☐ Check latches, keys, remote key, door locks and remote trunk lid and fuel lid release for operation. Ensure child locks are off	Technician's signature: _____	
26	☐ Check wheel nut torques	FINAL INSPECTION - SALES EXECUTIVE	
27	☐ Check tire pressure (incl. spare tire)	56	☐ Confirm all accessories ordered have been fitted
28	☐ Check tool kit and jack for operation	57	☐ Check content of vehicle owner's manuals pack, operation manuals for accessories and Quick Reference Guide (if applicable)
29	☐ Remove towing eye from bumper (if applicable)	58	☐ Complete warranty booklet record
Where applicable:			
30	☐ Check automatic transmission starter inhibitor		
31	☐ Check sunroof for operation and alignment		
32	☐ Set up Trip Computer service reminder		
UNDER VEHICLE			
33	☐ Check manual transmission/ transaxle, differential and transfer box for oil level and oil leaks	I confirm that I am satisfied with the condition of the vehicle and it is ready for delivery to the customer	
34	☐ Tighten bolts and nuts steering linkage and gear box, axle/suspension parts, propeller shaft and exhaust system	Date: _____	
35	☐ Check brake and clutch lines, and oil/fluid reservoirs for leaks	Sales executive signature: _____	
Where applicable:			
36	☐ Remove front suspension spacer blocks		
37	☐ Check body mountings torque		

SAIA1597E

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O

MA

GENERAL MAINTENANCE

< ON-VEHICLE MAINTENANCE >

ON-VEHICLE MAINTENANCE

GENERAL MAINTENANCE

General Maintenance

INFOID:000000001080774

General maintenance includes those items which should be checked during the normal day-to-day operation of the vehicle. They are essential if the vehicle is to continue operating properly. The owners can perform the checks and inspections themselves or they can have their NISSAN dealers do them for a nominal charge.

OUTSIDE THE VEHICLE

The maintenance items listed here should be performed from time to time, unless otherwise specified.

Item		Reference page
Tires	Check the pressure with a gauge periodically when at a service station, including the spare, and adjust to the specified pressure if necessary. Check carefully for damage, cuts or excessive wear.	—
Windshield wiper blades	Check for cracks or wear if not functioning correctly.	—
Doors and engine hood	Check that all doors, the engine hood, the trunk lid and back door operate properly. Also ensure that all latches lock securely. Lubricate if necessary. Make sure that the secondary latch keeps the hood from opening when the primary latch is released. When driving in areas using road salt or other corrosive materials, check for lubrication frequently.	MA-66
Tire rotation	Tires should be rotated every 10,000 km (6,000 miles) for 2WD models and every 5,000 km (3,000 miles) for 4WD models.	MA-62

INSIDE THE VEHICLE

The maintenance items listed here should be checked on a regular basis, such as when performing periodic maintenance, cleaning the vehicle, etc.

Item		Reference page
Lamps	Make sure that the headlamps, stop lamps, tail lamps, turn signal lamps, and other lamps are all operating properly and installed securely. Also check headlamp aim.	—
Warning lamps and chimes	Make sure that all warning lamps and buzzers/chimes are operating properly.	—
Steering wheel	Check that it has the specified play. Check for changes in the steering conditions, such as excessive free play, hard steering or strange noises. Free play: Less than 35 mm (1.38 in)	—
Seat belts	Check that all parts of the seat belt system (e.g. buckles, anchors, adjusters and retractors) operate properly and smoothly, and are installed securely. Check the belt webbing for cuts, fraying, wear or damage.	MA-66

UNDER THE HOOD AND VEHICLE

The maintenance items listed here should be checked periodically e.g. each time you check the engine oil or refuel.

Item		Reference page
Windshield washer fluid	Check that there is adequate fluid in the tank.	—
Engine coolant level	Check the coolant level when the engine is cold.	MA-25 (HR)
		MA-32 (MR)
		MA-39 (K9K)
Engine oil level	Check the level after parking the vehicle on a level spot and turning off the engine.	LU-6 (HR)
		LU-14 (MR)
		LU-23 (K9K)
Brake and clutch fluid levels	Make sure that the brake and clutch fluid levels are between the "MAX" and "MIN" lines on the reservoir.	MA-63 , MA-59
Battery	Check the fluid level in each cell. It should be between the "MAX" and "MIN" lines.	—

PERIODIC MAINTENANCE

< ON-VEHICLE MAINTENANCE >

PERIODIC MAINTENANCE

Periodic Maintenance

INFOID:000000001080775

The following tables show the normal maintenance schedule. Depending upon weather and atmospheric conditions, varying road surfaces, individual driving habits and vehicle usage, additional or more frequent maintenance may be required.

Periodic maintenance beyond the last period shown on the tables requires similar maintenance.

ENGINE AND EMISSION CONTROL MAINTENANCE (HR16DE PETROL ENGINE)

(Annual Mileage <30,000 Km/year)

Abbreviations: I = Inspect and correct or replace as necessary, R = Replace, [] = At the specified mileage only.

MAINTENANCE OPERATION		MAINTENANCE INTERVAL				Refer- ence page
Perform on a kilometer basis, but on an annual basis when driving less than 30,000 km (18,000 miles) per 2 years.	km x 1,000 (Miles x 1,000) Months	30 (18) 24	60 (36) 48	90 (54) 72	120 (72) 96	
Engine compartment and under vehicle						
Intake and exhaust valve clearance	See NOTE (1)					EM-21
Drive belt	See NOTE (2)	I	I	I	I	MA-24
Engine oil (Use recommended oil.)★		R	R	R	R	MA-28
Engine oil filter (Use genuine NISSAN part or equivalent)★		R	R	R	R	MA-29
Engine coolant (Use genuine NISSAN Engine Coolant or equivalent in its quality.)	See NOTE (3)	I	I	R	I	MA-25
Cooling system		I	I	I	I	MA-25 , MA-27 , MA-27
Fuel and EVAP vapor lines		I	I	I	I	MA-28 , MA-31
Air cleaner filter★			R		R	MA-28
Fuel filter (In-tank type)	See NOTE (4)					—
Spark plugs (Platinum-tipped type)	See NOTE (5)	[R]*1	[R]*1	[R]	[R]*1	MA-30
Heated oxygen sensor 1	See NOTE (6)					EC-573

NOTE:

- ★ Maintenance items with “★” should be performed more frequently according to “Maintenance Under Severe Driving Conditions”.
- (1) Periodic maintenance is not required. However, if valve noise increases, check valve clearance.
- (2) Replace the drive belt if found damaged.
- (3) First replace at 90,000 Km (54,000 miles)/60 months, then every 60,000 km (36,000 miles)/48 months. Perform "I" (Checking the mixture ratio and correcting the mixture ratio if necessary) at the middle of replacement interval.
- (4) Fuel filter is maintenance-free. For service procedures, refer to FL section.
- (5) Intervals marked with “*1” are for Russia and Ukraine only.
- (6) Perform only according to “Maintenance Under Severe Driving conditions” for models without Euro-OBD system. For models with Euro-OBD system, periodic maintenance is not required.

CHASSIS AND BODY MAINTENANCE (HR16DE PETROL ENGINE)

(Annual Mileage <30,000 Km/year)

PERIODIC MAINTENANCE

< ON-VEHICLE MAINTENANCE >

Abbreviations: I = Inspect and correct or replace as necessary, R = Replace, L = Lubricate.

MAINTENANCE OPERATION		MAINTENANCE INTERVAL				Reference page
Perform on a kilometer basis, but on an annual basis when driving less than 30,000 km (18,000 miles) per 2 years.	km x 1,000 (Miles x 1,000) Months	30 (18) 24	60 (36) 48	90 (54) 72	120 (72) 96	
Underhood and under vehicle						
Headlamp aiming		I	I	I	I	MA-45, MA-47, MA-49, MA-52
Brake & clutch, systems and fluid (For level & leaks)		I	I	I	I	MA-63, MA-63
Brake fluid★		R	R	R	R	MA-63
Brake booster vacuum hoses, connections & check valve		I	I	I	I	BR-14, BR-58
Manual transaxle gear oil (For level & leaks)		I	I	I	I	MA-57
Steering gear & linkage, axle & suspension parts, front drive shafts & exhaust system★		I	I	I	I	MA-64, MA-65, MA-65, MA-54
Wheel alignment (If necessary, rotate & balance wheels)		I	I	I	I	FSU-7, RSU-5, MA-62
Brake pads, rotors & other brake components★		I	I	I	I	MA-63, BR-15, BR-59, BR-16, BR-60
Foot brake, parking brake & clutch (For free play, stroke & operation)		I	I	I	I	BR-8, BR-52, PB-2, CL-5
Air conditioner filter★		R	R	R	R	VTL-18, VTL-69
Body corrosion	See NOTE (1)					MA-66

NOTE:

- (1) Inspect once per year.
- ★ Maintenance items with “★” should be performed more frequently according to “Maintenance Under Severe Driving Conditions”.

ENGINE AND EMISSION CONTROL MAINTENANCE (MR20DE PETROL ENGINE) (Annual Mileage <30,000 Km/year)

Abbreviations: I = Inspect and correct or replace as necessary, R = Replace, [] = At the specified mileage only.

MAINTENANCE OPERATION			MAINTENANCE INTERVAL								Ref- er- ence page
Perform on a kilometer basis, but on an annual basis when driving less than 15,000 km (9,000 miles) per year.	km x 1,000	15	30	45	60	75	90	105	120		
	(Miles x 1,000)	(9)	(18)	(27)	(36)	(45)	(54)	(63)	(72)		
	Months	12	24	36	48	60	72	84	96		
Engine compartment and under vehicle											
Intake and exhaust valve clearance	See NOTE (1)									EM-139	

PERIODIC MAINTENANCE

< ON-VEHICLE MAINTENANCE >

MAINTENANCE OPERATION		MAINTENANCE INTERVAL								Ref- er- ence page
	km x 1,000 (Miles x 1,000) Months	15 (9) 12	30 (18) 24	45 (27) 36	60 (36) 48	75 (45) 60	90 (54) 72	105 (63) 84	120 (72) 96	
Perform on a kilometer basis, but on an annual basis when driving less than 15,000 km (9,000 miles) per year.										
Drive belt	See NOTE (2)		I		I		I		I	MA-32
Engine oil (Use recommended oil.)★			R		R		R		R	MA-36
Engine oil filter (Use genuine NISSAN part or equivalent)★			R		R		R		R	MA-37
Engine coolant (Use genuine NISSAN Engine Coolant or equivalent in its quality.)	See NOTE (3)		I		I		R		I	MA-33
Cooling system			I		I		I		I	MA-32 , MA-35 , MA-35
Fuel and EVAP vapor lines			I		I		I		I	MA-35 , MA-38
Air cleaner filter★					R				R	MA-35
Fuel filter (In-tank type)	See NOTE (4)									—
Spark plugs (Platinum-tipped type)	See NOTE (5)		[R]*1		[R]*1		[R]		[R]*1	MA-38
Heated oxygen sensor 1	See NOTE (6)									EC-1193

NOTE:

- ★ Maintenance items with “★” should be performed more frequently according to “Maintenance Under Severe Driving Conditions”.
- (1) Periodic maintenance is not required. However, if valve noise increases, check valve clearance.
- (2) Replace the drive belt if found damaged or if the auto belt tensioner reading reaches the maximum limit.
- (3) First replace at 90,000 Km (54,000 miles)/60 months, then every 60,000 km (36,000 miles)/48 months. Perform "I" (Checking the mixture ratio and correcting the mixture ratio if necessary) at the middle of replacement interval.
- (4) Fuel filter is maintenance-free. For service procedures, refer to FL section.
- (5) Intervals marked with “*1” are for Russia and Ukraine only.
- (6) Perform only according to “Maintenance Under Severe Driving conditions” for models without Euro-OBD system. For models with Euro-OBD system, periodic maintenance is not required.

CHASSIS AND BODY MAINTENANCE (MR20DE PETROL ENGINE) (Annual Mileage <30,000 Km/year)

PERIODIC MAINTENANCE

< ON-VEHICLE MAINTENANCE >

Abbreviations: I = Inspect and correct or replace as necessary, R = Replace.

MAINTENANCE OPERATION		MAINTENANCE INTERVAL								Reference page
Perform on a kilometer basis, but on an annual basis when driving less than 15,000 km (9,000 miles) per 2 years.	km x 1,000 (Miles x 1,000) Months	15 (9) 12	30 (18) 24	45 (27) 36	60 (36) 48	75 (45) 60	90 (54) 72	105 (63) 84	120 (72) 96	
Underhood and under vehicle										
Headlamp aiming			I		I		I		I	MA-45, MA-47, MA-49, MA-52
Brake & clutch, systems and fluid (For level & leaks)			I		I		I		I	MA-63, MA-63
Brake fluid★			R		R		R		R	MA-63
Brake booster vacuum hoses, connections & check valve			I		I		I		I	BR-14, BR-58
CVT fluid (For level & leaks)	See NOTE (1)		I		I		I		I	MA-55, MA-56
Manual transaxle gear oil (For level & leaks)			I		I		I		I	MA-57 (2WD) MA-58 (4WD)
Transfer oil (For level & leaks)		I	I	I	I	I	I	I	I	MA-60
Differential gear oil (For level & leaks or erplace★			I		I		I		I	MA-61
Steering gear & linkage, axle & suspension parts, propeller shaft, drive shafts & exhaust system★	See NOTE (2)	I*1	I	I*1	I	I*1	I	I*1	I	MA-64, MA-65, MA-65, MA-54
Wheel alignment (If necessary, rotate & balance wheels)			I		I		I		I	FSU-7, RSU-5, MA-62
Brake pads, rotors & other brake components★			I		I		I		I	MA-63, BR-15, BR-59, BR-16, BR-60
Foot brake, parking brake & clutch (For free play, stroke & operation)			I		I		I		I	BR-8, BR-52, PB-2, CL-5
Air conditioner filter★			R		R		R		R	VTL-18, VTL-69
Body corrosion	See NOTE (3)									MA-66

NOTE:

- (1) If towing a trailer, using a camper or a car-top carrier, or driving on rough or muddy roads, inspect CVT fluid deterioration with Consult-III every 90,000 km (54,000 miles), then change CVT fluid NS-2 if necessary. And if Consult-III is not available, change (do not just inspect) CVT fluid NS-2 every 90,000 km (54,000 miles). Using transmission fluid other than Genuine NISSAN CVT fluid NS-2 will damage the CVT, which is not covered by the warranty.
- (2) Intervals marked with “*1” are only for drive shaft inspection for 4WD models.
- (3) Inspect once per year.
- ★ Maintenance items with “★” should be performed more frequently according to “Maintenance Under Severe Driving Conditions”.

ENGINE AND EMISSION CONTROL MAINTENANCE (K9K DIESEL ENGINE)

PERIODIC MAINTENANCE

< ON-VEHICLE MAINTENANCE >

(Annual Mileage <30,000 Km/year)

Abbreviations: I = Inspect and correct or replace as necessary, R = Replace, D = Check filter and drain water

MAINTENANCE OPERATION		MAINTENANCE INTERVAL						Refer- ence page
Perform on a kilometer basis, but on an annual basis when driving less than 20,000 km (12,000 miles) per year	km x 1,000 (Miles x 1,000) Months	20 (12) 12	40 (24) 24	60 (36) 36	80 (48) 48	100 (60) 60	120 (72) 72	
Engine compartment and under vehicle								
Engine oil (Use recommended oil.)★		R	R	R	R	R	R	MA-43
Engine oil filter (Use recommended oil filter)★		R	R	R	R	R	R	MA-43
Timing belt★	See NOTE (1)	Replace every 120,000 km/60 months						EM-287
Drive belt	See NOTE (2)	I	I	I	I	I	R	MA-39
Cooling system		I	I	I	I	I	I	MA-39 , MA-41 , MA-42
Engine coolant (Use genuine Nissan Engine Coolant or equivalent in its quality.)	See NOTE (3)		I			R		MA-40
Air cleaner filter ★			R		R		R	MA-42
Intake & exhaust valve clearance	See NOTE (4)	Inspect every 100,000 km						EM-262
Fuel lines		I	I	I	I	I	I	MA-42
Fuel filter★	See NOTE (5)	D	R	D	R	D	R	FL-23 , FL-23

NOTE:

- ★ Maintenance items with “★” should be performed more frequently according to “Maintenance Under Severe Driving Conditions”.
- (1) The replacement interval for the timing belt is the maximum lifespan which should not be exceeded. Replace the timing belt if it comes into contact with fuel. The frequency of replacement should be adapted depending on vehicle usage. See “Maintenance Under Severe Driving Conditions”.
- (2) Replace every 120,000 km/maximum 60 months. Replace drive belt if it comes into contact with fuel or damage is found during inspection.
- (3) First replace at 100,000 Km (60,000 miles)/60 months, then every 60,000Km (36,000 miles)/36 months. After first replacement, perform "I" (checking the mixture ratio and correcting the mixture ratio if necessary) at the middle of replacement interval.
- (4) If valve noise increases, check valve clearance.
- (5) Replace every 40,000 km/48 months.

CHASSIS AND BODY MAINTENANCE (K9K DIESEL ENGINE)

(Annual Mileage <30,000 Km/year)

Abbreviations: I = Inspect and correct or replace as necessary, R = Replace, L = Lubricate.

MAINTENANCE OPERATION		MAINTENANCE INTERVAL						Reference page
Perform on a kilometer basis, but on an annual basis when driving less than 20,000 km (12,000 miles) per year	km x 1,000	20	40	60	80	100	120	
	(Miles x 1,000)	(12)	(24)	(36)	(48)	(60)	(72)	
	Months	12	24	36	48	60	72	
Underhood and under vehicle								
Headlamp aiming		I	I	I	I	I	I	MA-45 , MA-47 , MA-49 , MA-52
Brake & clutch, systems and fluid (For level & leaks)		I	I	I	I	I	I	MA-63 , MA-63

PERIODIC MAINTENANCE

< ON-VEHICLE MAINTENANCE >

MAINTENANCE OPERATION		MAINTENANCE INTERVAL						Reference page
Perform on a kilometer basis, but on an annual basis when driving less than 20,000 km (12,000 miles) per year	km x 1,000 (Miles x 1,000) Months	20 (12) 12	40 (24) 24	60 (36) 36	80 (48) 48	100 (60) 60	120 (72) 72	
Brake fluid★			R		R		R	MA-63
Brake booster vacuum hoses, connections & check valve			I		I		I	BR-14 , BR-58
Manual transaxle gear oil (For leaks)		I	I	I	I	I	I	MA-57
Steering gear & linkage, axle & suspension parts, front drive shafts & exhaust system★			I		I		I	MA-64 , MA-65 , MA-65 , MA-54
Wheel alignment (If necessary, rotate & balance wheels)		I	I	I	I	I	I	FSU-7 , RSU-5 , MA-62
Brake pads, rotors & other brake components★		I	I	I	I	I	I	MA-63 , BR-15 , BR-59 , BR-16 , BR-60
Foot brake, parking brake & clutch (For free play, stroke & operation)		I	I	I	I	I	I	BR-8 , BR-52 , PB-2 , CL-5
Air conditioner filter★		R	R	R	R	R	R	VTL-18 , VTL-69
Body corrosion	See NOTE (1)							MA-66

NOTE:

- (1) Inspect once per year.
- ★ Maintenance items with “★” should be performed more frequently according to “Maintenance Under Severe Driving Conditions”.

MAINTENANCE UNDER SEVERE DRIVING CONDITIONS

(Annual Mileage <30,000 Km/year)

The maintenance intervals shown on the preceding pages are for normal operating conditions. If the vehicle is mainly operated under severe driving conditions as shown below, more frequent maintenance must be performed on the following items as shown in the table.

Severe driving conditions

A — Driving in dusty conditions

B — Driving repeatedly short distances or door to door driving

C — Towing a trailer or caravan

D — Extensive idling or urban driving

E — Driving in extremely adverse weather conditions or in areas where ambient temperatures are either extremely low or extremely high

F — Driving in high humidity areas or in mountainous areas

G — Driving in areas using salt or other corrosive materials

H — Driving on rough and/or muddy roads or in the desert

I — Driving with frequent use of braking or in mountainous areas

J — Frequent off road use or driving in water

K — Sustained high speed driving

L — For models without Euro-OBD system (For petrol engine models)

L — Repeated short journeys, cold engine at low temperature (For K9K diesel engine models)

PERIODIC MAINTENANCE

< ON-VEHICLE MAINTENANCE >

Maintenance operation: Check = Check and correct or replace as necessary.

Driving condition													Maintenance item			Maintenance operation	Maintenance interval	Reference page
A	.	.	.	.	.	.	.	.	.	.	.	.	Air cleaner filter	Petrol models	HR	Re- place	Every 30,000 km (18,000 miles) or 24 months	MA-28
	.	.	.	.	.	.	.	.	.	.	.	MR		MA-35				
	.	.	.	.	.	.	.	.	.	.	.	Diesel models		K9K	MA-42			
A	B	C	D	.	.	.	.	.	.	.	.	.	Engine oil & engine oil filter	Petrol models	HR	Re- place	Every 15,000 km (9,000 miles) or 12 months	MA-28 , MA-29
	.	.	.	.	.	.	.	.	.	.	.	MR		MA-36 , MA-37				
	.	.	.	.	.	.	.	.	.	.	.	.		Diesel models	K9K		Every 10,000 km (6,000 miles) or 6 months	MA-43 , MA-43
.	.	C	.	.	.	.	.	H	.	.	.	.	Fuel filter	Diesel models	K9K	Check & drain water	Every 15,000 km (9,000 miles) or 12 months	FL-23 ,
.	.	.	.	.	.	.	.	.	.	.	.	Re- place				Every 30,000 km (18,000 miles) or 24 months	FL-23	
.	.	.	.	.	.	.	.	.	.	.	.	L	Heated oxgen sensor 1	Petrol models	HR	Inspect	Every 30,000 km (18,000 miles) or 24 months	EC-573
.	.	.	.	.	.	.	.	.	.	.	.	MR		EC-1193				
A	B	.	D	.	.	.	.	H	.	.	.	L	Timing belt	Diesel models	K9K	Re- place	More frequently	EM-287
.	.	.	.	.	.	.	F	.	.	.	.	.	Brake fluid	Petrol models	HR	Re- place	Every 15,000 km (9,000 miles) or 12 months	MA-63
.	.	.	.	.	.	.	.	.	.	.	.	.			MR		Every 20,000 km (12,000 miles) or 12 months	
.	.	.	.	.	.	.	.	.	.	.	.	.	Diesel models	K9K				
.	.	C	.	.	.	.	.	H	.	.	.	.	Differential gear oil	Petrol models	MR	Re- place	Every 30,000 km (18,000 miles) or 24 months	MA-62
.	.	.	.	.	.	.	G	H	.	.	.	.	Steering gear & linkage, axle & suspension parts, front drive shafts*1 & exhaust sys- tem	Petrol models	HR	Inspect	Every 15,000km (9,000miles) or 12 months	MA-64 MA-65 MA-65 MA-54
.	.	.	.	.	.	.	.	.	.	.	.	.			MR			
.	.	.	.	.	.	.	.	.	.	.	.	.	Diesel models	K9K				
.	.	.	.	.	.	.	G	H	.	.	.	.	Drive shaft for 4WD models	Petrol models	MR	Inspect	Every 7,500 km (4,500 miles) or 6 months	MA-65
A	.	C	.	.	.	.	G	H	I	.	.	.	Brake pads, ro- tors & other brake compo- nents	Petrol models	HR	Inspect	Every 15,000km (9,000miles) or 12 months	MA-63 BR-15 BR-16 BR-59 BR-60
	.	.	.	.	.	.	.	.	.	.	.	.			MR			
.	.	.	.	.	.	.	.	.	.	.	.	.	Diesel models	K9K				
A	.	.	.	.	.	.	.	.	.	.	.	.	Air conditioner filter	Petrol models	HR	Re- place	Every 15,000 km (9,000 miles) or 12 months	VTL-18 , VTL-69
	.	.	.	.	.	.	.	.	.	.	.	.			MR		Every 10,000 km (6,000 miles) or 6 months	
.	.	.	.	.	.	.	.	.	.	.	.	.	Diesel models	K9K				

*1: Except for 4WD models

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
MA

cardiagn.com

PERIODIC MAINTENANCE

< ON-VEHICLE MAINTENANCE >

ENGINE AND EMISSION CONTROL MAINTENANCE (HR16DE PETROL ENGINE)

(Annual Mileage >30,000 Km/year)

Abbreviations: I = Inspect and correct or replace as necessary, R = Replace, L = Lubricate.

MAINTENANCE OPERATION		MAINTENANCE INTERVAL				Refer- ence page
Perform at number of kilometers (miles) basis only.	km x 1,000 (Miles x 1,000)	30 (18)	60 (36)	90 (54)	120 (72)	
Engine compartment and under vehicle						
Intake and exhaust valve clearance	See NOTE (1)					EM-21
Drive belt	See NOTE (2)	I	I	I	I	MA-24
Engine oil (Use recommended oil.)★		R	R	R	R	MA-28
Engine oil filter (Use genuine NISSAN part or equivalent)★		R	R	R	R	MA-29
Engine coolant (Use genuine NISSAN Engine Coolant or equivalent in its quality.)	See NOTE (3)	I	I	R	I	MA-25
Cooling system		I	I	I	I	MA-25 , MA-27 , MA-27
Fuel and EVAP vapor lines			I		I	MA-28 , MA-31
Air cleaner filter★			R		R	MA-28
Fuel filter (In-tank type)	See NOTE (4)					—
Spark-plugs (Platinum-tipped type)	See NOTE (5)	R*1	R*1	R*1	R*1	MA-30
Heated oxygen sensor 1	See NOTE (6)					EC-573

NOTE:

- ★ Maintenance items with “★” should be performed more frequently according to “Maintenance Under Severe Driving Conditions”.
- (1) Periodic maintenance is not required. However, if valve noise increases, check valve clearance.
- (2) Replace the drive belt if found damaged or if the auto belt tensioner reading reaches the maximum limit.
- (3) First replace at 90,000 Km (54,000 miles), then every 60,000 km (36,000 miles). Perform "I" (Checking the mixture ratio and correcting the mixture ratio if necessary) at the middle of replacement interval.
- (4) Fuel filter is maintenance-free. For service procedures, refer to FL section.
- (5) Intervals marked with “*1” are for Russia and Ukraine only.
- (6) Perform only according to “Maintenance Under Severe Driving conditions” for models without Euro-OBD system. For models with Euro-OBD system, periodic maintenance is not required.

CHASSIS AND BODY MAINTENANCE (HR16DE PETROL ENGINE)

(Annual Mileage >30,000 Km/year)

Abbreviations: I = Inspect and correct or replace as necessary, R = Replace, L = Lubricate.

MAINTENANCE OPERATION		MAINTENANCE INTERVAL				Reference page
Perform at number of kilometers (miles) basis only.	km x 1,000 (Miles x 1,000)	30 (18)	60 (36)	90 (54)	120 (72)	
Underhood and under vehicle						
Headlamp aiming		I	I	I	I	MA-45 , MA-47 , MA-49 , MA-52
Brake & clutch, systems and fluid (For level & leaks)		I	I	I	I	MA-63 , MA-63

PERIODIC MAINTENANCE

< ON-VEHICLE MAINTENANCE >

MAINTENANCE OPERATION		MAINTENANCE INTERVAL				Reference page
Perform at number of kilometers (miles) basis only.	km x 1,000 (Miles x 1,000)	30 (18)	60 (36)	90 (54)	120 (72)	
Brake fluid★			R		R	MA-63
Brake booster vacuum hoses, connections & check valve			I		I	BR-14 , BR-58
Manual transaxle gear oil (For level & leaks)		I	I	I	I	MA-57
Steering gear & linkage, axle & suspension parts, propeller shaft, front drive shafts & exhaust system★		I	I	I	I	MA-64 , MA-65 , MA-65 , MA-54
Wheel alignment (If necessary, rotate & balance wheels)		I	I	I	I	FSU-7 , RSU-5 , MA-62
Brake pads, rotors & other brake components★		I	I	I	I	MA-63 , BR-15 , BR-59 , BR-16 , BR-60
Foot brake, parking brake & clutch (For free play, stroke & operation)		I	I	I	I	BR-8 , BR-52 , PB-2 , CL-5
Air conditioner filter★		R	R	R	R	VTL-18 , VTL-69
Body corrosion	See NOTE (1)					MA-66

NOTE:

- (1) Inspect once per year.
- ★ Maintenance items with “★” should be performed more frequently according to “Maintenance Under Severe Driving Conditions”.

ENGINE AND EMISSION CONTROL MAINTENANCE (MR20DE PETROL ENGINE) (Annual Mileage >30,000 Km/year)

Abbreviations: I = Inspect and correct or replace as necessary, R = Replace,.

MAINTENANCE OPERATION			MAINTENANCE INTERVAL								Refer- ence page
Perform at number of kilometers (miles) basis only.	km x 1,000 (Miles x 1,000)	15 (9)	30 (18)	45 (27)	60 (36)	75 (45)	90 (54)	105 (63)	120 (72)		
Engine compartment and under vehicle											
Intake and exhaust valve clearance	See NOTE (1)									EM-139	
Drive belt	See NOTE (2)		I		I		I		I	MA-32	
Engine oil (Use recommended oil.)★			R		R		R		R	MA-36	
Engine oil filter (Use genuine NISSAN part or equivalent)★			R		R		R		R	MA-37	
Engine coolant (Use genuine NISSAN Engine Coolant or equivalent in its quality.)	See NOTE (3)		I		I		R		I	MA-33	
Cooling system			I		I		I		I	MA-32 , MA-35 , MA-35	
Fuel and EVAP vapor lines					I				I	MA-35 , MA-38	

PERIODIC MAINTENANCE

< ON-VEHICLE MAINTENANCE >

MAINTENANCE OPERATION		MAINTENANCE INTERVAL								Reference page
Perform at number of kilometers (miles) basis only.	km x 1,000 (Miles x 1,000)	15 (9)	30 (18)	45 (27)	60 (36)	75 (45)	90 (54)	105 (63)	120 (72)	
Air cleaner filter★					R				R	MA-35
Fuel filter (In-tank type)	See NOTE (4)									—
Spark-plugs (Platinum-tipped type)	See NOTE (5)		R*1		R*1		R		R*1	MA-38
Heated oxygen sensor 1	See NOTE (6)									EC-1193

NOTE:

- ★ Maintenance items with “★” should be performed more frequently according to “Maintenance Under Severe Driving Conditions”.
- (1) Periodic maintenance is not required. However, if valve noise increases, check valve clearance.
- (2) Replace the drive belt if found damaged or if the auto belt tensioner reading reaches the maximum limit.
- (3) First replace at 90,000 Km (54,000 miles), then every 60,000 km (36,000 miles). Perform "I" (Checking the mixture ratio and correcting the mixture ratio if necessary) at the middle of replacement interval.
- (4) Fuel filter is maintenance-free. For service procedures, refer to FL section.
- (5) Intervals marked with “*1” are for Russia and Ukraine only.
- (6) Perform only according to “Maintenance Under Severe Driving conditions” for models without Euro-OBD system. For models with Euro-OBD system, periodic maintenance is not required.

CHASSIS AND BODY MAINTENANCE (MR20DE PETROL ENGINE) (Annual Mileage >30,000 Km/year)

Abbreviations: I = Inspect and correct or replace as necessary, R = Replace, L = Lubricate.

MAINTENANCE OPERATION		MAINTENANCE INTERVAL								Reference page
Perform at number of kilometers (miles) basis only.	km x 1,000 (Miles x 1,000)	15 (9)	30 (18)	45 (27)	60 (36)	75 (45)	90 (54)	105 (63)	120 (72)	
Underhood and under vehicle										
Headlamp aiming			I		I		I		I	MA-45, MA-47, MA-49, MA-52
Brake, systems and fluid (For level & leaks)			I		I		I		I	MA-63, MA-63
Brake fluid★					R				R	MA-63
Brake booster vacuum hoses, connections & check valve					I				I	BR-14, BR-58
CVT fluid (For level & leaks)	See NOTE (1)									MA-55, MA-56
Manual transaxle gear oil (For level &leaks)			I		I		I		I	MA-57 (2WD) MA-58 (4WD)
Transfer gear oil (For level & leaks)			I		I		I		I	MA-60
Differeantial gear oil (For level & leak or replace)★			I		I		I		I	MA-61
Steering gear & linkage, axle & suspension parts, propeller shaft, drive shafts & exhaust system★	See NOTE (2)	I*1	I	I*1	I	I*1	I	I*1	I	MA-64, MA-65, MA-65, MA-54

PERIODIC MAINTENANCE

< ON-VEHICLE MAINTENANCE >

MAINTENANCE OPERATION		MAINTENANCE INTERVAL								Reference page
Perform at number of kilometers (miles) basis only.	km x 1,000 (Miles x 1,000)	15 (9)	30 (18)	45 (27)	60 (36)	75 (45)	90 (54)	105 (63)	120 (72)	
Wheel alignment (If necessary, rotate & balance wheels)			I		I		I		I	FSU-7, RSU-5, MA-62
Brake pads, rotors & other brake components★			I		I		I		I	MA-63, BR-15, BR-59, BR-16, BR-60
Foot brake, parking brake & clutch (For free play, stroke & operation)			I		I		I		I	BR-8, BR-52, PB-2, CL-5
Air conditioner filter★			R		R		R		R	VTL-18, VTL-69
Body corrosion	See NOTE (3)									MA-66

NOTE:

- (1) If towing a trailer, using a camper or a car-top carrier, or driving on rough or muddy roads, inspect CVT fluid deterioration with Consult-III every 90,000 km (54,000 miles), then change CVT fluid NS-2 if necessary. And if Consult-III is not available, change (do not just inspect) CVT fluid NS-2 every 90,000 km (54,000 miles). Using transmission fluid other than Genuine NISSAN CVT Fluid NS-2 will damage the CVT, which is not covered by the warranty.
- (2) Intervals marked with “*1” are only for drive shaft inspection for 4WD models.
- (3) Inspect once per year.
- ★ Maintenance items with “★” should be performed more frequently according to “Maintenance Under Severe Driving Conditions”.

ENGINE AND EMISSION CONTROL MAINTENANCE (K9K DIESEL ENGINE)

(Annual Mileage >30,000 Km/year)

Abbreviations: I = Inspect and correct or replace as necessary, R = Replace, D = Check filter and drain water

MAINTENANCE OPERATION		MAINTENANCE INTERVAL						Refer- ence page
Perform at number of kilometers (miles) basis only.	km x 1,000 (Miles x 1,000)	20 (12)	40 (24)	60 (36)	80 (48)	100 (60)	120 (72)	
Engine compartment and under vehicle								
Engine oil (Use recommended oil.)★		R	R	R	R	R	R	MA-43
Engine oil filter (Use recommended oil filter)★		R	R	R	R	R	R	MA-43
Timing belt★	See NOTE (1)	Replace every 120,000 km						EM-287
Drive belt	See NOTE (2)	I	I	I	I	I	R	MA-39
Cooling system		I	I	I	I	I	I	MA-39, MA-41, MA-42
Engine anti-freeze coolant (Use genuine NISSAN En- gine Coolant or equivalent in its quality.)	See NOTE (3)		I			R		MA-40
Air cleaner filter ★			R		R		R	MA-42
Intake & exhaust valve clearance	See NOTE (4)	Inspect every 100,000 km						EM-262
Fuel lines		I	I	I	I	I	I	MA-42
Fuel filter★	See NOTE (5)	D	R	D	R	D	R	FL-23, FL-23

PERIODIC MAINTENANCE

< ON-VEHICLE MAINTENANCE >

NOTE:

- ★ Maintenance items with “★” should be performed more frequently according to “Maintenance Under Severe Driving Conditions”.
- (1) The replacement interval for the timing belt is the maximum lifespan which should not be exceeded. Replace the timing belt if it comes into contact with fuel. The frequency of replacement should be adapted depending on vehicle usage. See “Maintenance Under Severe Driving Conditions”.
- (2) Replace every 120,000 km. Replace drive belt if it comes into contact with fuel or damage is found during inspection.
- (3) First replace at 100,000 Km (60,000 miles), then every 60,000Km (36,000 miles). After first replacement, perform "I" (checking the mixture ratio and correcting the mixture ratio if necessary) at the middle of replacement interval.
- (4) If valve noise increases, check valve clearance.
- (5) Replace every 40,000 km.

CHASSIS AND BODY MAINTENANCE (K9K DIESEL ENGINE)

(Annual Mileage >30,000 Km/year)

Abbreviations: I = Inspect and correct or replace as necessary, R = Replace, L = Lubricate.

MAINTENANCE OPERATION		MAINTENANCE INTERVAL						Reference page
Perform at number of kilometers (miles) basis only.	km x 1,000 (Miles x 1,000)	20 (12)	40 (24)	60 (36)	80 (48)	100 (60)	120 (72)	
Underhood and under vehicle								
Headlamp aiming			I		I		I	MA-45 , MA-47 , MA-49 , MA-52
Brake & clutch, systems and fluid (For level & leaks)		I	I	I	I	I	I	MA-63 , MA-63
Brake fluid★				R			R	MA-63
Brake booster vacuum hoses, connections & check valve				I			I	BR-14 , BR-58
Manual transaxle gear oil (For leaks)		I	I	I	I	I	I	MA-57
Steering gear & linkage, axle & suspension parts, front drive shafts & exhaust system★				I			I	MA-64 , MA-65 , MA-65 , MA-54
Wheel alignment (If necessary, rotate & balance wheels)		I	I	I	I	I	I	FSU-7 , RSU-5 , MA-62
Brake pads, rotors & other brake components★		I	I	I	I	I	I	MA-63 , BR-15 , BR-59 , BR-16 , BR-60
Foot brake, parking brake & clutch (For free play, stroke & operation)		I	I	I	I	I	I	BR-8 , BR-52 , PB-2 , CL-5
Air conditioner filter★		R	R	R	R	R	R	VTL-18 , VTL-69
Body corrosion	See NOTE (1)							MA-66

NOTE:

- (1) Inspect once per year.
- ★ Maintenance items with “★” should be performed more frequently according to “Maintenance Under Severe Driving Conditions”.

MAINTENANCE UNDER SEVERE DRIVING CONDITIONS

(Annual Mileage >30,000 Km/year)

PERIODIC MAINTENANCE

< ON-VEHICLE MAINTENANCE >

The maintenance intervals shown on the preceding pages are for normal operating conditions. If the vehicle is mainly operated under severe driving conditions as shown below, more frequent maintenance must be performed on the following items as shown in the table.

Severe driving conditions

A — Driving in dusty conditions

B — Driving repeatedly short distances or door to door driving

C — Towing a trailer or caravan

D — Extensive idling or urban driving

E — Driving in extremely adverse weather conditions or in areas where ambient temperatures are either extremely low or extremely high

F — Driving in high humidity areas or in mountainous areas

G — Driving in areas using salt or other corrosive materials

H — Driving on rough and/or muddy roads or in the desert

I — Driving with frequent use of braking or in mountainous areas

J — Frequent off road use or driving in water

K — Sustained high speed driving

L — For models without Euro-OBD system (For petrol engine models)

L — Repeated short journeys, cold engine at low temperature (for K9K diesel engine models)

Maintenance operation: Check = Check and correct or replace as necessary.

Driving condition													Maintenance item			Maintenance operation	Maintenance interval	Reference page
A	.	.	.	.	.	.	.	.	.	.	.	.	Air cleaner filter	Petrol models	HR	Re-place	Every 30,000 km (18,000 miles)	MA-28
												MR		MA-35				
												Diesel models		K9K	MA-42			
A	B	C	D	.	.	.	.	.	.	.	.	.	Engine oil & engine oil filter	Petrol models	HR	Re-place	Every 15,000 km (9,000 miles)	MA-28 , MA-29
												MR		MA-36 , MA-37				
														Diesel models	K9K		Every 10,000 km (6,000 miles)	MA-43 , MA-43
A	.	.	.	E	.	.	.	.	.	.	.	.	Fuel filter	Diesel models	K9K	Check & drain water	Every 15,000 km (9,000 miles)	FL-23 ,
												Re-place				Every 30,000 km (18,000 miles)	FL-23	
.	.	.	.	.	.	.	.	.	.	.	.	L	Heated oxgen sensor 1	Petrol models	HR	inspect	Every 60,000 km (36,000 miles)	EC-573
													MR	EC-1193				
A	B	.	D	.	.	.	.	H	.	.	.	L	Timing belt	Diesel models	K9K	Re-place	More frequently	EM-287
.	.	.	.	.	.	F	.	.	.	.	.	.	Brake fluid	Petrol models	HR	Re-place	Every 30,000 km (18,000 miles)	MA-63
														MR				
														Diesel models	K9K			
.	.	C	.	.	.	.	.	H	.	.	.	.	Differential gear oil	Petrol models	MR	Re-place	Every 30,000 km (18,000 miles)	MA-62
.	.	.	.	.	.	G	H	.	.	.	.	.	Steering gear & linkage, axle & suspension parts, front drive shafts*1 & exhaust system	Petrol models	HR	Inspect	Every 15,000 km (9,000 miles)	MA-64 MA-65 MA-65 MA-54
															MR			
													Diesel models	K9K	Every 30,000 km (18,000 miles)			

PERIODIC MAINTENANCE

< ON-VEHICLE MAINTENANCE >

Driving condition													Maintenance item			Maintenance operation	Maintenance interval	Reference page
.	.	.	.	.	.	G	H	.	.	.	.	.	Drive shaft for 4WD models	Petrol models	MR	Inspect	Every 75,000 km (4,500 miles)	MA-65
A	.	C	.	.	.	G	H	I	.	.	.	.	Brake pads, rotors & other brake components	Petrol models	HR	Inspect	Every 15,000 km (9,000 miles)	MA-63 BR-15 BR-16 BR-59 BR-60
														Diesel models	MR			
A	.	.	.	.	.	.	.	.	.	.	.	.	Air conditioner filter	Petrol models	K9K	Re-place	Every 15,000 km (9,000 miles)	VTL-18 , VTL-69
														Diesel models	HR			

*1: Except for 4WD models

RECOMMENDED FLUIDS AND LUBRICANTS

< ON-VEHICLE MAINTENANCE >

RECOMMENDED FLUIDS AND LUBRICANTS

Fluids and Lubricants

INFOID:000000001080776

			Capacity (Approximate)		Recommended Fluids/Lubricants
			Liter	Imp measure	
Engine oil Drain and refill	With oil filter change	HR16DE	4.3	3-3/4 qt	- Gasoline engine Genuine NISSAN engine oil*1 API SL or SM*1 ILSAC grade GF-3 or GF-4*1 ACEA A1/B1, A3/B3, A3/B4, A5/B5, C2 or C3*1 - Diesel engine Genuine NISSAN engine oil *1 ACEA A1-B1*1
		MR20DE	4.4	3-7/8 qt	
		K9K	4.55	4 qt	
	Without oil filter change	HR16DE	4.1	3-5/8 qt	
		MR20DE	4.2	3-3/4 qt	
		K9K	4.39	3-7/8 qt	
Dry engine (engine over- haul)	HR16DE		4.8	4-1/4 qt	Diesel engine Genuine NISSAN engine oil *1 ACEA A1-B1*1
	MR20DE		5.2	4-5/8 qt	
	K9K		4.71	4-1/8 qt	
Cooling system (with res- ervoir)	HR16DE		5.9	5-1/4 qt	Genuine NISSAN Engine Coolant or equivalent in its quality*2
	MR20DE	M/T models	7.6	6-5/8 qt	
		CVT models	8.9	7-7/8 qt	
	K9K		7.3	6-3/8 qt	
Reservoir tank	HR16DE		0.78	5/8 qt	
	MR20DE		0.78	5/8 qt	
	K9K		0.279	1/4 qt	
Manual transaxle gear oil	HR16DE		2.3	4 pt	Genuine NISSAN gear oil or API GL-4, Viscosity SAE 75W-80
	MR20DE K9K	2WD	2.0	3-1/2 qt	
	MR20DE	4WD	2.0	3-1/2 qt	Genuine NISSAN gear oil or API GL-4, Viscosity SAE 75W-85
Transfer gear oil		M/T models	0.38	5/8 pt	Genuine NISSAN Differential oil Hypoid Super GL-5 80W-90 or API GL-5, Vis- cosity SAE 80W-90
		CVT models	0.36	5/8 pt	
Differential gear oil			0.55	1 pt	Genuine NISSAN Differential oil Hypoid Super GL-5 80W-90 or API GL-5, Vis- cosity SAE 80W-90
CVT fluid			8.3	7-1/4 qt	Genuine NISSAN CVT Fluid NS-2*3
Brake and clutch fluid			—	—	Genuine NISSAN brake fluid or equiva- lent DOT 4 (US FMVSS No. 116)
Multi-purpose grease			—	—	NLGI No. 2 (Lithium soap base)

*1: For further details, see "SAE Viscosity Number".

*2: Use Genuine NISSAN Engine Coolant or equivalent in its quality, in order to avoid possible aluminum corrosion within the engine cooling system caused by the use of non-genuine engine coolant.

Note that any repairs for the incidents within the engine cooling system while using non-genuine engine coolant may not be covered by the warranty even if such incidents occurred during the warranty period.

*3: Using transmission fluid other than Genuine NISSAN CVT fluid NS-2 will damage the CVT, which is not covered by the warranty.

SAE Viscosity Number

INFOID:000000001080777


GASOLINE ENGINE

- 5W-30 is preferable.

RECOMMENDED FLUIDS AND LUBRICANTS

< ON-VEHICLE MAINTENANCE >


If 5W-30 is not available, select the viscosity, from the chart, that is suitable for the outside temperature range.

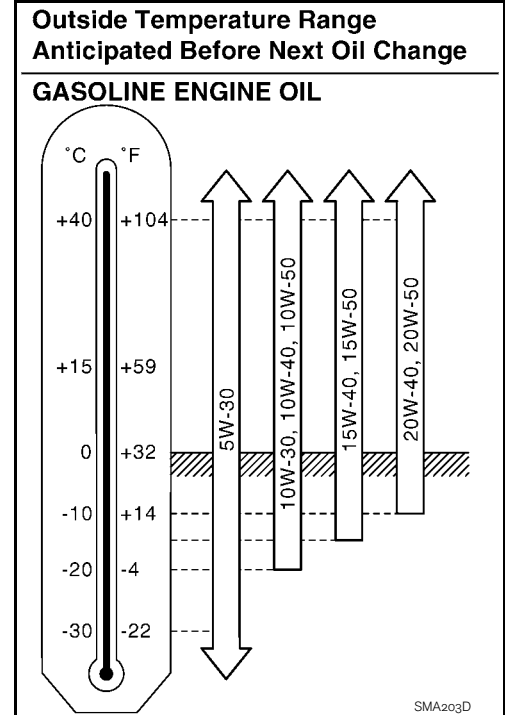

DIESEL ENGINE

- 5W-30 is preferable.

If 5W-30 is not available, select the viscosity, from the chart, that is suitable for the outside temperature range.

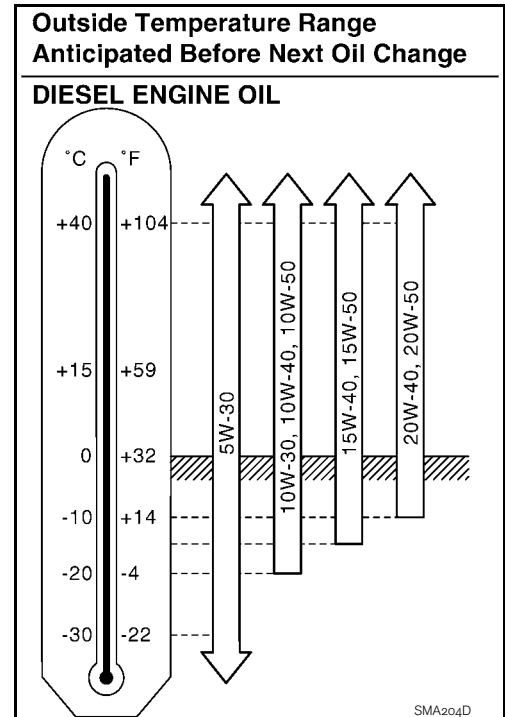

Engine Coolant Mixture Ratio

INFOID:000000001080778

RECOMMENDED FLUIDS AND LUBRICANTS

< ON-VEHICLE MAINTENANCE >

The engine cooling system is filled at the factory with a high-quality, year-round and extended life engine coolant. The high quality engine coolant contains the specific solutions effective for the anti-corrosion and the anti-freeze function. Therefore, additional cooling system additives are not necessary.

CAUTION:

- When adding or replacing coolant, be sure to use only Genuine NISSAN Engine Coolant or equivalent in its quality. Genuine NISSAN Engine Coolant is premixed (mixture ratio 50%) type coolant.

The use of other types of engine coolant may damage your cooling system.

- When checking the engine coolant mixture ratio by the coolant hydrometer, use the chart below to correct your hydrometer reading (specific gravity) according to coolant temperature.

Mixed coolant specific gravity

Unit: specific gravity

Engine coolant mixture ratio	Coolant temperature °C (°F)			
	15 (59)	25 (77)	35 (95)	45 (113)
30%	1.046 - 1.050	1.042 - 1.046	1.038 - 1.042	1.033 - 1.038
50%	1.076 - 1.080	1.070 - 1.076	1.065 - 1.071	1.059 - 1.065

WARNING:

Never remove the radiator cap when the engine is hot. Serious burns could be caused by high pressure fluid escaping from the radiator. Wait until the engine and radiator cool down.

Outside temperature down to		Composition	
°C	°F	Engine coolant (Concentrated)	Demineralized water or distilled water
-15	5	30%	70%
-35	-30	50%	50%

SMA08gD

ENGINE MAINTENANCE (HR16DE)

< ON-VEHICLE MAINTENANCE >

ENGINE MAINTENANCE (HR16DE)


DRIVE BELTS

DRIVE BELTS : Checking

INFOID:000000001095237

- Inspection should be done only when engine is cold or over 30 minutes after the engine is stopped.

- 1 : Alternator
- 2 : Water pump
- 3 : Crankshaft pulley
- 4 : A/C compressor (with A/C models)
- 5 : Idler pulley (without A/C models)
- 6 : Drive belt

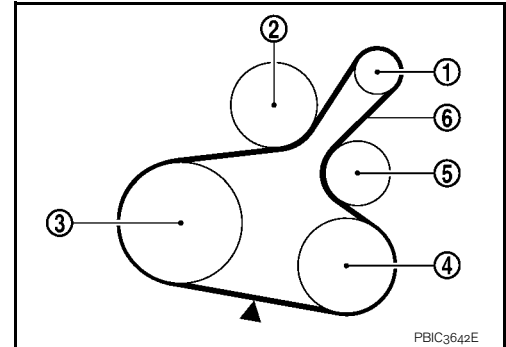

- Visually check belts for wear, damage, and cracks on inside and edges.
- Turn crankshaft pulley two time clockwise, and make sure tension on all pulleys is equal before doing the test.
- When measuring deflection, apply 98 N (10 kg, 22 lb) at the (▼) marked point.
- Measure the belt tension and frequency with acoustic tension gauge (commercial service tool) at the (▼) marked point.

CAUTION:

- When the tension and frequency are measured, the acoustic tension gauge should be used.
- When checking immediately after installation, first adjust it to the specified value. Then, after turning crankshaft two turns or more, re-adjust to the specified value to avoid variation in deflection between pulleys.

Belt Deflection / Belt Tension and Frequency:

Refer to [EM-115, "Drive Belts"](#).

DRIVE BELTS : Tension Adjustment

INFOID:000000001095238


Location	Location of adjuster and tightening method
Drive belt	Adjusting bolt on idler pulley

CAUTION:

- When belt is replaced with new one, adjust belt tension to the value for "New belt", because new belt will not fully seat in the pulley groove.
- When tension of the belt being used exceeds "Limit", adjust it to the value for "After adjusted".
- When installing a belt, make sure it is correctly engaged with the pulley groove.
- Never allow oil or engine coolant to get on the belt.
- Never twist or bend the belt strongly.

1. Remove front fender protector (RH). Refer to [EXT-21, "Exploded View"](#).
2. Loosen the idler pulley lock nut (A) from the tightening position with the specified torque by 45 degrees.

- 1 : Alternator
- 2 : Water pump
- 3 : Crankshaft pulley
- 4 : A/C compressor (with A/C models)
- 5 : Idler pulley
- 6 : Drive belt
- B : Adjusting bolt

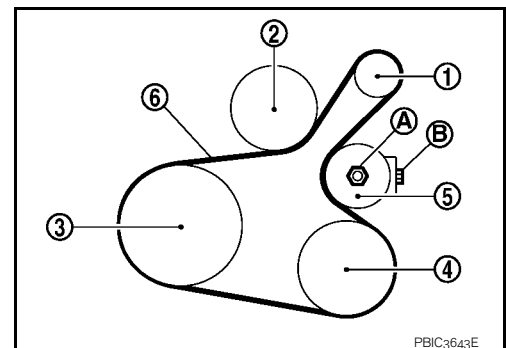

ENGINE MAINTENANCE (HR16DE)

< ON-VEHICLE MAINTENANCE >

CAUTION:

- When the lock nut is loosened excessively, the idler pulley tilts and the correct tension adjustment cannot be performed. Never loosen it excessively (more than 45 degrees).
- Put a matching mark on the lock nut, and check turning angle with a protractor. Never visually check the tightening angle.

3. Adjust the belt tension by turning the adjusting bolt.

CAUTION:

- When checking immediately after installation, first adjust it to the specified value. Then, after turning crankshaft two turns or more, re-adjust to the specified value to avoid variation in deflection between pulleys.
- When the tension adjustment is performed, the lock nut should be in the condition at step“2”. If the tension adjustment is performed when the lock nut is loosened more than the standard, the idler pulley tilts and the correct tension adjustment cannot be performed.

4. Tighten the lock nut.

 : 34.8 N·m (3.5 kg-m, 26 ft-lb)

ENGINE COOLANT

ENGINE COOLANT : Inspection


INFOID:000000001095240

LEVEL

- Check if the reservoir tank engine coolant level is within the “MIN” to “MAX” when the engine is cool.
- Adjust the engine coolant level as necessary.
- Check that the reservoir tank cap is tightened.

WARNING:

Never remove reservoir tank cap when engine is hot. Serious burns could occur from high-pressure engine coolant escaping from reservoir tank.

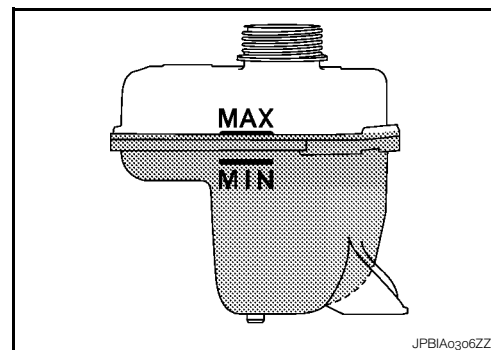

LEAKAGE

- To check for leakage, fit the adapter to the reservoir tank, and then connect it to the reservoir tank cap tester [SST: — (M.S.554-07)] (A) as shown.

Testing pressure: Refer to [CO-23, "Radiator"](#).


WARNING:

Never remove reservoir tank cap when engine is hot. Serious burns could occur from high-pressure engine coolant escaping from reservoir tank.

CAUTION:

Higher test pressure than specified may cause radiator damage.

- If anything is found, repair or replace damaged parts.

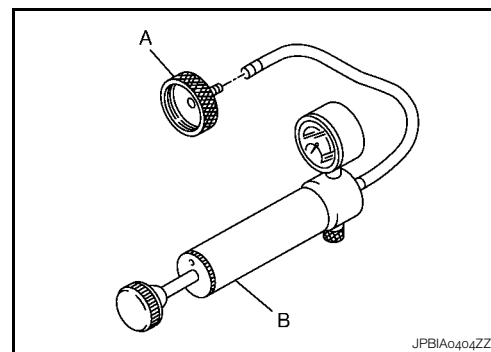

INFOID:000000001095241

ENGINE COOLANT : Draining

WARNING:

- Never remove reservoir tank cap when engine is hot. Serious burns could occur from high-pressure engine coolant escaping from reservoir tank.
- Wrap a thick cloth around the reservoir tank cap. Slowly turn it a quarter of a turn to release built-up pressure. Then turn it all the way.

1. Disconnect radiator hose (lower) and reservoir tank cap.
When draining all of engine coolant in the system, open water drain plugs on cylinder block. Refer to [EM-93, "Exploded View"](#).

ENGINE MAINTENANCE (HR16DE)

< ON-VEHICLE MAINTENANCE >

CAUTION:

- Perform this step when engine is cold.
 - Never spill engine coolant on drive belt.
2. Remove reservoir tank if necessary, and drain engine coolant and clean reservoir tank before installing. Refer to [CO-13, "Exploded View"](#).
 3. Check drained engine coolant for contaminants such as rust, corrosion or discoloration. If contaminated, flush the engine cooling system. Refer to [MA-27, "RADIATOR : Inspection"](#).


ENGINE COOLANT : Refilling

INFOID:000000001095242


1. Install reservoir tank if removed.
2. Connect radiator hose (lower).
 - If water drain plugs on cylinder block are removed, close and tighten them. Refer to [EM-74, "Exploded View"](#).
3. Make sure that each hose clamp has been firmly tightened.
4. Disconnect heater hose (1) at position (◀) in the figure.

◀ : Vehicle front

- Enhance heater hose as high as possible, keeping heater hose end above reservoir tank MAX level.

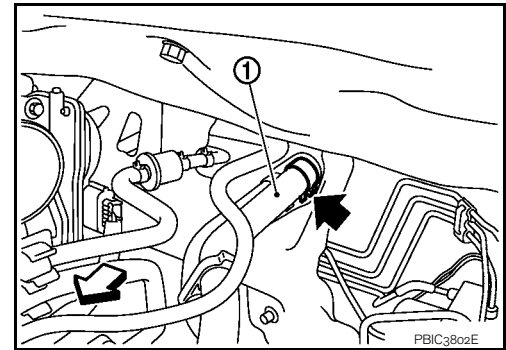

5. Fill reservoir tank to specified level.
 - Pour coolant slowly of less than 2 (1-3/4 Imp qt) a minute to allow air in system to escape.
 - When coolant from heater unit starts to drain, connect heater hose and continue to fill up to reservoir tank MAX level.
 - Start engine without closing reservoir tank cap.
 - Keep engine racing at 1,500 rpm for about 2-3 minutes, filling reservoir tank up to MAX. Level, if necessary.
 - Use Genuine Nissan Engine Coolant or equivalent mixed with water (distilled or demineralized). Refer to [MA-21, "Fluids and Lubricants"](#).

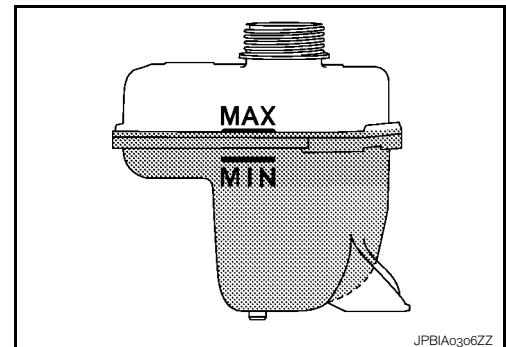

Engine coolant capacity

(With reservoir tank at "MAX" level)

Refer to [CO-23, "Periodical Maintenance Specification"](#).

Reservoir tank engine coolant capacity

(At "MAX" level)

Refer to: [CO-23, "Periodical Maintenance Specification"](#).

6. Install reservoir tank cap.
7. Warm up engine until opening thermostat. Standard for warming-up time is approximately 10 minutes at 2,000 - 2,500 rpm.
 - Make sure thermostat opening condition by touching radiator hose (lower) to see a flow of warm water.

CAUTION:

Watch water temperature gauge so as not to overheat engine.

8. Stop the engine and cool down to less than approximately 50°C (122°F).
 - Cool down using fan to reduce the time.
9. Refill reservoir tank to "MAX" level line with engine coolant, if necessary.

ENGINE MAINTENANCE (HR16DE)

< ON-VEHICLE MAINTENANCE >

10. Repeat steps 6 through 9 two or more times with reservoir tank cap installed until reservoir tank level no longer drops.
11. Check cooling system for leaks with engine running.
12. Warm up the engine, and check for sound of engine coolant flow while running engine from idle up to 3,000 rpm with heater temperature controller set at several position between "COOL" and "WARM".
 - Sound may be noticeable at heater unit.
13. Repeat step 12 three times.
14. If sound is heard, bleed air from cooling system by repeating step 6 through 9 until reservoir tank level no longer drops.
15. Check that the reservoir tank cap is tightened.

ENGINE COOLANT : Flushing

INFOID:0000000001095243

1. Install reservoir tank if removed.
2. Disconnect radiator hose (lower) and reservoir tank cap.
If water drain plugs on cylinder block are removed, close and tighten them. Refer to [EM-83, "Exploded View"](#).
3. Fill reservoir tank with water and reinstall reservoir tank cap.
4. Run the engine and warm it up to normal operating temperature.
5. Rev the engine two or three times under no-load.
6. Stop the engine and wait until it cools down.
7. Drain water from the system. Refer to [CO-9, "Draining"](#).
8. Repeat steps 1 through 7 until clear water begins to drain from radiator.
9. Check that the reservoir tank cap is tightened.

RADIATOR CAP

RADIATOR CAP : Inspection

INFOID:0000000001095369


- Fit the adapter to the reservoir tank cap tester [SST: — (M.S. 554-07)] (A) as shown.
- When connecting the reservoir tank cap to the reservoir tank cap tester, apply water or LLC to the reservoir tank cap seal part.
- Check reservoir tank cap relief pressure.

Standard and limit : Refer to [CO-23, "Radiator"](#).

- Replace the reservoir tank cap if the engine coolant passes through it, or if any fur signs is detected.

CAUTION:

When installing reservoir tank cap, thoroughly wipe out the reservoir tank filler neck to remove any waxy residue or foreign material.

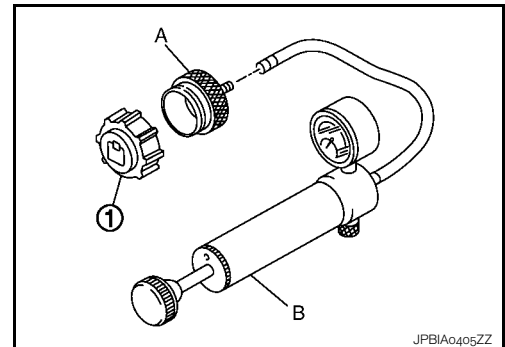

RADIATOR

RADIATOR : Inspection

INFOID:0000000001095495

Check radiator for mud or clogging. If necessary, clean radiator as follows.

CAUTION:

- **Be careful not to bend or damage radiator fins.**
- **When radiator is cleaned without removal, remove all surrounding parts such as radiator cooling fan assembly and horns. Then tape harness and connectors to prevent water from entering.**

1. Apply water by hose to the back side of the radiator core vertically downward.
2. Apply water again to all radiator core surfaces once per minute.
3. Stop washing if any stains no longer flow out from radiator.
4. Blow air into the back side of radiator core vertically downward.
 - Use compressed air lower than 490 kPa (5 kg/cm², 71 psi) and keep distance more than 30 cm (11.8 in).

ENGINE MAINTENANCE (HR16DE)

< ON-VEHICLE MAINTENANCE >


5. Blow air again into all the radiator core surfaces once per minute until no water sprays out.

FUEL LINES

FUEL LINES : Inspection

INFOID:0000000001095723

Inspect fuel lines, filler cap and tank for improper attachment, leaks, cracks, damage, loose connections, chafing or deterioration. If necessary, repair or replace damaged parts.

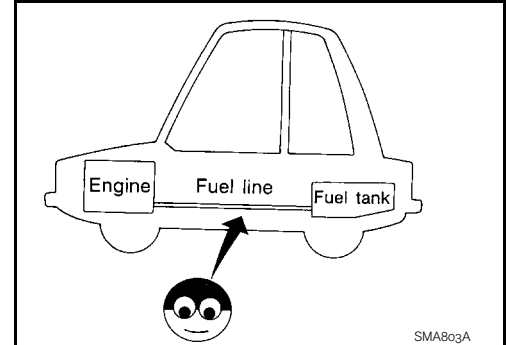


AIR CLEANER FILTER

AIR CLEANER FILTER : Removal and Installation


INFOID:0000000001095621

REMOVAL

1. Unhook clips (A) and remove holder (2) from air cleaner case (1).

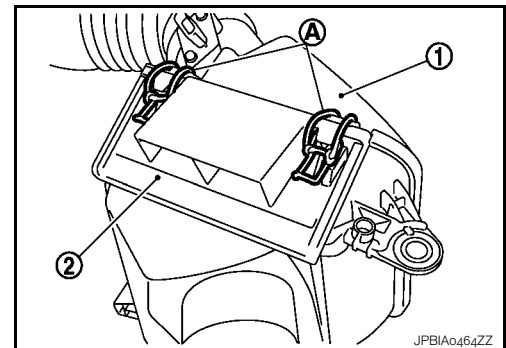

2. Remove air cleaner filter (1) from air cleaner case (2).

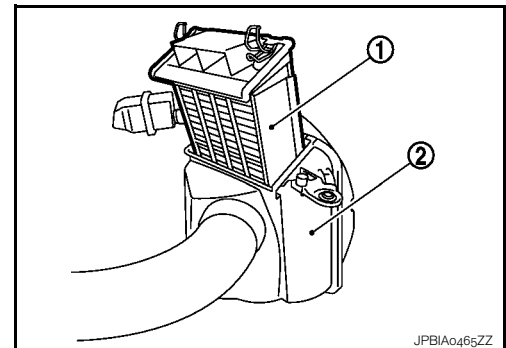

INSTALLATION

Note the following, and install in the reverse order of removal.

- Install the air cleaner filter by aligning the seal with the notch of air cleaner case.

ENGINE OIL

ENGINE OIL : Draining

INFOID:0000000001095630

WARNING:

- Be careful not to get burned, as engine oil may be hot.
- Prolonged and repeated contact with used engine oil may cause skin cancer. Try to avoid direct skin contact with used engine oil. If skin contact is made, wash thoroughly with soap or hand cleaner as soon as possible.

ENGINE MAINTENANCE (HR16DE)

< ON-VEHICLE MAINTENANCE >

1. Warm up the engine, and check for engine oil leakage from engine components. Refer to [LU-6. "Inspection"](#).
2. Stop the engine and wait for 10 minutes.
3. Loosen oil filler cap.
4. Remove drain plug and then drain engine oil.

ENGINE OIL : Refilling

INFOID:000000001095631

1. Install drain plug with new washer. Refer to [EM-40. "Exploded View"](#).

CAUTION:

Be sure to clean drain plug and install with new washer.

Tightening torque : Refer to [EM-40. "Exploded View"](#).

2. Refill with new engine oil.

Engine oil specification and viscosity: Refer to [MA-21. "Fluids and Lubricants"](#).

Engine oil capacity : Refer to [LU-10. "Periodical Maintenance Specification"](#).

CAUTION:

- The refill capacity depends on the engine oil temperature and drain time. Use these specifications for reference only.
- Always use oil level gauge to determine the proper amount of engine oil in the engine.

3. Warm up engine and check area around drain plug and oil filter for engine oil leakage.
4. Stop engine and wait for 10 minutes.
5. Check the engine oil level. Refer to [LU-6. "Inspection"](#).

OIL FILTER

OIL FILTER : Removal and Installation

INFOID:000000001095632


REMOVAL

- Using oil filter wrench [SST: KV10115801] (A), remove oil filter.

⇐ : Vehicle front


CAUTION:

- Oil filter is provided with relief valve. Use Genuine NISSAN Oil Filter or equivalent.
- Be careful not to get burned when engine and engine oil may be hot.
- When removing, prepare a shop cloth to absorb any engine oil leakage or spillage.
- Completely wipe off any engine oil that adheres to engine and vehicle.

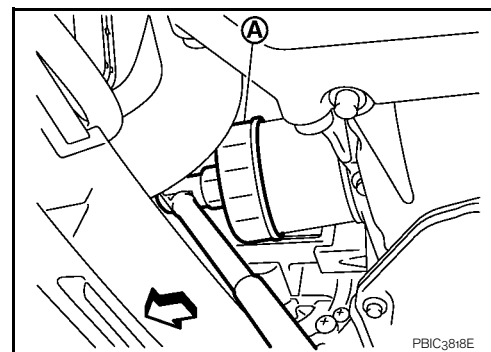

INSTALLATION

1. Remove foreign materials adhering to the oil filter installation surface.
2. Apply new engine oil to the oil seal contact surface of new oil filter.

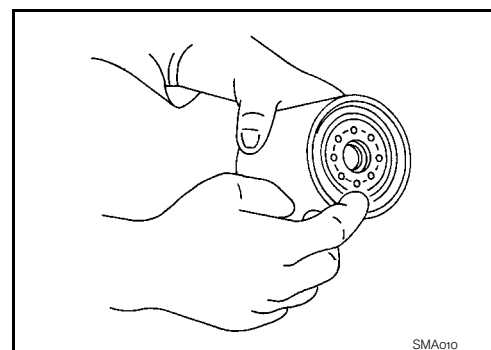


ENGINE MAINTENANCE (HR16DE)

< ON-VEHICLE MAINTENANCE >

3. Screw oil filter manually until it touches the installation surface, then tighten it by 2/3 turn. Or tighten to specification.

Oil filter:

 : 17.7 N·m (1.8 kg-m, 13 ft-lb)

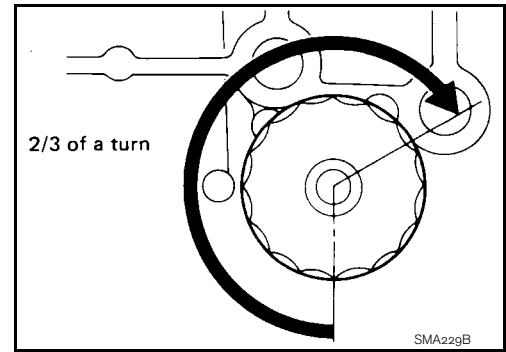

INFOID:000000001095633

OIL FILTER : Inspection

INSPECTION AFTER INSTALLATION

1. Check the engine oil level. Refer to [LU-6, "Inspection"](#).
2. Start the engine, and check there is no leak of engine oil.
3. Stop the engine and wait for 10 minutes.
4. Check the engine oil level, and adjust the level. Refer to [LU-6, "Inspection"](#).


SPARK PLUG

SPARK PLUG : Removal and Installation

INFOID:000000001095634

REMOVAL

1. Remove intake manifold. Refer to [EM-29, "Removal and Installation"](#).
2. Remove ignition coil. Refer to [EM-43, "Removal and Installation"](#).
3. Remove spark plug with a spark plug wrench (commercial service tool).

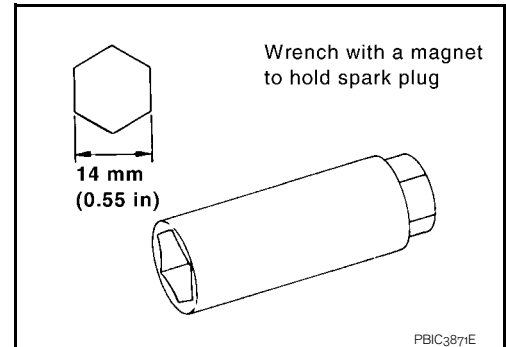

INSTALLATION

Installation is the reverse order of removal.

SPARK PLUG : Inspection

INFOID:000000001095635

INSPECTION AFTER REMOVAL

Use the standard type spark plug for normal condition.

Spark plug (Standard type): Refer to [EM-116, "Spark Plug"](#).

CAUTION:

ENGINE MAINTENANCE (HR16DE)

< ON-VEHICLE MAINTENANCE >


- Never drop or shock spark plug.
- Never use a wire brush for cleaning.
- If plug tip is covered with carbon, spark plug cleaner may be used.

Cleaner air pressure:


Less than 588 kPa (6 kg/cm², 85 psi)

Cleaning time:

Less than 20 seconds

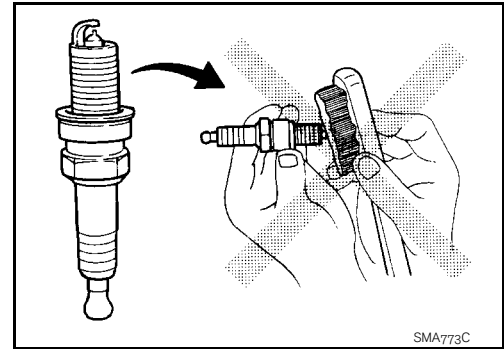

- Checking and adjusting plug gap is not required between change intervals.

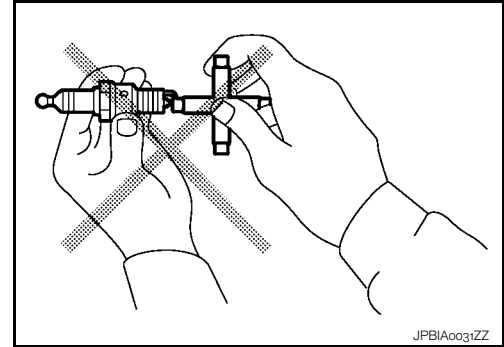

EVAP VAPOR LINES

EVAP VAPOR LINES : Inspection

INFOID:000000001109392

Refer to [EC-359. "Inspection"](#) (WITH EURO-OBD), [EC-636. "Inspection"](#)(WITHOUT EURO-OBD).

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O

MA

ENGINE MAINTENANCE (MR20DE)


< ON-VEHICLE MAINTENANCE >

ENGINE MAINTENANCE (MR20DE)

DRIVE BELTS

DRIVE BELTS : Exploded View

INFOID:000000001116076

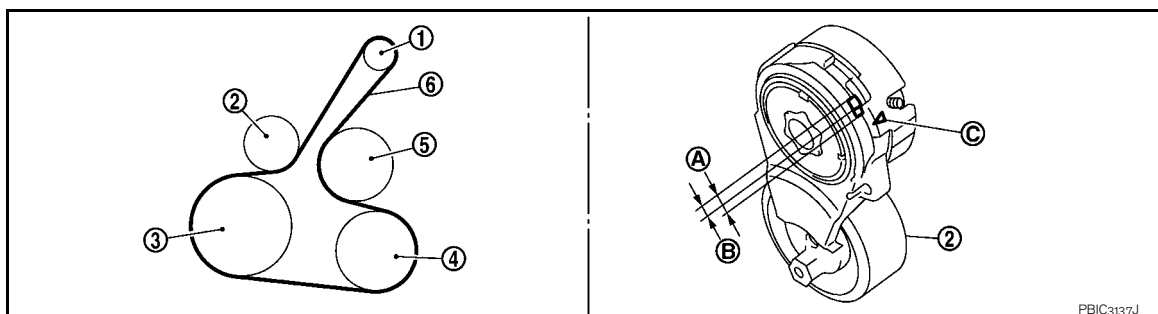

- | | | |
|-------------------------------------|---|----------------------|
| 1. Alternator | 2. Drive belt auto-tensioner | 3. Crankshaft pulley |
| 4. A/C compressor (with A/C models) | 5. Water pump | 6. Drive belt |
| Idler pulley (without A/C models) | | |
| A. Possible use range | B. Range when new drive belt is installed | C. Indicator |

DRIVE BELTS : Checking

INFOID:000000001095645

WARNING:

Perform this step when engine is stopped.

- Make sure that the indicator (notch on fixed side) of drive belt auto-tensioner is within the possible use range (A) in the figure.

NOTE:

- Check the drive belt auto-tensioner indication when the engine is cold.
- When new drive belt is installed, the indicator (notch on fixed side) should be within the range (B) in the figure.
- Visually check entire drive belt for wear, damage or cracks.
- If the indicator (notch on fixed side) is out of the possible use range or belt is damaged, replace drive belt.

DRIVE BELTS : Tension Adjustment

INFOID:000000001095646

Refer to : [EM-236, "Drive Belt"](#).

Belt tension is not necessary, as it is automatically adjusted by drive belt auto-tensioner.

ENGINE COOLANT

ENGINE COOLANT : Inspection


INFOID:000000001095647

LEVEL

- Check if the reservoir tank engine coolant level is within the "MIN" to "MAX" when the engine is cool.
- Adjust the engine coolant level as necessary.
- Check that the reservoir tank cap is tightened.

WARNING:

Never remove reservoir tank cap when engine is hot. Serious burns could occur from high-pressure engine coolant escaping from reservoir tank.

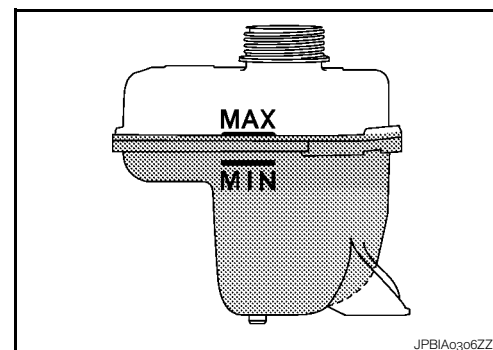

LEAKAGE

ENGINE MAINTENANCE (MR20DE)

< ON-VEHICLE MAINTENANCE >

- To check for leakage, fit the adapter to the reservoir tank, and then connect it to the reservoir tank cap tester [SST: — (M.S.554-07)] (A) as shown.

Testing pressure: Refer to [CO-46, "Radiator"](#).


WARNING:

Never remove reservoir tank cap when engine is hot. Serious burns could occur from high-pressure engine coolant escaping from reservoir tank.

CAUTION:

Higher test pressure than specified may cause radiator damage.

- If anything is found, repair or replace damaged parts.

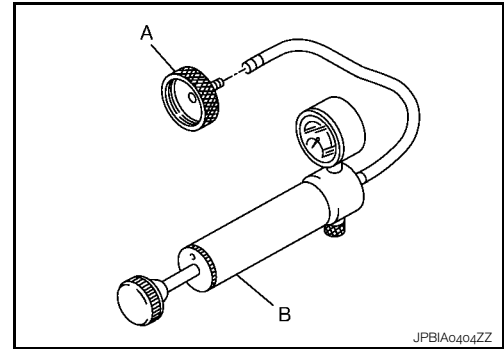

INFOID:000000001095648

ENGINE COOLANT : Draining

WARNING:

- Never remove reservoir tank cap when engine is hot. Serious burns could occur from high-pressure engine coolant escaping from reservoir tank.
- Wrap a thick cloth around the reservoir tank cap. Slowly turn it a quarter of a turn to release built-up pressure. Then turn it all the way.

1. Disconnect radiator hose (lower) and reservoir tank cap.
When draining all of engine coolant in the system, open water drain plugs on cylinder block. Refer to [EM-210, "Exploded View"](#).

CAUTION:

- Perform this step when engine is cold.
- Never spill engine coolant on drive belt.

2. Remove reservoir tank if necessary, and drain engine coolant and clean reservoir tank before installing.
 - Remove of engine mounting insulator (RH) is necessary. Refer to [EM-194, "M/T : Exploded View"](#) (M/T models) or [EM-198, "CVT : Exploded View"](#) (CVT models).
3. Check drained engine coolant for contaminants such as rust, corrosion or discoloration. If contaminated, flush the engine cooling system. Refer to [MA-35, "RADIATOR : Inspection"](#).


ENGINE COOLANT : Refilling

INFOID:000000001095649

1. Install reservoir tank if removed.
2. Connect radiator hose (lower).
If water drain plugs on cylinder block are removed, close and tighten them. Refer to [EM-210, "Exploded View"](#).
3. Make sure that each hose clamp has been firmly tightened.
4. Disconnect heater hose (1) at position (↖) in the figure.

↖ : Vehicle front


- Enhance heater hose as high as possible, keeping heater hose end above reservoir tank MAX level.

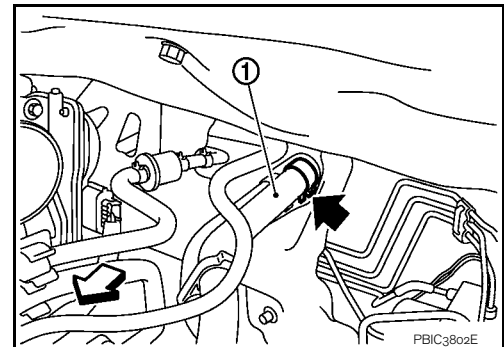

ENGINE MAINTENANCE (MR20DE)

< ON-VEHICLE MAINTENANCE >

5. Fill reservoir tank to specified level.
 - Pour coolant slowly of less than 2 (1-3/4 Imp qt) a minute to allow air in system to escape.
 - When coolant from heater unit starts to drain, connect heater hose and continue to fill up to reservoir tank MAX level.
 - Start engine without closing reservoir tank cap.
 - Keep engine racing at 1,500 rpm for about 2-3 minutes, filling reservoir tank up to MAX. Level, if necessary.
 - Use Genuine Nissan Engine Coolant or equivalent mixed with water (distilled or demineralized). Refer to [MA-21, "Fluids and Lubricants"](#).

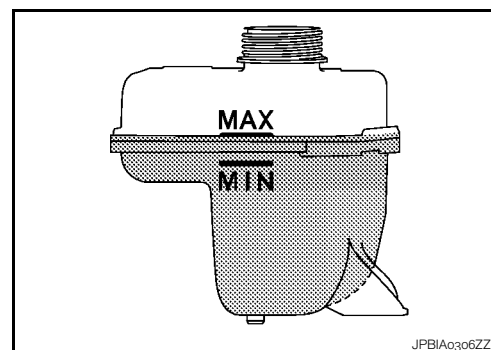

Engine coolant capacity
(With reservoir tank at "MAX" level)

Refer to [:CO-46, "Periodical Maintenance Specification"](#)

Reservoir tank engine coolant capacity
(At "MAX" level)

Refer to [CO-46, "Periodical Maintenance Specification"](#).

6. Install reservoir tank cap.
7. Warm up engine until opening thermostat. Standard for warming-up time is approximately 10 minutes at 2,000 - 2,500 rpm.
 - Make sure thermostat opening condition by touching radiator hose (lower) to see a flow of warm water.**CAUTION:**
Watch water temperature gauge so as not to overheat engine.
8. Stop the engine and cool down to less than approximately 50°C (122°F).
 - Cool down using fan to reduce the time.
9. Refill reservoir tank to "MAX" level line with engine coolant, if necessary.
10. Repeat steps 6 through 9 two or more times with reservoir tank cap installed until reservoir tank level no longer drops.
11. Check cooling system for leaks with engine running.
12. Warm up the engine, and check for sound of engine coolant flow while running engine from idle up to 3,000 rpm with heater temperature controller set at several position between "COOL" and "WARM".
 - Sound may be noticeable at heater unit.
13. Repeat step 12 three times.
14. If sound is heard, bleed air from cooling system by repeating step 6 through 9 until reservoir tank level no longer drops.
15. Check that the reservoir tank cap is tightened.

ENGINE COOLANT : Flushing

INFOID:0000000001095650

1. Install reservoir tank if removed.
2. Disconnect radiator hose (lower) and reservoir tank cap.
If water drain plugs on cylinder block are removed, close and tighten them. Refer to [EM-210, "Exploded View"](#).
3. Fill reservoir tank with water and reinstall reservoir tank cap.
4. Run the engine and warm it up to normal operating temperature.
5. Rev the engine two or three times under no-load.
6. Stop the engine and wait until it cools down.
7. Drain water from the system. Refer to [CO-30, "Draining"](#).
8. Repeat steps 1 through 7 until clear water begins to drain from radiator.
9. Check that the reservoir tank cap is tightened.

ENGINE MAINTENANCE (MR20DE)

< ON-VEHICLE MAINTENANCE >

RADIATOR CAP

RADIATOR CAP : Inspection

INFOID:000000001095651

- Fit the adapter to the reservoir tank cap tester [SST: — (M.S.554-07)] (A) as shown.
- When connecting the reservoir tank cap to the reservoir tank cap tester, apply water or LLC to the reservoir tank cap seal part.
- Check reservoir tank cap relief pressure.

Standard and limit: Refer to [CO-46, "Radiator"](#).

- Replace the reservoir tank cap if the engine coolant passes through it, or if any fur signs is detected.

CAUTION:

When installing reservoir tank cap, thoroughly wipe out the reservoir tank filler neck to remove any waxy residue or foreign material.

RADIATOR

RADIATOR : Inspection

INFOID:000000001095652

Check radiator for mud or clogging. If necessary, clean radiator as follows.

CAUTION:


- **Be careful not to bend or damage radiator fins.**
 - **When radiator is cleaned without removal, remove all surrounding parts such as radiator cooling fan assembly and horns. Then tape harness and connectors to prevent water from entering.**
1. Apply water by hose to the back side of the radiator core vertically downward.
 2. Apply water again to all radiator core surfaces once per minute.
 3. Stop washing if any stains no longer flow out from radiator.
 4. Blow air into the back side of radiator core vertically downward.
 - Use compressed air lower than 490 kPa (5 kg/cm², 71 psi) and keep distance more than 30 cm (11.8 in).
 5. Blow air again into all the radiator core surfaces once per minute until no water sprays out.

FUEL LINES

FUEL LINES : Inspection

INFOID:000000001095721

Inspect fuel lines, filler cap and tank for improper attachment, leaks, cracks, damage, loose connections, chafing or deterioration. If necessary, repair or replace damaged parts.

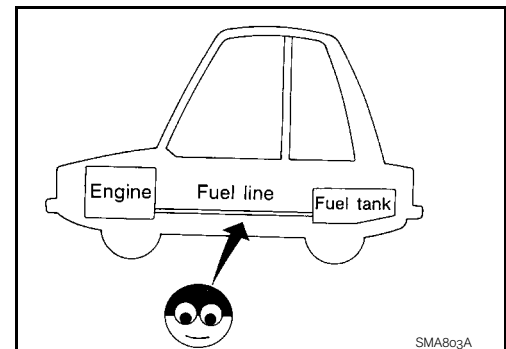

AIR CLEANER FILTER

AIR CLEANER FILTER : Removal and Installation


INFOID:000000001095661

REMOVAL


ENGINE MAINTENANCE (MR20DE)

< ON-VEHICLE MAINTENANCE >

1. Unhook clips (A) and remove holder (2) from air cleaner case (1).

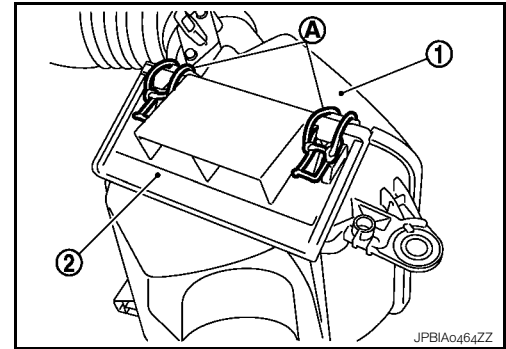

2. Remove air cleaner filter (1) from air cleaner case (2).

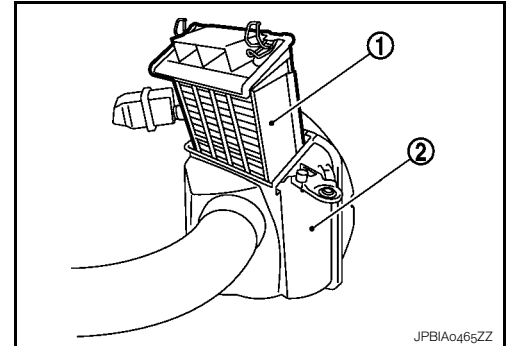

INSTALLATION

Note the following, and install in the reverse order of removal.

- Install the air cleaner filter by aligning the seal with the notch of air cleaner case.

ENGINE OIL

ENGINE OIL : Draining

INFOID:000000001095670

WARNING:

- Be careful not to get burned, as engine oil may be hot.
- Prolonged and repeated contact with used engine oil may cause skin cancer. Try to avoid direct skin contact with used engine oil. If skin contact is made, wash thoroughly with soap or hand cleaner as soon as possible.

1. Warm up the engine, and check for engine oil leakage from engine components. Refer to [LU-14, "Inspection"](#).
2. Stop the engine and wait for 10 minutes.
3. Loosen oil filler cap.
4. Remove drain plug and then drain engine oil.

ENGINE OIL : Refilling

INFOID:000000001095671

1. Install drain plug with new washer. Refer to [EM-152, "Exploded View"](#).

CAUTION:

Be sure to clean drain plug and install with new washer.

Tightening torque : Refer to [EM-152, "Exploded View"](#).

2. Refill with new engine oil.

Engine oil specification and viscosity: Refer to [MA-21, "Fluids and Lubricants"](#).

Engine oil capacity : Refer to [LU-20, "Periodical Maintenance Specification"](#).

CAUTION:

- The refill capacity depends on the engine oil temperature and drain time. Use these specifications for reference only.

ENGINE MAINTENANCE (MR20DE)

< ON-VEHICLE MAINTENANCE >

- Always use oil level gauge to determine the proper amount of engine oil in the engine.
3. Warm up engine and check area around drain plug and oil filter for engine oil leakage.
 4. Stop engine and wait for 10 minutes.
 5. Check the engine oil level. Refer to [LU-14. "Inspection"](#).

OIL FILTER

OIL FILTER : Removal and Installation

INFOID:000000001116098

REMOVAL


- Using oil filter wrench [SST: KV10115801] (A), remove oil filter.

1 : Oil pan (lower)

↩ : Vehicle front


CAUTION:

- Oil filter is provided with relief valve. Use Genuine NISSAN Oil Filter or equivalent.
- Be careful not to get burned when engine and engine oil may be hot.
- When removing, prepare a shop cloth to absorb any engine oil leakage or spillage.
- Completely wipe off any engine oil that adheres to engine and vehicle.

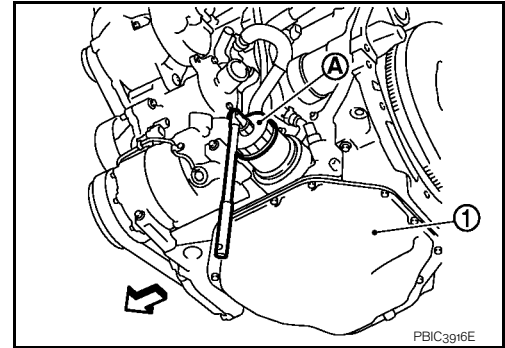

INSTALLATION


1. Remove foreign materials adhering to the oil filter installation surface.
2. Apply new engine oil to the oil seal contact surface of new oil filter.

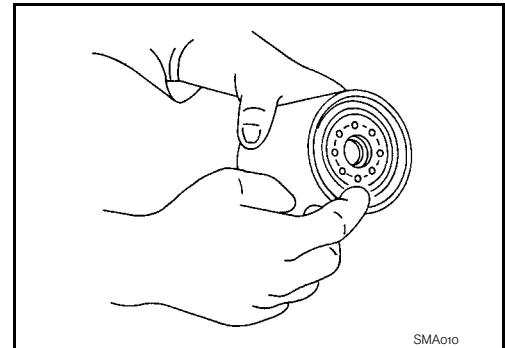

3. Screw oil filter manually until it touches the installation surface, then tighten it by 2/3 turn. Or tighten to specification.

Oil filter:

17.7 N·m (1.8 kg-m, 13 ft-lb)

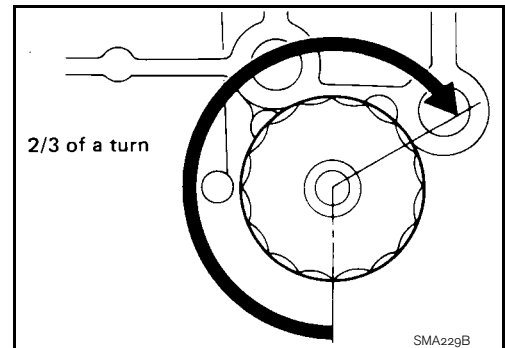

OIL FILTER : Inspection

INFOID:000000001095673

INSPECTION AFTER INSTALLATION

1. Check the engine oil level. Refer to [LU-14. "Inspection"](#).
2. Start the engine, and check there is no leak of engine oil.
3. Stop the engine and wait for 10 minutes.
4. Check the engine oil level, and adjust the level. Refer to [LU-14. "Inspection"](#).

SPARK PLUG

ENGINE MAINTENANCE (MR20DE)


< ON-VEHICLE MAINTENANCE >

SPARK PLUG : Removal and Installation

INFOID:000000001095674

REMOVAL

1. Remove ignition coil. Refer to [EM-160, "Exploded View"](#).
2. Remove spark plug with a spark plug wrench (commercial service tool).

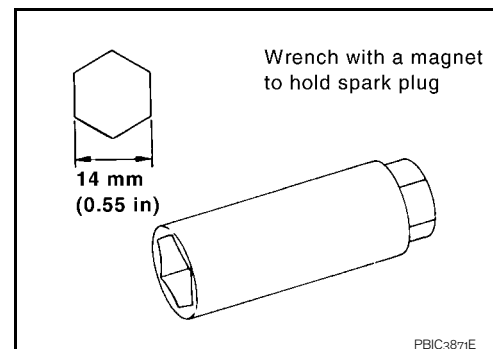

INSTALLATION

Installation is the reverse order of removal.

SPARK PLUG : Inspection

INFOID:000000001095675

INSPECTION AFTER REMOVAL

Use the standard type spark plug for normal condition.

Spark plug (standard) : Refer to [EM-236, "Spark Plug"](#).

CAUTION:


- Never drop or shock spark plug.
- Never use a wire brush for cleaning.
- If plug tip is covered with carbon, spark plug cleaner may be used.

Cleaner air pressure:


Less than 588 kPa (6 kg/cm², 85 psi)

Cleaning time:

Less than 20 seconds

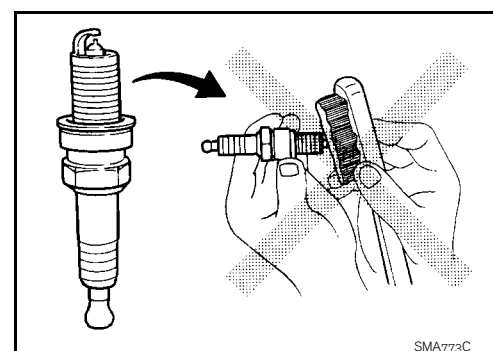

- Checking and adjusting plug gap is not required between change intervals.

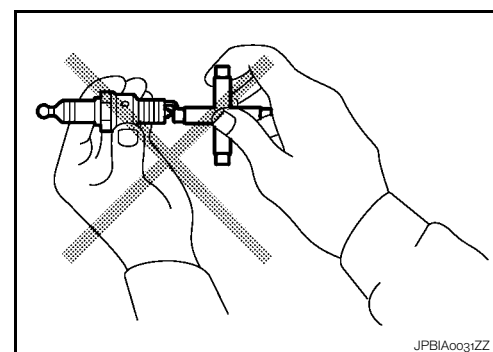

EVAP VAPOR LINES

EVAP VAPOR LINES : Inspection

INFOID:000000001109408

Refer to [EC-980, "Inspection"](#)(WITH EURO-OBD), [EC-1256, "Inspection"](#)(WITHOUT EURO-OBD).


ENGINE MAINTENANCE (K9K)

< ON-VEHICLE MAINTENANCE >

ENGINE MAINTENANCE (K9K)

DRIVE BELTS

DRIVE BELTS : Exploded View

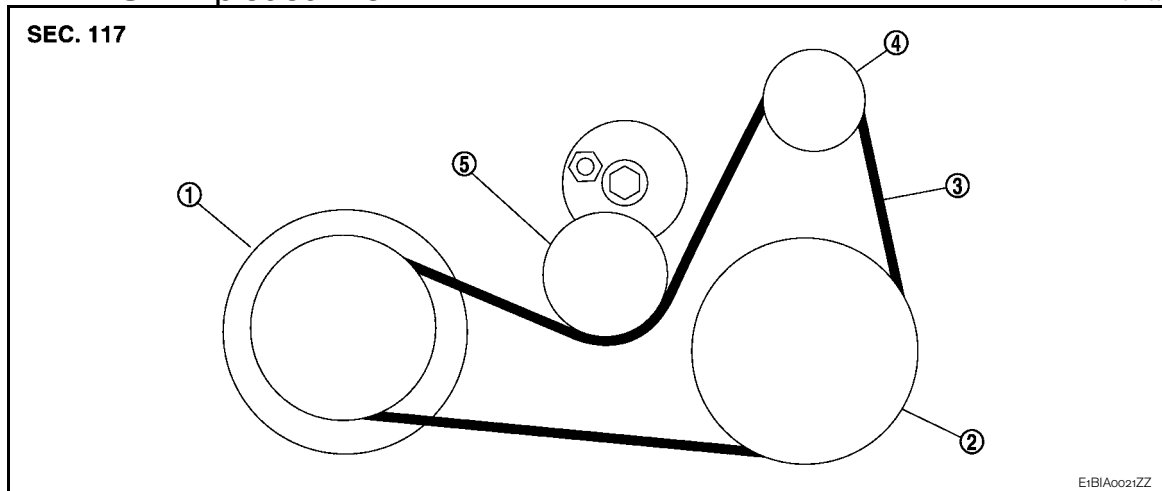

- | | | |
|----------------------|------------------------------|---------------|
| 1. Crankshaft pulley | 2. A/C compressor | 3. Drive belt |
| 4. Alternator | 5. Drive belt auto-tensioner | |

DRIVE BELTS : Inspection and Adjustment

INFOID:0000000001095677

INSPECTION

WARNING:

Be sure to perform when the engine is stopped.

1. Inspect belts for cracks, fraying, wear and oil. If necessary, replace.
2. Evaluate manually if the belt is enough tensioned (tension cannot be measured by way of frequency meter).
3. When drive belt is considered as not enough tensioned, replace it.

CAUTION:

Auto-tensioner must be replaced with a new one when the belt is replaced.

ADJUSTMENT

Refer to [EM-329, "Drive Belt"](#).

Belt tensioning is not necessary, as it is automatically adjusted by auto-tensioner.


ENGINE COOLANT

ENGINE COOLANT : Inspection

INFOID:0000000001095678

LEVEL

1. Check if the reservoir tank coolant level is within MIN to MAX when engine is cool.
2. Adjust coolant if too much or too little.

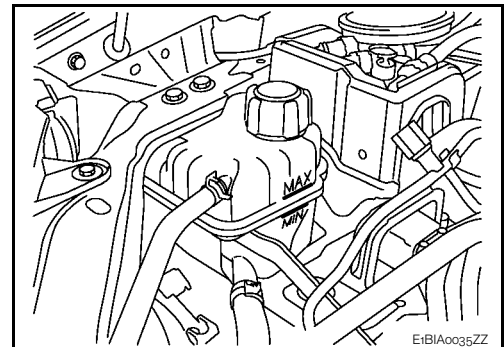

LEAKAGE

ENGINE MAINTENANCE (K9K)

< ON-VEHICLE MAINTENANCE >

- To check for leakage, fit the adapter to the reservoir tank, and then connect it to the tester [SST: — (M.S. 554-07)] (A) as shown.
- Warm up the engine and turn it off.
- To check for leaks, apply pressure to the cooling system with the radiator cap tester and radiator reservoir cap tester adapter.

Testing pressure : Refer to [CO-64, "Radiator"](#).

- If the pressure drops, look for leakage.
- Unscrew slowly the adapter from the reservoir tank to reduce the pressure in cooling system, and install the reservoir tank cap.

WARNING:

Never remove the radiator cap when the engine is hot. Serious burns could occur from high pressure engine coolant escaping from the radiator.

CAUTION:

Higher pressure than specified may cause radiator damage.


ENGINE COOLANT : Draining

INFOID:000000001095679

WARNING:

- **To avoid being scalded, never change the coolant when the engine is hot.**
- **Wrap a thick cloth around cap and carefully remove the cap. First, turn the cap a quarter of a turn to release built-up pressure. Then turn the cap all the way.**

1. Remove engine undercover.
2. Disconnect reservoir tank hose (lower) (1) from radiator and remove reservoir tank cap.
3. Remove air relief plug from water outlet. Refer to [CO-62, "Exploded View"](#).
4. Remove reservoir tank, then clean reservoir tank.
5. Check drained coolant for contaminants such as rust, corrosion or discoloration.
If contaminated, flush engine cooling system. Refer to [CO-53, "Flushing"](#).

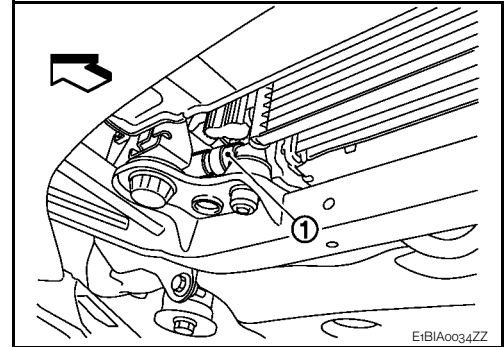

EtBlA0034ZZ

ENGINE COOLANT : Refilling

INFOID:000000001095680


- **Before start working, turn off the automatic air conditioner and the blower motor.**

1. Install reservoir tank, lower radiator hose and air relief plug.
2. Fill reservoir tank slowly with coolant until coolant spills from the air relief hole. Refer to [CO-62, "Exploded View"](#).
 - **Put a cloth under the air relief plug to prevent engine coolant to dampen the crankshaft position sensor.**
 - **Pour coolant to the MAX level line of the reservoir tank at a rate of 2 liter (1-3/4 Imp qt)/min or lower.**
3. Close the air relief plug.

CAUTION:

If the filling rate is too fast, this could lead to air being mixed in the coolant. Be sure to fill the coolant slowly according to the rate indicated above.

Use Nissan Genuine Coolant L250 or equivalent mixed with water (distilled or demineralised). Refer to [MA-22, "Engine Coolant Mixture Ratio"](#).

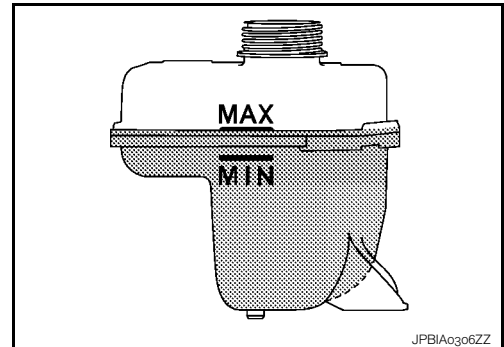

JPBlA0306ZZ

ENGINE MAINTENANCE (K9K)

< ON-VEHICLE MAINTENANCE >

Engine coolant capacity (With reservoir tank)	: Refer to CO-64 , "Periodical Maintenance Specification".
Reservoir tank capacity	: Refer to CO-64 , "Periodical Maintenance Specification".

4. Start engine without closing reservoir tank cap and keep engine racing at 1,500 rpm for about 2-3 minutes. If necessary, pour engine coolant up to MAX level.
 - If coolant overflows reservoir tank hole, install filler cap.
 - Watch engine coolant temperature gauge so as not overheat the engine during all of the operation.
- WARNING:**
 - Be careful not be scalded with hot engine coolant or vacuum pump when operating.
 - Radiator fan blade can start at any time and make personal injuries.
5. Turn off the engine and loose air relief plug until coolant spills from air relief hole.
6. Close the air relief plug and run the engine at 2,000 rpm until the upper hose comes hot and radiator fan operates. Let the engine running approximately 5 minutes at idle speed and check for sound of coolant flow while running engine from idle up to 3,000 rpm.
 - Sound may be noticeable at heater water cock.
7. If sound is heard, bleed air from cooling system by repeating steps 4 to 6 until coolant lever no longer drops.
 - Check the radiator lower hose for any signs of leakage.
8. Turn off the engine and let it cool down.
 - Cool down using a fan to reduce the time.
9. After cooling period, loose the air relief plug and check if coolant spills from the air relief hole. In other case, remove the air relief plug until the coolant spills, and then close the relief air plug. Bleed air from cooling system by repeating steps 6 to 10 until the coolant spills immediately.
10. Check the engine coolant level when engine is cool and refill to MAX level line if the level is lower.
 - Clean excess coolant from engine.
11. Check that the reservoir tank cap is tightened.

ENGINE COOLANT : Flushing

INFOID:000000001095681

1. Fill reservoir tank with water until water spills from the air relief hole, then close air relief plug. Reinstall reservoir tank cap.
2. Run engine and warm it up to normal operating temperature.
3. Rev engine two or three times under no-load.
4. Stop engine and wait until it cools down.
5. Drain water.
6. Repeat steps 1 through 5 until clear water begins to drain from radiator.
7. Blow compressed air into cooling circuit through the reservoir tank valve hole to drain all the water.

RADIATOR CAP


RADIATOR CAP : Inspection

INFOID:000000001095682

- Fit the adapter to the tester as shown.
- When connecting the reservoir tank cap to the tester [SST: — (M.S. 554-07)] (A), apply water or LLC to the cap seal part.
- Check reservoir tank cap relief pressure.

Standard : Refer to [CO-64](#), "Radiator".

- Replace the reservoir tank cap if the engine coolant passes through it, or if any fur signs is detected.

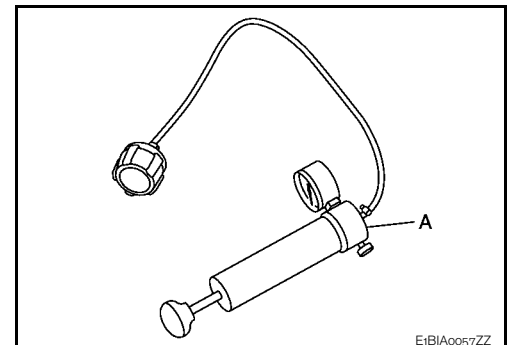

ENGINE MAINTENANCE (K9K)

< ON-VEHICLE MAINTENANCE >

RADIATOR

RADIATOR : Inspection

INFOID:000000001095683

Check radiator for mud or clogging. If necessary, clean radiator as follows.


- Be careful not to bend or damage the radiator fins.
 - When radiator is cleaned without removal, remove all surrounding parts such as radiator fan, radiator shroud and horns. Then tape the harness and connectors to prevent water from entering.
1. Apply water by hose to the back side of the radiator core vertically downwards.
 2. Apply water again to all radiator core surface once per minute.
 3. Stop washing if any stains no longer flow out from the radiator.
 4. Blow air into the back side of radiator core vertically downwards.
- Use compressed air lower than 490 kPa (4.9 bar 5 kg/cm², 71psi) and keep distance more than 30 cm (11.8 in).
5. Blow air again into all the radiator core surface once per minute until no water sprays out.

FUEL LINES

FUEL LINES : Inspection

INFOID:000000001095719

Inspect fuel lines, filler cap and tank for improper attachment, leaks, cracks, damage, loose connections, chafing or deterioration. If necessary, repair or replace damaged parts.

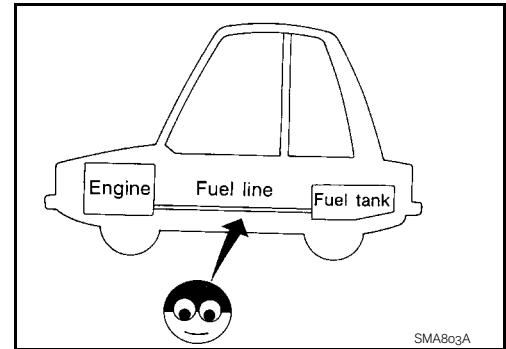


AIR CLEANER FILTER

AIR CLEANER FILTER : Removal and Installation

INFOID:000000001095684

REMOVAL


1. Open air cleaner case.

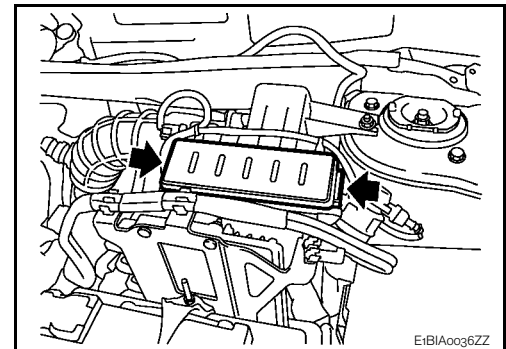

ENGINE MAINTENANCE (K9K)

< ON-VEHICLE MAINTENANCE >

2. Remove air cleaner filter (1).

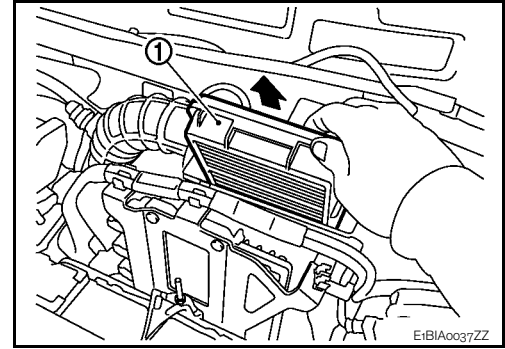

INSTALLATION

Install in the reverse order of removal.

ENGINE OIL

ENGINE OIL : Draining

INFOID:000000001095685

WARNING:

- Be careful not to burn yourself, as the engine oil is hot.
- Prolonged and repeated contact with used engine oil may cause skin cancer: try to avoid direct skin contact with used oil. If skin contact is made, wash thoroughly with soap or hand cleaner as soon as possible.

1. Put vehicle horizontally.
2. Warm up engine, and check for oil leakage from engine components.
3. Stop engine and wait for 10 minutes.
4. Loosen oil filler cap.
5. Remove drain plug and then drain engine oil.

ENGINE OIL : Refilling

INFOID:000000001095686

1. Refill with new engine oil.
 - Refer to [MA-21. "Fluids and Lubricants"](#).

Oil capacity (Approximate)

: Refer to [LU-30. "Periodical Maintenance Specification"](#).

- The refill capacity depends on the oil temperature and drain time. Use these specifications for reference only. Always use the dipstick to determine when the proper amount of oil is in the engine.


CAUTION:

- Be sure to clean drain plug and install with new washer.
 - The refill capacity depends on the oil temperature and drain time. Use these specifications for reference only. Always use the dipstick to determine when the proper amount of oil is in the engine.
2. Warm up engine and check area around drain plug and oil filter for oil leakage.
 3. Stop engine and wait for 10 minutes.
 4. Check oil level.

OIL FILTER

OIL FILTER : Replacement

INFOID:000000001095718

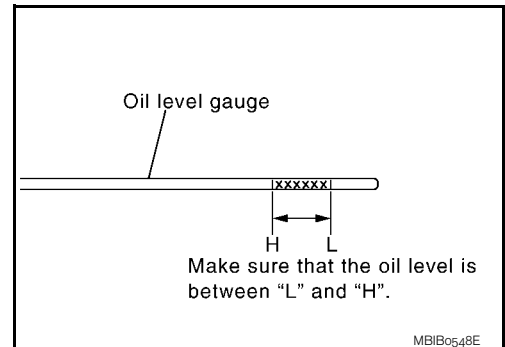

ENGINE MAINTENANCE (K9K)

< ON-VEHICLE MAINTENANCE >

1. Using an oil filter wrench [SST: KV113C0010 (Mot. 1329)], remove oil filter.

CAUTION:

- Be careful not to get burned when the engine and engine oil are hot.
- When removing, prepare a shop cloth to absorb any oil leakage or spillage.
- Do not allow engine oil to adhere to the drive belts.
- Completely wipe off any oil that adhere to the engine and the vehicle.

2. Remove foreign materials adhering to the oil filter installation surface.

3. Install oil filter bracket to oil cooler.



CAUTION:

Install oil filter bracket, positioning lug in the hole of oil cooler.

4. Apply engine oil to the oil seal contact surface of the new oil filter.
5. Install the oil filter until it comes into contact with the oil seal on the engine bracket.
6. Using an oil filter wrench [SST: KV113C0010 (Mot. 1329)], tighten oil filter.

 **14 N·m (1.4 kg-m, 10 ft-lb)**

7. After warming up the engine, check for engine oil leakage.
8. Check oil level and add engine oil. Refer to [LU-23](#).

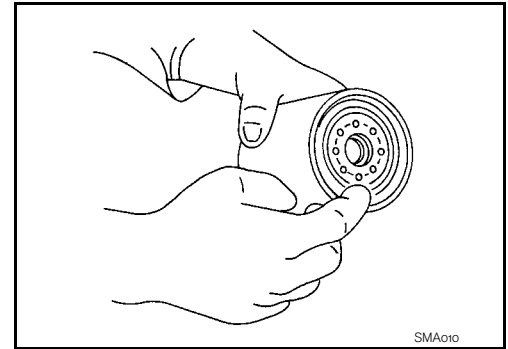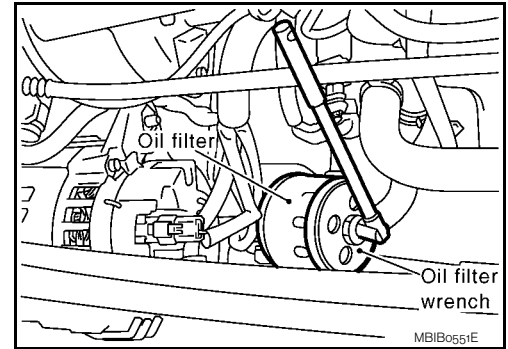

CHASSIS MAINTENANCE

< ON-VEHICLE MAINTENANCE >

CHASSIS MAINTENANCE

HEADLAMP AIMING ADJUSTMENT (XENON TYPE - LHD)

HEADLAMP AIMING ADJUSTMENT (XENON TYPE - LHD) : Description INFOID:0000000001116100

PREPARATION BEFORE ADJUSTING

NOTE:

- For details, refer to the regulations in your own country.
- Perform aiming if the vehicle front body has been repaired and/or the headlamp assembly has been replaced.

Before performing aiming adjustment, check the following.

- Adjust the tire pressure to the specification.
- Fill with fuel, engine coolant and each oil.
- Maintain the unloaded vehicle condition. (Remove luggage from the passenger compartment and the luggage room.)

NOTE:

Do not remove the temporary tire, jack and on-vehicle tool.


- Wipe out dirt on the headlamp.

CAUTION:

Never use organic solvent (thinner, gasoline etc.)

- Ride alone on the driver seat.

AIMING ADJUSTMENT SCREW

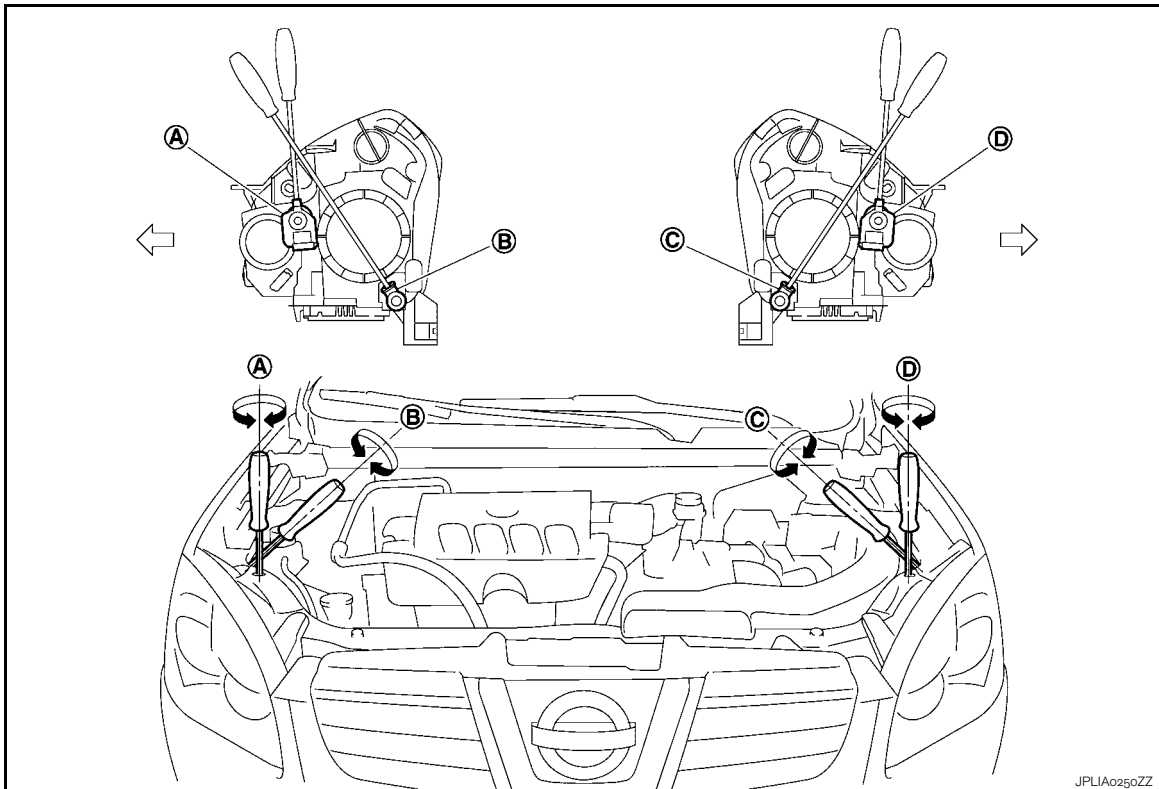

A. Headlamp RH (UP/DOWN) adjustment screw

B. Headlamp RH (INSIDE/OUTSIDE) adjustment screw

C. Headlamp LH (INSIDE/OUTSIDE) adjustment screw

D. Headlamp LH (UP/DOWN) adjustment screw

⇐ Vehicle center

CHASSIS MAINTENANCE

< ON-VEHICLE MAINTENANCE >

Adjustment screw		Screw driver rotation	Facing direction
A	Headlamp RH (UP/DOWN)	Clockwise	UP
		Counterclockwise	DOWN
B	Headlamp RH (INSIDE/OUTSIDE)	Clockwise	INSIDE
		Counterclockwise	OUTSIDE
C	Headlamp LH (INSIDE/OUTSIDE)	Clockwise	INSIDE
		Counterclockwise	OUTSIDE
D	Headlamp LH (UP/DOWN)	Clockwise	UP
		Counterclockwise	DOWN

HEADLAMP AIMING ADJUSTMENT (XENON TYPE - LHD) : Aiming Adjustment Procedure

INFOID:000000001116101

1. Place the screen.

NOTE:

- Stop the vehicle at the perpendicular angle to the wall.
- Set the screen perpendicularly to the ground.

2. Face the vehicle squarely toward the screen and make the distance between the headlamp center and the screen 10 m (32.8 ft).

3. Start the engine and illuminate the headlamp (LO).

NOTE:


Block light from the headlamp that is not being adjusted with a thick fabric or another object, so that it does not reach the adjustment screen.

CAUTION:

Never cover lens surface with tape, etc. because it is made from plastic.

4. Use the aiming adjustment screw to adjust the elbow point projected by the low beams on the screen, so that it is within the aiming adjustment area.

Low beam distribution on the screen

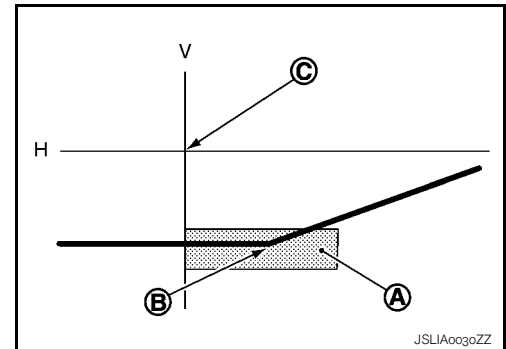


- A. Aiming adjustment area
- B. Elbow point
- C. Headlamp center
- H. Horizontal center line of headlamp
- V. Vertical center line of headlamp

Unit: mm (in)

Aiming adjustment area	
Vertical direction (Y) (Lower side from headlamp center height)	Lateral direction (X) (Right side from headlamp centerline)
100 – 124 (3.94 – 4.88)	Within 120 (4.72)

CHASSIS MAINTENANCE

< ON-VEHICLE MAINTENANCE >

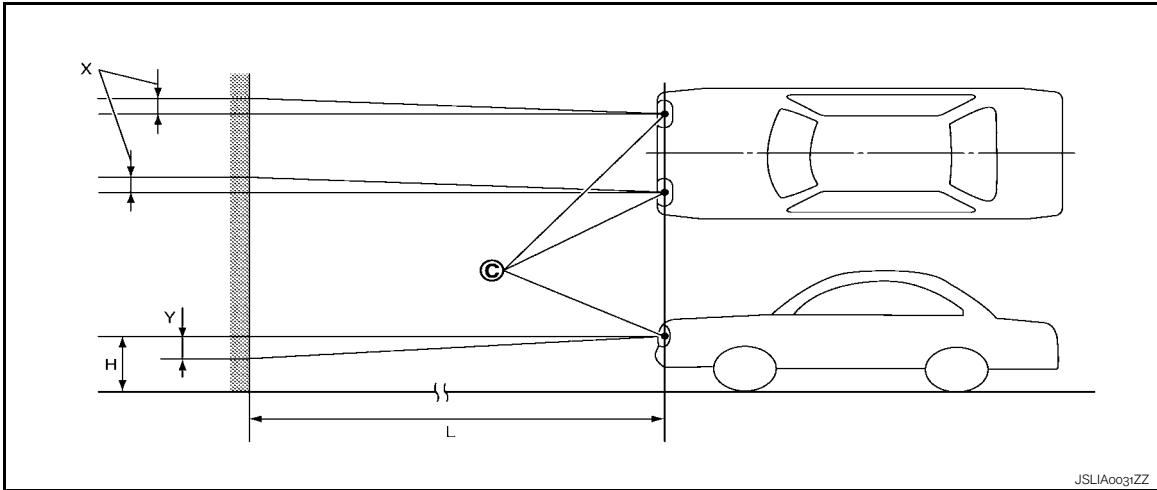

- C. Vertical center line of headlamp H. Horizontal center line of headlamp L. Distance from headlamp center to screen
 X. Aiming adjustment area (lateral) Y. Aiming adjustment area (Vertical)

Distance from headlamp center to screen (L) : 10 m (32.8 ft)

HEADLAMP AIMING ADJUSTMENT (XENON TYPE - RHD)

HEADLAMP AIMING ADJUSTMENT (XENON TYPE - RHD) : Description INFOID:0000000001116102

PREPARATION BEFORE ADJUSTING

NOTE:

- For details, refer to the regulations in your own country.
- Perform aiming if the vehicle front body has been repaired and/or the headlamp assembly has been replaced.

Before performing aiming adjustment, check the following.

- Adjust the tire pressure to the specification.
- Fill with fuel, engine coolant and each oil.
- Maintain the unloaded vehicle condition. (Remove luggage from the passenger compartment and the luggage room.)

NOTE:

Do not remove the temporary tire, jack and on-vehicle tool.

- Wipe out dirt on the headlamp.

CAUTION:


Never use organic solvent (thinner, gasoline etc.)

- Ride alone on the driver seat.

AIMING ADJUSTMENT SCREW

CHASSIS MAINTENANCE

< ON-VEHICLE MAINTENANCE >

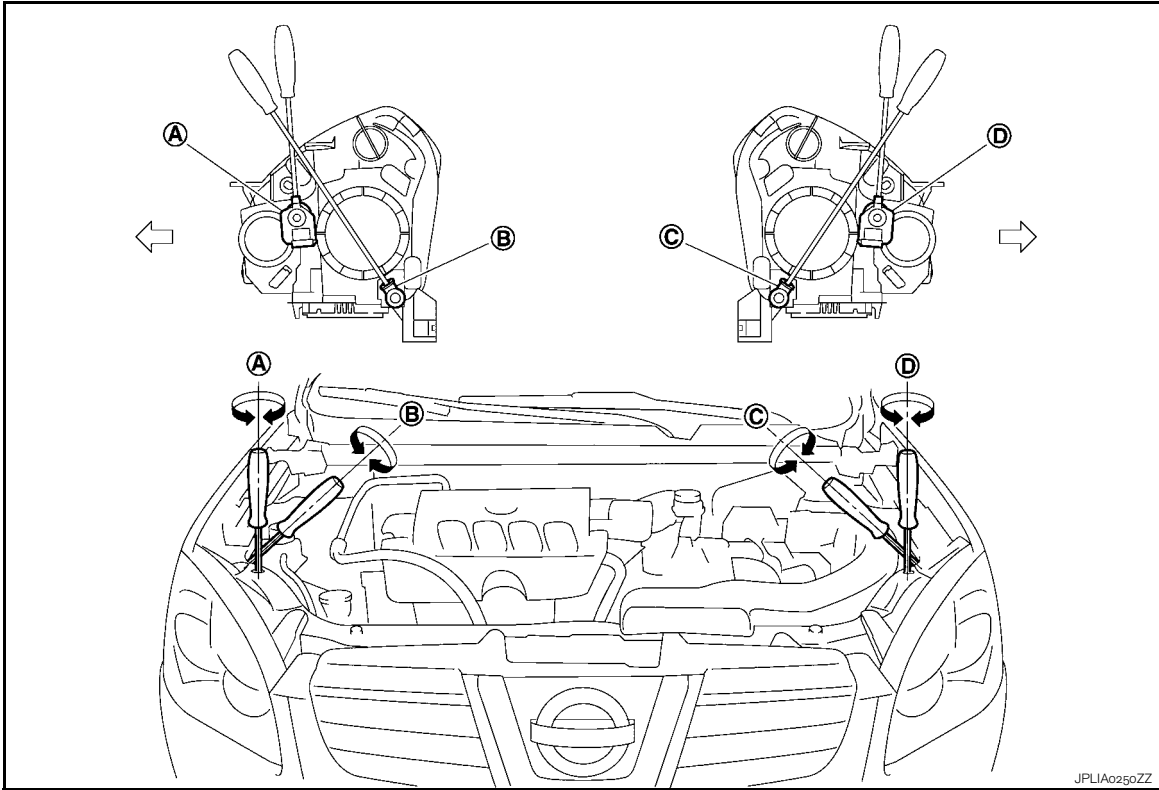

- A. Headlamp RH (UP/DOWN) adjustment screw B. Headlamp RH (INSIDE/OUTSIDE) adjustment screw C. Headlamp LH (INSIDE/OUTSIDE) adjustment screw
D. Headlamp LH (UP/DOWN) adjustment screw

↔: Vehicle center

Adjustment screw		Screw driver rotation	Facing direction
A	Headlamp RH (UP/DOWN)	Clockwise	UP
		Counterclockwise	DOWN
B	Headlamp RH (INSIDE/OUTSIDE)	Clockwise	INSIDE
		Counterclockwise	OUTSIDE
C	Headlamp LH (INSIDE/OUTSIDE)	Clockwise	INSIDE
		Counterclockwise	OUTSIDE
D	Headlamp LH (UP/DOWN)	Clockwise	UP
		Counterclockwise	DOWN

HEADLAMP AIMING ADJUSTMENT (XENON TYPE - RHD) : Aiming Adjustment Procedure

INFOID:0000000001116103

- Place the screen.
NOTE:
 - Stop the vehicle at the perpendicular angle to the wall.
 - Set the screen perpendicularly to the ground.
- Face the vehicle squarely toward the screen and make the distance between the headlamp center and the screen 10 m (32.8 ft).
- Start the engine and illuminate the headlamp (LO).
NOTE:

Block light from the headlamp that is not being adjusted with a thick fabric or another object, so that it does not reach the adjustment screen.

CHASSIS MAINTENANCE


< ON-VEHICLE MAINTENANCE >

CAUTION:

Never cover lens surface with tape, etc. because it is made from plastic.

- Use the aiming adjustment screw to adjust the elbow point projected by the low beams on the screen, so that it is within the aiming adjustment area.


Low beam distribution on the screen

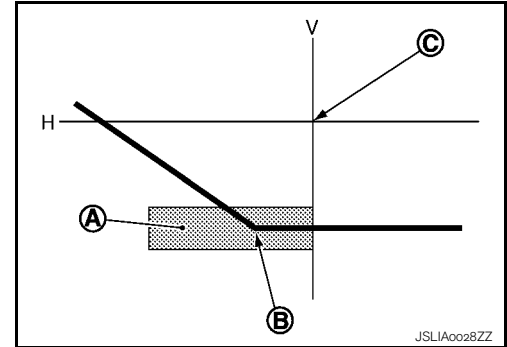

- A. Aiming adjustment area
- B. Elbow point
- C. Headlamp center
- H. Horizontal center line of headlamp
- V. Vertical center line of headlamp

Unit: mm (in)

Aiming adjustment area	
Vertical direction (Y) (Lower side from headlamp center height)	Lateral direction (X) (Left side from headlamp centerline)
100 – 124 (3.94 – 4.88)	Within 120 (4.72)

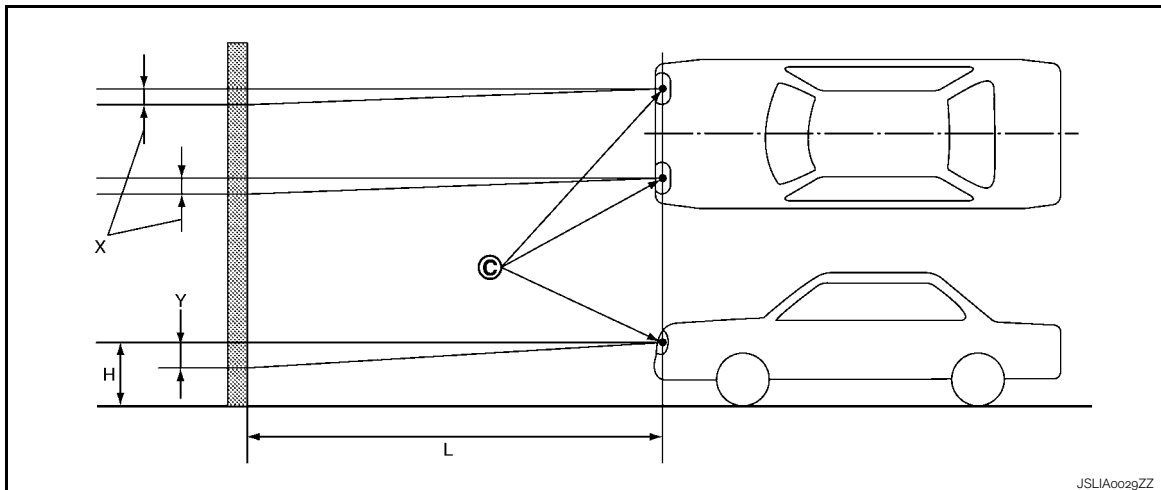

- C. Vertical center line of headlamp
- H. Horizontal center line of headlamp
- L. Distance from headlamp center to screen
- X. Aiming adjustment area (lateral)
- Y. Aiming adjustment area (Vertical)

Distance from headlamp center to screen (L) : 10 m (32.8 ft)

HEADLAMP AIMING ADJUSTMENT (HALOGEN TYPE - LHD)

HEADLAMP AIMING ADJUSTMENT (HALOGEN TYPE - LHD) : Description

INFOID:0000000001116172

PREPARATION BEFORE ADJUSTING

NOTE:

CHASSIS MAINTENANCE

< ON-VEHICLE MAINTENANCE >

- For details, refer to the regulations in your own country.
- Perform aiming if the vehicle front body has been repaired and/or the headlamp assembly has been replaced.

Before performing aiming adjustment, check the following.

- Adjust the tire pressure to the specification.
- Fill with fuel, engine coolant and each oil.
- Maintain the unloaded vehicle condition. (Remove luggage from the passenger compartment and the luggage room.)

NOTE:

Do not remove the temporary tire, jack and on-vehicle tool.


- Wipe out dirt on the headlamp.

CAUTION:

Never use organic solvent (thinner, gasoline etc.)

- Ride alone on the driver seat.
- Headlamp aiming switch sets to "0".

AIMING ADJUSTMENT SCREW

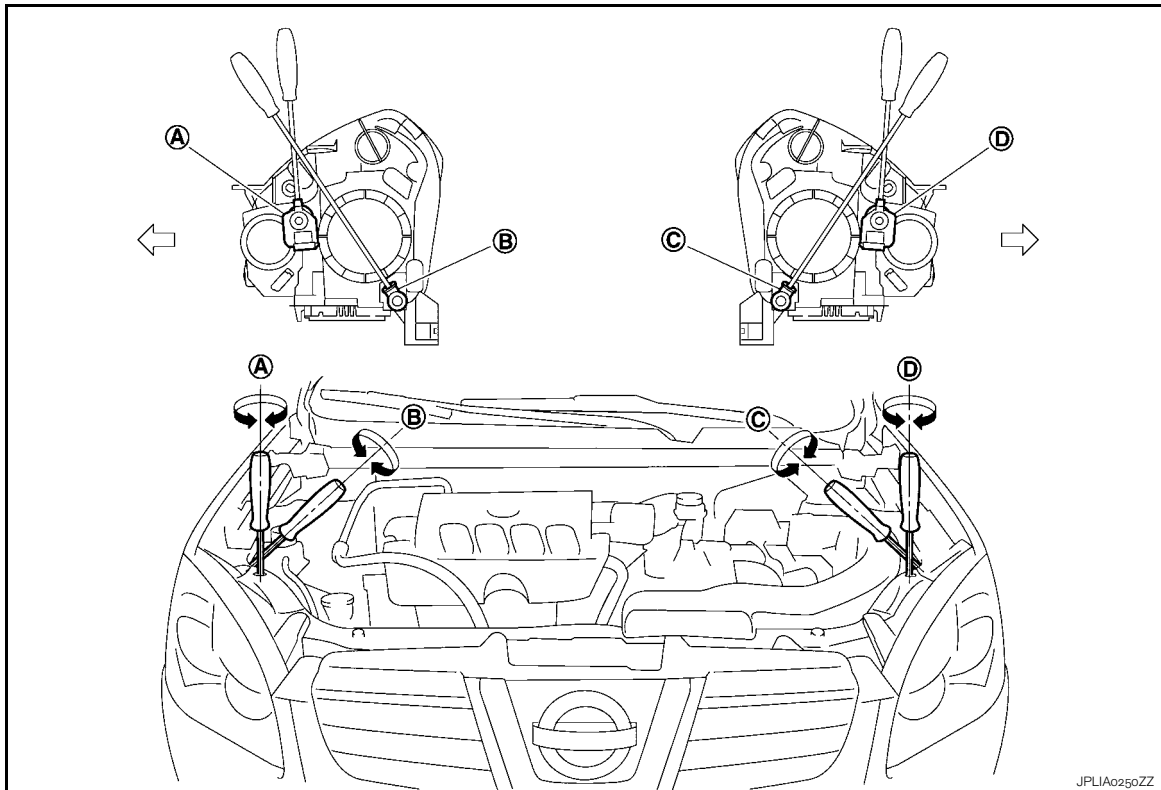

- A. Headlamp RH (UP/DOWN) adjustment screw B. Headlamp RH (INSIDE/OUTSIDE) adjustment screw C. Headlamp LH (INSIDE/OUTSIDE) adjustment screw
- D. Headlamp LH (UP/DOWN) adjustment screw

↔ Vehicle center

Adjustment screw		Screw driver rotation	Facing direction
A	Headlamp RH (UP/DOWN)	Clockwise	UP
		Counterclockwise	DOWN
B	Headlamp RH (INSIDE/OUTSIDE)	Clockwise	INSIDE
		Counterclockwise	OUTSIDE

CHASSIS MAINTENANCE

< ON-VEHICLE MAINTENANCE >

Adjustment screw		Screw driver rotation	Facing direction
C	Headlamp LH (INSIDE/OUTSIDE)	Clockwise	INSIDE
		Counterclockwise	OUTSIDE
D	Headlamp LH (UP/DOWN)	Clockwise	UP
		Counterclockwise	DOWN

HEADLAMP AIMING ADJUSTMENT (HALOGEN TYPE - LHD) : Aiming Adjustment Procedure

INFOID:000000001116173

1. Place the screen.

NOTE:

- Stop the vehicle at the perpendicular angle to the wall.
- Set the screen perpendicularly to the ground.

2. Face the vehicle squarely toward the screen and make the distance between the headlamp center and the screen 10 m (32.8 ft).

3. Start the engine and illuminate the headlamp (LO).

NOTE:


Block light from the headlamp that is not being adjusted with a thick fabric or another object, so that it does not reach the adjustment screen.

CAUTION:

Never cover lens surface with tape, etc. because it is made from plastic.

4. Use the aiming adjustment screw to adjust the elbow point projected by the low beams on the screen, so that it is within the aiming adjustment area.

Low beam distribution on the screen

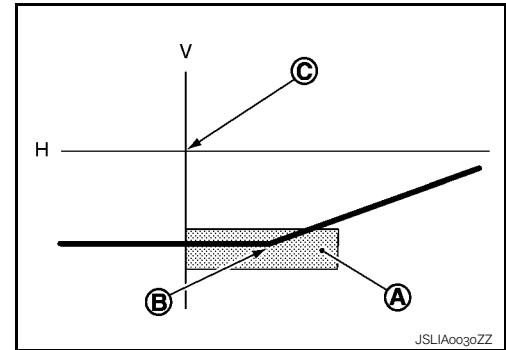


- A. Aiming adjustment area
- B. Elbow point
- C. Headlamp center
- H. Horizontal center line of headlamp
- V. Vertical center line of headlamp

Unit: mm (in)

Aiming adjustment area	
Vertical direction (Y) (Lower side from headlamp center height)	Lateral direction (X) (Right side from headlamp centerline)
100 – 124 (3.94 – 4.88)	Within 120 (4.72)

CHASSIS MAINTENANCE

< ON-VEHICLE MAINTENANCE >

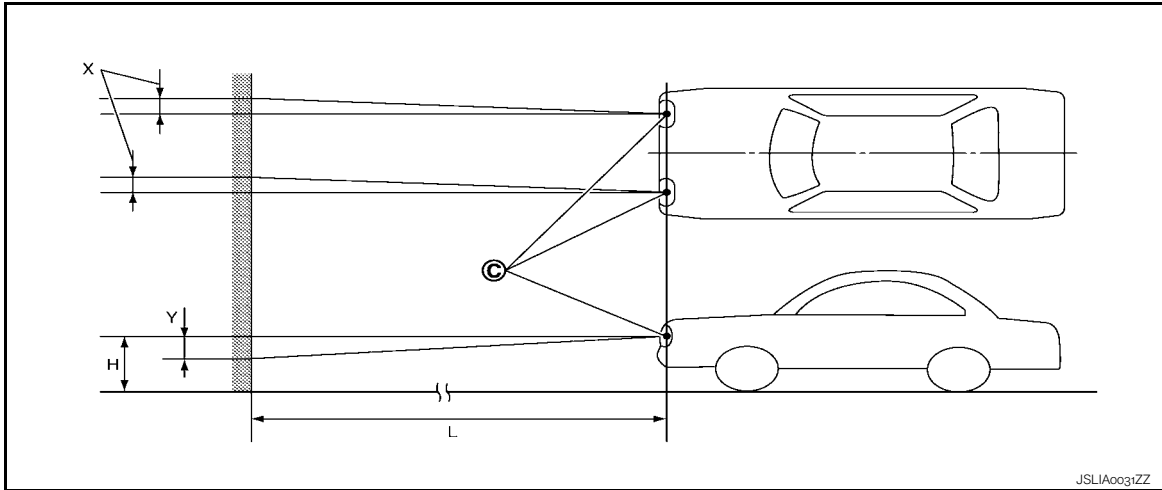

- C. Vertical center line of headlamp H. Horizontal center line of headlamp L. Distance from headlamp center to screen
X. Aiming adjustment area (lateral) Y. Aiming adjustment area (Vertical)

Distance from headlamp center to screen (L) : 10 m (32.8 ft)

HEADLAMP AIMING ADJUSTMENT (HALOGEN TYPE - RHD)

HEADLAMP AIMING ADJUSTMENT (HALOGEN TYPE - RHD) : Description

INFOID:0000000001116242

PREPARATION BEFORE ADJUSTING

NOTE:

- For details, refer to the regulations in your own country.
- Perform aiming if the vehicle front body has been repaired and/or the headlamp assembly has been replaced.

Before performing aiming adjustment, check the following.

- Adjust the tire pressure to the specification.
- Fill with fuel, engine coolant and each oil.
- Maintain the unloaded vehicle condition. (Remove luggage from the passenger compartment and the luggage room.)

NOTE:

- Do not remove the temporary tire, jack and on-vehicle tool.
- Wipe out dirt on the headlamp.

CAUTION:


Never use organic solvent (thinner, gasoline etc.)

- Ride alone on the driver seat.
- Headlamp aiming switch sets to "0".

AIMING ADJUSTMENT SCREW

CHASSIS MAINTENANCE

< ON-VEHICLE MAINTENANCE >

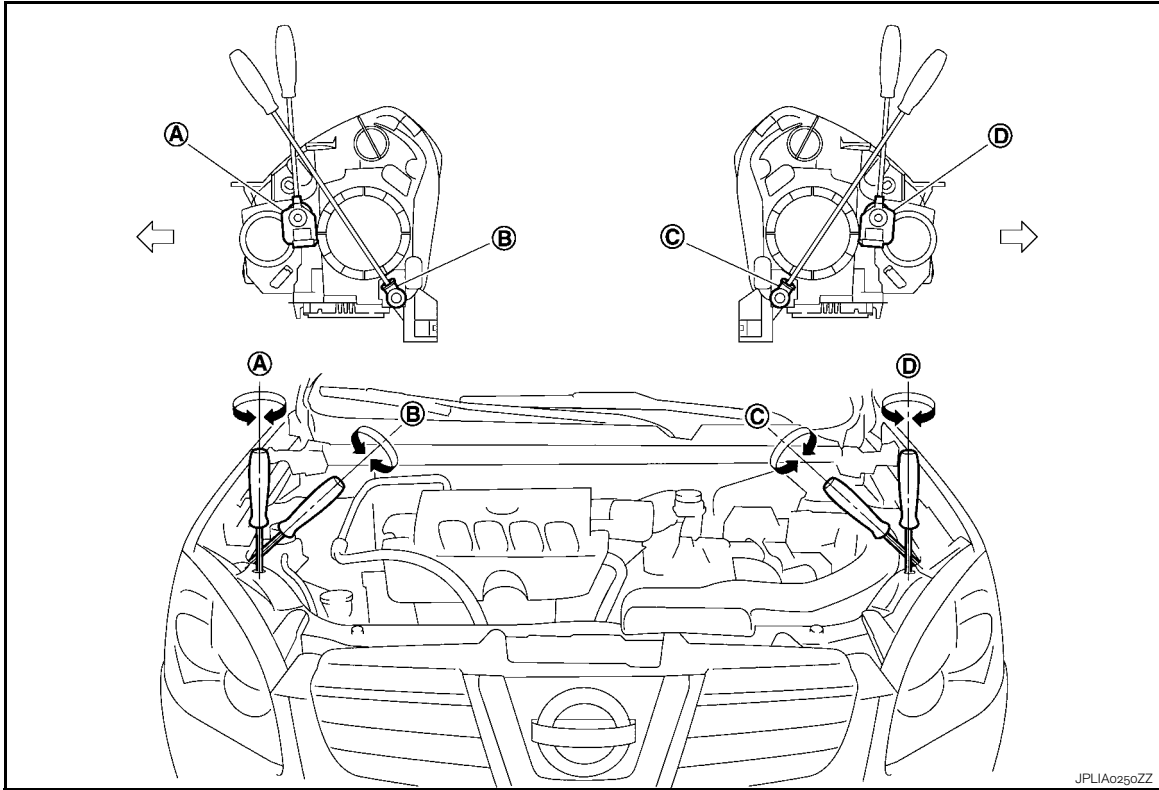

- A. Headlamp RH (UP/DOWN) adjustment screw
 B. Headlamp RH (INSIDE/OUTSIDE) adjustment screw
 C. Headlamp LH (INSIDE/OUTSIDE) adjustment screw
 D. Headlamp LH (UP/DOWN) adjustment screw

↔: Vehicle center

Adjustment screw		Screw driver rotation	Facing direction
A	Headlamp RH (UP/DOWN)	Clockwise	UP
		Counterclockwise	DOWN
B	Headlamp RH (INSIDE/OUTSIDE)	Clockwise	INSIDE
		Counterclockwise	OUTSIDE
C	Headlamp LH (INSIDE/OUTSIDE)	Clockwise	INSIDE
		Counterclockwise	OUTSIDE
D	Headlamp LH (UP/DOWN)	Clockwise	UP
		Counterclockwise	DOWN

HEADLAMP AIMING ADJUSTMENT (HALOGEN TYPE - RHD) : Aiming Adjustment Procedure

INFOID:0000000001116243

- Place the screen.

NOTE:

 - Stop the vehicle at the perpendicular angle to the wall.
 - Set the screen perpendicularly to the ground.
- Face the vehicle squarely toward the screen and make the distance between the headlamp center and the screen 10 m (32.8 ft).
- Start the engine and illuminate the headlamp (LO).

NOTE:

Block light from the headlamp that is not being adjusted with a thick fabric or another object, so that it does not reach the adjustment screen.

CHASSIS MAINTENANCE


< ON-VEHICLE MAINTENANCE >

CAUTION:

Never cover lens surface with tape, etc. because it is made from plastic.

- Use the aiming adjustment screw to adjust the elbow point projected by the low beams on the screen, so that it is within the aiming adjustment area.


Low beam distribution on the screen

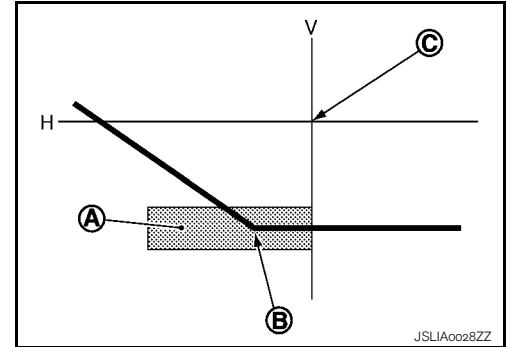

- A. Aiming adjustment area
- B. Elbow point
- C. Headlamp center
- H. Horizontal center line of headlamp
- V. Vertical center line of headlamp

Unit: mm (in)

Aiming adjustment area	
Vertical direction (Y) (Lower side from headlamp center height)	Lateral direction (X) (Left side from headlamp centerline)
100 – 124 (3.94 – 4.88)	Within 120 (4.72)

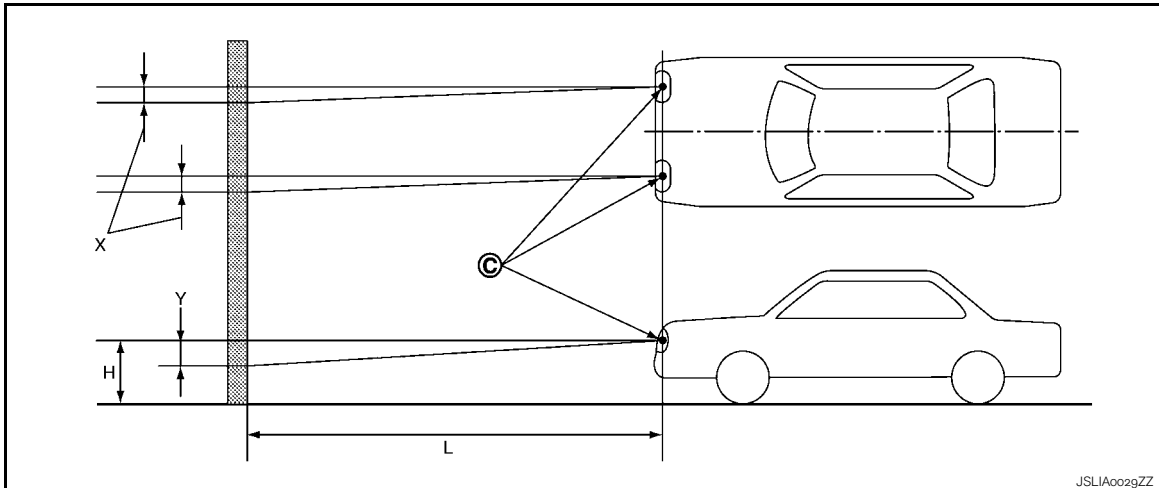

- C. Vertical center line of headlamp
- H. Horizontal center line of headlamp
- L. Distance from headlamp center to screen
- X. Aiming adjustment area (lateral)
- Y. Aiming adjustment area (Vertical)

Distance from headlamp center to screen (L) : 10 m (32.8 ft)

EXHAUST SYSTEM

EXHAUST SYSTEM : Inspection


INFOID:000000001088650

CHASSIS MAINTENANCE

< ON-VEHICLE MAINTENANCE >

Check exhaust pipes, muffler and mounting for improper attachment, leaks, cracks, damage, chafing or deterioration.

- If anything is found, repair or replace damaged parts.

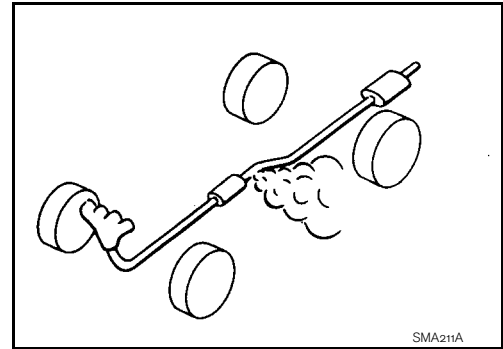

CVT FLUID




CVT FLUID : Inspection

INFOID:000000001115874

CHECKING CVT FLUID

Fluid level should be checked with the fluid warmed up to 50 to 80°C (122 to 176°F). The fluid level check procedure is as follows:

1. Check for fluid leakage.
 2. With the engine warmed up, drive the vehicle in an urban area. When ambient temperature is 20°C (68°F), it takes about 10 minutes for the CVT fluid to warm up to 50 to 80°C (122 to 176°F).
 3. Park the vehicle on a level surface.
 4. Apply parking brake firmly.
 5. With engine at idle, while depressing brake pedal, move shift selector throughout the entire shift range.
 6. Pull out the CVT fluid level gauge from the CVT fluid charging pipe after pressing the tab on the CVT fluid level gauge to release the lock.
 7. Wipe fluid off the CVT fluid level gauge. Insert the CVT fluid level gauge rotating 180° from the originally installed position, then securely push the CVT fluid level gauge until it meets the top end of the CVT fluid charging pipe.
- CAUTION:**
When wiping away the CVT fluid level gauge, always use lint-free paper, not a cloth rag.

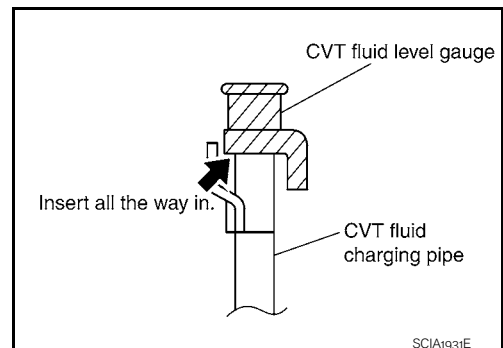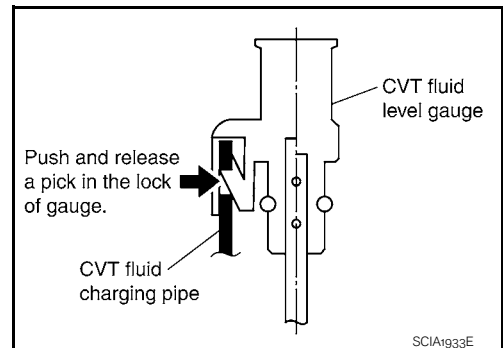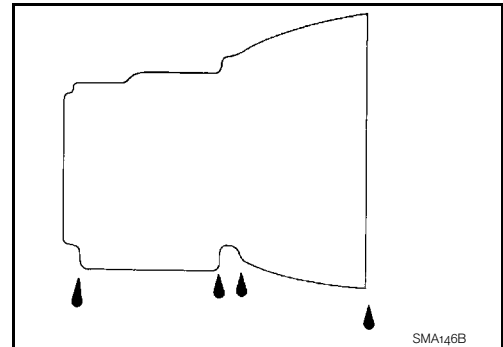


CHASSIS MAINTENANCE

< ON-VEHICLE MAINTENANCE >

- Place the selector lever in "P" or "N" and make sure the fluid level is within the specified range.

CAUTION:

When reinstalling CVT fluid level gauge, insert it into the CVT fluid charging pipe and rotate it to the original installation position until securely locked.

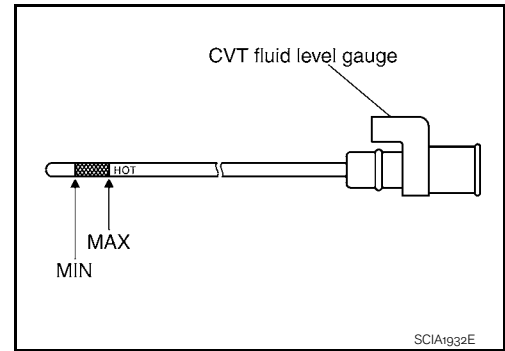


CVT FLUID CONDITION

Check CVT fluid condition.

- If CVT fluid is very dark or smells burned, check operation of CVT. Flush cooling system after repair of CVT.
- If CVT fluid contains frictional material (clutches, brakes, etc.), replace radiator and flush cooler line using cleaning solvent and compressed air after repair of CVT. Refer to [CO-34, "Exploded View"](#).

Fluid status	Conceivable cause	Required operation
Varnished (viscous varnish state)	CVT fluid become degraded due to high temperatures.	Replace the CVT fluid and check the CVT main unit and the vehicle for malfunctions (wire harnesses, cooler pipes, etc.)
Milky white or cloudy	Water in the fluid	Replace the CVT fluid and check for places where water is getting in.
Large amount of metal powder mixed in	Unusual wear of sliding parts within CVT	Replace the CVT fluid and check for improper operation of the CVT.

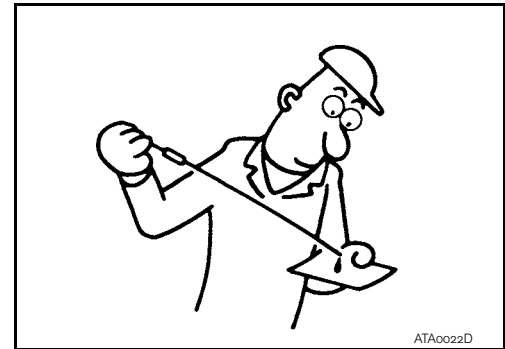

CVT FLUID : Changing

INFOID:0000000001115875

- Remove drain plug, and then drain CVT fluid from oil pan.
- Install drain plug to oil pan.

CAUTION:

Never reuse drain plug gasket.

Drain plug – tightening torque : Refer to [TM-335, "Exploded View"](#).

- Fill CVT fluid from CVT fluid charging pipe to the specified level.
- With the engine warmed up, drive the vehicle in an urban area. When ambient temperature is 20°C (68°F), it takes about 10 minutes for the CVT fluid to warm up to 50 to 80°C (122 to 176°F).
- Check CVT fluid level and condition.
- Repeat steps 1 to 5 if CVT fluid has been contaminated.

CVT fluid : Refer to [TM-361, "General Specification"](#).

Fluid capacity : Refer to [TM-361, "General Specification"](#).

CAUTION:

- Use only Genuine NISSAN CVT Fluid NS-2. Never mix with other fluid.
- Using CVT fluid other than Genuine NISSAN CVT Fluid NS-2 will deteriorate in driveability and CVT durability, and may damage the CVT, which is not covered by the warranty.
- When filling CVT fluid, take care not to scatter heat generating parts such as exhaust.
- Sufficiently shake the container of CVT fluid before using.

CHASSIS MAINTENANCE

< ON-VEHICLE MAINTENANCE >

- Delete CVT fluid deterioration date with CONSULT-III after changing CVT fluid.

GEAR OIL: RS5F92R

GEAR OIL: RS5F92R : Inspection


INFOID:000000001095729

LEAKAGE

Make sure that gear oil is not leaking from transaxle or around it.

LEVEL


1. Remove filler plug (1) and check oil level at filler plug hole as shown.
CAUTION:
Never start engine while checking oil level.
2. Set a new gasket on filler plug and then install it to transaxle case.
CAUTION:
Never reuse gasket.
3. Tighten filler plug to the specified torque.

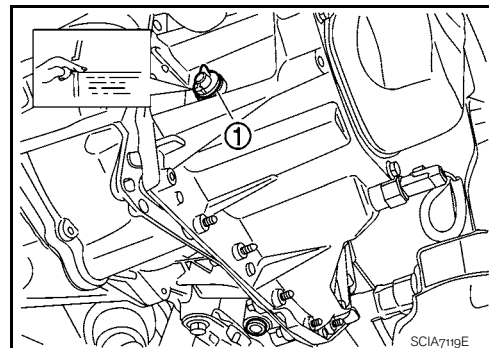

GEAR OIL: RS5F92R : Draining

INFOID:000000001095727

1. Start engine and let it run to warm up transaxle.
2. Stop engine. Remove drain plug (1) and then drain gear oil.
3. Set a new gasket on drain plug and install it to clutch housing. Tighten drain plug to the specified torque.
CAUTION:
Never reuse gasket.

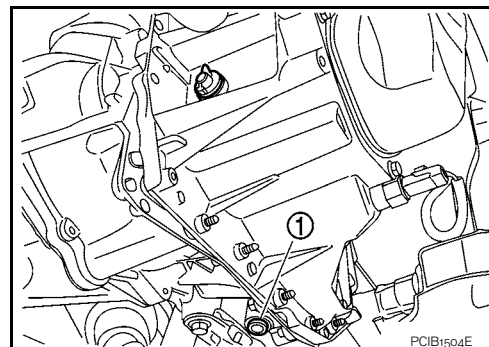

GEAR OIL: RS5F92R : Refilling


INFOID:000000001095728

1. Remove filler plug (1). Fill with new gear oil until oil level reaches the specified limit at filler plug hole as shown.

Oil grade and viscosity : Refer to [MA-21, "Fluids and Lubricants"](#).

Oil capacity : Refer to [TM-50, "General Specification"](#).

2. After refilling gear oil, check oil level. Refer to [TM-17, "Inspection"](#).
3. Set a new gasket on filler plug and then install it to transaxle case.
CAUTION:
Never reuse gasket.
4. Tighten filler plug to the specified torque.

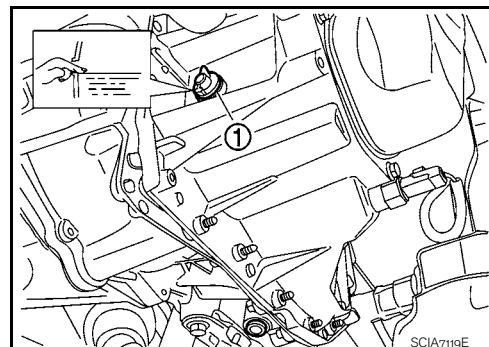

GEAR OIL: RS6F94R

GEAR OIL: RS6F94R : Inspection

INFOID:000000001095732

LEAKAGE

CHASSIS MAINTENANCE

< ON-VEHICLE MAINTENANCE >

Make sure that gear oil is not leaking from transaxle or around it.

LEVEL

1. Remove filler plug (1) and check oil level at filler plug hole as shown.

CAUTION:


Never start engine while checking oil level.

2. Set a new gasket on filler plug (1) and then install it to transaxle case.

CAUTION:

Never reuse gasket.

3. Tighten filler plug to the specified torque.

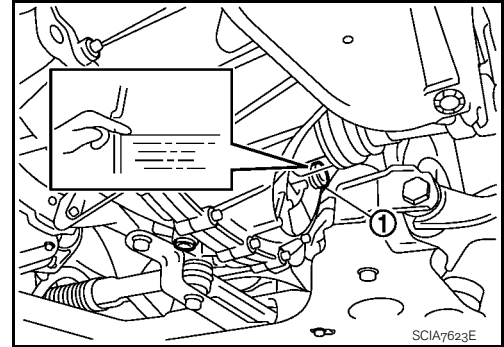


INFOID:000000001095730

GEAR OIL: RS6F94R : Draining

1. Start engine and let it run to warm up transaxle.
2. Stop engine. Remove drain plug (1) and then drain gear oil.
3. Set a new gasket on drain plug (1) and install it to clutch housing. Tighten drain plug to the specified torque.

CAUTION:

Never reuse gasket.

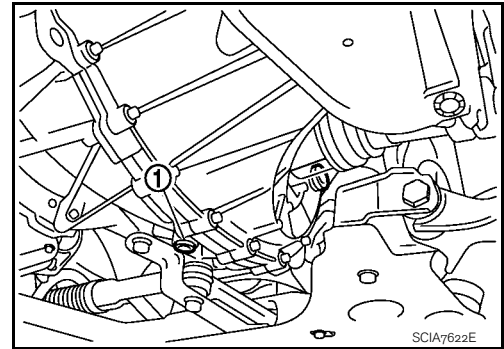

INFOID:000000001095731

GEAR OIL: RS6F94R : Refilling

1. Remove filler plug (1). Fill with new gear oil until oil level reaches the specified limit at filler plug hole as shown.

Oil grade and viscosity : Refer to [MA-21, "Fluids and Lubricants"](#).


Oil capacity : Refer to [TM-103, "General Specification"](#).

2. After refilling gear oil, check oil level. Refer to [TM-61, "Inspection"](#).
3. Set a new gasket on filler plug (1) and then install it to transaxle case.

CAUTION:

Never reuse gasket.

4. Tighten filler plug to the specified torque.

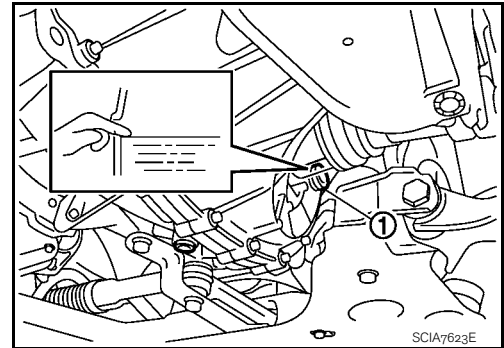

INFOID:000000001095739

GEAR OIL: RS6F52A

GEAR OIL: RS6F52A : Inspection

LEAKAGE

Make sure that gear oil is not leaking from transaxle or around it.

LEVEL

CHASSIS MAINTENANCE

< ON-VEHICLE MAINTENANCE >

1. Remove filler plug (1).
2. Measure oil level using a suitable gauge (A) as shown in the figure and then check if it is within the specifications.

Oil level "L" : Refer to [TM-183, "General Specifications"](#).

CAUTION:

Never start engine while checking oil level.

3. Set a new gasket on filler plug (1) and then install it to transaxle case.

CAUTION:

Never reuse gasket.

4. Tighten filler plug to the specified torque.



GEAR OIL: RS6F52A : Draining

INFOID:000000001095737

1. Start engine and let it run to warm up transaxle.
2. Stop engine. Remove drain plug and then drain gear oil.
3. Set a new gasket on drain plug and install it to clutch housing. Tighten drain plug to the specified torque.

CAUTION:

Never reuse gasket.

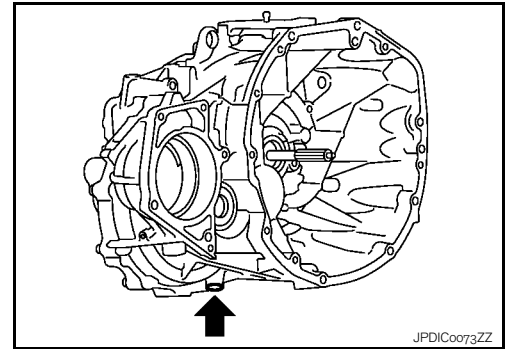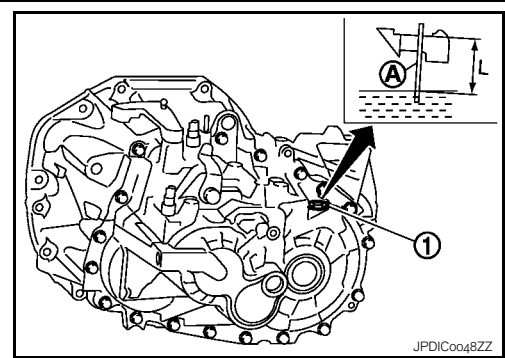

GEAR OIL: RS6F52A : Refilling

INFOID:000000001095738

1. Remove filler plug (1). Fill with new gear oil to transaxle.

A : Suitable gauge

Oil grade and viscosity : Refer to [MA-21, "Fluids and Lubricants"](#).


Oil capacity (reference) : Refer to [TM-183, "General Specifications"](#).

2. After refilling gear oil, check oil level. Refer to [TM-115, "Inspection"](#).
3. Set a new gasket on filler plug and then install it to transaxle case.

CAUTION:

Never reuse gasket.

4. Tighten filler plug to the specified torque.

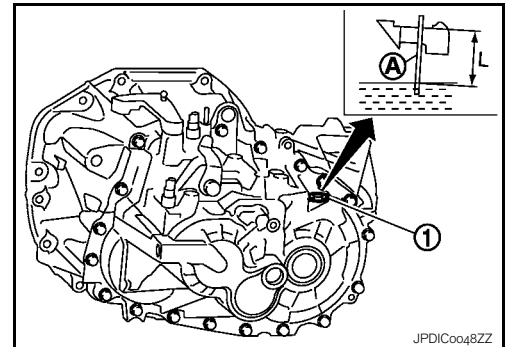

CLUTCH FLUID


CLUTCH FLUID : Inspection

INFOID:000000001088915

CHASSIS MAINTENANCE

< ON-VEHICLE MAINTENANCE >

If fluid level is extremely low, check clutch/brake system for leaks.

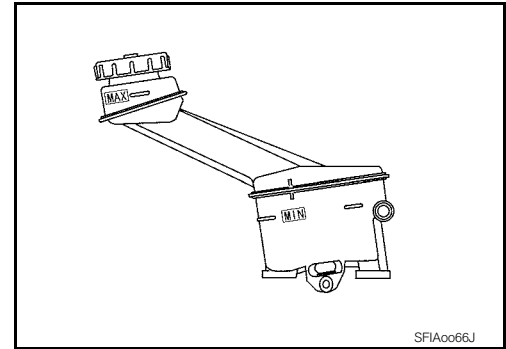

TRANSFER OIL

TRANSFER OIL : Inspection

INFOID:0000000001115876

OIL LEAKAGE


Check transfer surrounding area (oil seal, drain plug, filler plug, and transfer case, etc.) for oil leakage.

OIL LEVEL

1. Remove filler plug (1) and gasket. Then check that oil is filled up (A) from mounting hole for the filler plug.
2. Before installing filler plug, set a new gasket. Install filler plug on transfer and tighten to the specified torque. Refer to [DLN-61, "M/T : Exploded View"](#) (M/T models), [DLN-63, "CVT : Exploded View"](#) (CVT models).

CAUTION:

Never reuse gaskets.

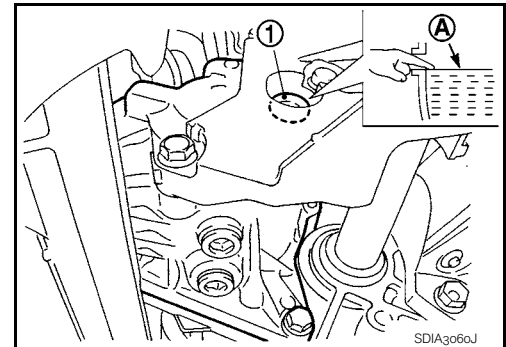

TRANSFER OIL : Draining

INFOID:0000000001115877

1. Run the vehicle to warm up the transfer unit sufficiently.
2. Stop the engine and remove drain plug (1) and gaskets to drain the transfer oil.


CAUTION:

Never remove tooth contact test hole plug (2).

3. Before installing drain plug, set a new gasket. Install drain plug on transfer and tighten to the specified torque. Refer to [DLN-61, "M/T : Exploded View"](#) (M/T models), [DLN-63, "CVT : Exploded View"](#) (CVT models).

CAUTION:

Never reuse gaskets.

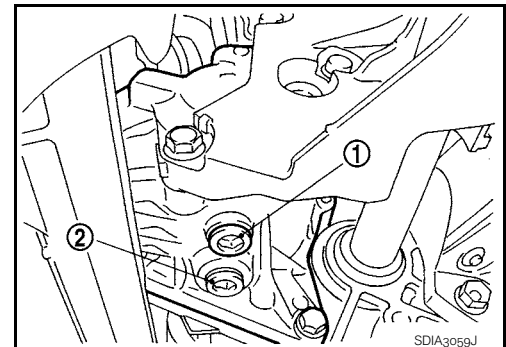

TRANSFER OIL : Refilling

INFOID:0000000001115878

1. Remove filler plug (1) and gasket. Then fill oil up to mounting hole (A) for the filler plug.

Oil grade and Viscosity

: Refer to [MA-21, "Fluids and Lubricants"](#).


Oil capacity

: Refer to [DLN-107, "General Specifications"](#).

CAUTION:

Carefully fill the oil. (Fill up for approximately 3 minutes.)

2. Leave the vehicle for 3 minutes. Then check oil level again.

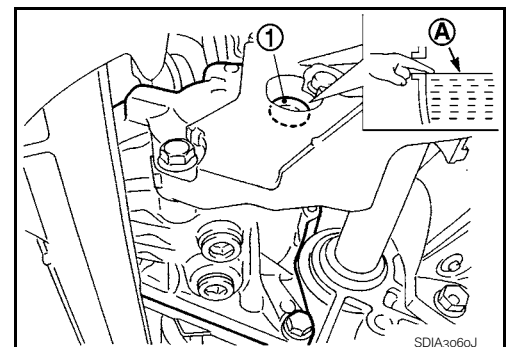

CHASSIS MAINTENANCE

< ON-VEHICLE MAINTENANCE >

- Before installing filler plug, set a new gasket. Install filler plug on transfer and tighten to the specified torque. Refer to [DLN-61, "M/T : Exploded View"](#) (M/T models), [DLN-63, "CVT : Exploded View"](#) (CVT models).

CAUTION:

Never reuse gasket.

REAR PROPELLER SHAFT

REAR PROPELLER SHAFT : Inspection

INFOID:000000001095800

NOISE

- Check the propeller shaft tube surface for dents or cracks. If damaged, replace propeller shaft assembly.
- If center bearing is noisy or damaged, replace propeller shaft assembly.

VIBRATION


If vibration is present at high speed, inspect propeller shaft runout first.

- Measure propeller shaft runout at runout measuring points by rotating final drive companion flange with hands.

Limit

Propeller shaft runout : Refer to [DLN-113, "Propeller Shaft Runout"](#).

- If runout still exceeds specifications, separate propeller shaft at final drive companion flange or transfer companion flange; then rotate companion flange 90, 180, 270 degrees and install propeller shaft.
- Check runout again. If runout still exceeds specifications, replace propeller shaft assembly.
- Check the vibration by driving vehicle.

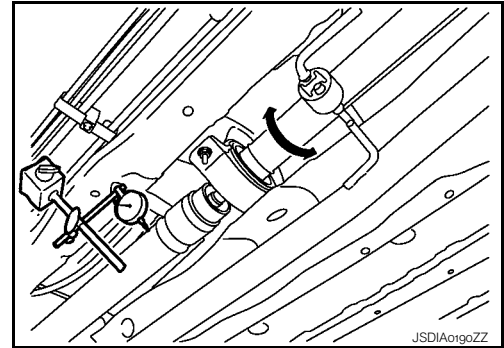


RUNOUT MEASURING POINT

Propeller shaft runout measuring point (Point "Δ").

↔ : Vehicle front

Dimension

A: 200 mm (7.87 in)
B: 639 mm (25.16 in)
C: 159 mm (6.26 in)

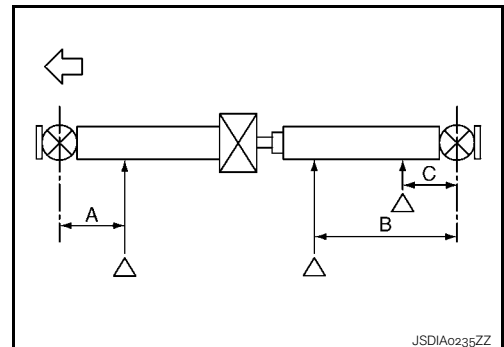

REAR DIFFERENTIAL GEAR OIL

REAR DIFFERENTIAL GEAR OIL : Inspection

INFOID:0000000001115879

OIL LEAKEGE

Make sure that oil is not leaking from final drive assembly or around it.

OIL LEVEL

CHASSIS MAINTENANCE

< ON-VEHICLE MAINTENANCE >

- Remove filler plug (1) and check oil level from filler plug mounting hole as shown in the figure.


CAUTION:

Never start engine while checking oil level.

- Set a new gasket on filler plug and install it on final drive assembly. Refer to [DLN-130, "Exploded View"](#).

CAUTION:

Never reuse gasket.

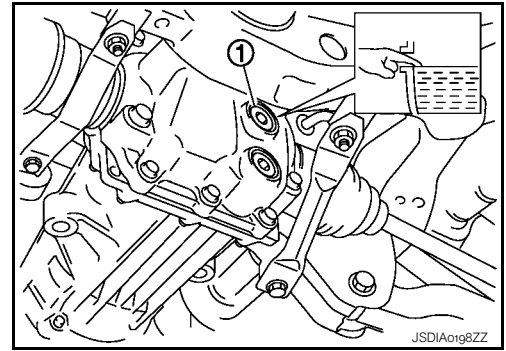


INFOID:000000001115880

REAR DIFFERENTIAL GEAR OIL : Draining

- Stop engine.
- Remove drain plug (1) and drain gear oil.
- Set a new gasket on drain plug and install it to final drive assembly and tighten to the specified torque. Refer to [DLN-130, "Exploded View"](#).

CAUTION:

Never reuse gasket.

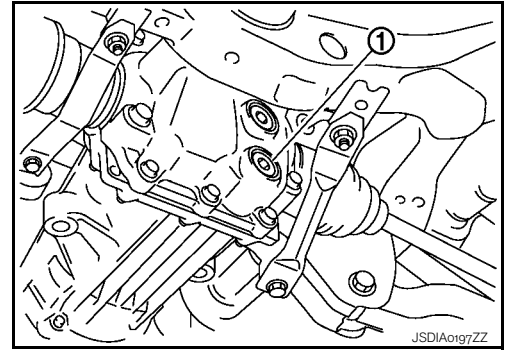

INFOID:000000001115881

REAR DIFFERENTIAL GEAR OIL : Refilling

- Remove filler plug (1). Fill with new gear oil until oil level reaches the specified level near filler plug mounting hole.


Oil grade and Viscosity : Refer to [MA-21, "Fluids and Lubricants"](#).

Oil capacity : Refer to [DLN-151, "General Specification"](#).

- After refilling oil, check oil level. Set a new gasket to filler plug, then install it to final drive assembly. Refer to [DLN-130, "Exploded View"](#).

CAUTION:

Never reuse gasket.

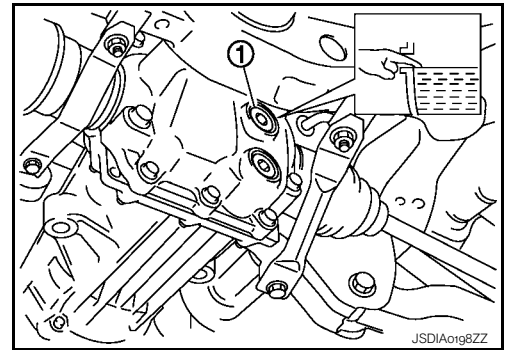

WHEELS (BONDING WEIGHT TYPE)

WHEELS (BONDING WEIGHT TYPE) : Adjustment


INFOID:000000001115882

TIRE ROTATION

- Follow the maintenance schedule for tire rotation service intervals. Refer to [MA-6, "General Maintenance"](#).
- Do not include the T-type spare tire when rotating the tires.
- When installing the wheel, tighten wheel nuts to the specified torque.

CAUTION:

- When installing wheels, tighten them diagonally by dividing the work two to three times in order to prevent the wheels from developing any distortion.
- Be careful not to tighten wheel nut at torque exceeding the criteria for preventing strain of disc rotor.
- Use NISSAN genuine wheel nuts for aluminum wheels.

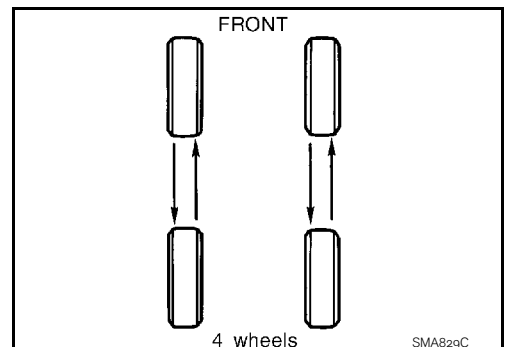

CHASSIS MAINTENANCE

< ON-VEHICLE MAINTENANCE >


Wheel nuts tightening torque: Refer to [WT-4, "Road Wheel"](#).

BRAKE FLUID LEVEL AND LEAKS

BRAKE FLUID LEVEL AND LEAKS : Inspection

INFOID:000000001088925

- If fluid level is extremely low, check brake/clutch system for leaks.

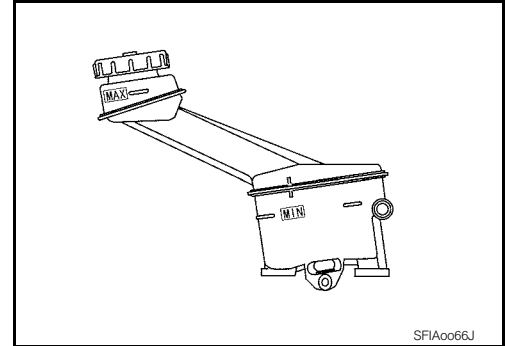


BRAKE LINES AND CABLES

BRAKE LINES AND CABLES : Inspection

INFOID:000000001088935

- Check brake/clutch fluid lines and parking brake cables for improper attachment, leaks, chafing, abrasions, deterioration, etc.

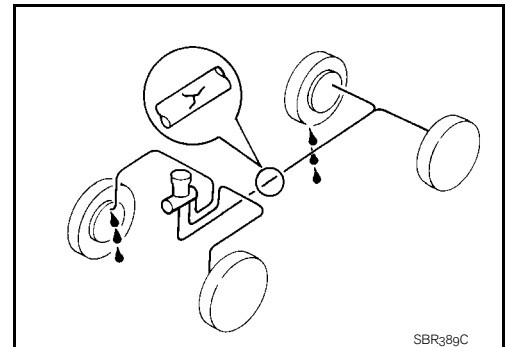


BRAKE FLUID

BRAKE FLUID : Changing

INFOID:000000001088936

1. Drain brake fluid from each bleed valve.
2. Refill until new brake fluid comes out from each bleed valve. Use same procedure as in bleeding hydraulic system to refill brake fluid. Refer to [BR-12, "Bleeding Brake System"](#) (LHD), [BR-56, "Bleeding Brake System"](#) (RHD).
 - Refill with recommended brake fluid. Refer to [MA-21, "Fluids and Lubricants"](#).
 - Never reuse drained brake fluid.
 - Be careful not to splash brake fluid on painted areas.

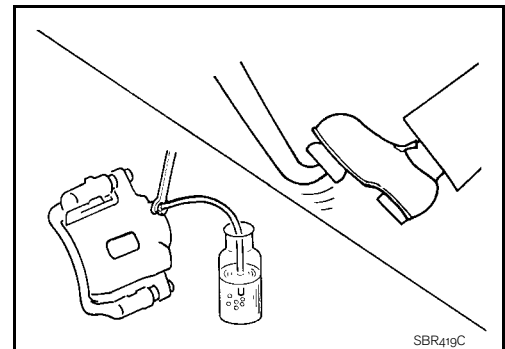

DISC BRAKE

DISC BRAKE : Inspection

INFOID:000000001088943

DISC ROTOR


Check condition, wear, and damage.

CALIPER

CHASSIS MAINTENANCE


< ON-VEHICLE MAINTENANCE >

- Check for leakage.

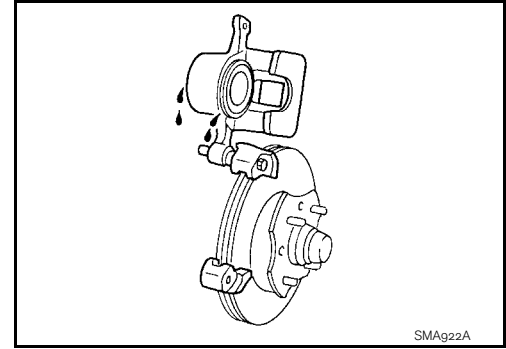

BRAKE PAD

- Check for wear or damage.

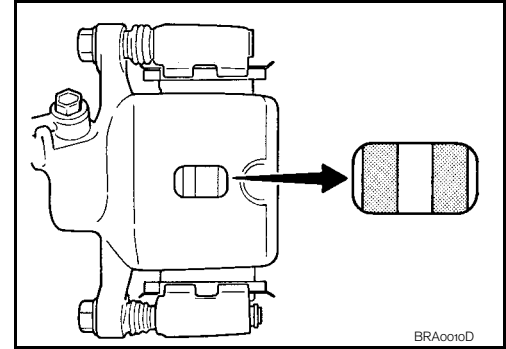

DISC BRAKE : Front Disc Brake

INFOID:000000001095941

Unit: mm (in.)

Brake pad	Standard thickness	11.0 (0.433)
	Wear limit thickness	2.0 (0.079)
Disc rotor	Standard thickness	26.0 (1.024)
	Wear limit thickness	24.0 (0.945)
	Thickness variation (measured at 8 positions)	0.020 (0.0008)
	Runout limit (with it attached to the vehicle)	0.035 (0.0014)

DISC BRAKE : Rear Disc Brake

INFOID:000000001095942

Unit: mm (in.)

Brake pad	Standard thickness	8.5 (0.335)
	Wear limit thickness	2.0 (0.079)
Disc rotor	Standard thickness	9.0 (0.354)
	Wear limit thickness	8.0 (0.315)
	Thickness variation (measured at 8 positions)	0.020 (0.0008)
	Runout limit (with it attached to the vehicle)	—

STEERING GEAR AND LINKAGE

STEERING GEAR AND LINKAGE : Inspection


INFOID:000000001088947

STEERING GEAR

CHASSIS MAINTENANCE

< ON-VEHICLE MAINTENANCE >

- Check gear housing and boots for looseness, damage and grease leakage.
- Check connection with steering column for looseness.

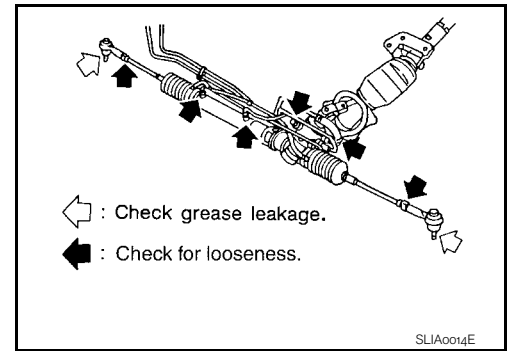

STEERING LINKAGE

Check ball joint, dust cover and other component parts for looseness, wear, damage and grease leakage.



AXLE AND SUSPENSION PARTS

AXLE AND SUSPENSION PARTS : Inspection

INFOID:000000001088949

Check front and rear axle and suspension parts for excessive play, cracks, wear or other damage.

- Shake each wheel to check for excessive play.
- Check wheel bearings for smooth operation.
- Check axle and suspension nuts and bolts for looseness.
- Check strut (shock absorber) for oil leakage or other damage.
- Check suspension ball joint for grease leakage and ball joint dust cover for cracks or other damage.

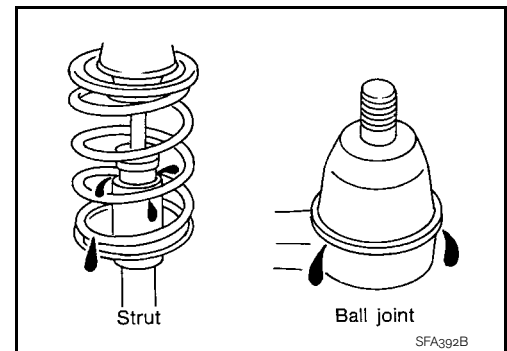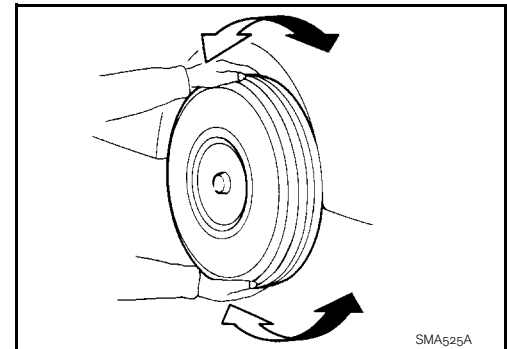


DRIVE SHAFT

DRIVE SHAFT : Inspection

INFOID:000000001088951

- Check boot and drive shaft for cracks, wear, damage and grease leakage.

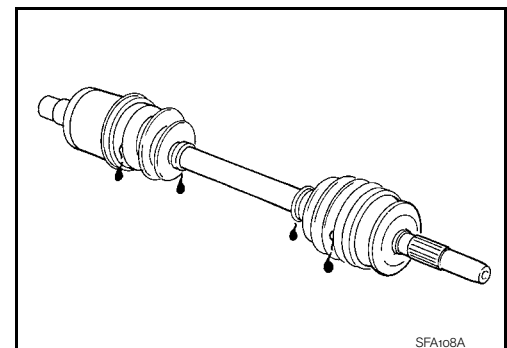

BODY MAINTENANCE

< ON-VEHICLE MAINTENANCE >

BODY MAINTENANCE

LOCKS, HINGES AND HOOD LATCH

LOCKS, HINGES AND HOOD LATCH : Lubricating

INFOID:0000000001088898

For hood and hood lock illustration.

- Hood: Refer to [DLK-223, "HOOD ASSEMBLY : Exploded View"](#).
- Hood lock control: Refer to [DLK-227, "HOOD LOCK CONTROL : Exploded View"](#).

For door and door lock illustration.

- Front door: Refer to [DLK-235, "DOOR ASSEMBLY : Exploded View"](#).
- Front door lock: Refer to [DLK-255, "DOOR LOCK : Exploded View"](#).
- Rear door: Refer to [DLK-241, "DOOR ASSEMBLY : Exploded View"](#).
- Rear door lock: Refer to [DLK-262, "DOOR LOCK : Exploded View"](#).

For back door and back door lock illustration.

- Back door: Refer to [DLK-247, "BACK DOOR ASSEMBLY : Exploded View"](#).
- Back door lock: Refer to [DLK-268, "DOOR LOCK : Exploded View"](#).

SEAT BELT, BUCKLES, RETRACTORS, ANCHORS AND ADJUSTERS

SEAT BELT, BUCKLES, RETRACTORS, ANCHORS AND ADJUSTERS : Inspection

INFOID:0000000001088905

For front seat belt illustration. Refer to [SB-5, "SEAT BELT RETRACTOR : Exploded View"](#).

For rear seat belt illustration. Refer to [SB-11, "OUTER SEAT BELT RETRACTOR : Exploded View"](#).

CAUTION:

- **After any collision, inspect all seat belt assemblies, including retractors and other attached hardware (i.e. anchor bolt, guide rail set). Nissan recommends to replace all seat belt assemblies in use during a collision, unless not damaged and properly operating after minor collision. Also inspect seat belt assemblies not in use during a collision, and replace if damaged or improperly operating.**

Seat belt pre-tensioner should be replaced even if the seat belts are not in use during a frontal collision where the driver and passenger air bags are deployed.

- **If any component of seat belt assembly is questionable, do not repair. Replace as seat belt assembly.**

- **If webbing is cut, frayed, or damaged, replace belt assembly.**

- **Never oil tongue and buckle.**

- **Use a genuine NISSAN seat belt assembly.**

For details, refer to [SB-3, "SEAT BELT RETRACTOR : Inspection"](#), [SB-10, "OUTER SEAT BELT RETRACTOR : Inspection"](#) in SB section.

- Check anchors for loose mounting
- Check belts for damage
- Check retractor for smooth operation
- Check function of buckles and tongues when buckled and released

BODY CORROSION

BODY CORROSION : Checking Body Corrosion

INFOID:0000000001088905

Visually check body panels for collision damage (scratches, chipping, rubbing, etc.) or damage to the anti-corrosion materials. In particular, check the following locations.

HEMMED PANELS

Hood front end, door lower end, trunk lid rear end, etc.

PANEL JOINT

Side sill of rear fender and center pillar, rear wheel housing of rear fender, around strut tower in engine compartment, etc.

PANEL EDGE

Trunk lid opening, sunroof opening, fender wheel-arch flange, fuel filler lid flange, around holes in panel, etc.

PARTS CONTACT

Waist moulding, windshield moulding, bumper, etc.

BODY MAINTENANCE

< ON-VEHICLE MAINTENANCE >

PROTECTORS

Damage or condition of mudguard, fender protector, chipping protector, etc.

ANTI-CORROSION MATERIALS

Damage or separation of anti-corrosion materials under the body.

DRAIN HOLES

Condition of drain holes at door and side sill. When repairing corroded areas, refer to the Corrosion Repair Manual.

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O

SERVICE DATA AND SPECIFICATIONS (SDS)

< SERVICE DATA AND SPECIFICATIONS (SDS)

SERVICE DATA AND SPECIFICATIONS (SDS)

SERVICE DATA AND SPECIFICATIONS (SDS)

DRIVE BELTS (HR16DE)

DRIVE BELTS (HR16DE) : Drive Belts

INFOID:0000000001095805

BELT DEFLECTION:

Location		Deflection adjustment *		Unit: mm (in)
		Used belt		New belt
		Limit	After adjusted	
Drive belt	With A/C models	7.9 (0.31)	4.8 - 5.3 (0.19 - 0.21)	4.2 - 4.5 (0.17 - 0.18)
	Without A/C models	7.1 (0.28)	4.3 - 4.7 (0.17 - 0.19)	3.6 - 3.9 (0.14 - 0.15)
Applied pushing force		98 N (10 kg, 22 lb)		

*: When engine is cold.

BELT TENSION AND FREQUENCY:

Location		Tension adjustment *		Unit: N (kg, lb)	Frequency adjustment *		Unit: Hz
		Used belt		New belt	Used belt		New belt
		Limit	After adjusted		Limit	After adjusted	
Drive belt	With A/C models	500 (51.0, 112)	876 - 964 (89.4 - 98.3, 197 - 217)	1064 - 1152 (108.5 - 117.5, 239 - 259)	163	216 - 225	238 - 246
	Without A/C models	500 (51.0, 112)	876 - 964 (89.4 - 98.3, 197 - 217)	1064 - 1152 (108.5 - 117.5, 239 - 259)	183	242 - 252	266 - 276

*: When engine is cold.

DRIVE BELTS (MR20DE)

DRIVE BELTS (MR20DE) : Drive Belt

INFOID:0000000001095807

DRIVE BELT

Tension of drive belt	Auto adjustment by auto-tensioner
-----------------------	-----------------------------------

DRIVE BELTS (K9K)

DRIVE BELTS (K9K) : Drive Belt

INFOID:0000000001095809

DRIVE BELT

Tension of drive belt	Auto adjustment by auto-tensioner
-----------------------	-----------------------------------

ENGINE COOLANT (HR16DE)

ENGINE COOLANT (HR16DE) : Periodical Maintenance Specification

INFOID:0000000001095810

ENGINE COOLANT CAPACITY (APPROXIMATE)

Unit: ℓ (Imp qt)

Engine coolant capacity [With reservoir tank ("MAX" level)]	5.9 (5-1/4)
Reservoir tank engine coolant capacity (At "MAX" level)	0.78 (5/8)

SERVICE DATA AND SPECIFICATIONS (SDS)

< SERVICE DATA AND SPECIFICATIONS (SDS)

ENGINE COOLANT (MR20DE)

ENGINE COOLANT (MR20DE) : Periodical Maintenance Specification

INFOID:0000000001095811

ENGINE COOLANT CAPACITY (APPROXIMATE)

Unit: ℓ (Imp qt)

Engine coolant capacity (With reservoir tank at "MAX" level)	M/T models	7.6 (6-5/8)
	CVT models	8.9 (7-7/8)
Reservoir tank engine coolant capacity (At "MAX" level)		0.78 (5/8)

ENGINE COOLANT (K9K)

ENGINE COOLANT (K9K) : Periodical Maintenance Specification

INFOID:0000000001095812

ENGINE COOLANT CAPACITY (APPROXIMATE)

Unit: ℓ (Imp qt)

Engine coolant capacity [With reservoir tank ("MAX" level)]	7.0 (6-1/8)
Reservoir tank engine coolant capacity (At "MAX" level)	0.8 (3/4)

ENGINE OIL (HR16DE)

ENGINE OIL (HR16DE) : Periodical Maintenance Specification

INFOID:0000000001095861

ENGINE OIL CAPACITY (APPROXIMATE)

Unit: ℓ (Imp qt)

Drain and refill	With oil filter change	4.3 (3-3/4)
	Without oil filter change	4.1 (3-5/8)
Dry engine (Overhaul)		4.8 (4-1/4)

ENGINE OIL (MR20DE)

ENGINE OIL (MR20DE) : Periodical Maintenance Specification

INFOID:0000000001095862

ENGINE OIL CAPACITY (APPROXIMATE)

Unit: ℓ (Imp qt)

Drain and refill	With oil filter change	4.4 (3-7/8)
	Without oil filter change	4.2 (3-3/4)
Dry engine (Overhaul)		5.2 (4-5/8)

ENGINE OIL (K9K)

ENGINE OIL (K9K) : Periodical Maintenance Specification

INFOID:0000000001095863

ENGINE OIL CAPACITY (APPROXIMATE)

Unit: ℓ (Imp qt)

With oil filter change	4.55 (4)
Without oil filter change	4.39 (3-7/8)
Dry engine (overhaul)	4.71 (4-1/8)

SPARK PLUG (HR16DE)

SPARK PLUG (HR16DE) : Spark Plug

INFOID:0000000001095806

SPARK PLUG (PLATINUM-TIPPED TYPE)

SERVICE DATA AND SPECIFICATIONS (SDS)

< SERVICE DATA AND SPECIFICATIONS (SDS)

Unit: mm (in)

Make	NGK
Standard type	PLZKAR6A-11
Gap (Nominal)	1.1 (0.043)

SPARK PLUG (MR20DE)

SPARK PLUG (MR20DE) : Spark Plug

INFOID:0000000001095808

SPARK PLUG

Unit: mm (in)

Make	NGK
Standard type	PLZKAR6A-11
Gap (Nominal)	1.1 (0.043)

ROAD WHEEL

ROAD WHEEL : Road Wheel

INFOID:0000000001095913

Kind of wheel		Aluminum	Steel	
			Conventional	For temporary use
Maximum radial runout limit	Lateral deflection	Less than 0.3 mm (0.012 in)	Less than 0.8 mm (0.031 in)	Less than 1.2 mm (0.047 in)
	Vertical deflection		Less than 0.7 mm (0.028 in)	Less than 1.3 mm (0.051 in)
Maximum allowable unbalance limit	Dynamic (At flange)	Less than 10 g (0.35 oz) (one side)		
	Static (At flange)	Less than 20 g (0.71 oz)		
Wheel nuts tightening torque		112.6 N·m (11 kg-m, 83 ft-lb)		