


Fiat Ducato 2006 – 2014 fuse box diagram

Year of production: 2006, 2007, 2008, 2009, 2010, 2011, 2012, 2013, 2014

Fuse box on dashboard

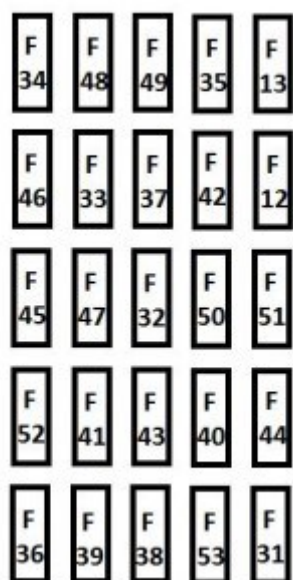


Fiat Ducato mk3 – fuse box – under dashboard

Users	Fuse	Ampere rating [A]
Right dipped beam headlight	F12	7,5
Left dipped beam headlight, Headlight aiming device	F13	7,5
Engine compartment fuse box relay, dashboard fuse box relay (+key	F31	7,5
Minibus internal lights (emergency)	F32	10
Rear current outlet	F33	15
Absent	F34	—
Reversing lights, sevotronic control unit, Water in diesel fuel filter sensor, (+key)	F35	7,5
Central door locking (+ battery)	F36	7,5
Brake lights (main), Third brake light, Instrument panel (+key)	F37	7,5
Dashboard control unit relay (+ battery)	F38	10
EOBD socket, Sound System, A/C control, Alarm, Chronotachograph, Webasto timer (+battery)	F39	10
Left-hand heated window, Driver's mirror defroster	F40	15
Right-hand heated window, Passenger's mirror defroster	F41	15
ABS, ASR, ESP, Brake light control (secondary) (+key)	F42	7,5
Windscreen wiper (+key)	F43	30
Zapalniczka, Gniazdko prądowe przednie	F44	20
Control on driver's door, Controls on passenger's door	F45	7,5
Absent	F46	—

Driver's power window	F47	20
Passenger's power window	F48	20
Sound System, Driver's power window, Dashboard controls, Alarm control unit, Rain sensor (+key)	F49	7,5
Airbag (+key)	F50	7,5
A/C control, Cruise control, Chronotachograph (+key)	F51	7,5
Optional fuse box relay	F52	7,5
Instrument panel, Rear fog lights (+battery)	F53	7,5

Fuse box in engine compartment

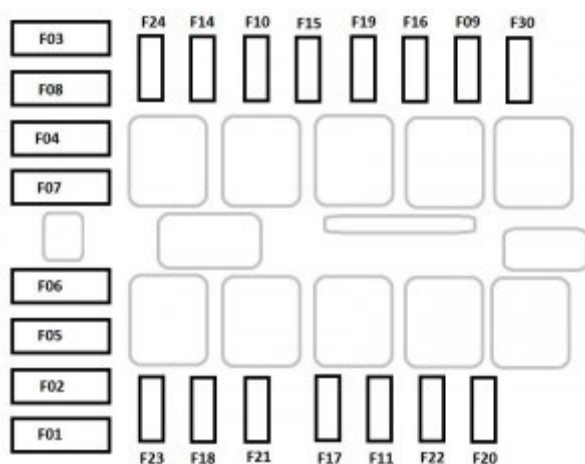


Fiat Ducato mk3 – fuse box – engine

compartment

Users	Fuse	Ampere rating [A]
ABS pump (+battery)	F01	40
Glow plug heating (+battery)	F02	50
Ignition switch (+battery)	F03	30
Webasto control unit (+battery)	F04	20
Passenger's compartment ventilation with Webasto (+battery)	F05	20
Engine cooling fan high speed (+battery)	F06	40/60
Engine cooling fan low speed (+battery)	F07	40/50
Passenger's compartment fan (+key)	F08	40
Headlight washer pump	F09	20
Horn	F10	15
E.i. system (secondary services)	F11	15
Right main beam headlight	F14	7,5
Left main beam headlight	F15	7,5
E.i. system (+key)	F16	7,5
E.i. system (primary services)	F17	10
Engine control unit (+battery)	F18	7,5
Conditioner compressor	F19	7,5

Headlight washer pump	F20	30
Fuel pump	F21	15
E.i. system (primary services)	F22	20
ABS solenoid valves	F23	30
Automatic transmission 8 (+key)	F24	15
Front fog lights	F30	15

Right central post optional fuse box

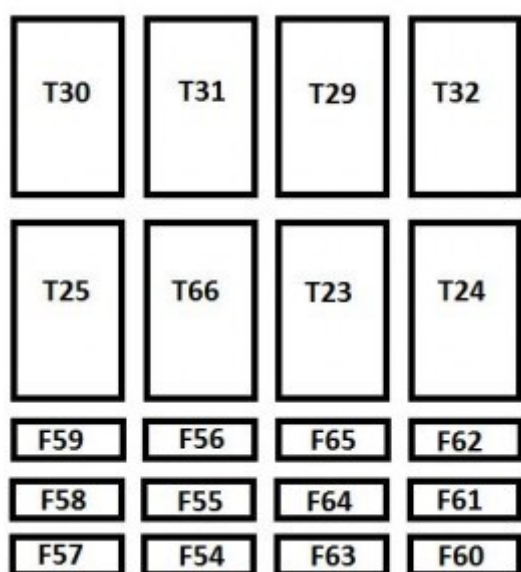

Fiat Ducato mk3 – fuse box – passenger compartment

(optional box)

Users	Fuse	Ampere rating [A]
Absent	F54	—
Heated seats	F55	15
Rear passenger's current outlet	F56	15
Additional heater under seat	F57	10
Sidelights	F58	10
Self-levelling suspensions (+battery)	F59	7,5
Absent	F60	—
Absent	F61	—
Absent	F62	—
Passenger's additional heater contro	F63	10
Absent	F64	—
Passenger's additional heater fan	F65	30

WARNING: Terminal and harness assignments for individual connectors will vary depending on vehicle equipment level, model, and market.