

Last Modified: 11-27-2007		1.6 D
Service Category: Engine/Hybrid System	Section: Engine Control	
Model Year: 2008	Model: LX570	Doc ID: RM000000PDK06ZX
Title: 3UR-FE ENGINE CONTROL: SFI SYSTEM: DTC CHECK / CLEAR (2008 LX570)		

DTC CHECK / CLEAR

NOTICE:

When the diagnosis system is changed from the normal mode to check mode or vice versa, all DTCs and freeze frame data recorded in normal mode are cleared. Before changing modes, always check and make a note of DTCs and freeze frame data.

HINT:

- DTCs which are stored in the ECM can be output to the Techstream. The Techstream can display the current and pending output DTCs.
- Same DTCs are not set if the ECM does not detect the same malfunction again during a second consecutive driving cycle. However, such malfunctions, detected on only one occasion, are stored as pending DTCs.

1. CHECK DTC

- Connect the Techstream to the DLC3.
- Turn the engine switch on (IG).
- Turn the Techstream on.
- Enter the following menus: Powertrain / Engine and ECT / Trouble Codes.
- Check the DTC(s) and freeze frame data, and then write them down.
- Check the details of the DTC(s)  .

2. CLEAR DTC

- Connect the Techstream to the DLC3.
- Turn the engine switch on (IG).
- Turn the Techstream on.
- Enter the following menus: Powertrain / Engine and ECT / Trouble Codes.
- Clear the DTCs.

3. CLEAR DTC (Without using the Techstream)

- Perform either of the following operations:
 - Disconnect the cable from the negative (-) battery terminal for more than 1 minute.
 - Remove the EFI MAIN fuse from the engine room relay block located inside the engine compartment for more than 1 minute.

