


GMC Jimmy 1993 fuse box diagram

Fuses and Circuit breakers

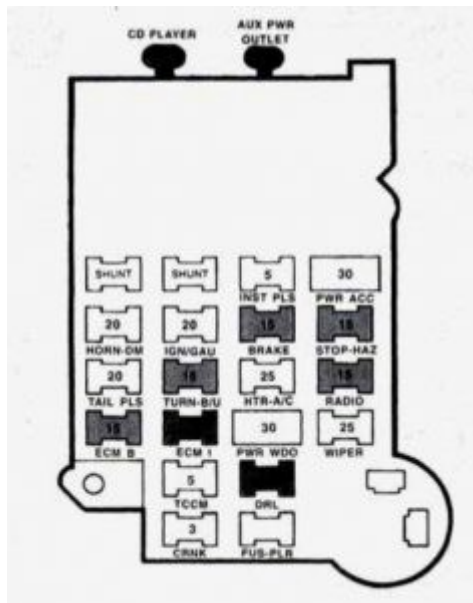

GMC Jimmy – fuse box diagram

Name	Circuit protected	Ampere rating [A]	Circuit Breaker
Inst. Lps.	Instrument Panel Lights, Headlight Warning Buzzer, Rear Defogger Switch Light, Ash Tray Light, Four Wheel Drive Indicator Light, RR Wiper SW Lamp, Fog Lamp Switch Light	5	
Pwr. Accy	Power Door Locks, Rear Defogger, CD Player, Electric Shift Transfer Case, Power Seat		30
Horn-DM	Horn, Dome Lights, Glove Box Light, Courtesy Lights, Clock, Lighter, Lighted Vanity Mirror, Fog Lamp Relay, Outside Rearview Mirror, Liftgate Release Solenoid	20	
Ign.-Gages	Indicator Lights and Gages, Rear Defogger Relay, Cruise Control, Four Wheel Drive Indicator Light, Rear Defogger Timer, Seat Belt Timer	20	
Crank	Engine Control Module	3	
Stop-Haz.	Stop Lights, Hazard Warning Lights, Chime Module	15	
Tail Lps	Light Switch, Tail/Park Lights, Digital Cluster, License Lamp	20	
Turn-B/U	Turn Signals & Backup Lights	15	
Heater/A/C	Heating and Air Conditioning	25	
Radio	Radio, Inside Rearview Mirror Map Lights, Rear Wiper, Rear Washer	15	
ECM B	Engine Control Module, Fuel Pump	15	
ECM I	Engine Control Module	10	

Pwr. Wndw.	Power Windows		30
Wiper	Windshield Wipers and Washers	25	
Brake	Four Wheel Antilock Brake Module, Digital Ratio Adapter Module, Speedometer, Auto Transmission Converter Clutch	15	
DRL	Daytime Running Light Relay (Canada Only)	10	
Trailer*	Trailer Wiring Harness	30	
CD Player**	CD Player	10	
TCCM	Electric Shift Transfer Case Module	5	
Aux. Pwr**	Aux. Pwr. Outlet	10	
*In-line fuse			
**Fuse is attached to fuse block.			