


Chevrolet Monte Carlo 2007 fuse box diagram

Instrument Panel Fuse Block

The fuse block is located on the passenger side of the vehicle in the carpet molding.

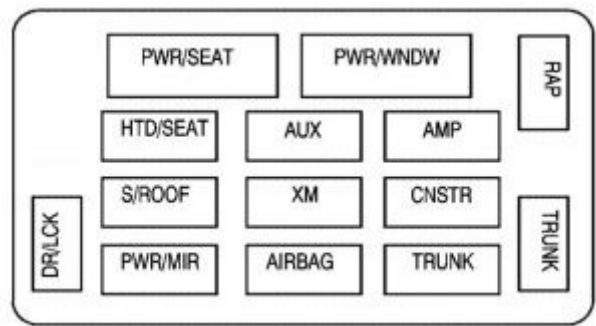


Chevrolet Monte Carlo – fuse box – instrument panel

Fuses	Usage
PWR/SEAT	Power Seats
PWR/WNDW	Power Window
RAP	Retained Accessory Power
HTD/SEAT	Heated Seats
AUX	Auxiliary Outlets
AMP	Amplifier
S/ROOF	Sunroof
XM	XM Radio
CNSTR	Canister
DR/LCK	Door Locks
PWR/MIR	Power Mirrors
AIRBAG	Airbags
TRUNK	Trunk

TRUNK	Trunk Relay
-------	-------------

Underhood Fuse Block

The underhood fuse block is located in the engine compartment.

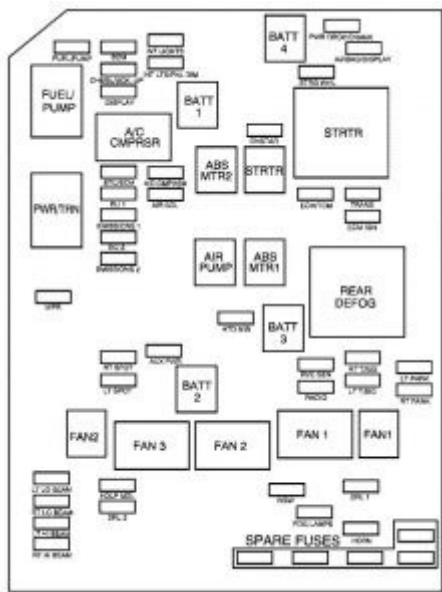

Chevrolet Monte Carlo – fuse box – engine compartment

Fuse	Usage
LT PARK	Driver’s Side Parking Lamp
RT PARK	Passenger’s Side Parking Lamp
FAN 1	Cooling Fan 1
SPARE	Spare
SPARE	Spare
AIRBAG/DISPLAY	Airbag, Display
TRANS	Transaxle
ECM IGN	Engine Control Module, Ignition
RT T/SIG	Passenger’s Side Turn Signal
LT T/SIG	Driver’s Side Turn Signal
DRL 1	Daytime Running Lamps 1
HORN	Horn
SPARE	Spare

PWR DROP/RANK	Power Drop, Crank
STRG WHL	Steering Whee
ECM/TCM	Engine Control Module, Transmission Control Module
RVC SEN	Regulated Voltage Control Sensor
RADIO	Audio System
FOG LAMPS	Fog Lamps
SPARE	Spare
BATT 4	Battery 4
ONSTAR	OnStar
STRTR	Starter
ABS MTR1	Anti-lock Brake System Motor 1
BATT 3	Battery 3
WSW	Windshield Wiper
HTD MIR	Heated Mirror
SPARE	Spare
BATT 1	Battery 1
ABS MTR2	Anti-lock Brake System Motor 2
AIR PUMP	Air Pump
BATT 2	Battery 2
INT LIGHTS	Interior Lamps
INT LTS/NL DIM	Interior Lamps, Instrument Panel Dimmer
A/C CMPSR	Air Conditioning Compressor
AIR SOL	AIR (Air Injection Reactor) Solenoid
AUX PWR	Auxiliary Power
BCM	Body Control Module
CHMSL/BACKUP	Center High-Mounted Stoplamp, Back-up Lamps
DISPLAY	Display

ETC/ECM	Electronic Throttle Control, Engine Control Module
INJ 1	Injector 1
EMISSIONS 1	Emissions 1
INJ 2	Injector 2
EMISSIONS 2	Emissions 2
RT SPOT	Right Spot
LT SPOT	Left Spot
HDLP MDL	Headlamp Module
DRL 2	Daytime Running Lamps 2
FAN 2	Cooling Fan 2
FUEL/PUMP	Fuel Pump
WPR	Wiper
LT LO BEAM	Driver's Side Low Beam
RT LO BEAM	Passenger's Side Low Beam
LT HI BEAM	Driver's Side High Beam
RT HI BEAM	Passenger's Side High Beam
Relay	Description
STRTR	Starter
REAR DEFOG	Rear Defogger
FAN 1	Cooling Fan 1
FAN 2	Cooling Fan 2
A/C CMPSR	Air Conditioning Compressor
FAN 3	Cooling Fan 3
FUEL/PUMP	Fuel Pump
PWR/TRN	Powertrain