


Vauxhall Frontera 1998 – 2004 fuse box diagram

Engine Compartment Fuse Box

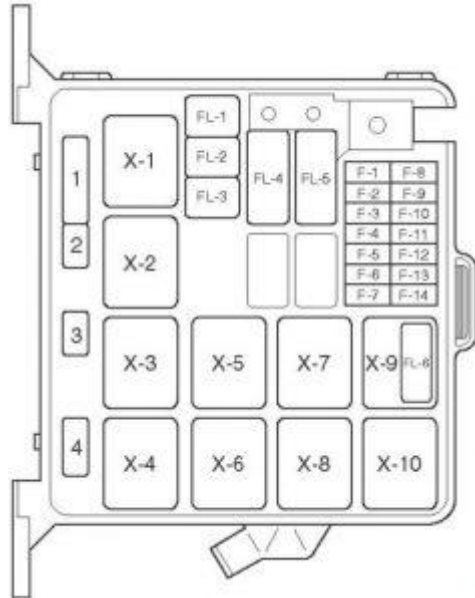

Vauxhall Frontera – fuse box diagram – engine


compartment fuse box

Number	Ampere rating [A]	Fuse	Description
F1	15	HAZARD	Hazard warning light
F2	10	HORN	Alarm & relay control unit, Horn, Anti – theft horn
F4	20	BLOWER	Blower motor, Blower resistor
F5	10	A/C	A/C thermostat relay, Electronic thermostat, A/C compressor relay, Magnetic clutch
F8	10	H/L LIGHT LH	Headlight – LH, High beam indicator light, Fog light relay

F9	10	H/L LIGHT RH	Headlight – RH
F10	15	FOG LIGHT	Fog light
F11	20	O2 SENSOR	Oxygen sensor
F12	20	FUEL PUMP	Fuel pump
F13	15	ECM	Engine control module
F14	—	—	—
FL1	60	ABS	EHCUC
FL2	30	COND.FAN	6VD1: Condenser fan unit
FL4	100	MAIN	Ignition switch, starter relay, A/C, generator, heater relay, Fuse: F10, FL1, FL2, FL5, FL6
FL5	60	IGN.	Ignition switch, fuel pump relay, engine control module relay, power train module
FL6	30	ELEC. FAN	X22SE: Electric fan relay, Electric fan
Relay			
X1	Headlight		
X2	Fog light		

X3	Starter
X4	A/C compressor
X5	Thermo
X6	Heater
X7	Fuel pump
X8	Engine control module
X9	6VD1: Condenser fan
X10	—
Diode	
1	Brake
2	—
3	—
4	—

Passenger Compartment Fuse Box

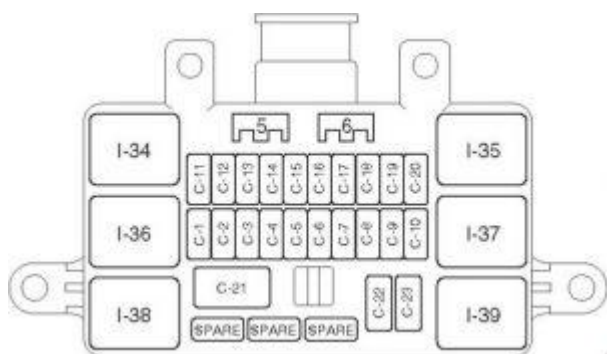

Vauxhall Frontera – fuse box diagram –


passenger compartment fuse box

Number	Ampere rating [A]	Fuse	Description
C1	20	ACC. SOCKET	Acc socket relay, Acc socket
C2	10	AUDIO	Audio
C3	15	CIGAR LIGHTER	Cigarette Lighter
C4	15	TAIL/ILLUMI. LIGHT	Tail relay, Parking light & Side marker light, Tail light License plate light, Illumination controller, Illumination light, All shift indicator control unit
C5	10	DOME LIGHT	Stop light, Dome light, Courtesy light – LH, Courtesy light – RH, Courtesy light RR – LH, Courtesy light RR – RH, Luggage room light, Alarm & relay control unit, Digital clock, Audio
C6	15	STOP LIGHT	Stop light switch, Rear combination light – LH, Rear combination light – RH, High mounted stop light
C7	20	POWER DOOR LOCK	FRT door lock & Power window SW, Door lock actuator, Anti- theft indicator light
C8	10	MIRROR DEFOG	Mirror defogger

C9	15	REAR DEFOG	Rear defogger
C10	15	REAR DEFOG	Rear defogger
C11	15	METER	Indicator and warning lights (meter), Meter gauge, Vehicle speed sensor
C12	15	ENGINE IG.	Generator, ECM main relay, Vacuum switching valve (VSV); purge solenoid, Coil drive, Power train module (PCM), EGR valve
C13	15	IG. COIL	Ignition coil
C14	15	BACKUP/TURN LIGHT	Mode SW, PCM, Turn signal light, Backup light, Cruise control unit, A/T shift indicator control unit
C15	15	ELEC. IG.	Alarm & relay control unit, Rear defogger relay, Mirror defogger – LH, Mirror defogger – RH, Rear defogger SW, Power window relay, Cruise control unit, Shift lock relay, 4WD control unit, Vacuum switching valve (VSV); FRT axle (c), Vacuum switching valve (VSV); FRT axle (d)
C16	20	FRONT WIPER & WASHER	Windshield wiper motor, Windshield washer motor, Alarm & relay control unit
C17	10	REAR WIPER & WASHER	Rear wiper motor, Rear washer motor, Alarm & relay & control unit
C19	15	AUDIO	Audio
C20	10	STARTER	Starter, Starter relay, Anti – theft controller

C21	30	POWER WINDOW	Power window relay, Power window SW, Power window motor, Sun roof motor, Sun roof control unit, Sun roof SW, Safety stop SW, Limit SW, Power seat switch, Front tilt motor & SW, Rear tilt motor & SW, Slide motor, Re-cliner moror & SW
C22	10	SRS	SRS warning light, SDM
Relay			
I34	Taillight		
I35	Power window		
I36	—		
I37	—		
I38	ACC socket		
I39	Rear defogger		
Diode			
5	Tailgate SW, Door SW. Doom light		
6	Alarm & relay control unit		

Engine Compartment Relay Box

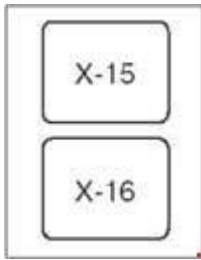

Vauxhall Frontera – fuse box diagram – engine compartment relay

box

Number	Description
X15	X22SE: Cooling fan (high speed)
X16	X22SE: Cooling fan (low speed)