



INSPECTION

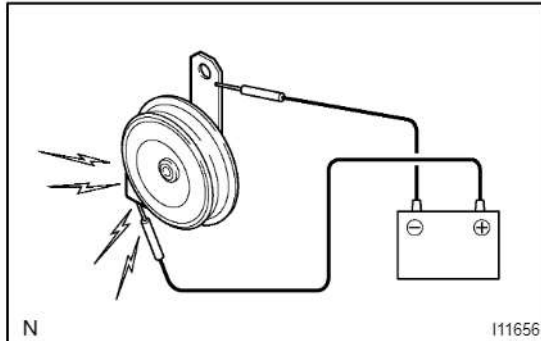

1. INSPECT LOW PITCHED HORN ASSY

- Connect the positive (+) lead from the battery to the terminal and the negative (-) lead to the horn body, and check that the horn blows.

If the result is not as specified, replace the horn.

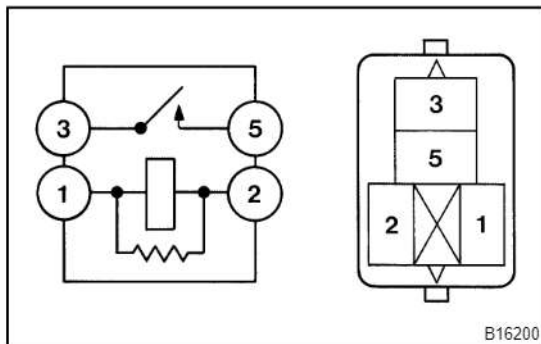

2. INSPECT HORN RELAY ASSY (Marking: HORN)

- Remove the horn relay from the engine room J/B.
- Inspect the horn relay continuity.


Standard:

Terminal No.	Condition	Specified condition
1 ⇔ 2	Constant	Continuity
3 ⇔ 5	Apply B+ between terminals 1 and 2	

If the result is not as specified, replace the relay.

HORN SYSTEM LOCATION

69044-01

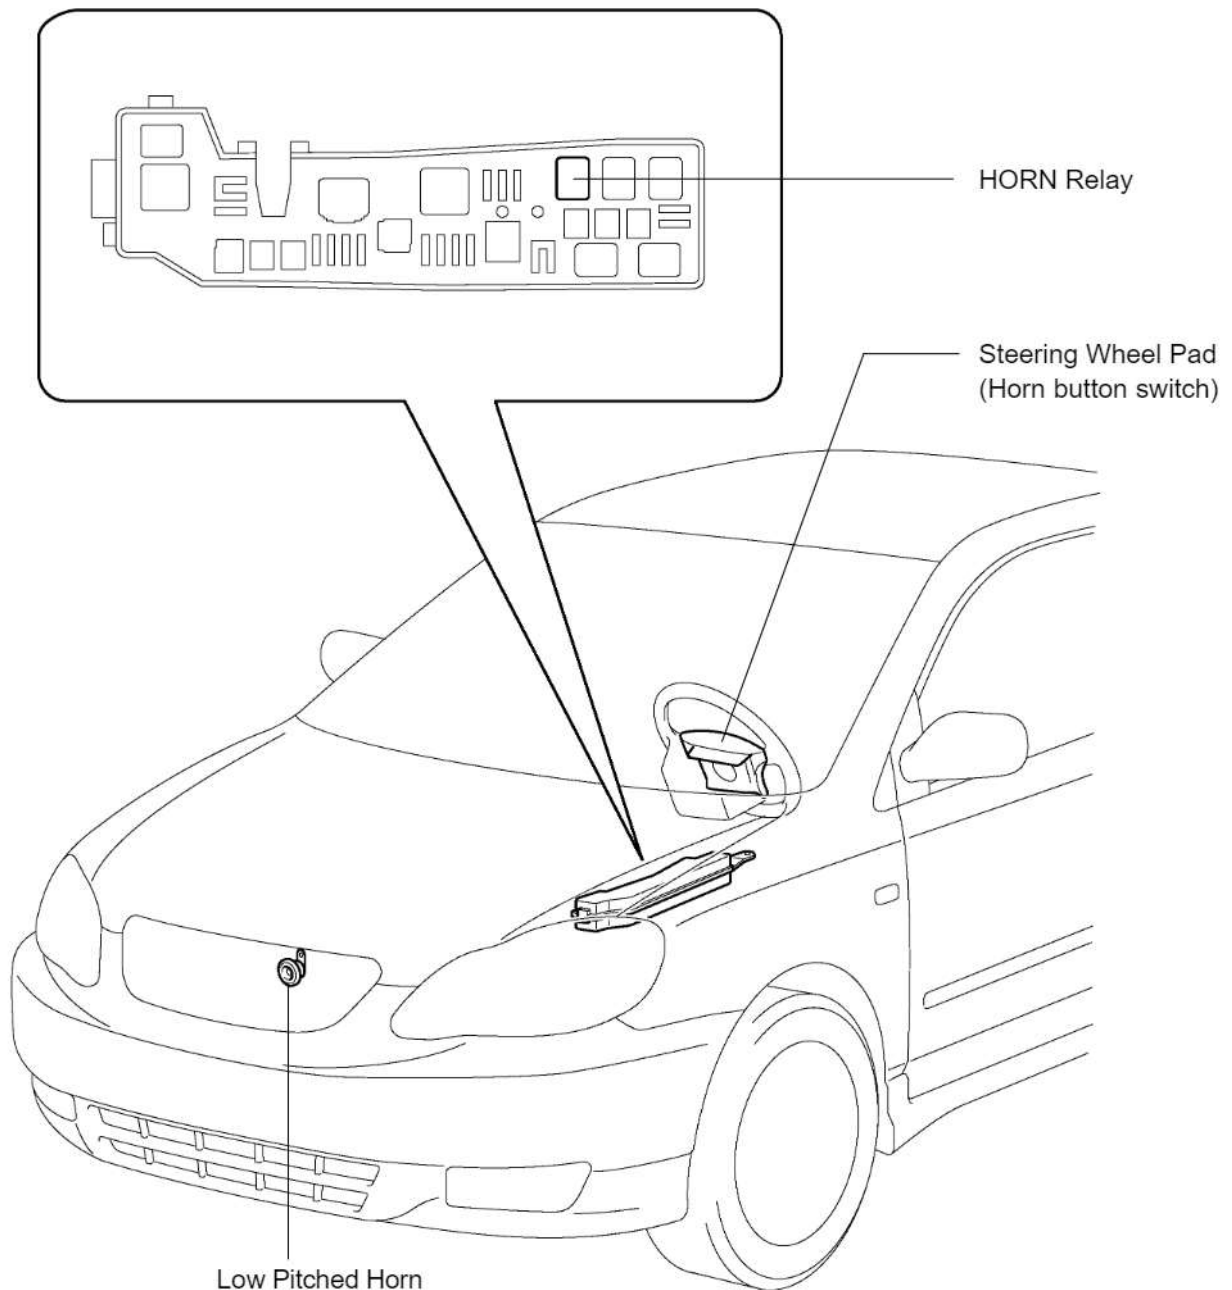

Y

B59083

PROBLEM SYMPTOMS TABLE

Symptom	Suspected Area	See page
Horn does not sound	2. Horn button switch	–
	3. Low pitched horn	69-3
	4. HORN relay	69-3
	5. Wire harness	–