


Cadillac CTS 2008 fuse box diagram

Underhood Fuse Block

The underhood fuse block is located on the passenger side of the engine compartment.

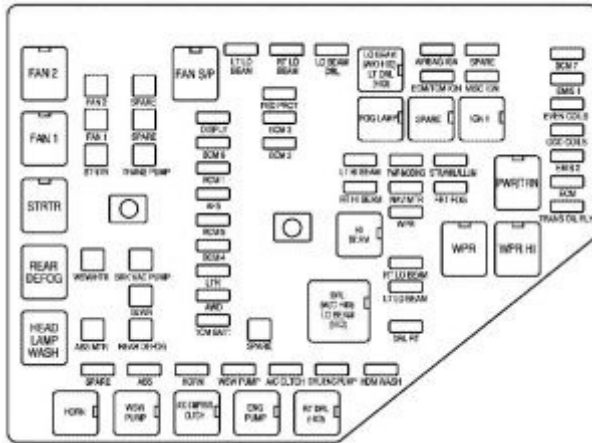

Cadillac CTS mk2 fuse box – engine compartment

Fuses	Usage
A/C CLTCH	Air Conditioning Clutch
ABS	Antilock Braking System (ABS)
AFS	Adaptive Forward Lighting System
AIRBAG IGN	Airbag Switch
AWD	All-Wheel Drive
BCM 1	Body Control Module 1
BCM 2	Body Control Module 2
BCM 3	Body Control Module 3
BCM 4	Body Control Module 4
BCM 5	Body Control Module 5
BCM 6	Body Control Module 6
BCM 7	Body Control Module 7
DISPLY	Display
DRL RT	Right Daytime Running Lamp (DRL)
DRL/ENG PUMP	Daytime Running Lamps
ECM	Engine Control Module (ECM)

ECM/TCM IGN	ECM, Transmission Control Module (TCM), Instrument Panel Cluster (IPC), PASS-Key III+ Module
EMIS 1	Emission 1
EMIS 2	Emission 2
EVEN COILS	Even Coils
FRT FOG	Front Fog Lamps
HDM WASH	Headlamp Driver Module Washer
HORN	Horn
LO BEAM DRL	Low-Beam DRL
LT HI BEAM	Left High-Beam Headlamp
LT LO BEAM	Left Low-Beam Headlamp
LT LO BEAM	Left Low-Beam Headlamp
LTR	Cigarette Lighter
MISC IGN	Ignition
NAV MTR	Navigation Motor
ODD COILS	Odd Coils
PED PROT	Not Used
PWR MODING	PassKey Module, Body Control Module
RT HI BEAM	Right High-Beam Headlamp
RT LO BEAM	Right Low-Beam Headlamp
RT LO BEAM	Right Low-Beam Headlamp
SPARE	Spare
SPARE	Spare
STR/WHL/ILLUM	Steering Wheel Illumination
TCM BATT	Transmission Control Module Battery
TRANS OIL RLY	Transmission Oil Relay
WPR	Windshield Wiper
WSW PUMP	Windshield Washer Pump


J Cases	Usage
ABS MTR	ABS Motor
BLWR	Blower
BRK VAC PUMP	Brake Vacuum Pump
FAN 1	Cooling Fan 1
FAN 2	Cooling Fan 2
REAR DEFOG	Rear Defogger
SPARE	Spare
SPARE	Spare
SPARE	Spare
STRTR	Starter
TRANS PUMP	Transmission Pump
WSW/HTR	Windshield Washer Heater

Relays	Usage
A/C CMPSR CLTCH	Air Conditioning Compressor Clutch
DRL (W/O HID) LO BEAM (HID)	Daytime Running Lamps (without High Intensity Discharge), Low-Beam Headlamps (High Intensity Discharge)
ENG PUMP	Engine Pump
FAN S/P	Cooling Fan Series/Parallel
FAN 1	Cooling Fan 1
FAN 2	Cooling Fan 2
HEAD LAMP WASH	Headlamp Washer
HI BEAM	High-Beam Headlamp
HORN	Horn
IGN 1	Ignition 1

LO BEAM (W/O HID) LT DRL (HID)	Low-Beam (without High Intensity Discharge), Left Daytime Running Lamp (High Intensity Discharge)
PWR/TRN	Powertrain
REAR DEFOG	Rear Defogger
SPARE	Spare
STRTR	Starter
WPR	Windshield Wiper
WPR HI	Windshield Wiper High Speed
WSW PUMP	Windshield Washer Pump

Rear Compartment Fuse Block

The rear compartment fuse block is located on top of the battery, on the right side of the trunk. The battery access door must be removed to access the fuse block.

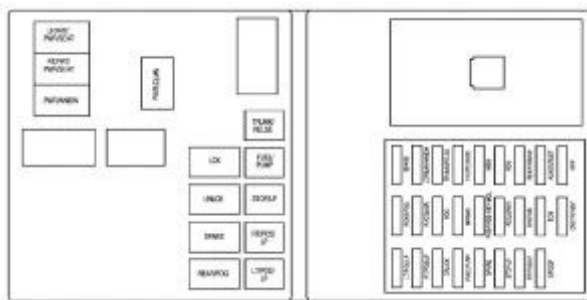

Cadillac CTS mk2 – fuse box – rear compartment

Relay	Usage
FUEL/PUMP	Fuel Pump
LCK	Lock
LF FRT/PWR/SEAT	Left Front Power Seat
LF/POS/LP	Left Position Lamp
PWR CLMN	Power Steering Column
PWR/WNDW	Power Window
REAR/FOG	Not Used
RT FRT/PWR/SEAT	Right Front Power Seat
RT/POS/LP	Right Position Lamp
SPARE	Spare

STOP/LP	Stoplamp
TRUNK/RELSE	Trunk Release
UNLCK	Unlock

Fuses	Usage
AIRBAG	Airbag System
AMP	Amplifier
AUX/OUTLET	Auxiliary Power Outlet
CNSTR/VENT	Canister Vent
DR/LCK	Door Lock
ECM	Engine Control Module (ECM)
FUEL/PUMP	Fuel Pump
LT/POS/LP	Left Position Lamp
LT/REAR/WNDW	Left Rear Window
MSM	Memory Seat Module
ONSTAR	OnStar® System
PDM	Passenger Door Module
RDO	Audio System
RDO/SPKR	Audio Speakers
REAR/FOG	Not Used
REAR/WNDW	Rear Window
RKE/PASS-KEY/MDL	Remote Keyless Entry System, Pass-Key Theft Deterrent Feature Module
RT/POS/LP	Right Position Lamp
RT/POS/LP	Right Position Lamp
RVC/SNSR	Regulated Voltage Control Sensor
S/ROOF	Sunroof
SPARE	Spare

SPARE	Spare
STOP/LP	Stoplamp
THEFT/UGDO	Theft Deterrent System, Universal Home Remote System
TRUNK/RELSE	Trunk Release