





F RELAY LOCATIONS

[Engine Compartment]

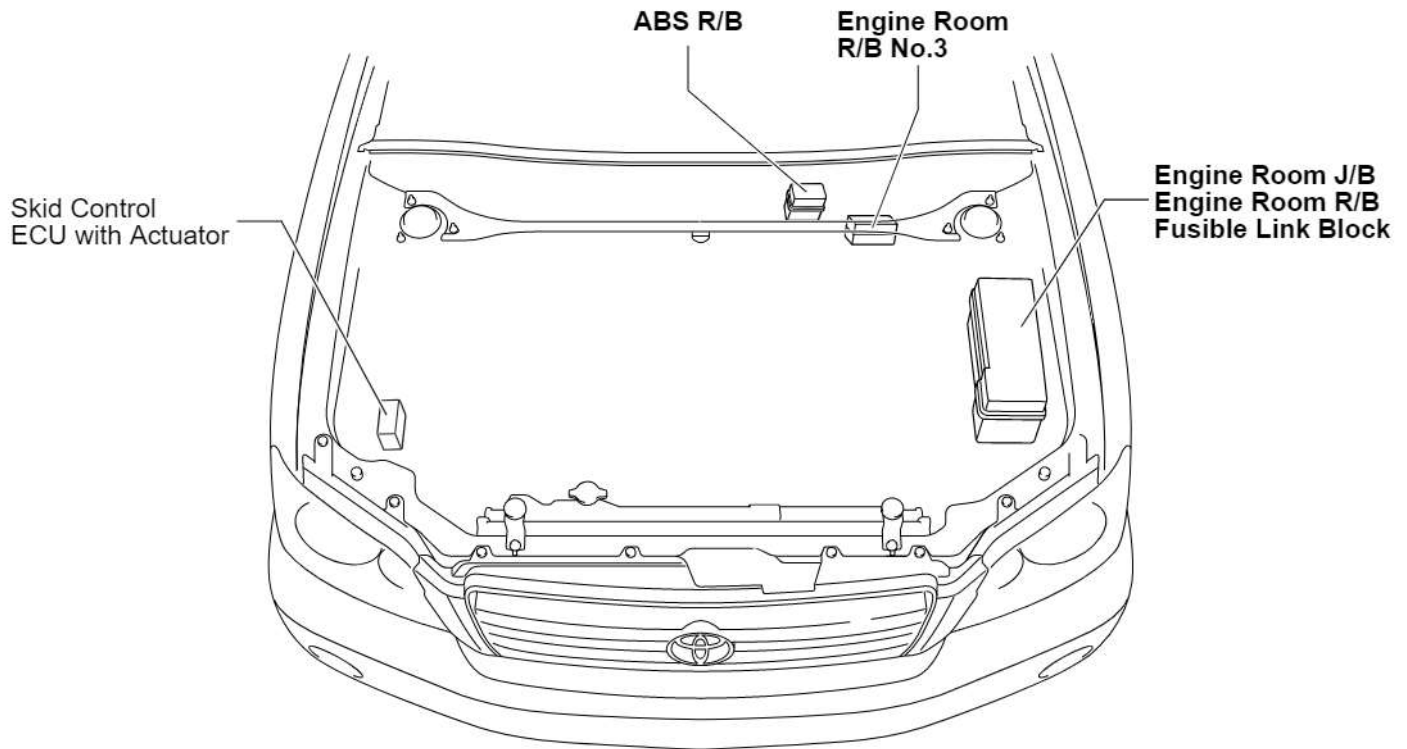

[Instrument Panel]

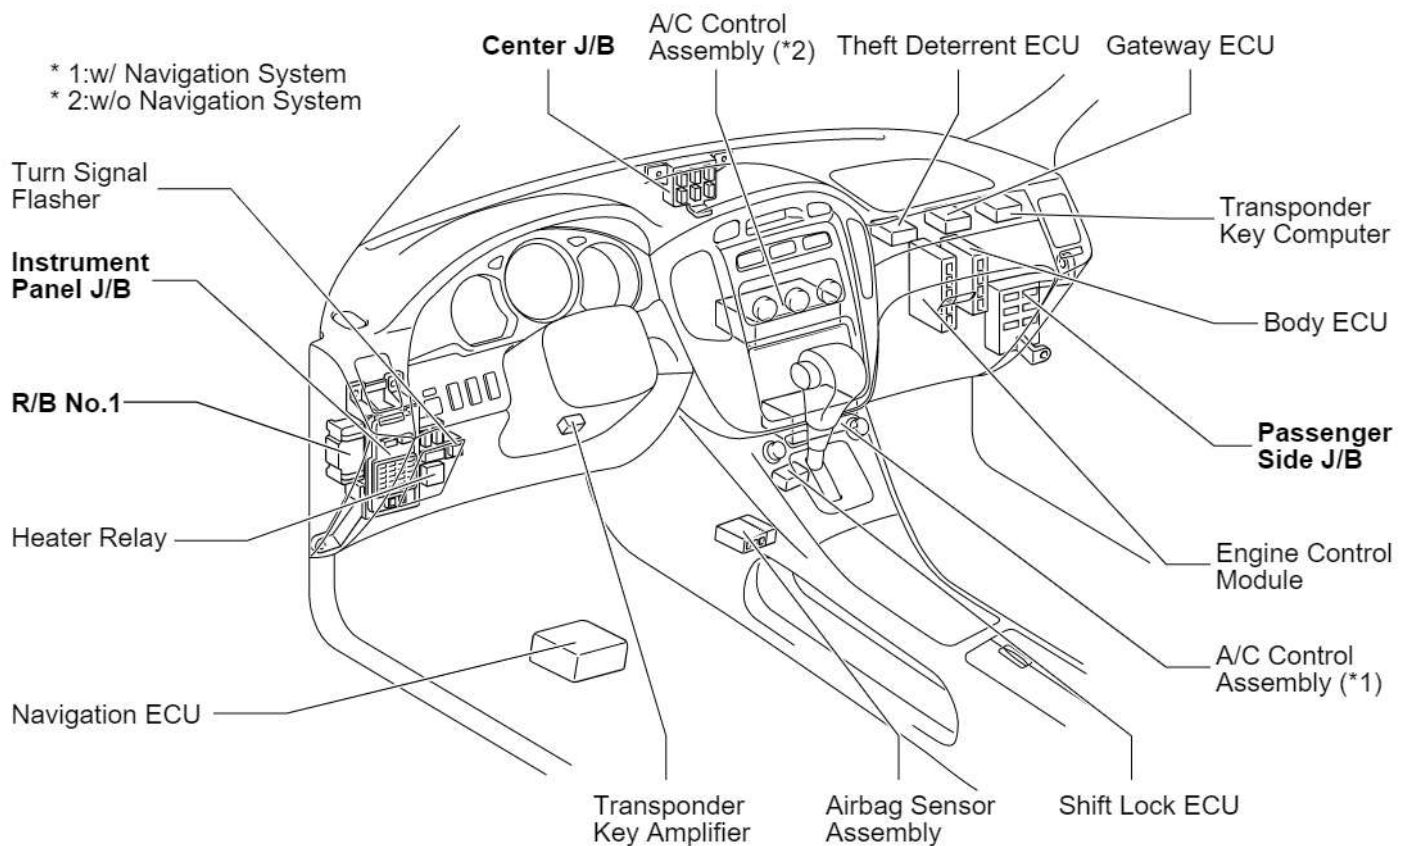


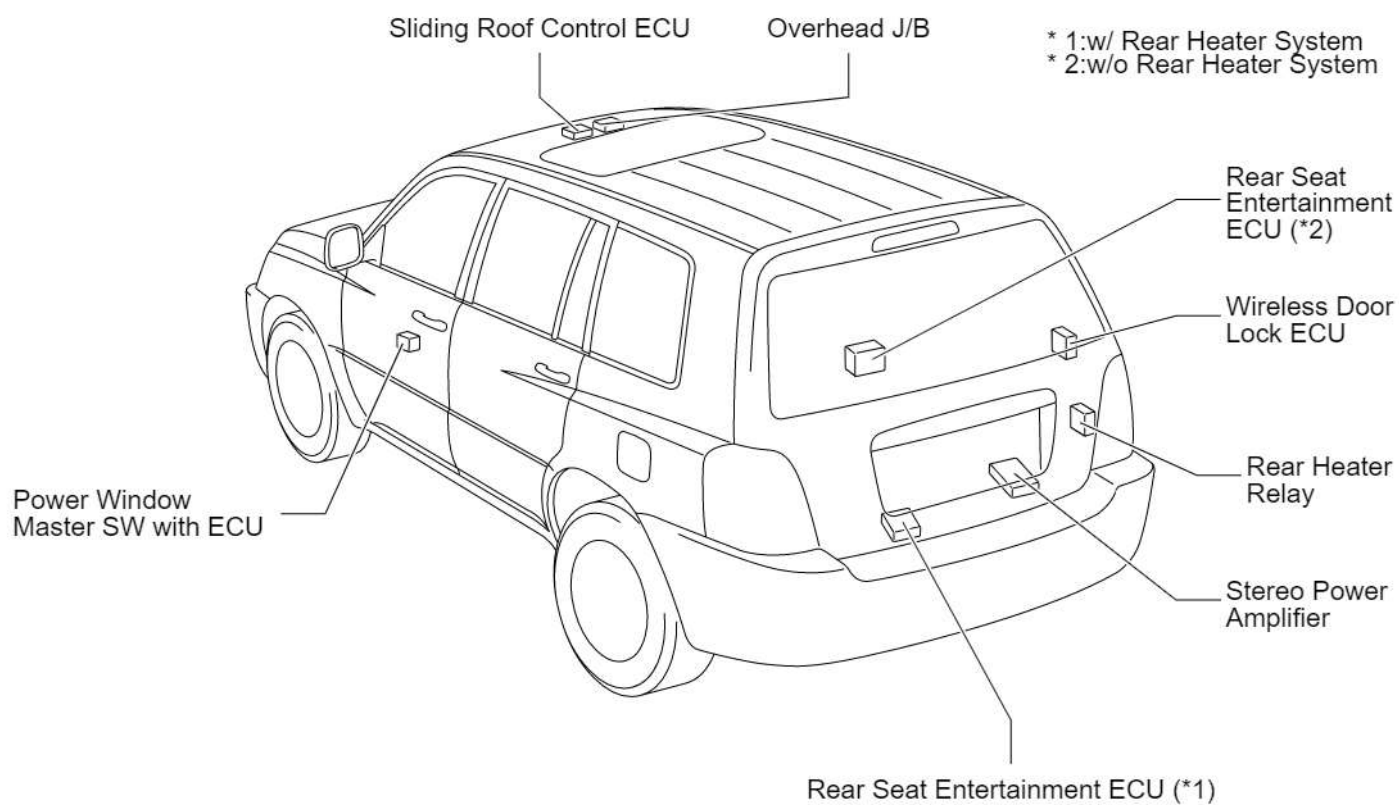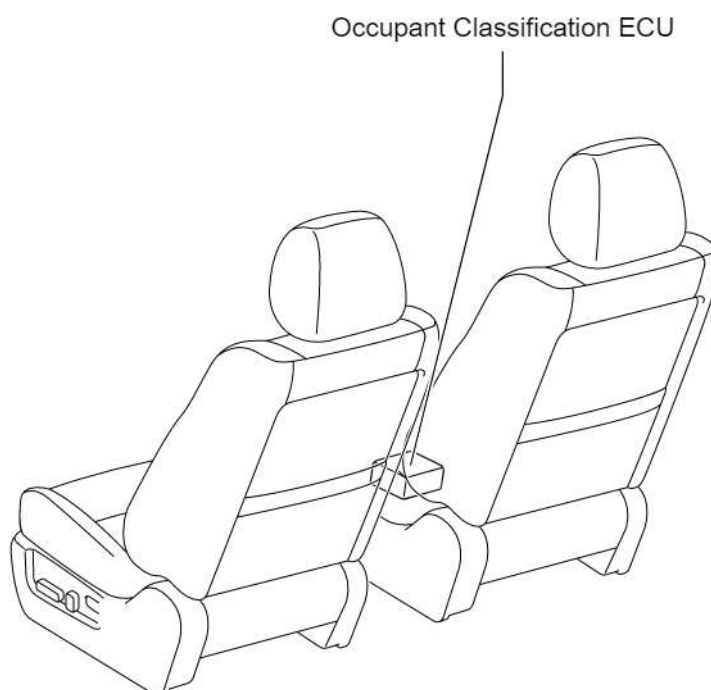[Body]**[Seat]**


F RELAY LOCATIONS

② : Engine Room R/B	Engine Compartment Left [Inside Engine Room J/B] (See Page 20)
---------------------	---


* 1:H-LP RH LWR
* 2:ETCS

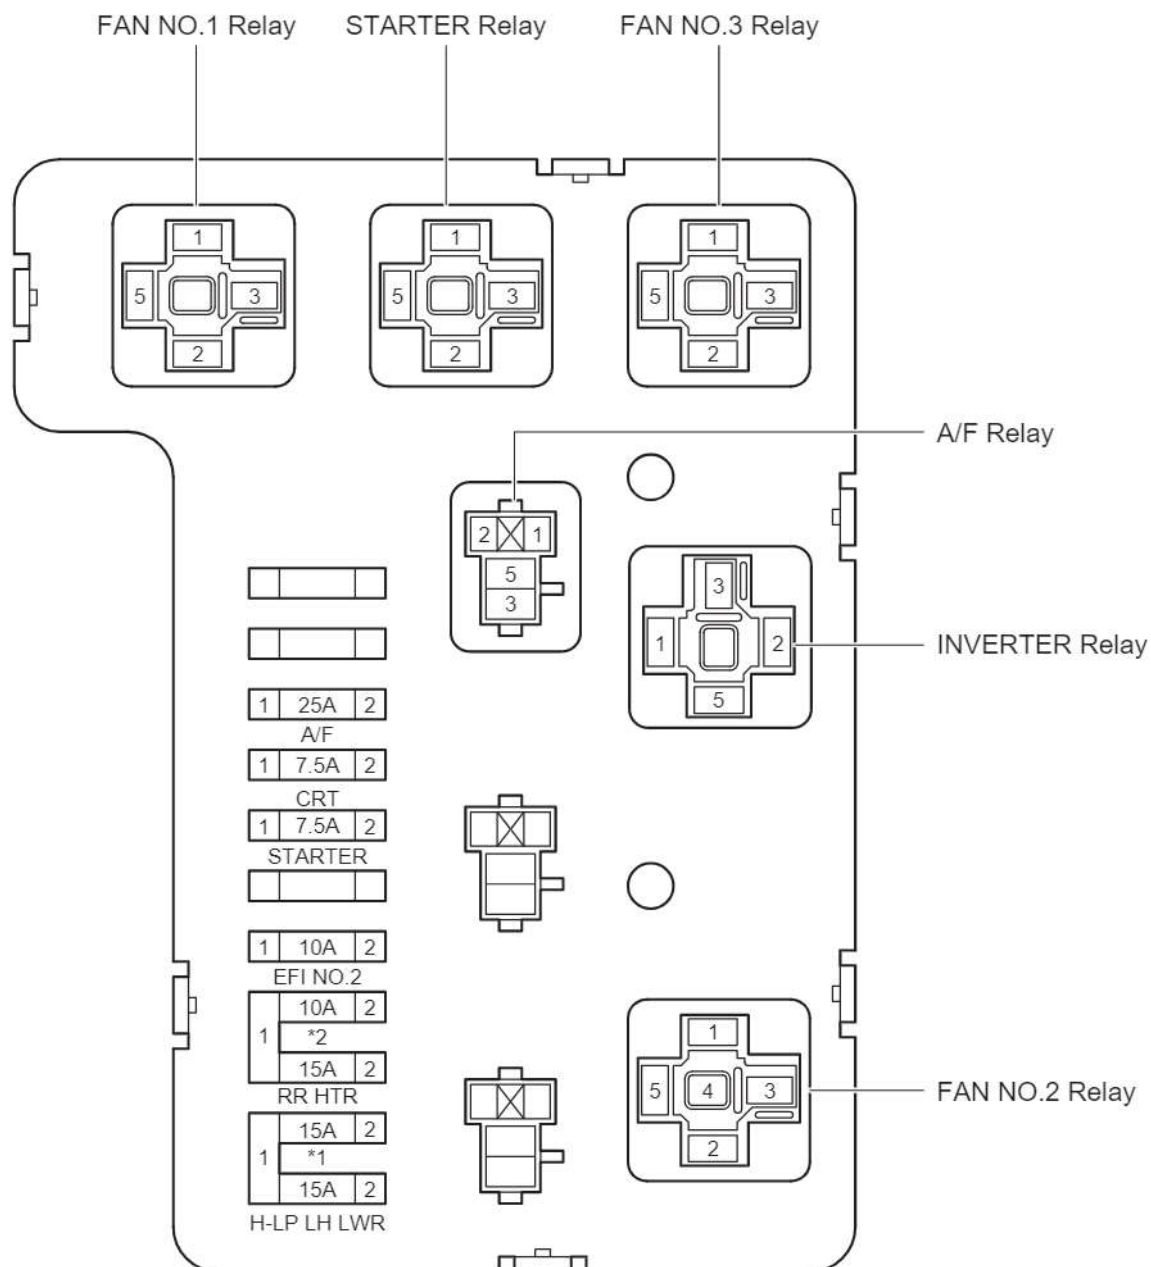

③ : Engine Room R/B No.3 Engine Compartment Rear Left (See Page 20)

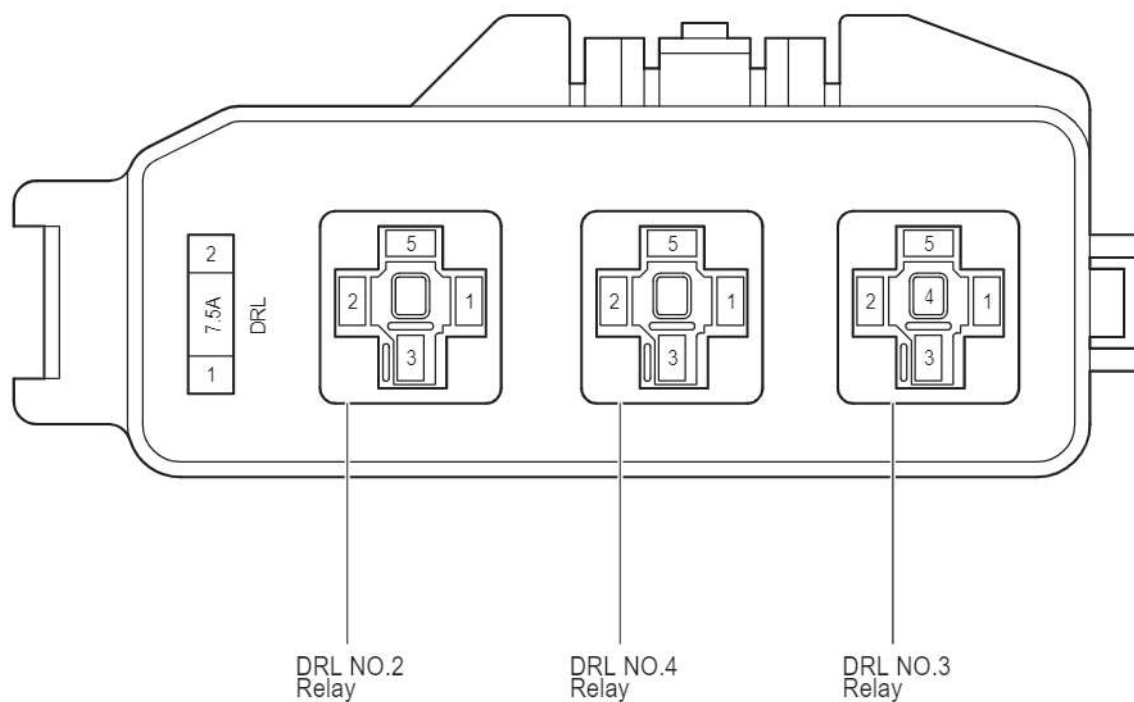


⑤ : ABS R/B Engine Compartment Rear Left (See Page 20)

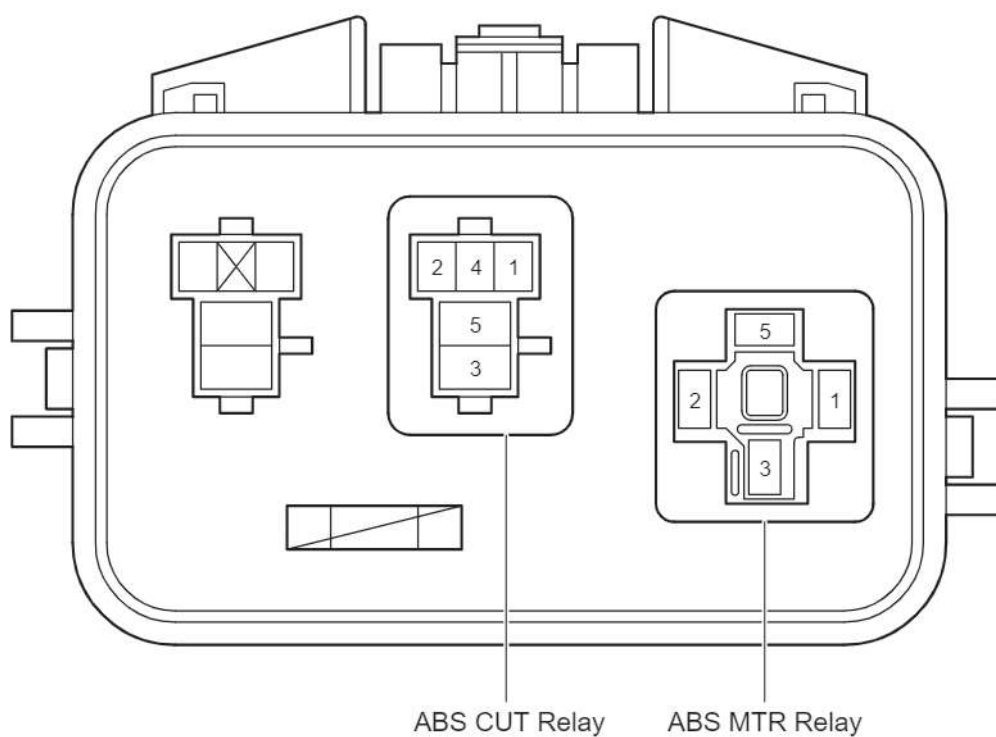

F RELAY LOCATIONS

① : R/B No.1


Lower Finish Panel (See Page 20)

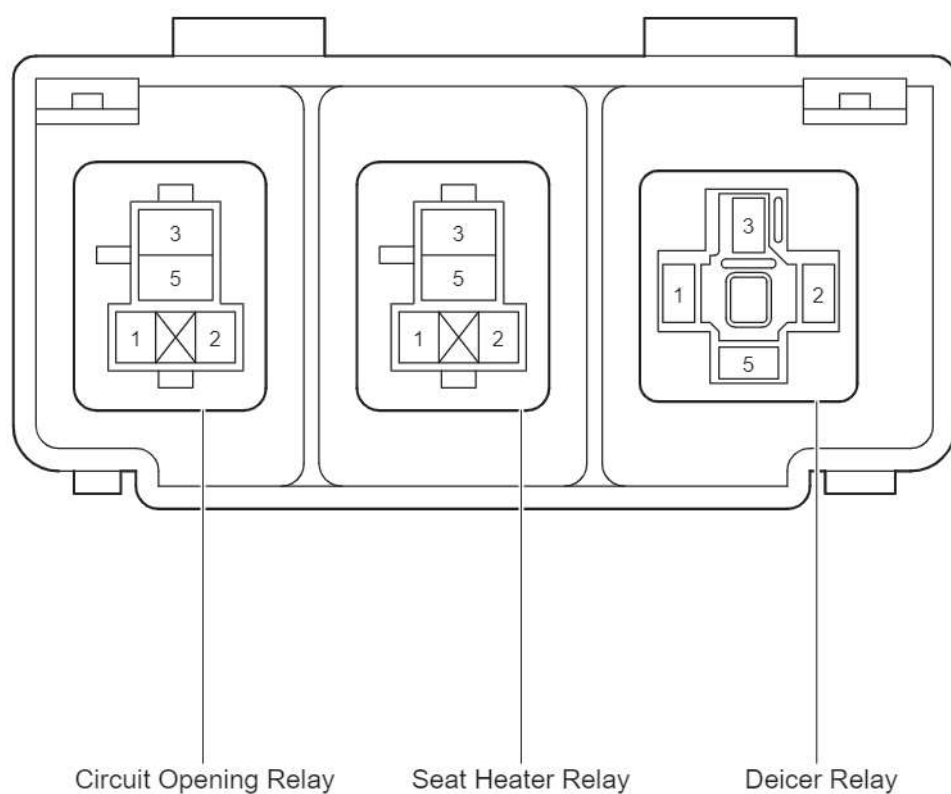

Fusible Link Block

Engine Compartment Left
[Inside Engine Room J/B] (See Page 20)

* 1:3MZ-FE

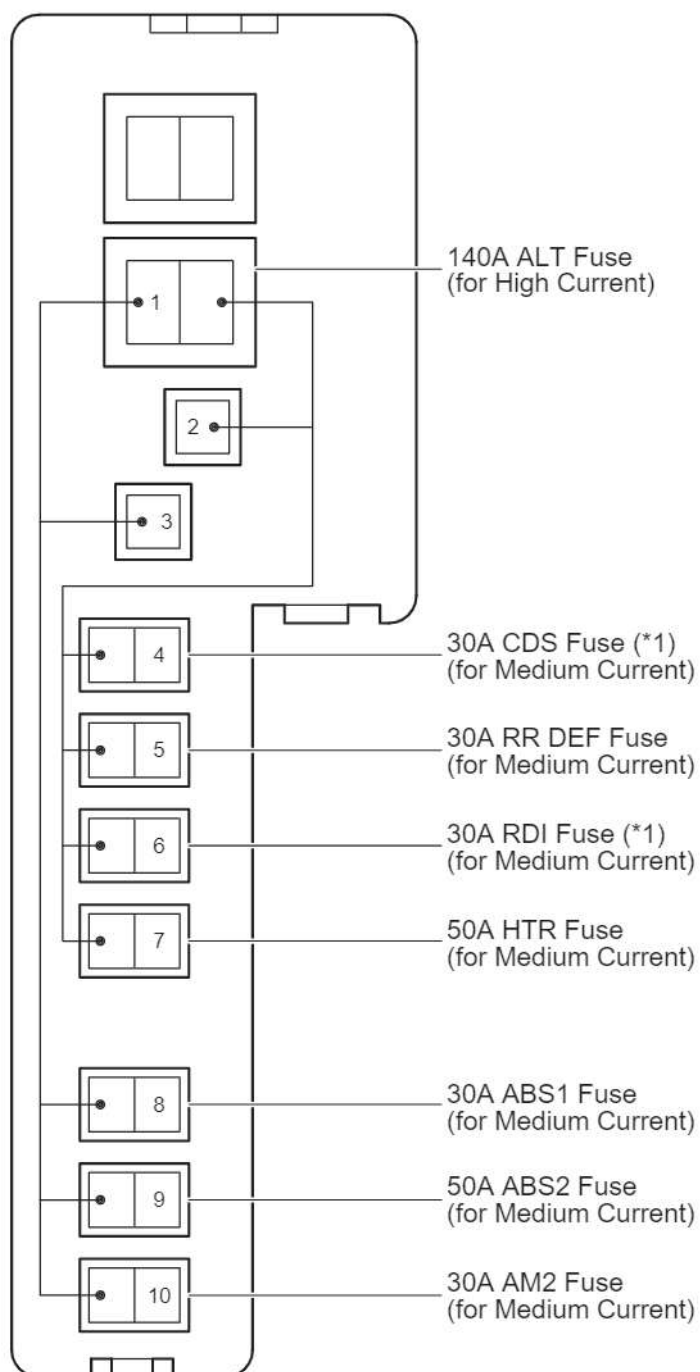


F RELAY LOCATIONS


 : Engine Room J/B

Engine Compartment Left (See Page 20)

- * 1:H-LP RH UPR
- * 2:H-LP LH UPR
- * 3:POWER OUTLET2
- * 4:SHORT

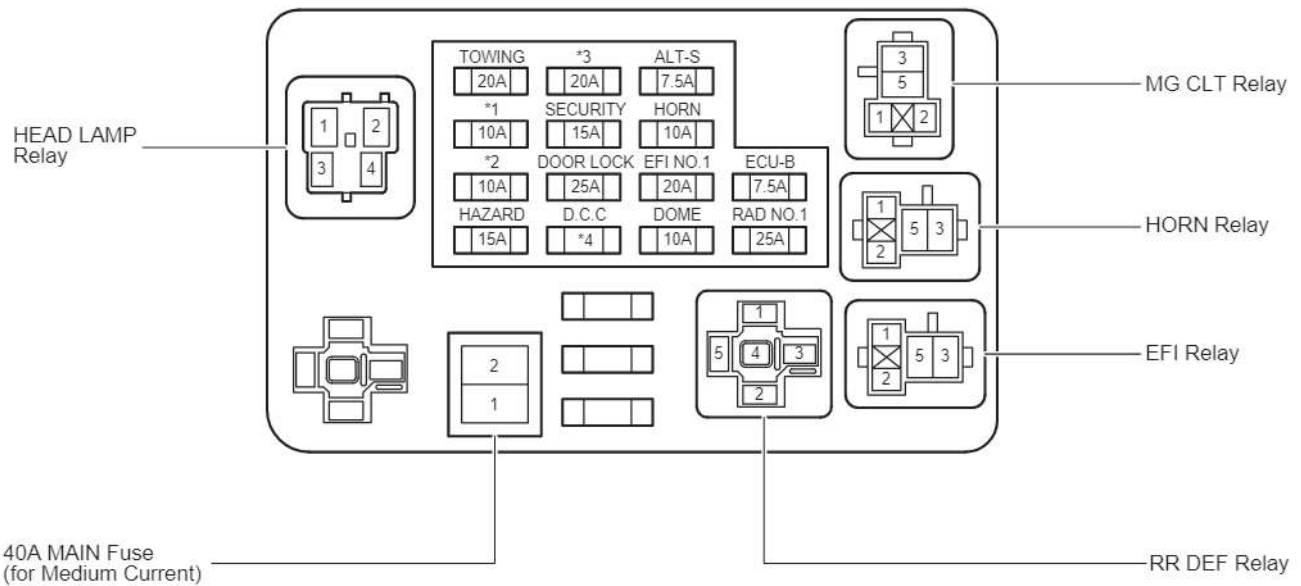


(Inner Circuit : See Page 34)

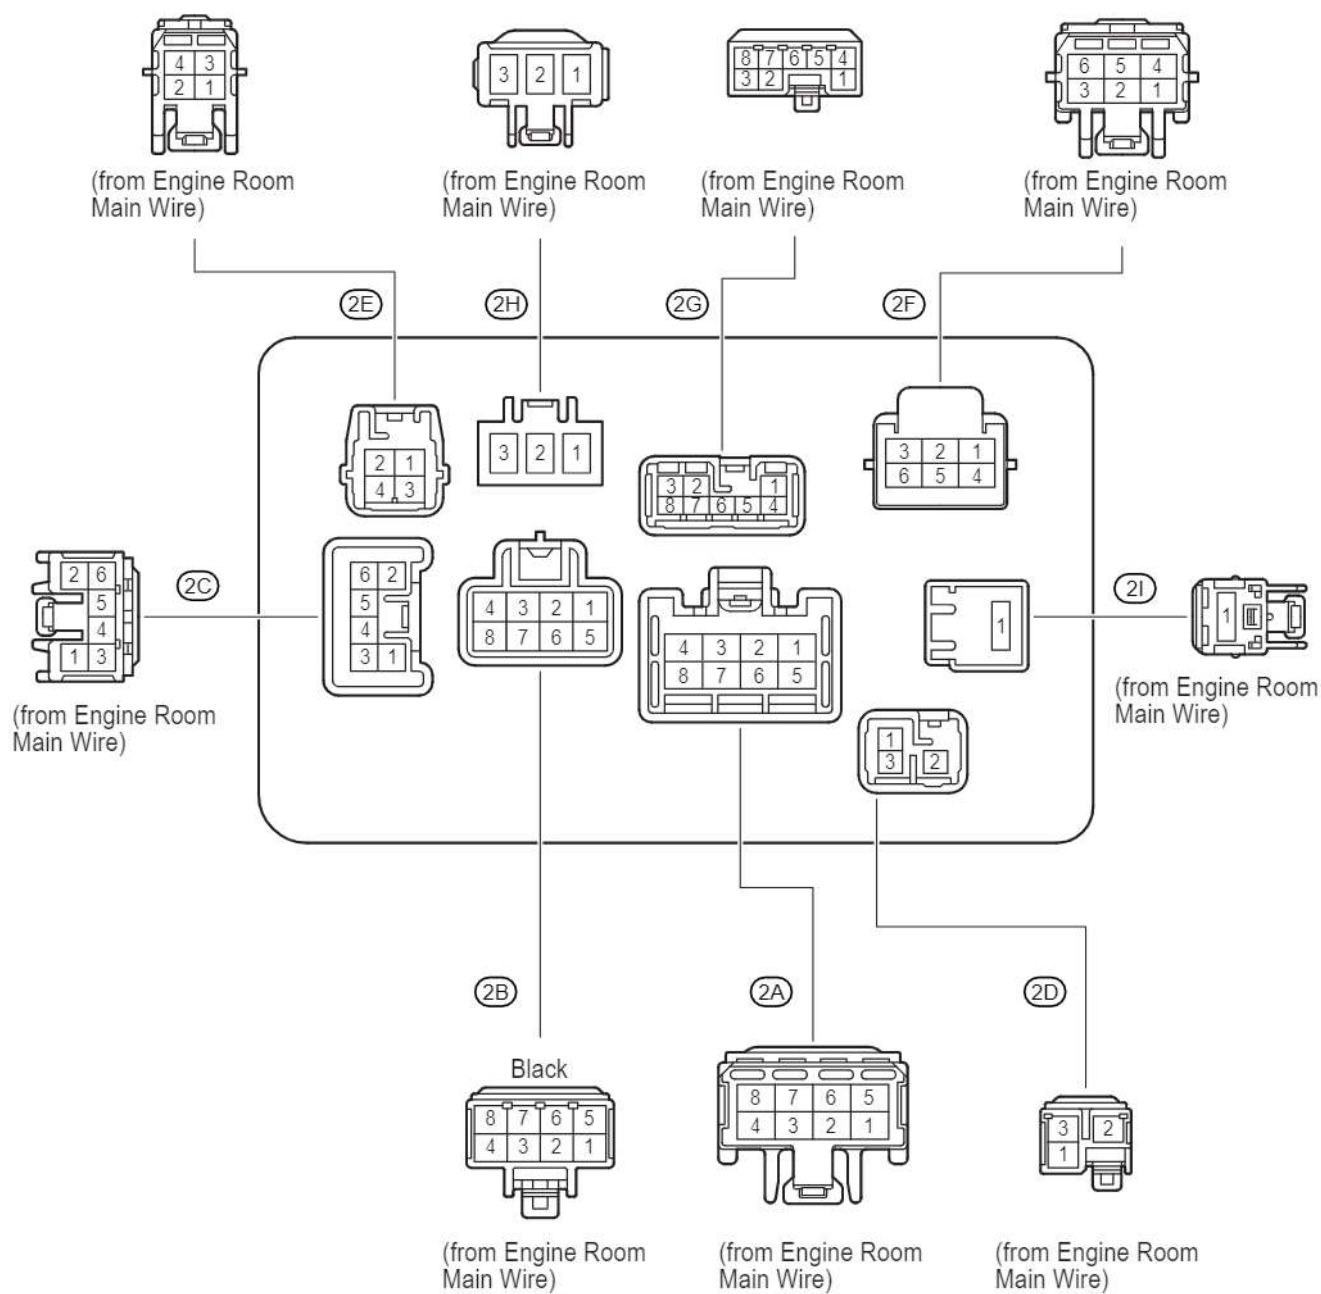


F RELAY LOCATIONS

 : Instrument Panel J/B Lower Finish Panel (See Page 20)

* 1:PWR OUTLET1

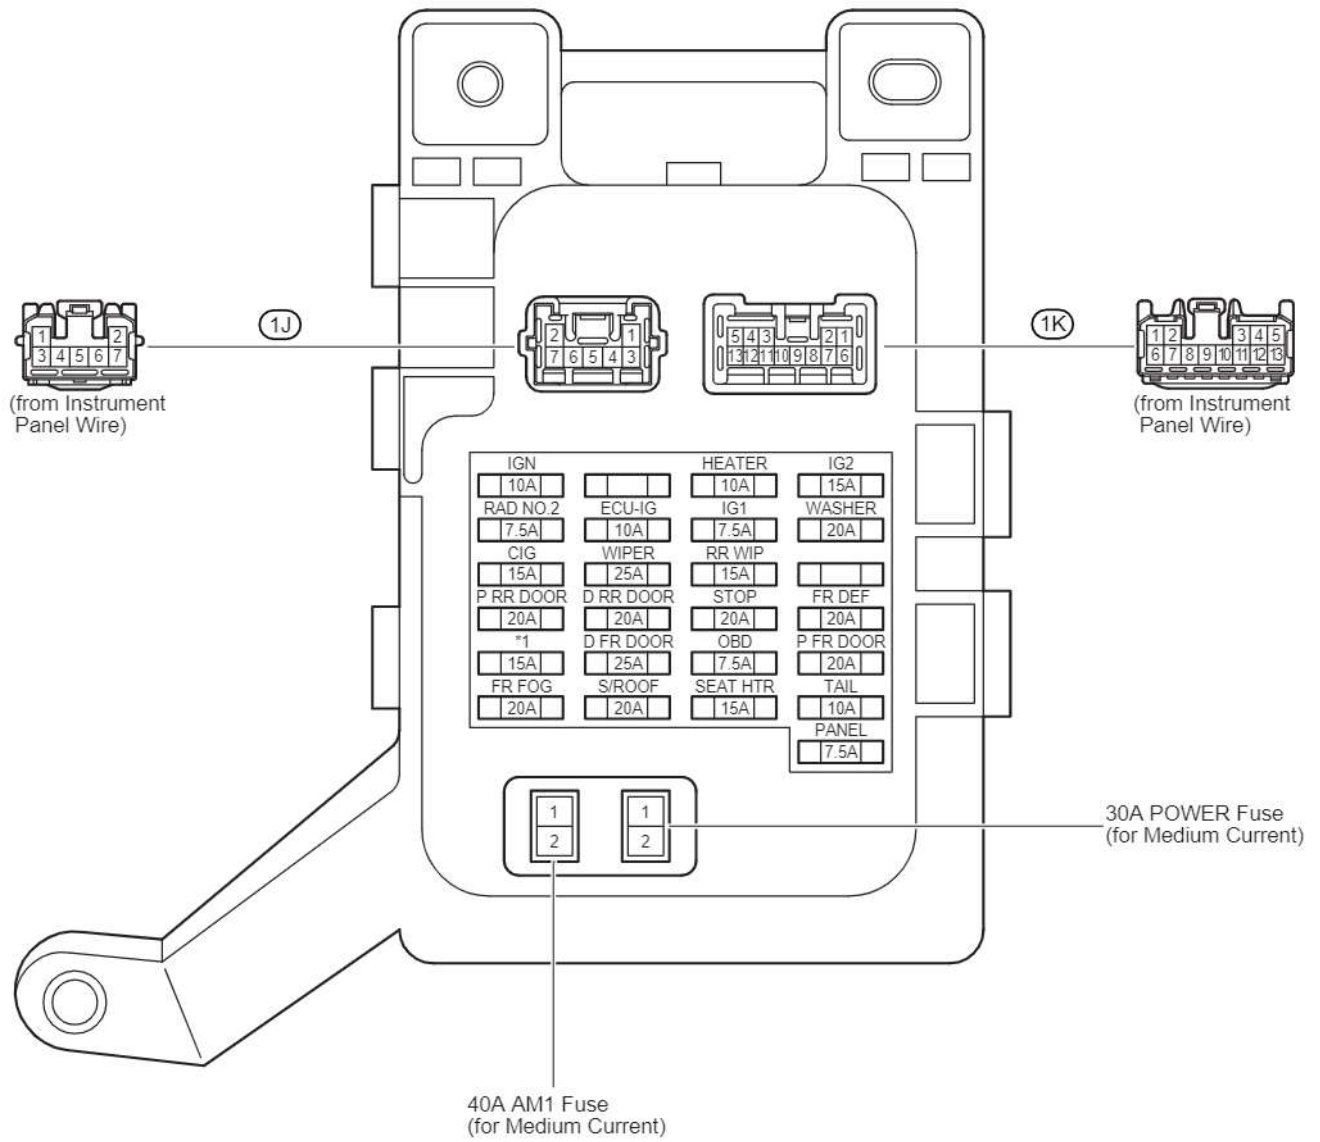


(Inner Circuit : See Page 35)

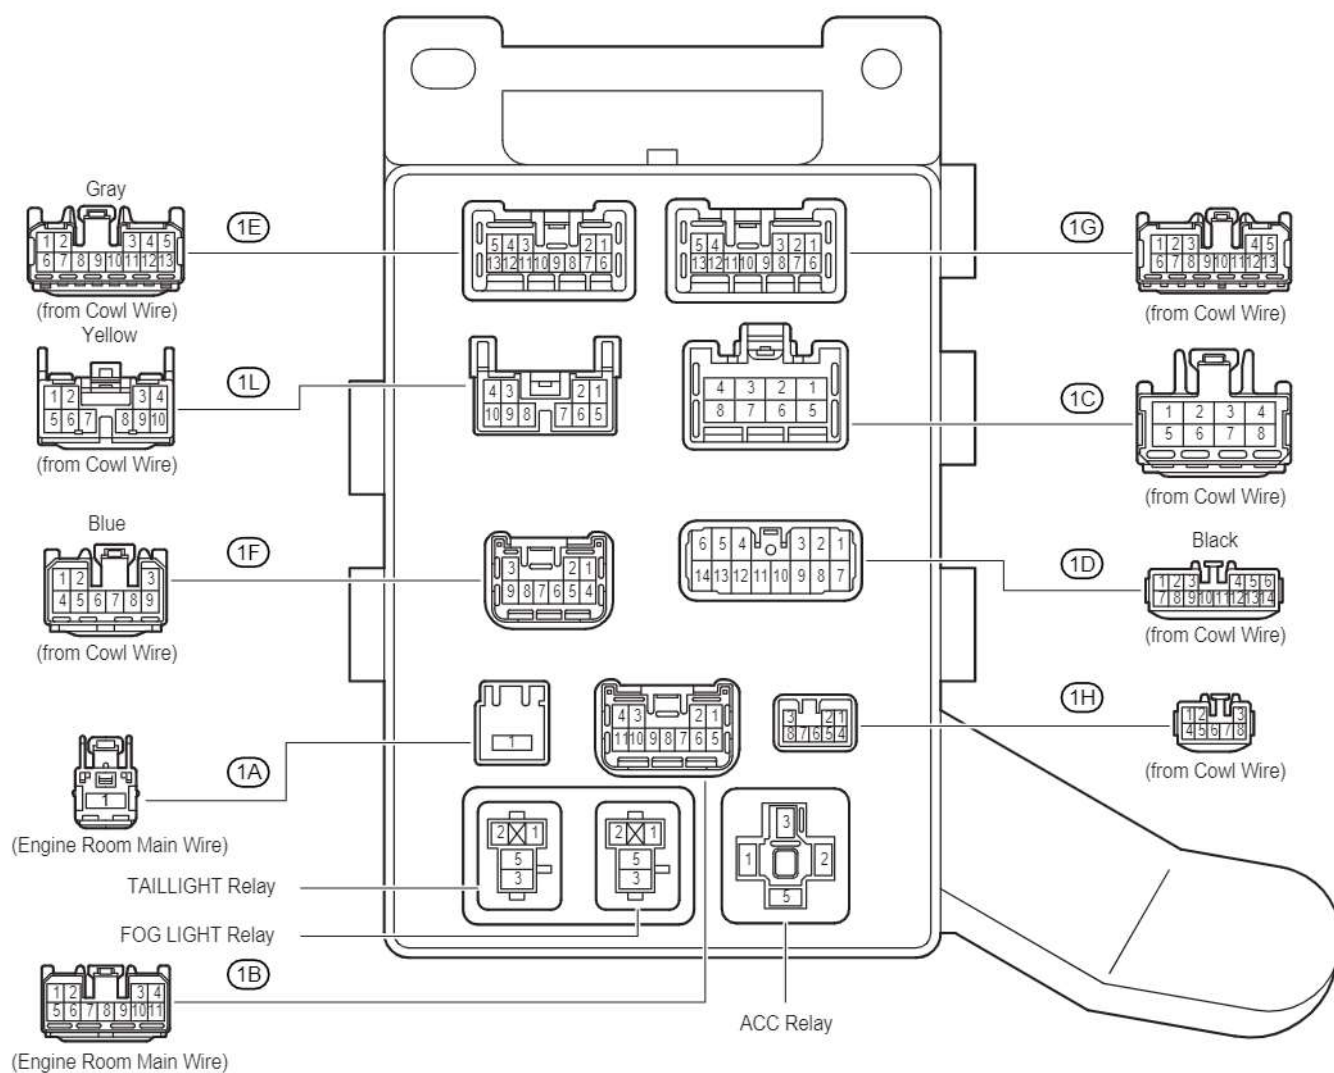


F RELAY LOCATIONS

 : Center J/B

Behind the Instrument Panel Center (See Page 20)

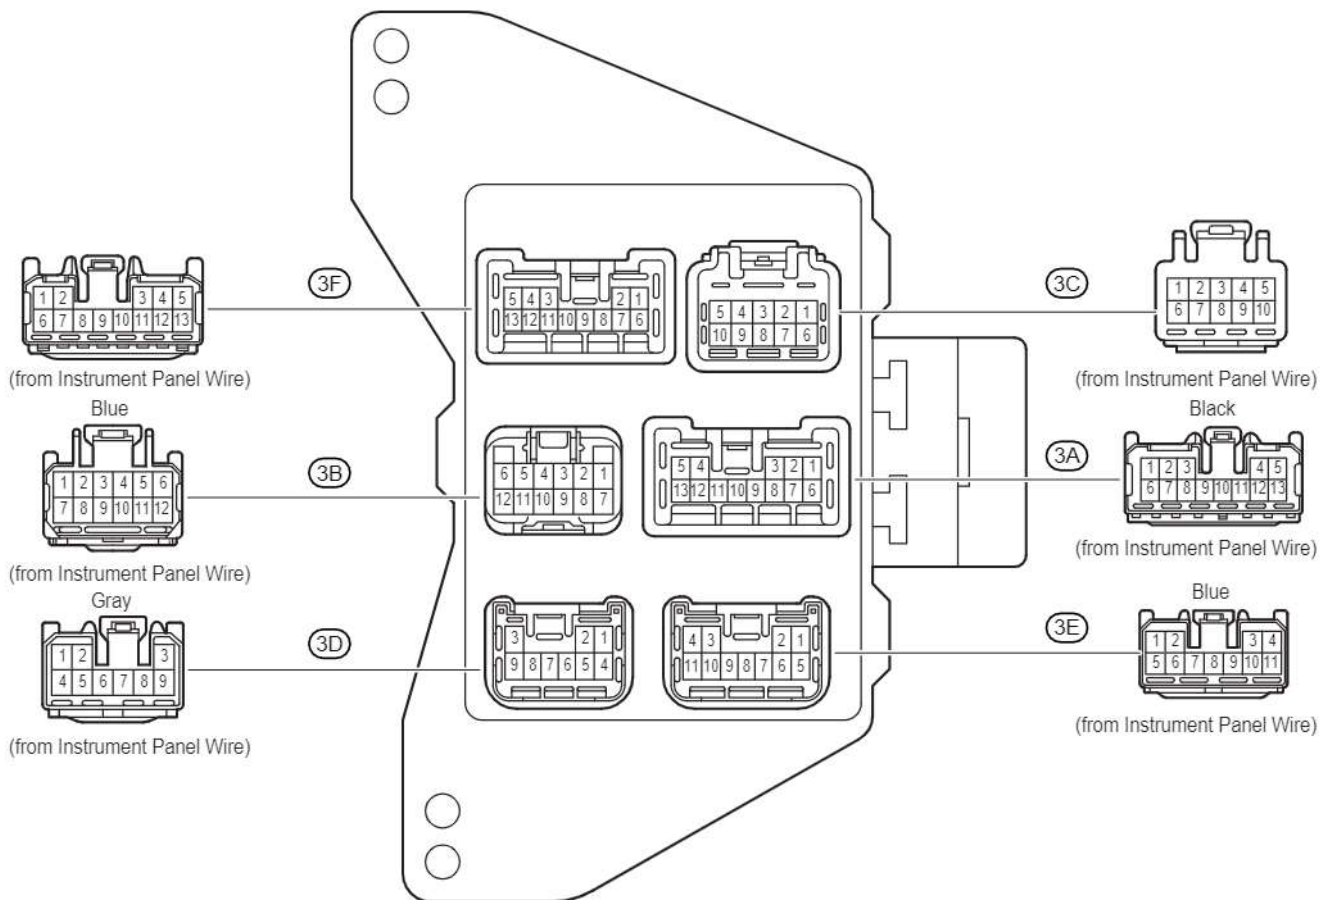


(Inner Circuit : See Page 36)

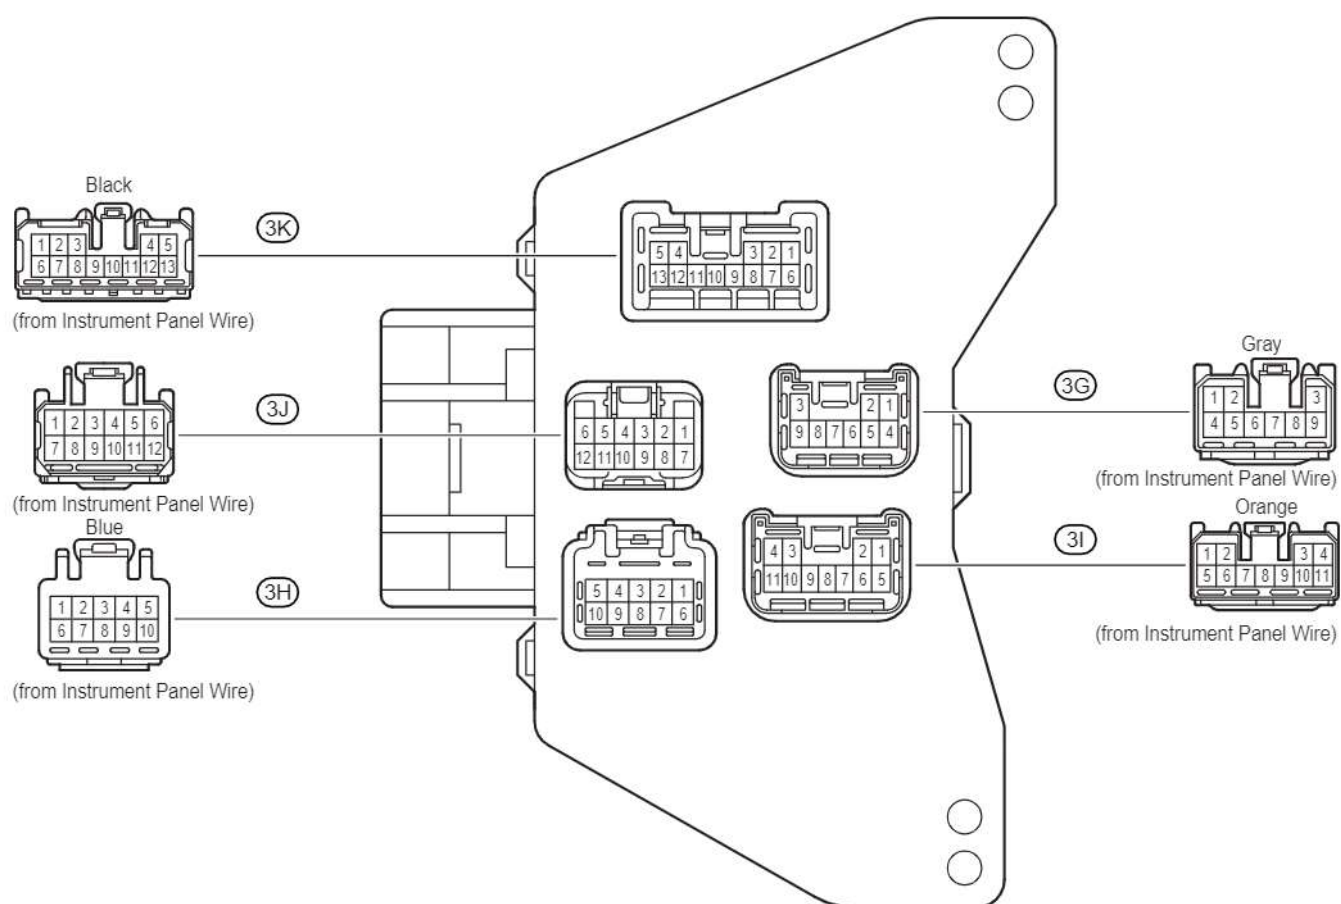


F RELAY LOCATIONS

○ : Passenger Side J/B

Right Side of Glove Box (See Page 20)

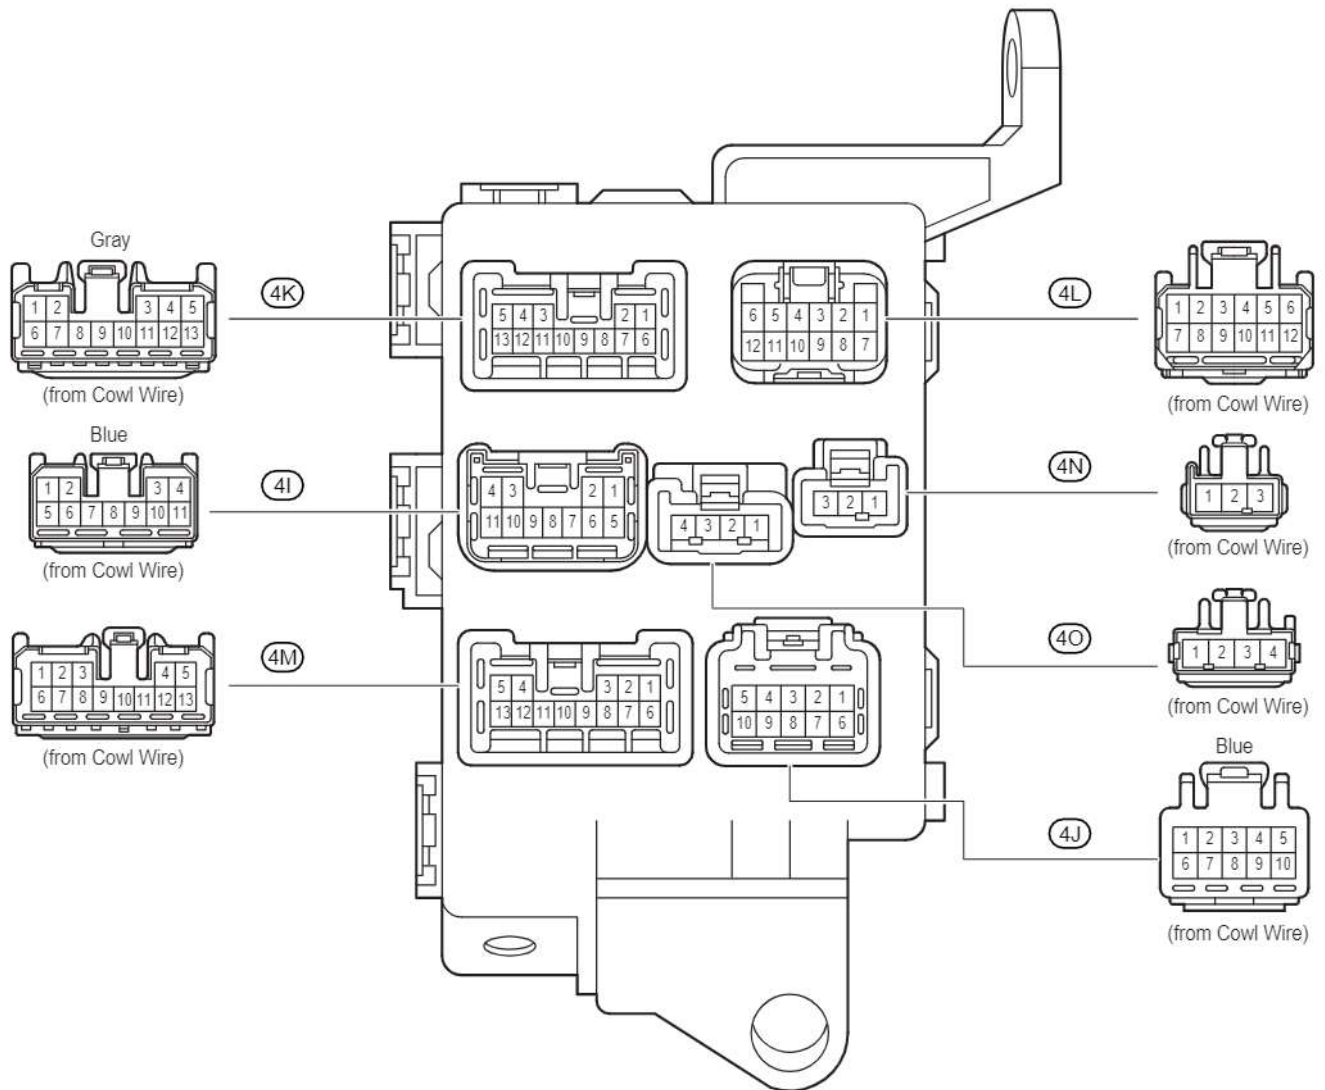


(Inner Circuit : See Page 37)

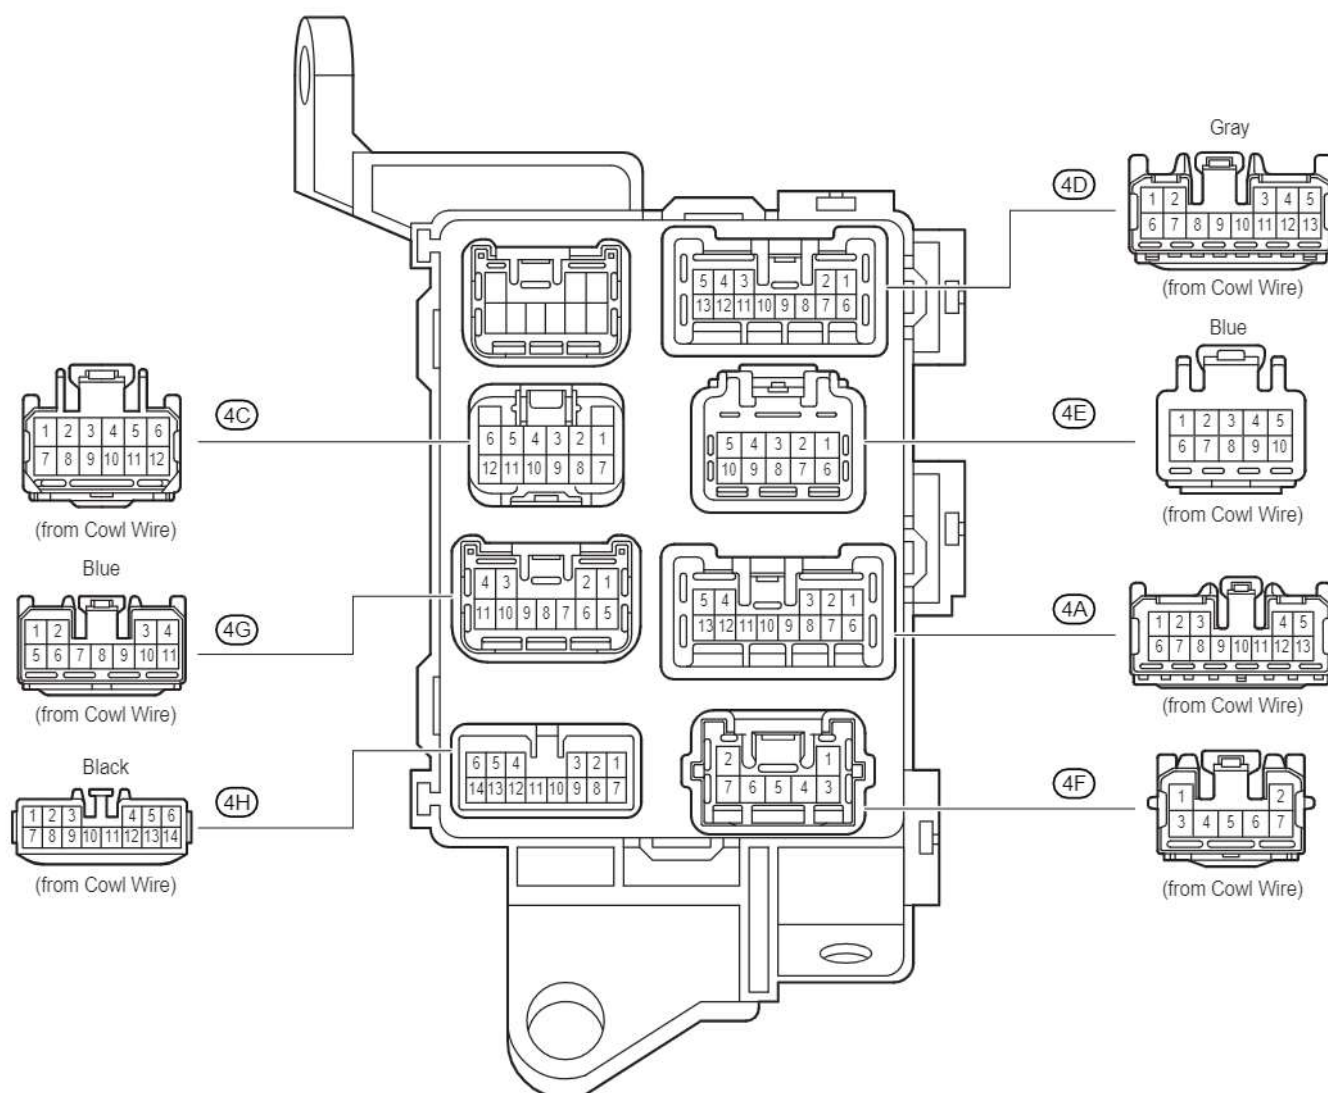


F RELAY LOCATIONS

[Engine Room J/B Inner Circuit]

* 1:20A POWER OUTLET2

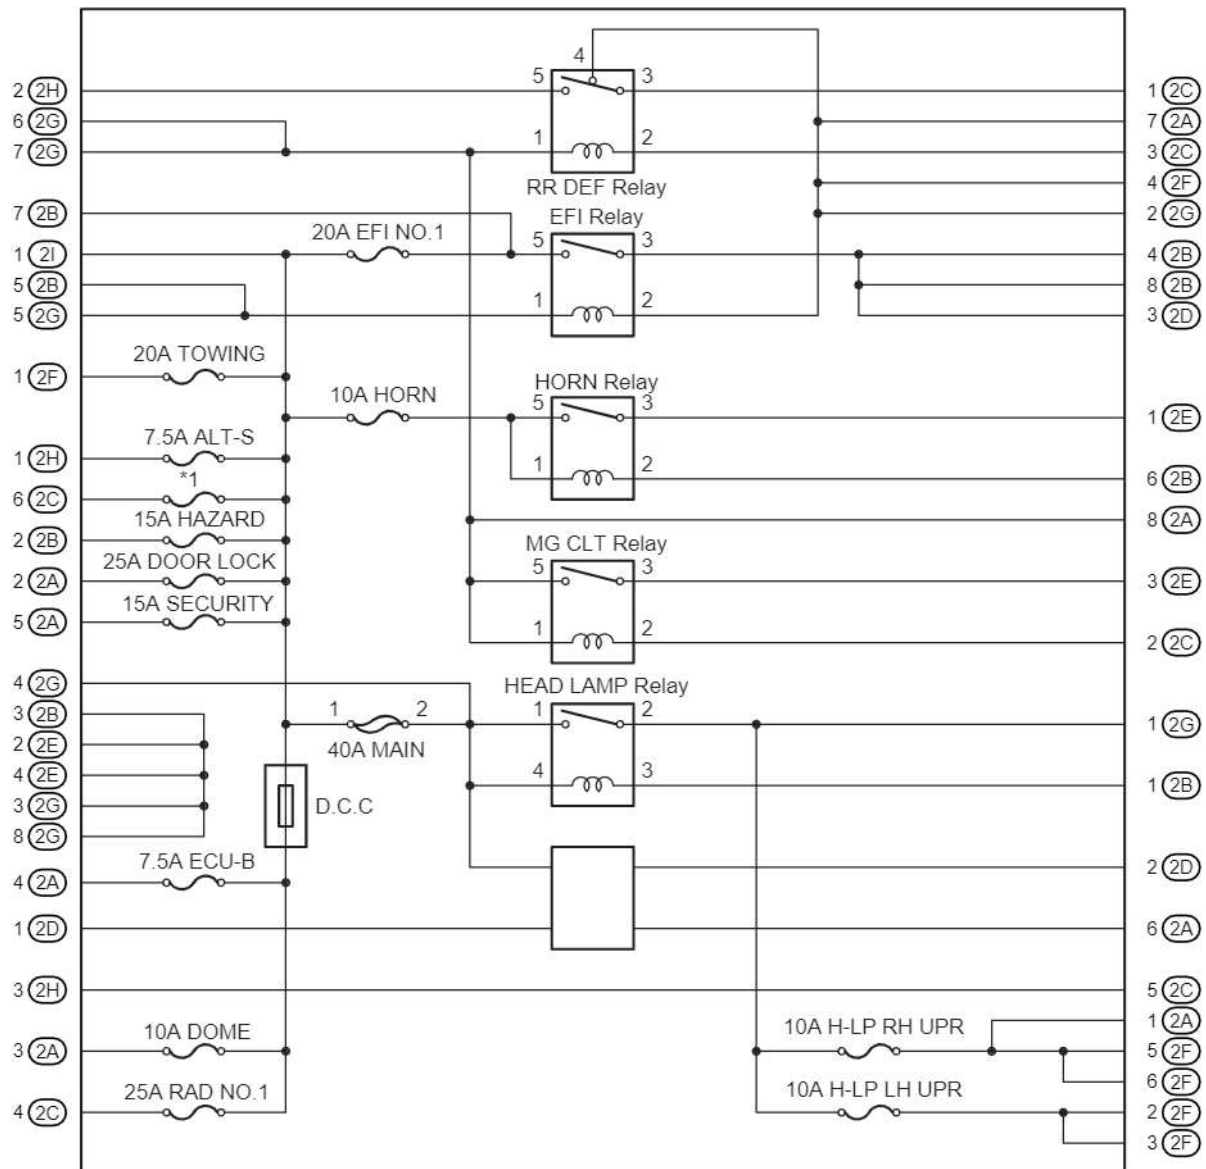


[Instrument Panel J/B Inner Circuit]

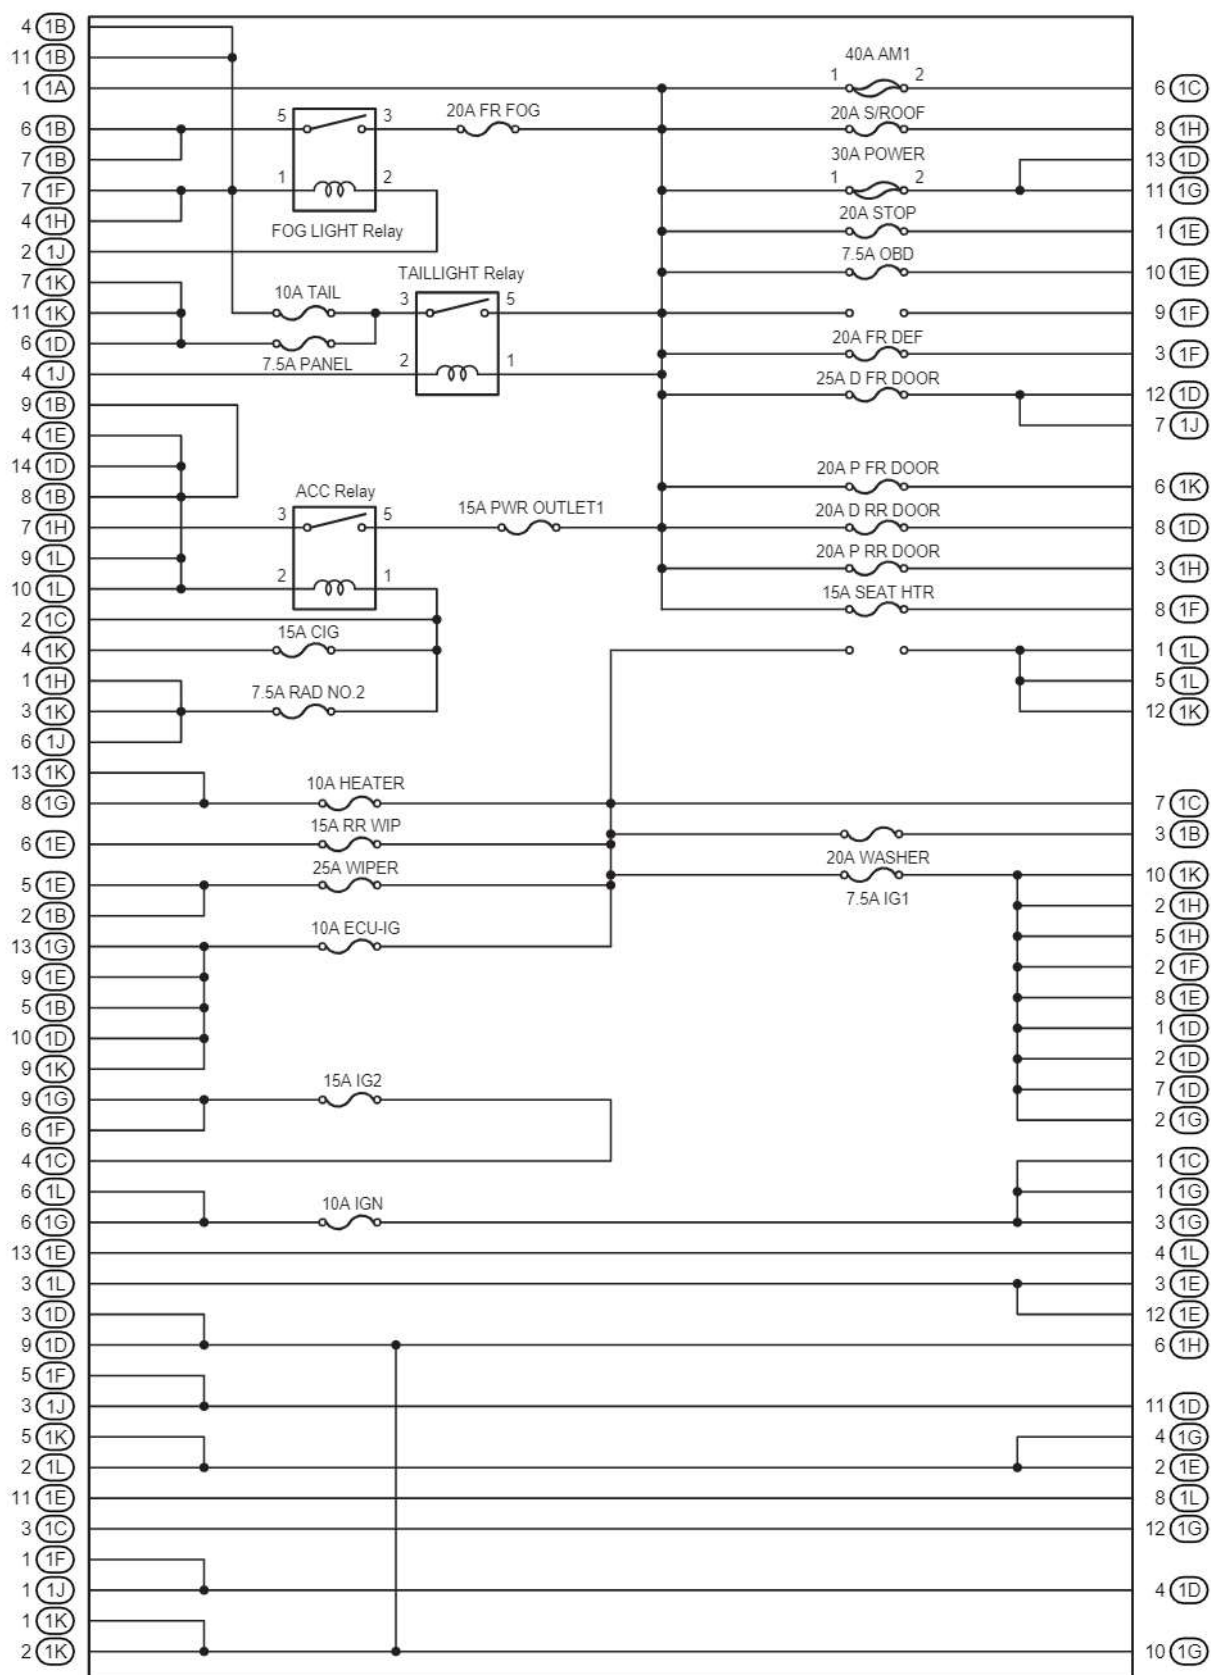

F RELAY LOCATIONS

[Center J/B Inner Circuit]

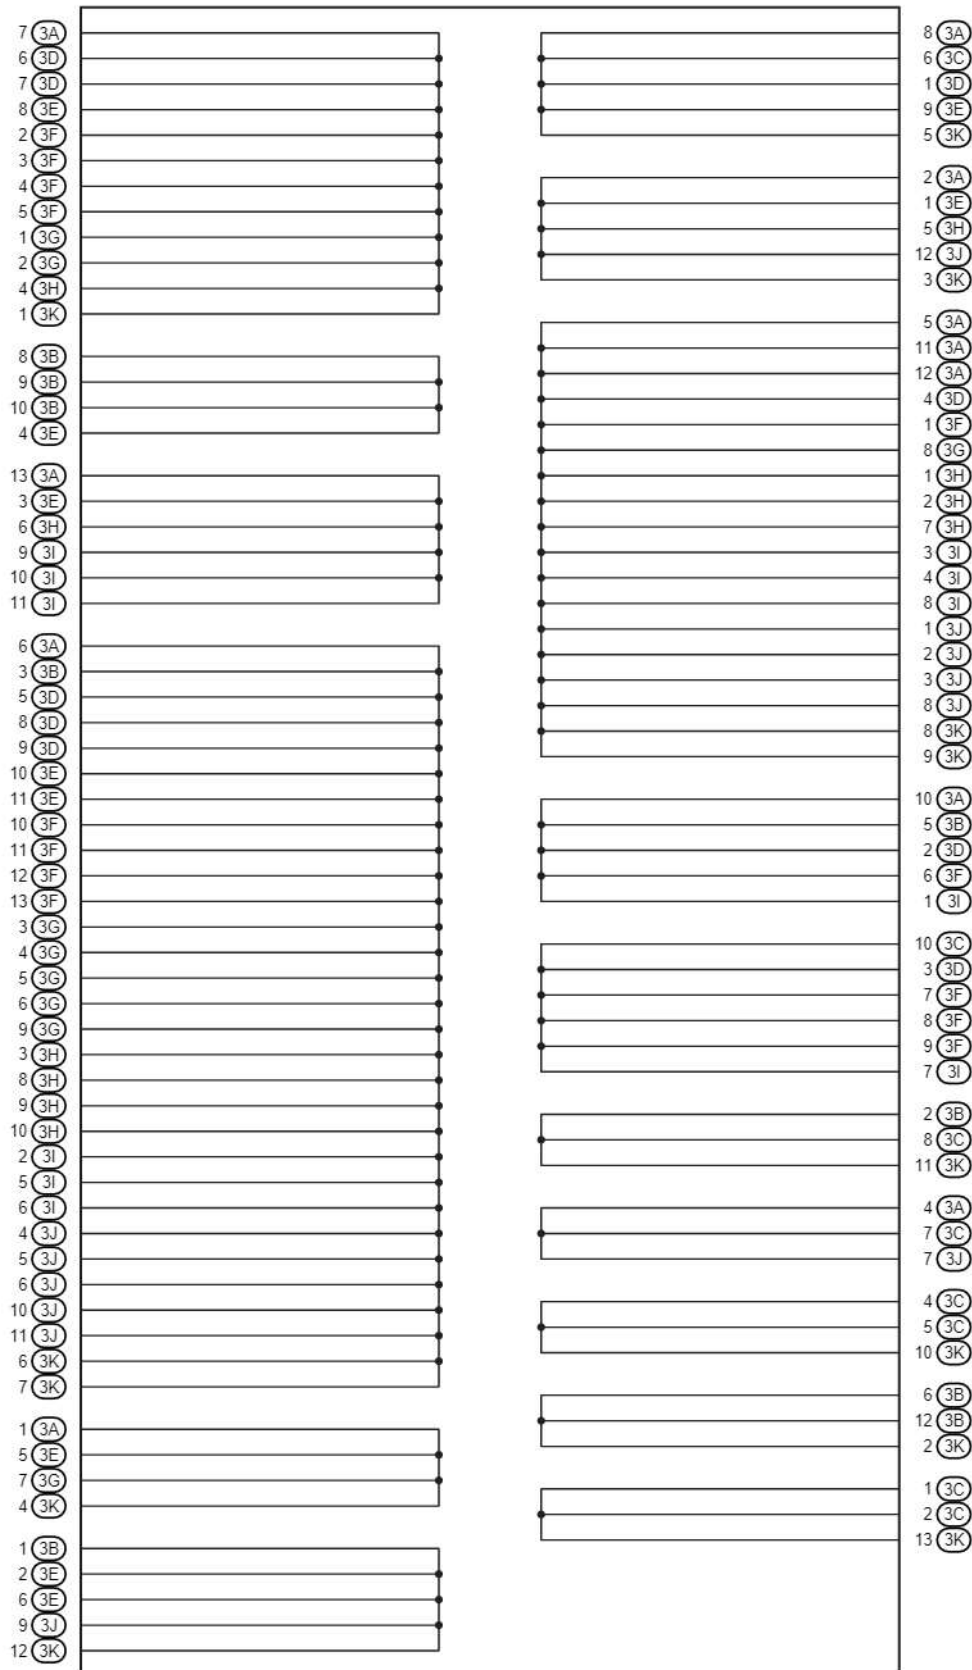

[Passenger Side J/B Inner Circuit]

