

Toyota Camry (XV20; 1997-2001) fuses

*In this article, we consider the second -generation Toyota Camry (XV20), produced from 1996 to 2001. Here you will find fuse box diagrams of **Toyota Camry 1997, 1998, 1999, 2000 and 2001**, get information about the location of the fuse panels inside the car, and learn about the assignment of each fuse (fuse layout).*

See other Toyota Camry:

Fuse Layout Toyota Camry 1997-2001



Cigar lighter (power outlet) fuses in the Toyota Camry are the fuses #29 ("POWER-OUTLET") and #37 ("CIG") in the Instrument panel fuse box.


Passenger Compartment Fuse Box

Fuse Box Location

The fuse box is located behind the storage compartment in the instrument panel (on the driver's side).



Fuse Box Diagram

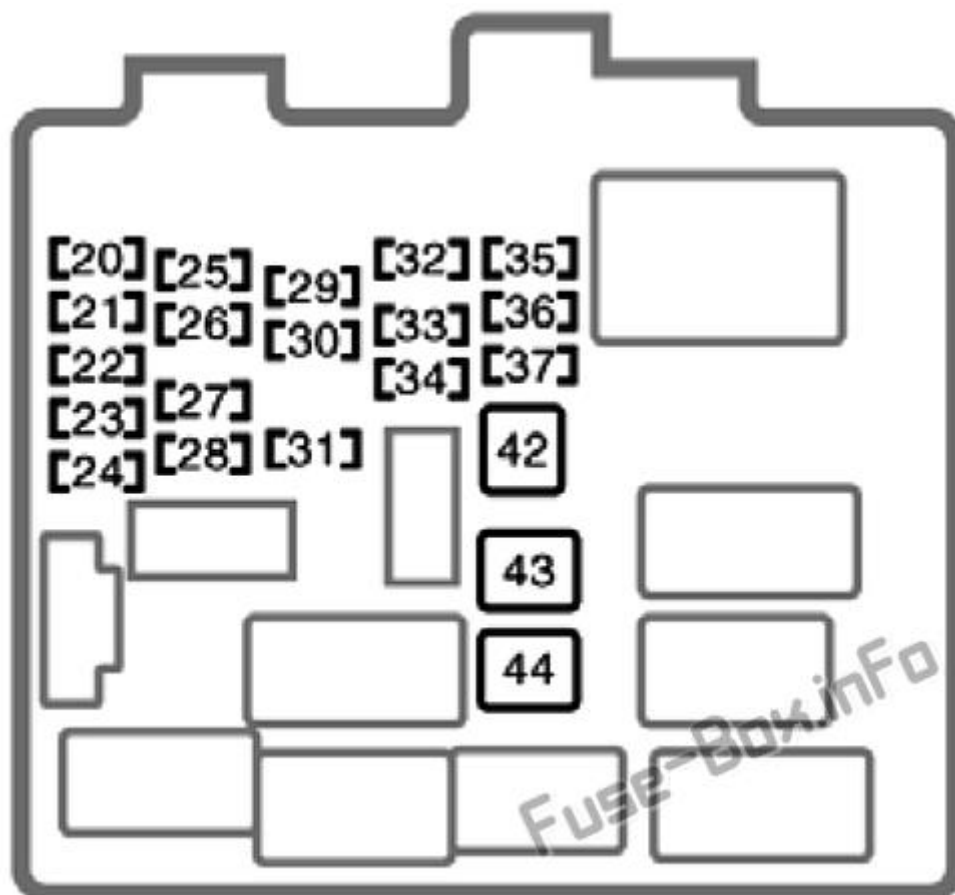

Assignment of the fuses in the instrument panel

№	Name	Amp	Description
20	SEAT-HEATER	20A	1997-2000: Not Used; 2001: Seat heater
21	HEATER	10A	Air conditioning system, rear window defogger, starting system
22	GAUGE	10A	Gauges and meters, back-up lights, cruise control system, charging system, traction control system, daytime running light system, power windows, service reminder indicators and warning buzzers
23	WIPER	20A or 25A	Windshield wipers and washer (1997-1998: 20A; 1999-2001: 25A)
24	MIRROR-HEATER	10A	Outside rear view mirror defogger
25	ECU-IG	15A	Cruise control system, anti-lock brake system, power antenna, SRS airbag system, seat belt pretensioners, theft deterrent system, shift lock control system, traction control system, daytime running light system, locking with wireless remote control system, multiport fuel injection system/ sequential multiport fuel injection system
26	IGN	5A	Gauges and meters, charging system, SRS airbag system, seat belt pretensioners, multiport fuel injection system/sequential multiport fuel injection system
27	STOP	15A	Stop lights, cruise control system, high-mounted stoplight, antilock brake system, shift lock control system, multiport fuel injection system/ sequential multiport fuel injection system
28	TAIL	10A	Parking lights, license plate lights, tail lights, front side marker lights, daytime running light system, multiport fuel injection system/sequential multiport fuel injection system
29	POWER-OUTLET	15A	Power outlet
30	OBD	7.5A	On-board diagnosis system


No	Name	Amp	Description
31	FOG	15A	No circuit
32	STARTER	5A	Gauges and meters, multiport fuel injection system/sequential multiport fuel injection system
33	DOOR	25A	1997-1999: Power door lock system, theft deterrent system, fuel filler door control system; 2000-2001: Power door lock system, theft deterrent system
34	PANEL	7.5A	Gauge and meter, audio system, cigarette lighter, glove box light, clock, instrument panel light control, service reminder indicators, air conditioning control panel lights, ashtray light, emergency flasher, daytime running light system, seat heater control system, rear window defogger, electronically controlled automatic transmission system
35	TURN	7.5A	Emergency flasher
36	RAD-No2	7.5A	Audio system, power antenna
37	CIG	15A	Cigarette lighter, shift lock control system, power rear view mirror controls, theft deterrent system, power door lock system, SRS airbag system, seat belt pretensioners, outside rear view mirror defogger, air conditioning system
42	DEF	40A	Rear window defogger
43	PWR	30A	Power window control system, power seat, electric moon roof
44	AM1	40A	1999: Head lamp cleaner; 2000-2001: "POWER-OUTLET", "CIG", "RAD-No2", "TURN", "WIPER", "ECU-IG", "GAUGE" and "HEATER" fuses

Advertisements

Engine Compartment Fuse Box


Fuse Box Location

There are two or three fuse blocks in the engine compartment of this Toyota Camry, depending on the version and equipment.

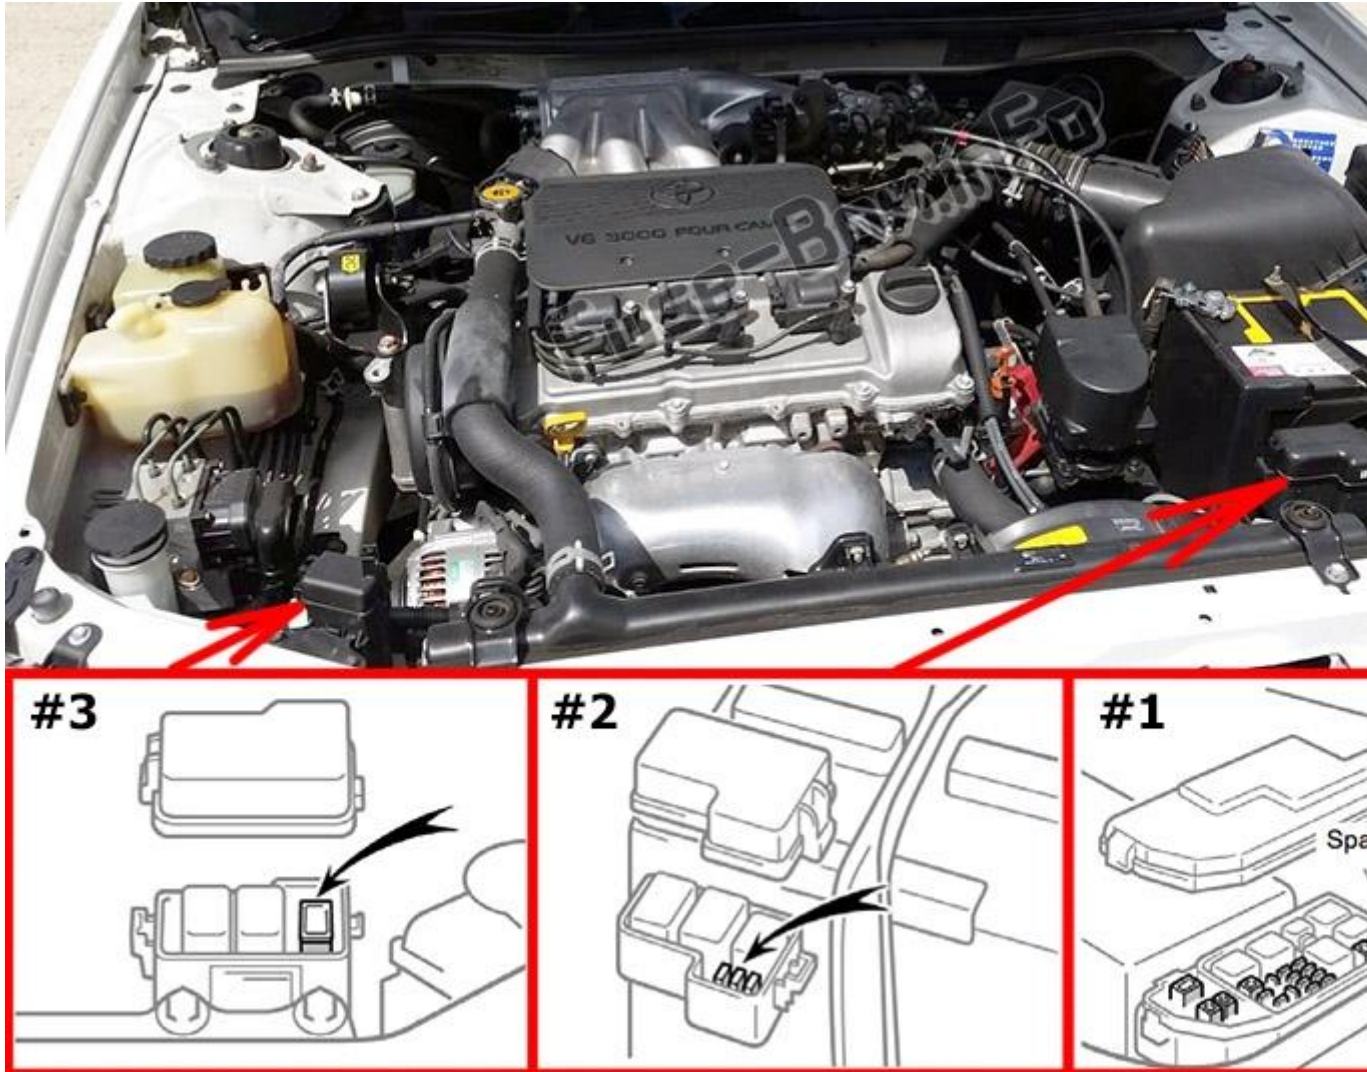


Fuse Box Diagram

Fuse Box #1

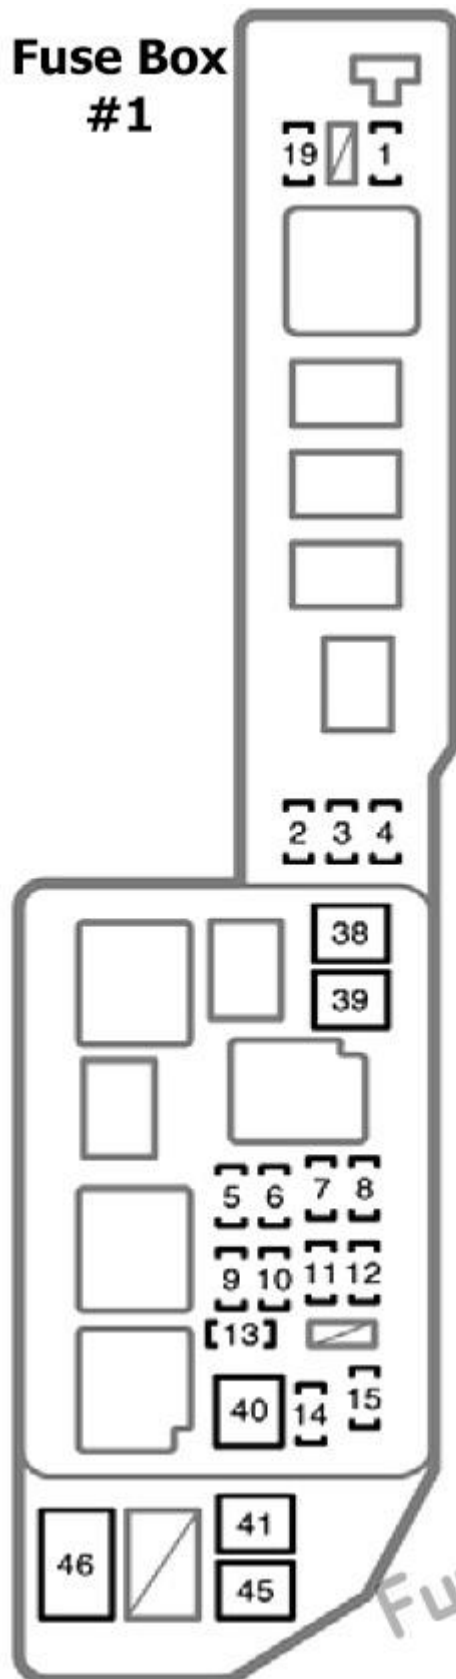

Fuse Box #2

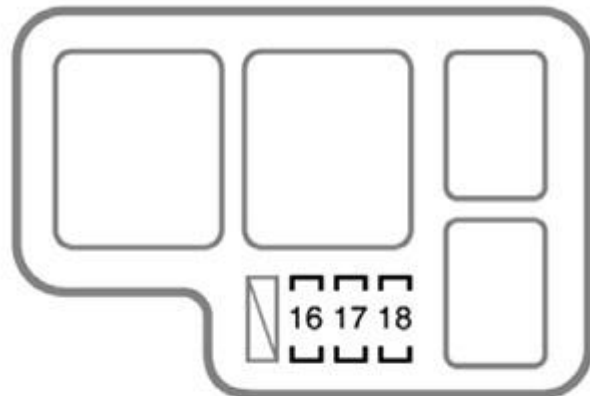

Fuse Box #3

Type 1



Type 2



Advertisements

Assignment of the fuses in the engine compartment

№	Name	Amp	Description
1	A/C	10A	Air conditioning system
2	SPARE	10A	Spare
3	SPARE	15A	Spare
4	SPARE	30A	Spare
5	ALT-S	5A	Charging system
6	HEAD (RH-HI) or HEAD RH (UPR) or HEAD (RH)	15A or 20A	Right-hand headlight (1997-1999: 15A; 2000-2001: 20A)
7	EFI	15A	Multiport fuel injection system/sequential multiport fuel injection system
8	HORN	10A	Horn, theft deterrent system
9	HAZARD	10A or 15A	Emergency flasher (1997-1999: 10A; 2000-2001: 15A)
10	AM2	30A	Gauge and meter, SRS airbag system, seat belt pretensioners, multiport fuel injection system/sequential multiport fuel injection system, "IGN" and "STARTER" fuses
11	TEL	5A	No circuit
12	HEAD (LH-HI) or HEAD LH (UPR) or HEAD (LH)	15A or 20A	Left-hand headlight (1997-1999: 15A; 2000-2001: 20A)
13	RADIO №1	20A	Audio system
14	DOME	7.5A	Theft deterrent system, daytime running light system, clock, locking with wireless remote control system, ignition switch light, personal light, trunk light, electric

No	Name	Amp	Description
			moon roof, interior light, vanity mirror light, door courtesy light, power door lock system
15	ECU-B	7.5A or 10A	Cruise control system, anti-lock brake system, SRS airbag system, seat belt pretensioners (1997: 7.5A; 1998-2001: 10A)
16	DRL №2	5A	Daytime running light system
17	HEAD (LH-LO) or H-LP LH (LWR)	10A	Left-hand headlight
18	HEAD (RH-LO) or H-LP RH (LWR)	10A	Right-hand headlight
19	A/F HTR	25A	1997: Not Used; 1998-2001: A/F sensor
38	CDS	30A	Electric cooling fans
39	RDI	30A	Electric cooling fans
40	MAIN	40A	"HEAD RH(UPR)", "HEAD (RH)", "H-LP RH(LWR)" and "HEAD (LH)" fuses
41	HTR	50A	"AM1" and "A/C" fuses
45	T-STK or CDS №2	30A	No circuit
46	ALT	100A	"RDI" and "CDS" fuses
47	FL ABS	60A	Anti-lock brake system