



F RELAY LOCATIONS

[Engine Compartment]

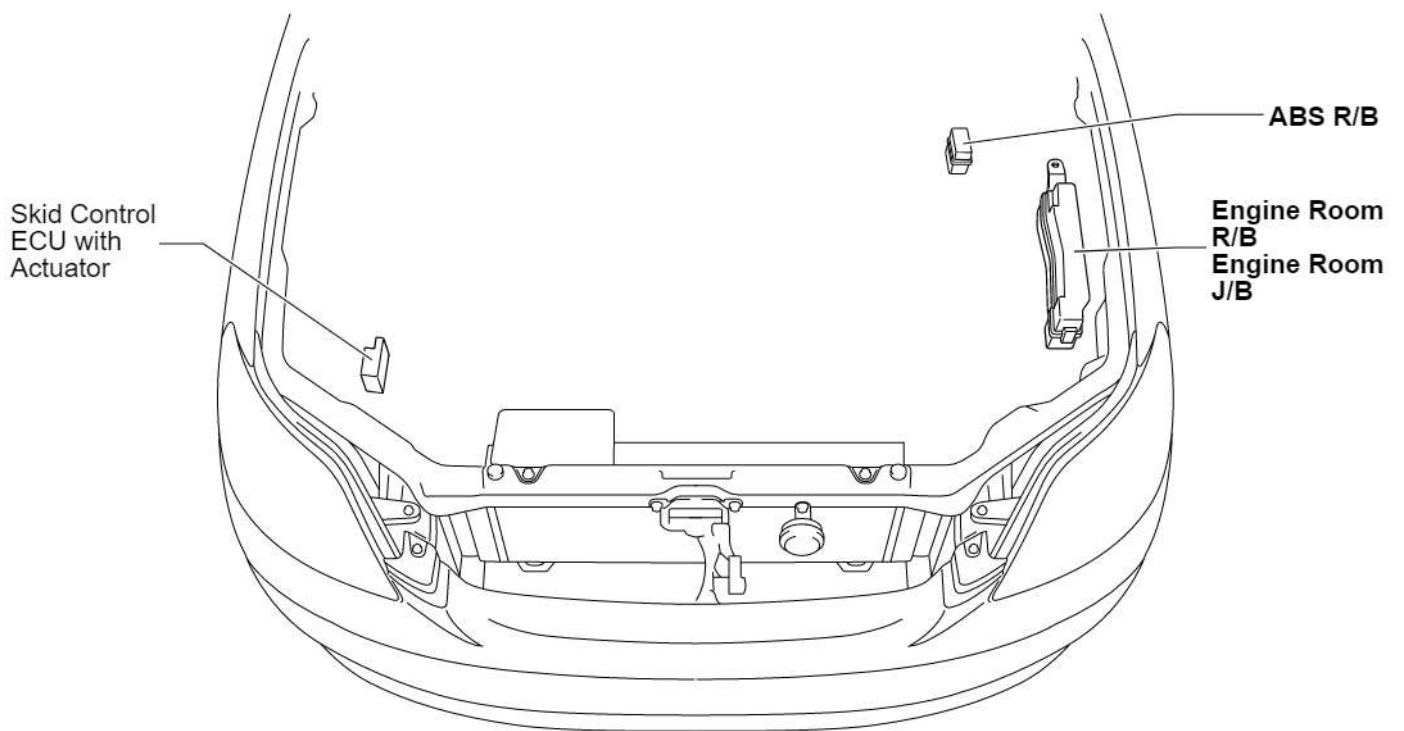


[Instrument Panel]

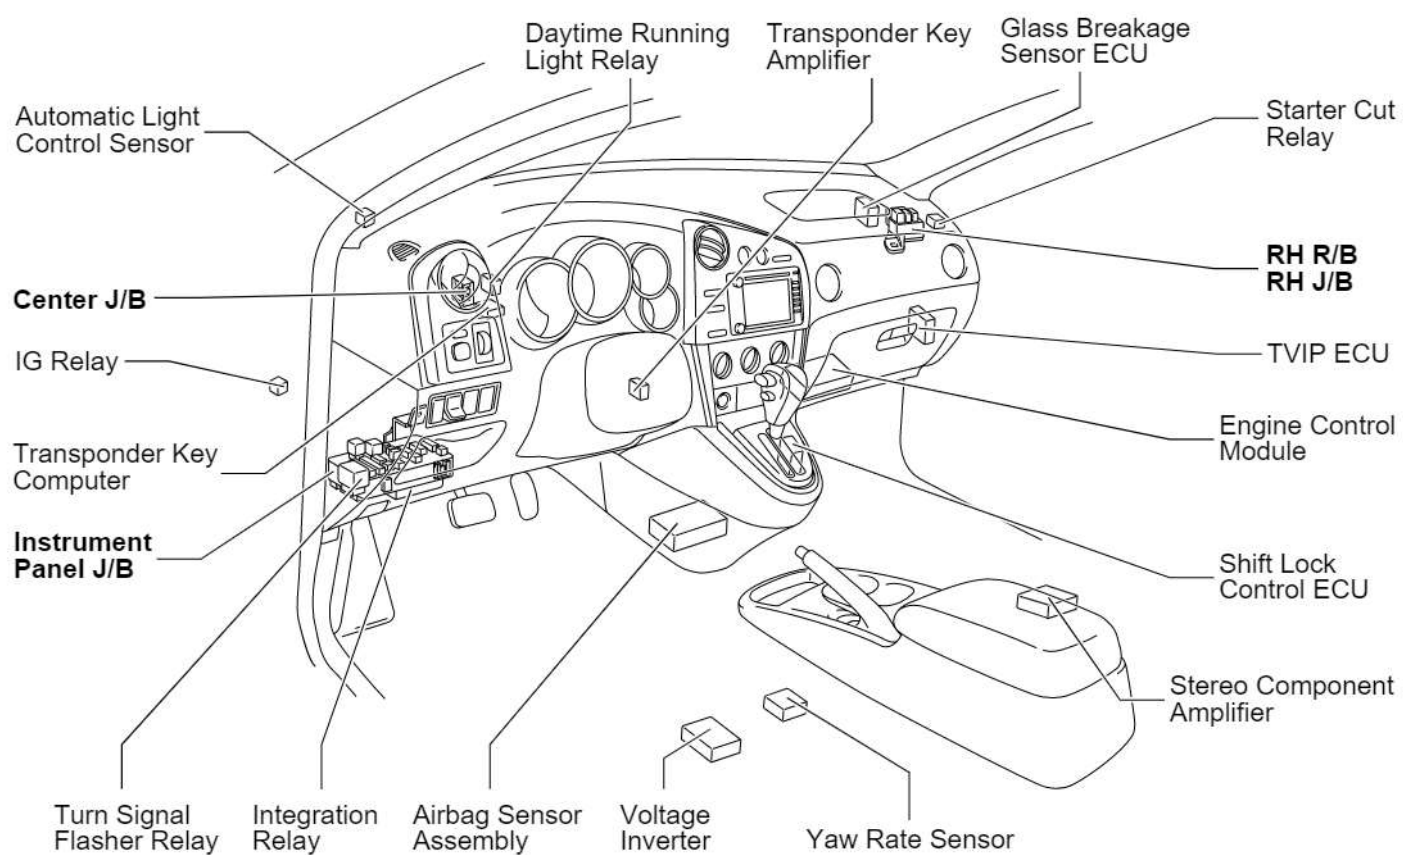

F RELAY LOCATIONS


[Body]

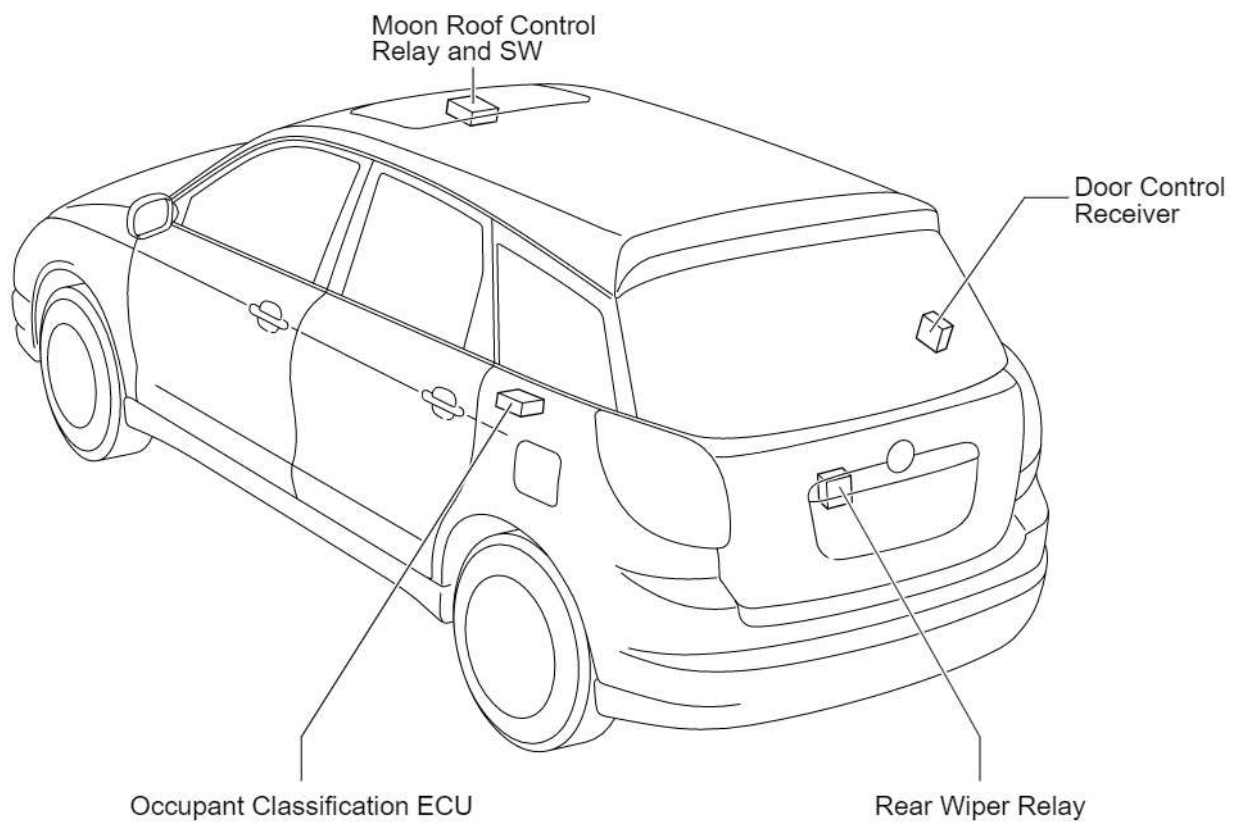




F RELAY LOCATIONS


 : Instrument Panel J/B Lower Finish Panel (See Page 21)

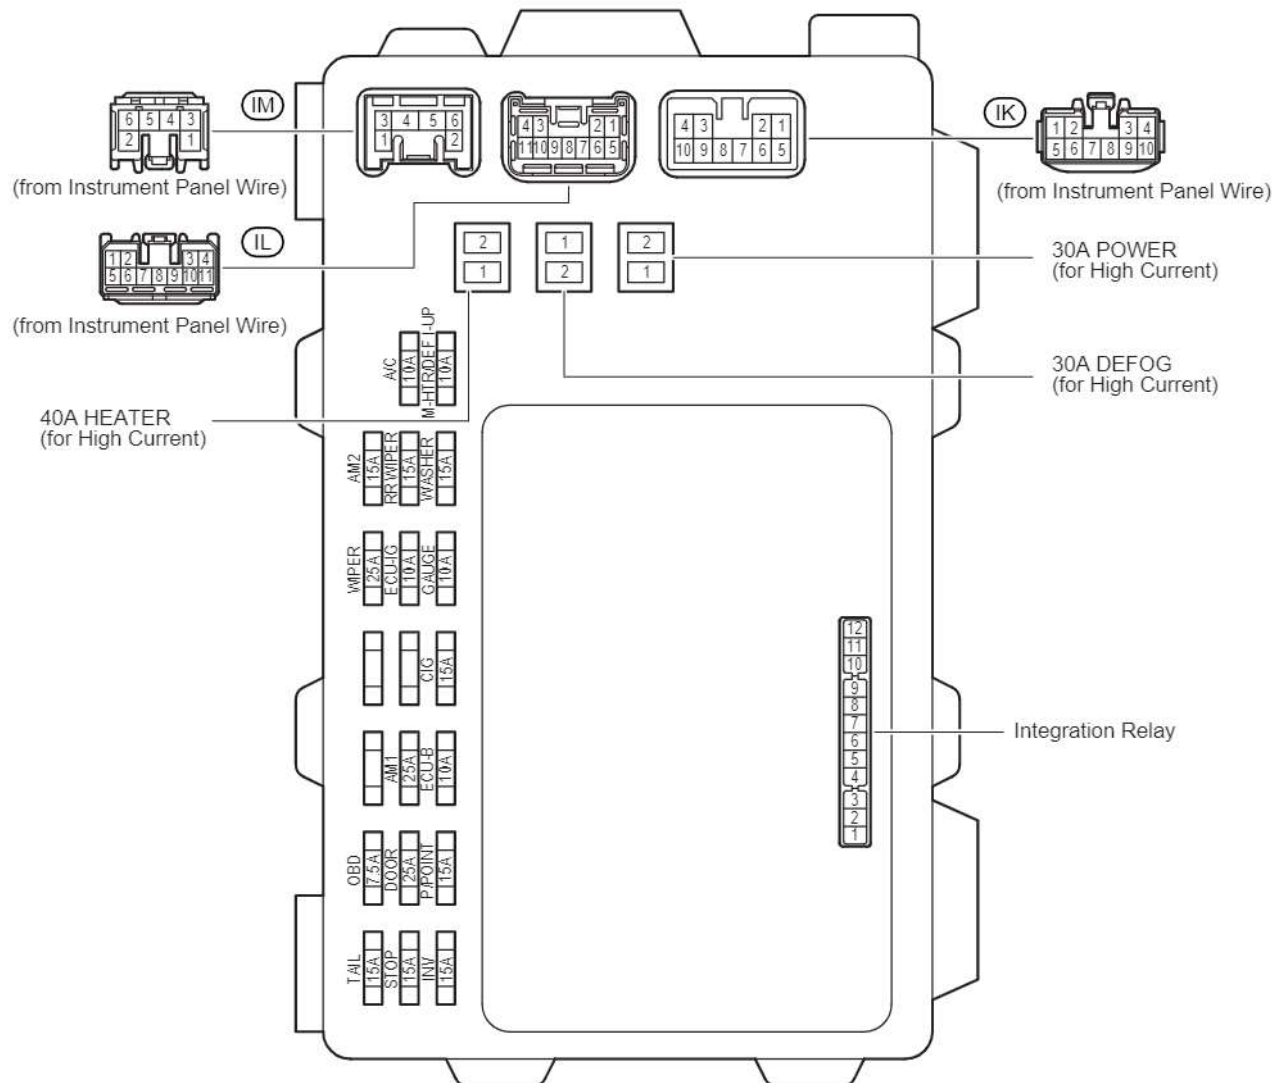

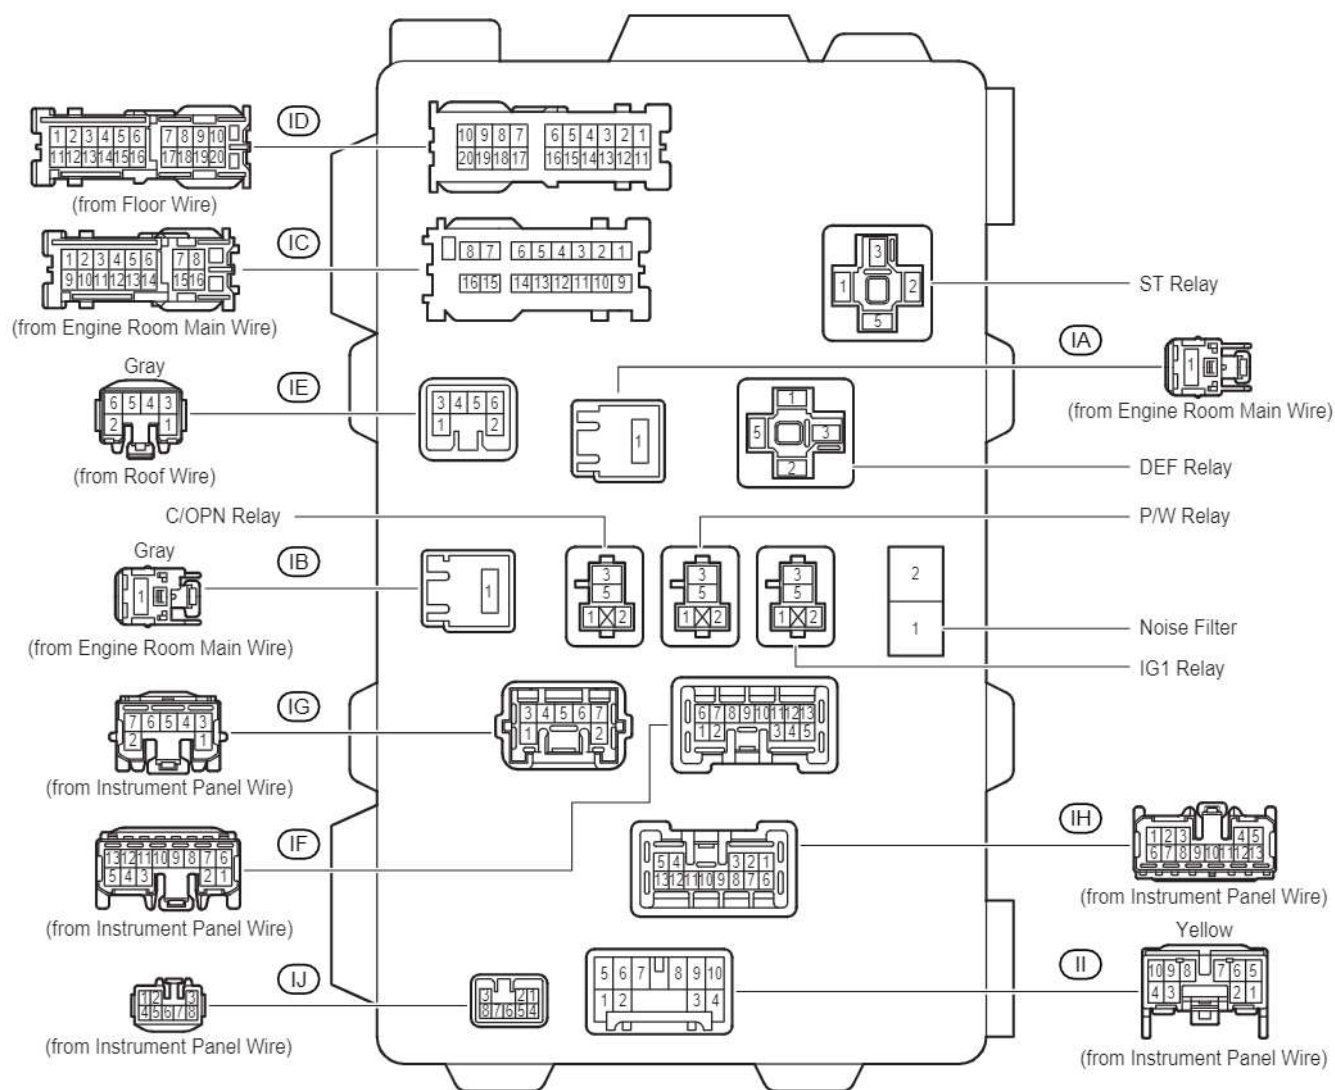


F RELAY LOCATIONS

[Instrument Panel J/B Inner Circuit]

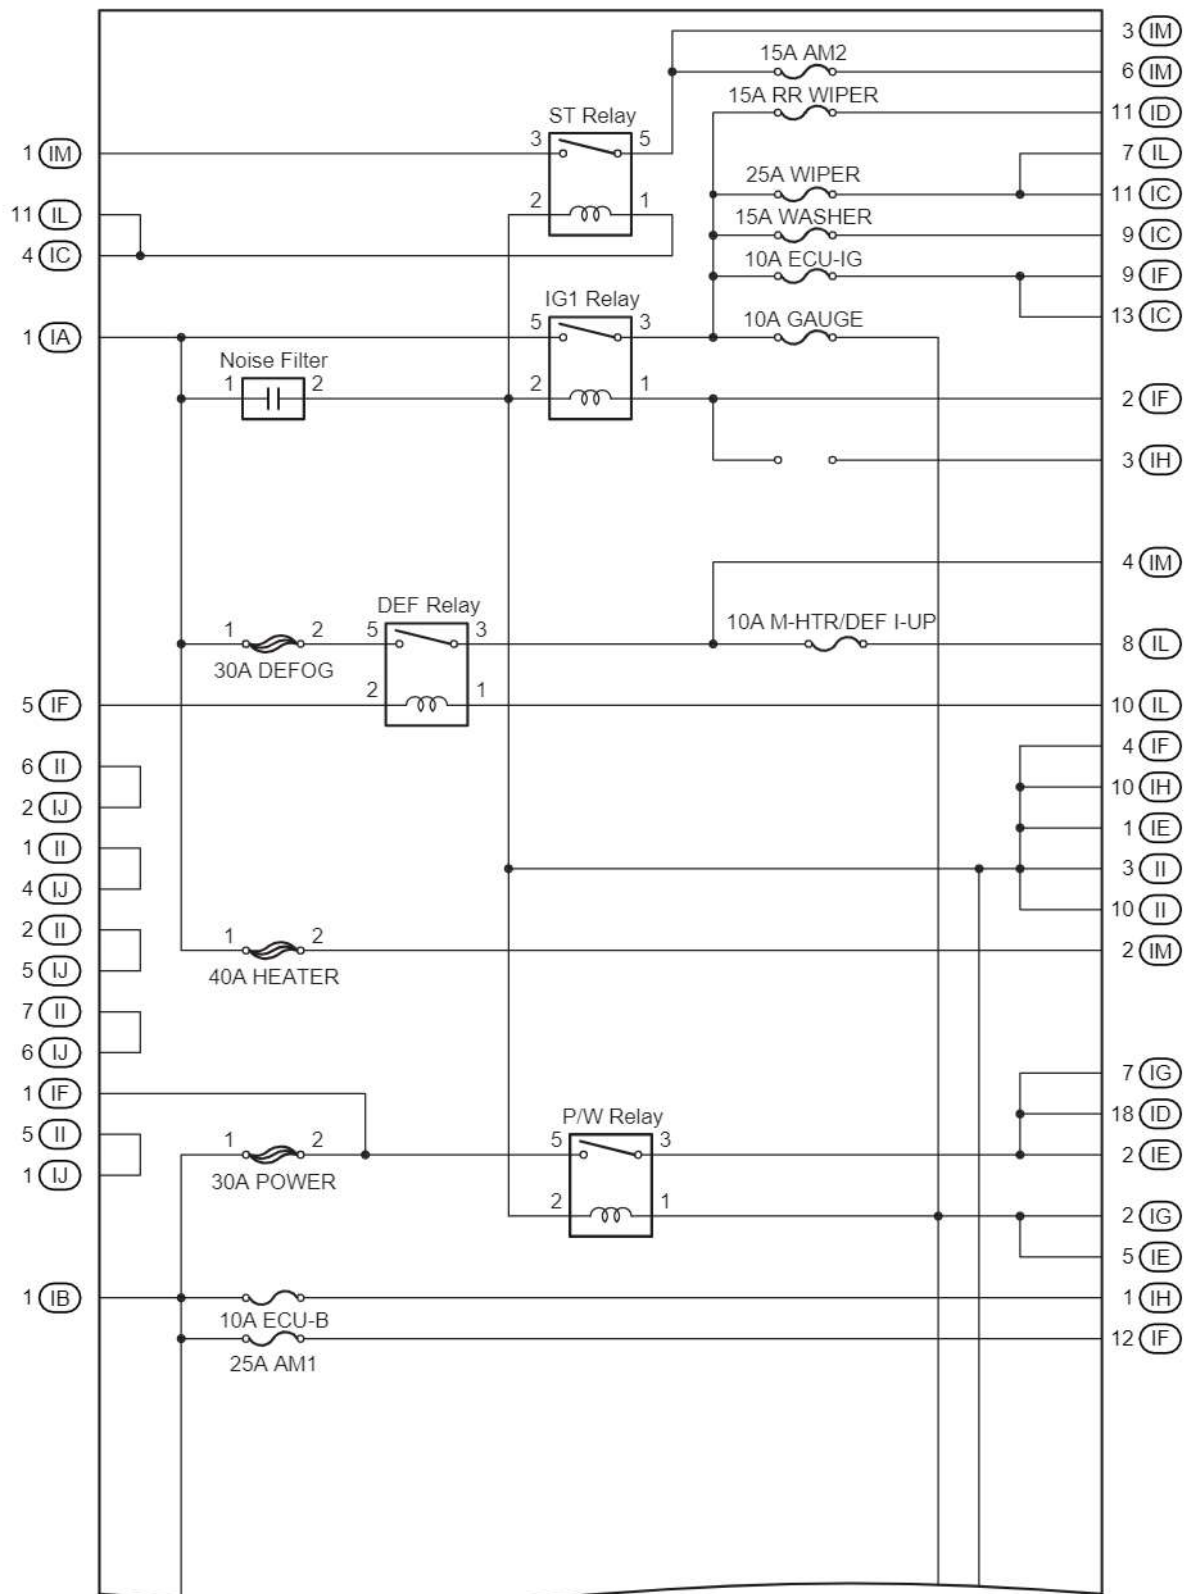


(Cont. Next Page)


(Cont'd)

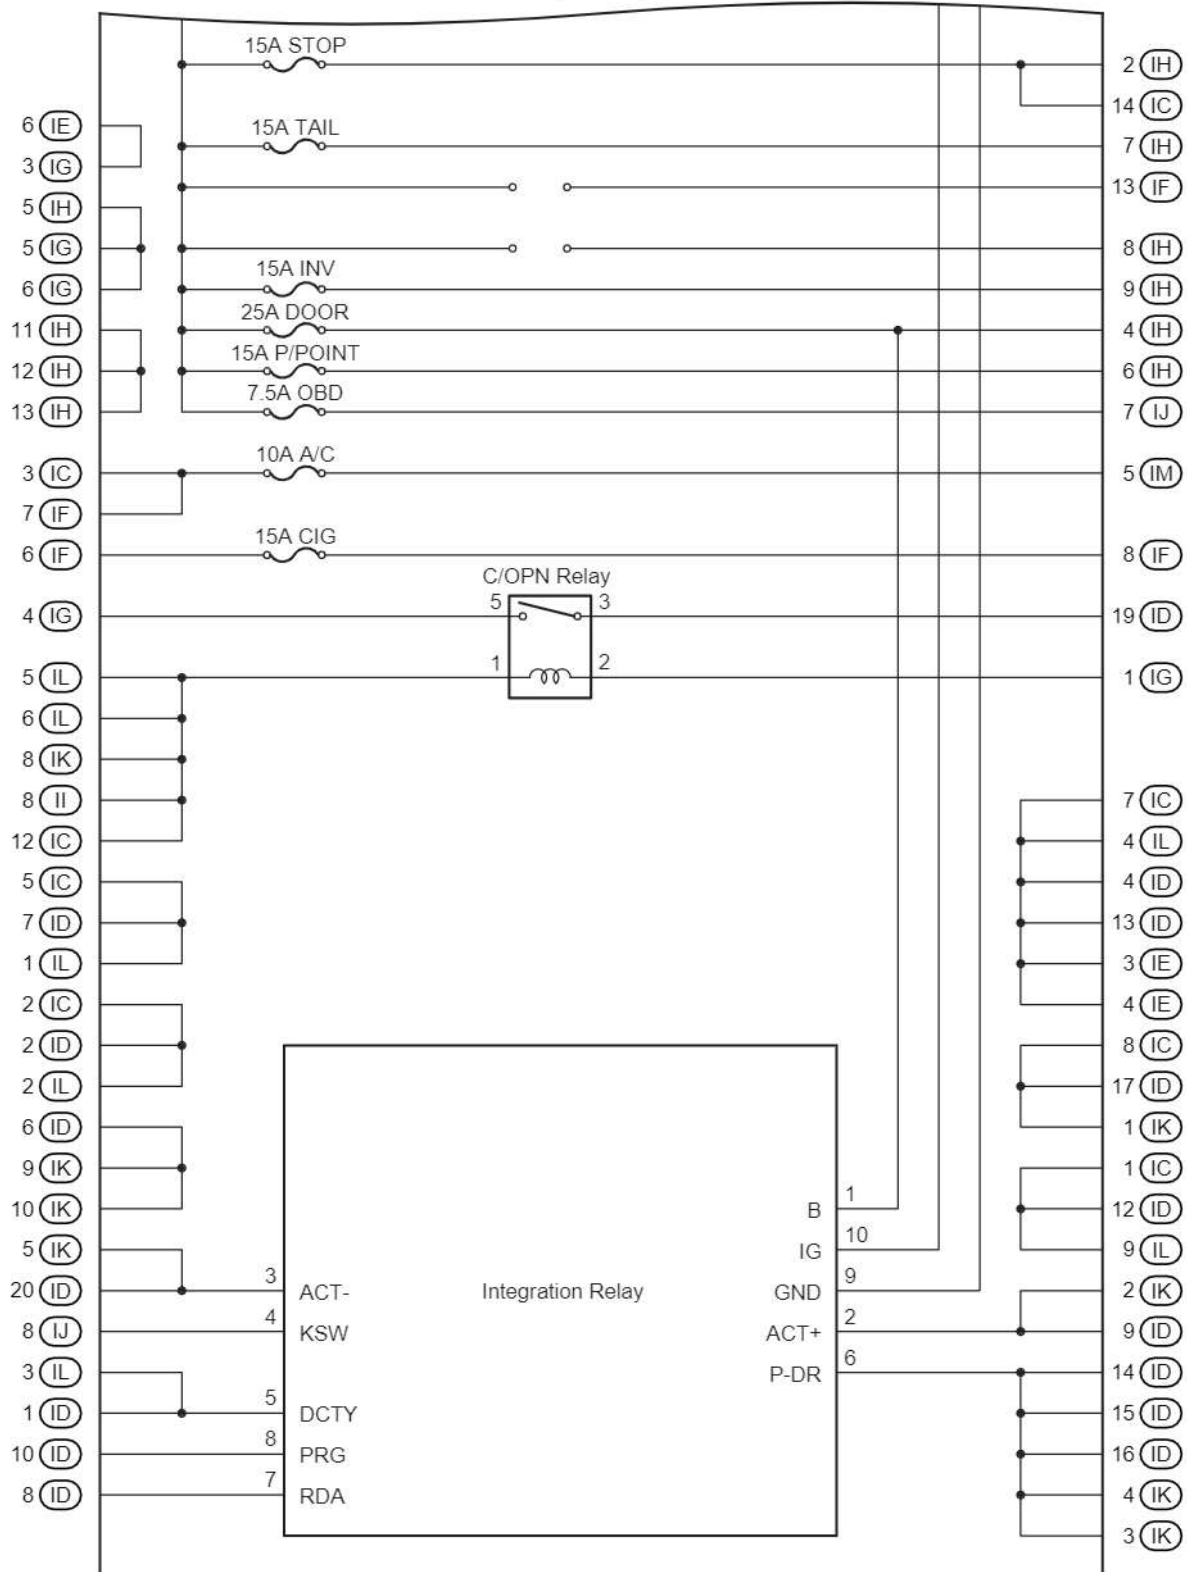

F RELAY LOCATIONS


③ : RH R/B	Right Side of the Instrument Panel Reinforcement (See Page 21)
○ : RH J/B	

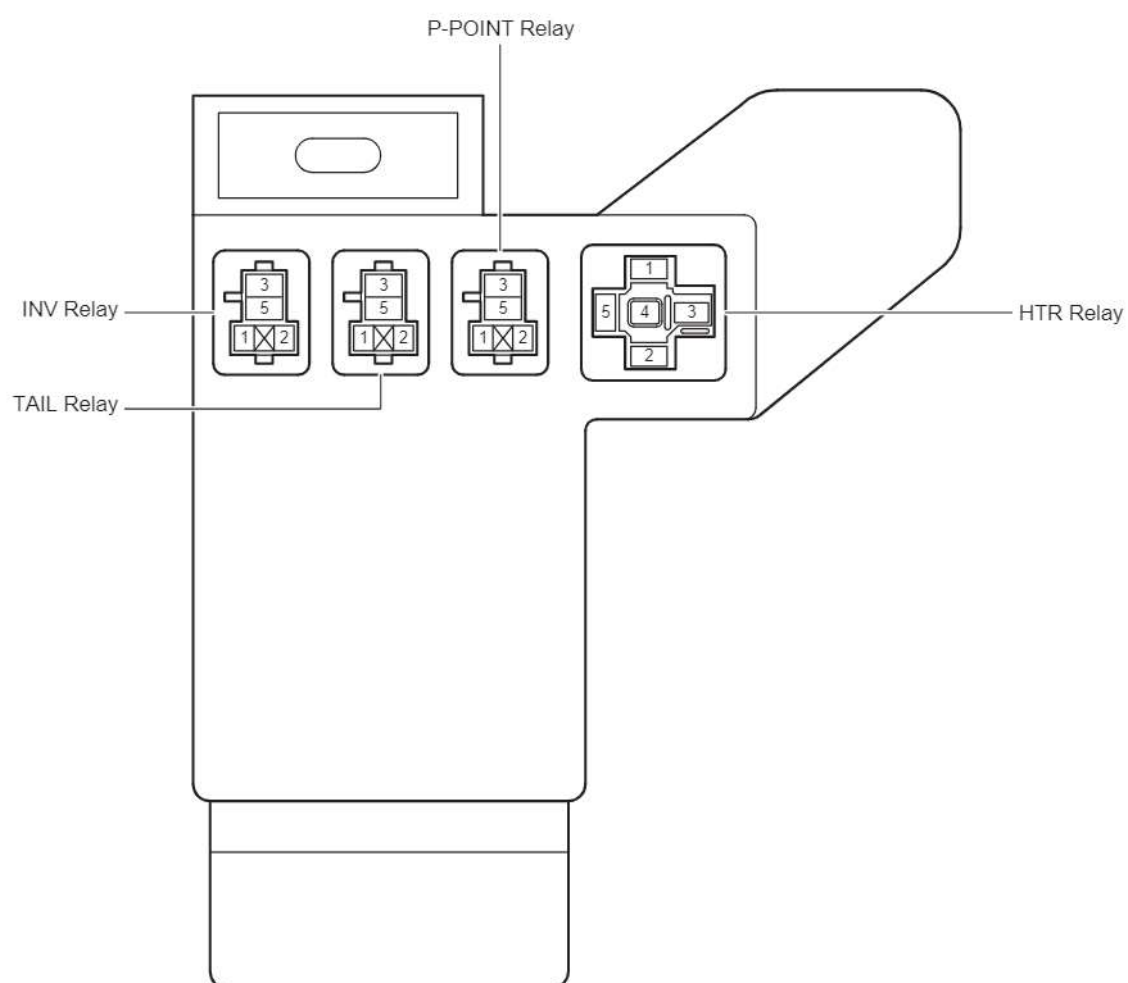

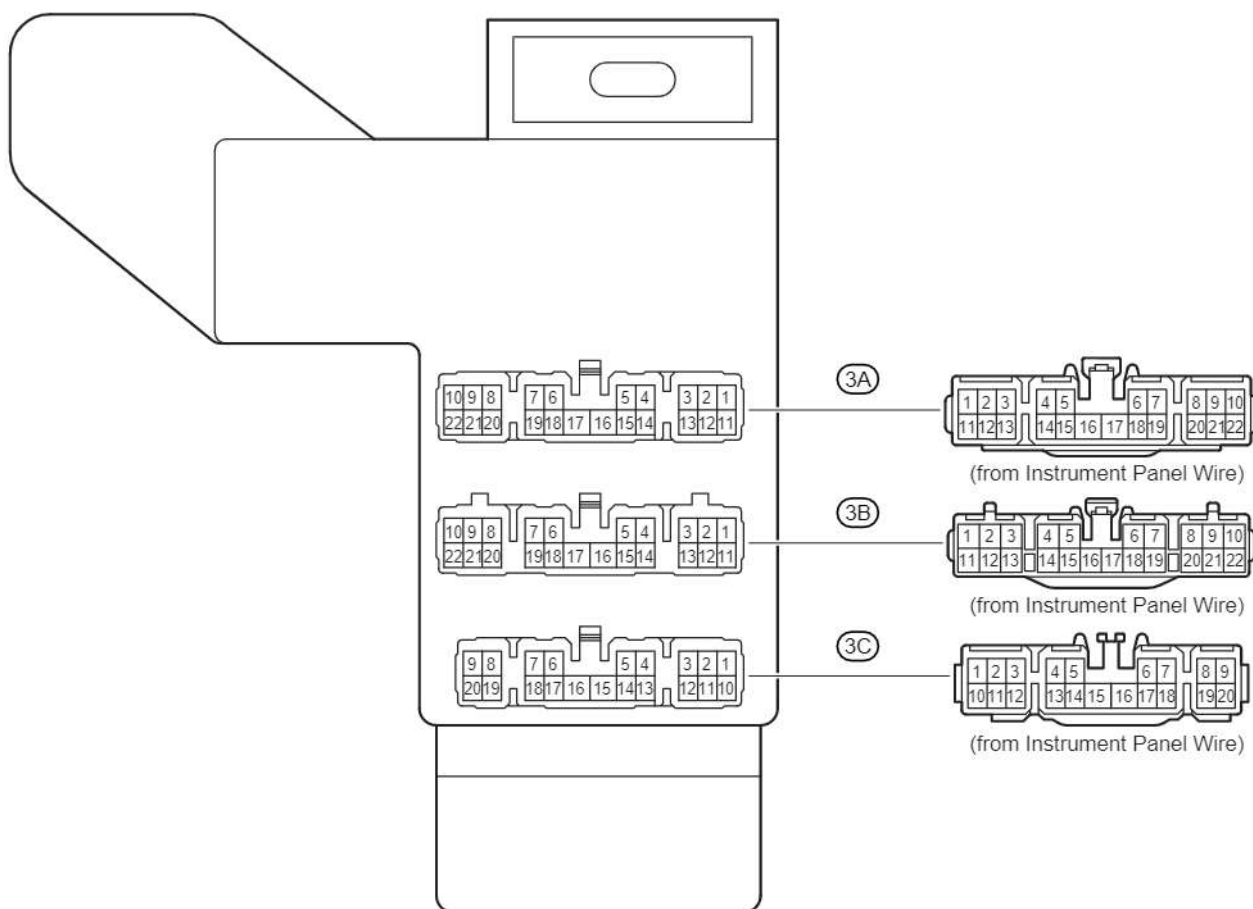


F RELAY LOCATIONS

[RH J/B Inner Circuit]

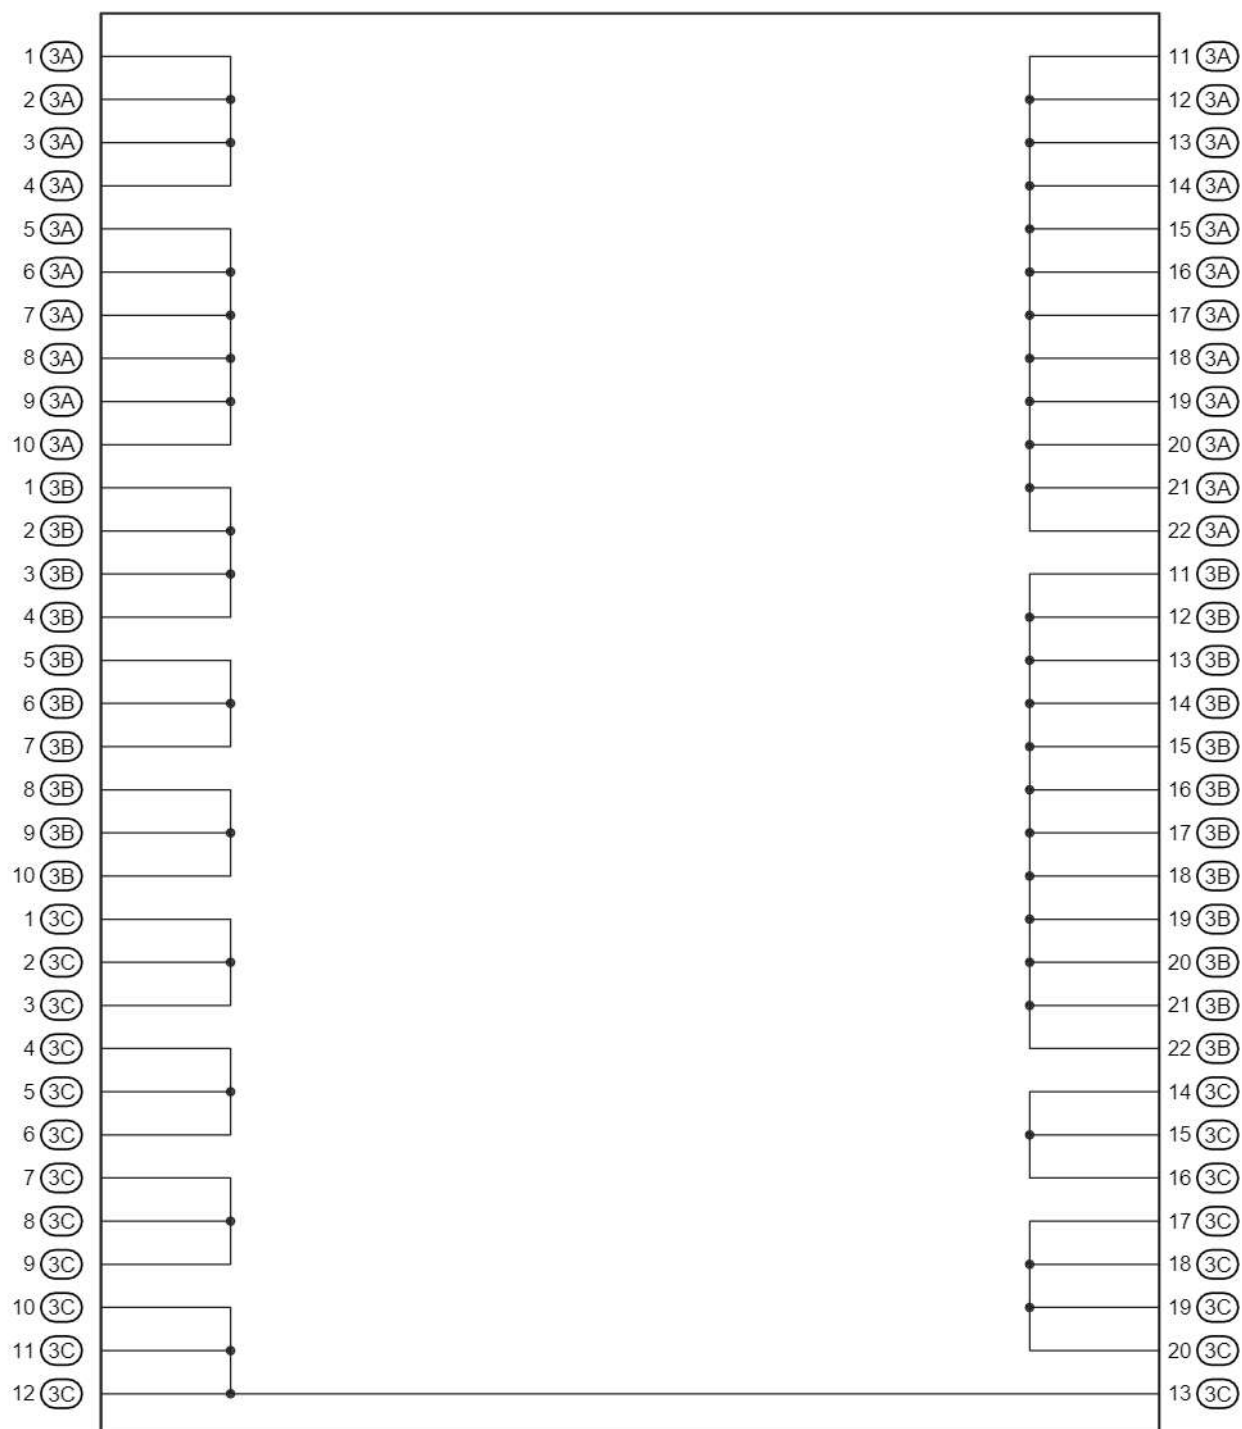

② : ABS R/B


Near the Front Left Suspension Tower (See Page 20)

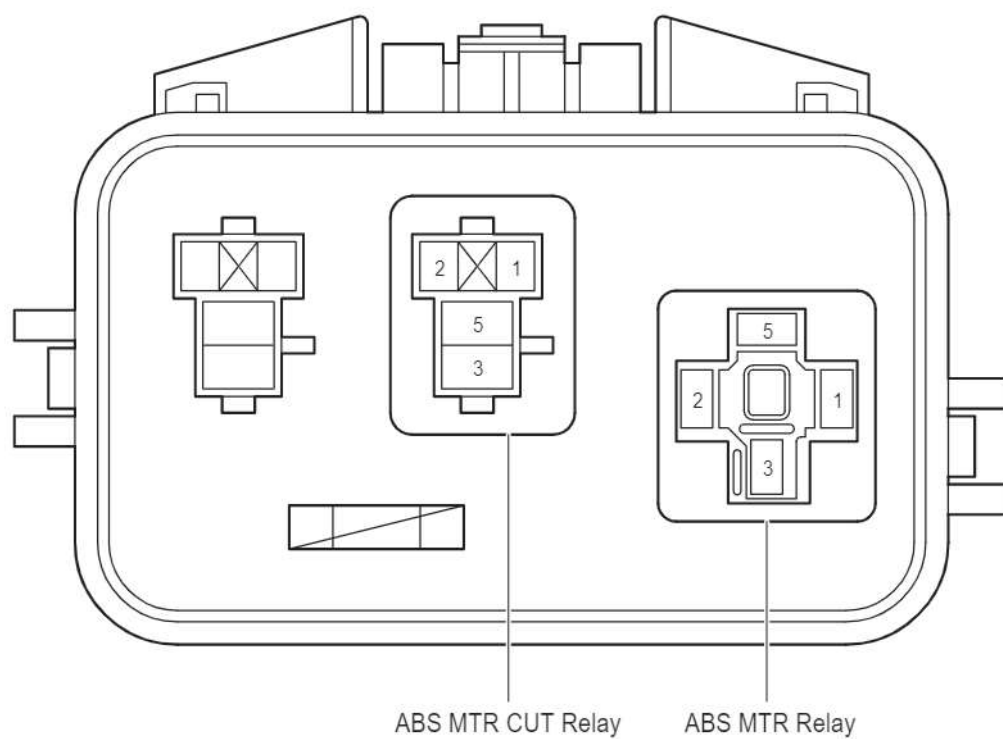

F RELAY LOCATIONS

○ : Center J/B

Behind the Combination Meter (See Page 21)

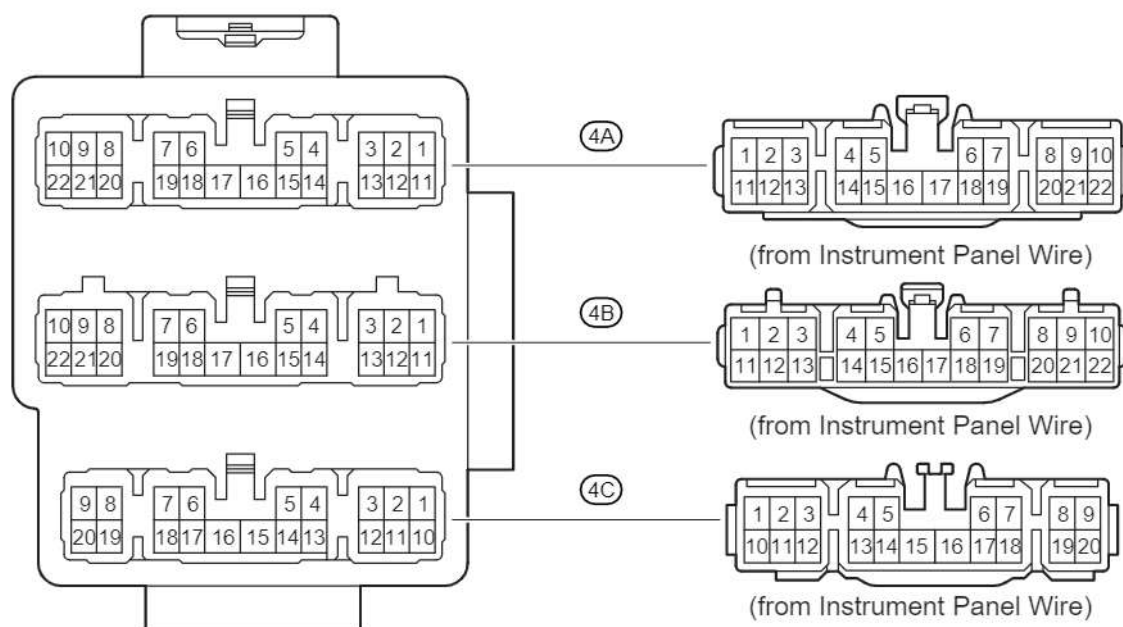

[Center J/B Inner Circuit]