

Dodge Dakota 2005 – 2011 fuse box diagram

Fuse box diagram



Dodge Dakota – fuse box diagram

No	A	Protected Component
1	40	←'07: Ignition Switch (Blower Motor)
2	40	←'07: Ignition Switch (Windows/Door Lock Circuit Breaker, Fuse: "22")
3	30	Brake Provision Module
4	50	Driver Seat Switch
5	40	←'07: Ignition Switch (Rear Window Defogger Relay, Fuse: "57", "58", "59", "60", "61")
6	20	Radio, Cluster, Electronic Overhead Module ('07→), Satellite Receiver, Front Control Module

7	1 0	Powertrain Control Module, Air Conditioner Compressor Clutch Relay, Fuel Pump Relay, Sentry Key Remote Entry Module (←'07), Fuse: "8", "46"
8	1 0	Cluster, Transfer Case Selector Switch, Inside Rearview Mirror
9	1 0	←'07: Occupant Classification Module
10	2 0	'07→: Ignition Switch (Sentry Key Remote Entry Module), Front Control Module
11	1 0	Air Conditioner Compressor Clutch Relay
12	1 5	Left Trailer Tow Relay
13	1 5	Right Trailer Tow Relay
14	2 0	Data Link Connector, Hands-Free Module, Sentry Key Remote Entry Module, Electronic Overhead Module (←'07)
15	2 5	Transmission Control Relay
16	2 0	Horn Relay
17	2 0	ABS
18	2 0	Fuel Pump Relay
19	1 5	Stop Lamp Switch
20	2 0	Cluster, Shift Motor/Mode Sensor Assembly (4WD)

21	2 5	Radio Amplifier
22	2 0	Power Outlet – Instrument Panel
23	2 0	Fog Lamp Relay
24	2 0	Powertrain Control Module
25	1 5	Cluster
26	2 0	'07→: Run/Start Relay
27	1 0	'07→: Mirror Switch
	2 0	←'07: Mirror Switch
28	2 0	Power Outlet – Console
29	2 0	Front Control Module
30	–	–
31	3 0	'07→: Ignition ACC Relay (Window/Door Lock Circuit Breaker (Power Window, Door Lock, Sunroof, Subwoofer Amplifier), Fuse: "22")
32	3 0	Front Control Module
33	3 0	Automatic Shut Down Relay (Powertrain Control Module, Ignition Coil, Fuel Injector, Ignition Capacitor)

34	3 0	←'07: Front Control Module
35	4 0	'07→: Blower Motor Relay
36	1 0	←'07: Powertrain Control Module
37	1 0	Starter Relay
38	2 0	←'07: Ignition Switch
39	3 0	Powertrain Control Module, Front Control Module, Starter Relay
40	4 0	'07→: Ignition RUN Relay
41	3 0	Wipen On/Off Relay, Wiper High/Low Relay
42	2 5	Front Control Module (Wiper)
43	1 0	Park/Turn Lamp – Front Left, Tail/Stop/Turn Lamp – Left
44	1 0	Park/Turn Lamp – Front Right, Tail/Stop/Turn Lamp – Right
45	2 0	Trailer Tow
46	1 0	Occupant Restraint Controller Module, Passenger Airbag On/Off Indicator Lamp, Occupant Classification Module (←'07)

47	4 0	←'07: Ignition Switch (Cluster)
48	2 0	'07→: Sunroof (Quad Cab), Subwoofer Amplifier (Club Cab)
49	3 0	Trailer Tow
50	4 0	ABS
51	4 0	Park Lamp Relay (Fuse: "43", "44", "45"), Front Control Module
52	–	–
53	4 0	Rear Window Defogger Relay (Rear Window Defogger, Fuse: "56")
54	–	–
55	1 0	←'07: Cluster
56	1 0	Heated Mirrors
57	2 0	Occupant Restraint Controller Module
58	2 0	Heated Seat
59	1 0	A/C Heater Control, Rear Window Defogger Relay
60	1 0	ABS

61	2 0	Front Control Module
Relay		
R1	Right Trailer Tow	
R2	Left Trailer Tow	
R3	Air Conditioner Compressor Clutch	
R4	Horn	
R5	Transmission Control	
R6	Park Lamp	
R7	Fuel Pump	
R8	Fog Lamp	
R9	–	
R1 0	Rear Window Defogger	
R1 1	'07→: Ignition – RUN	
R1 2	Wiper High/Low	

R1 3	Wiper On/Off
R1 4	Starter
R1 5	Automatic Shut Down
R1 6	'07→: Blower Motor
75	'07→: Ignition – ACC