



I GROUND POINT (LHD)


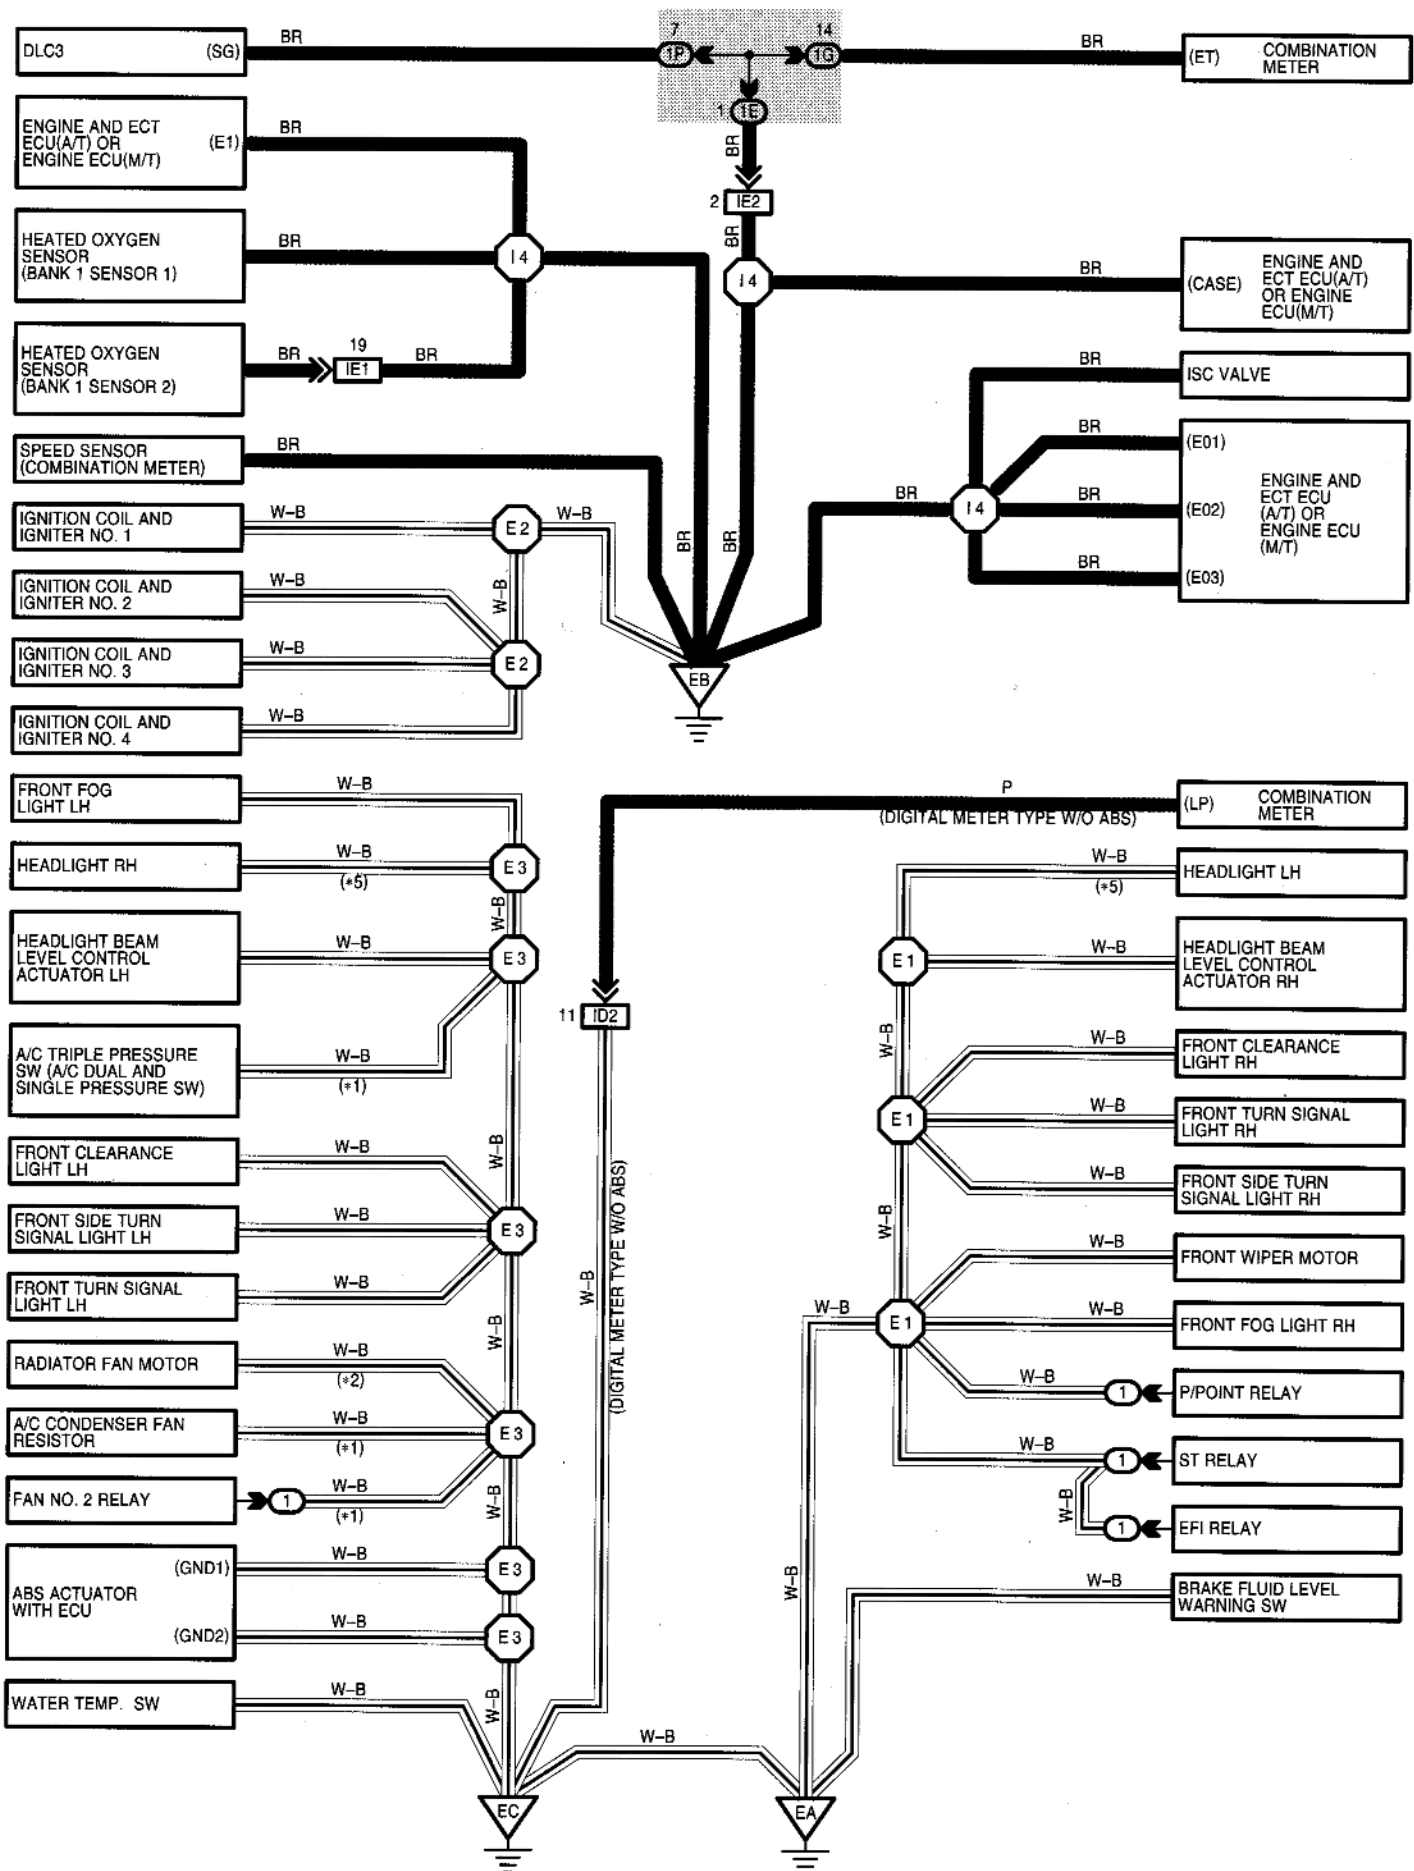


* 1 : W/ A/C
 * 2 : W/O A/C
 * 3 : W/ MULTI DISPLAY
 * 4 : W/O MULTI DISPLAY

* 5 : W/ DAYTIME RUNNING LIGHT
 * 6 : W/O DAYTIME RUNNING LIGHT
 * 7 : W/ SHORT CONNECTOR
 * 8 : W/O SHORT CONNECTOR

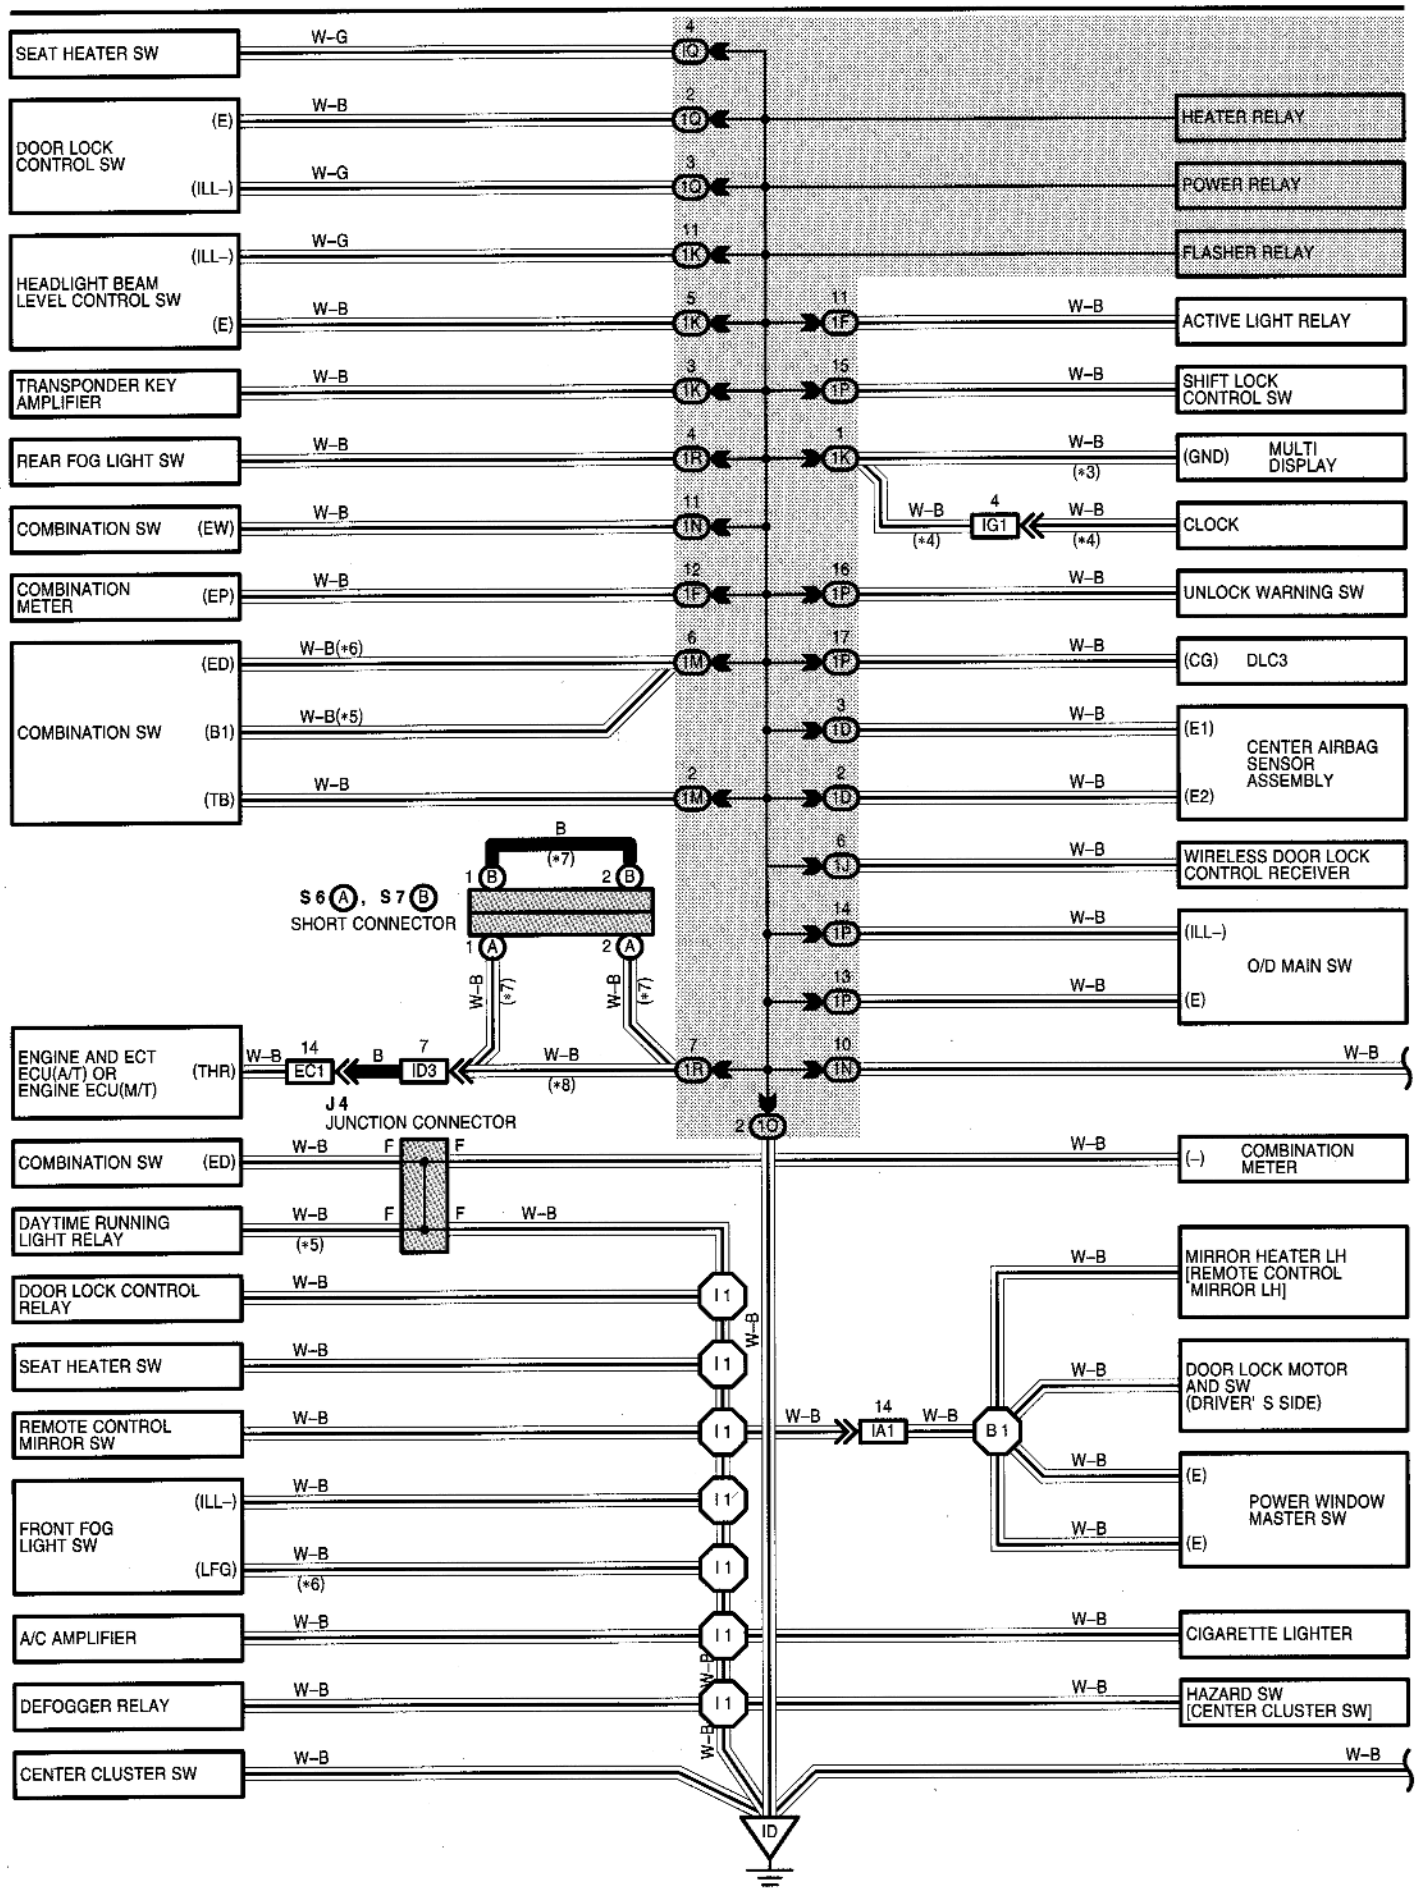

I GROUND POINT (LHD)

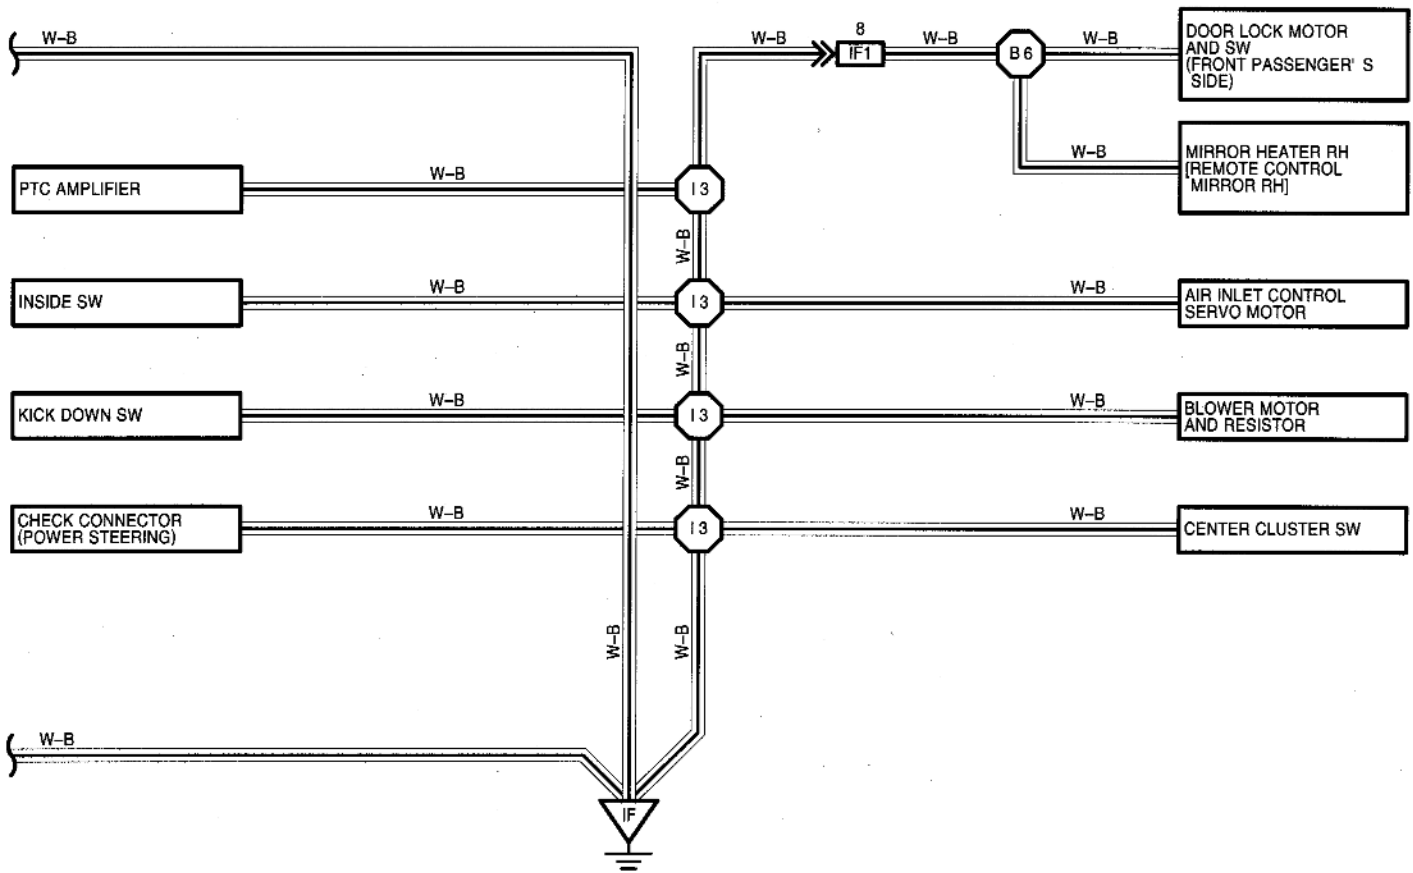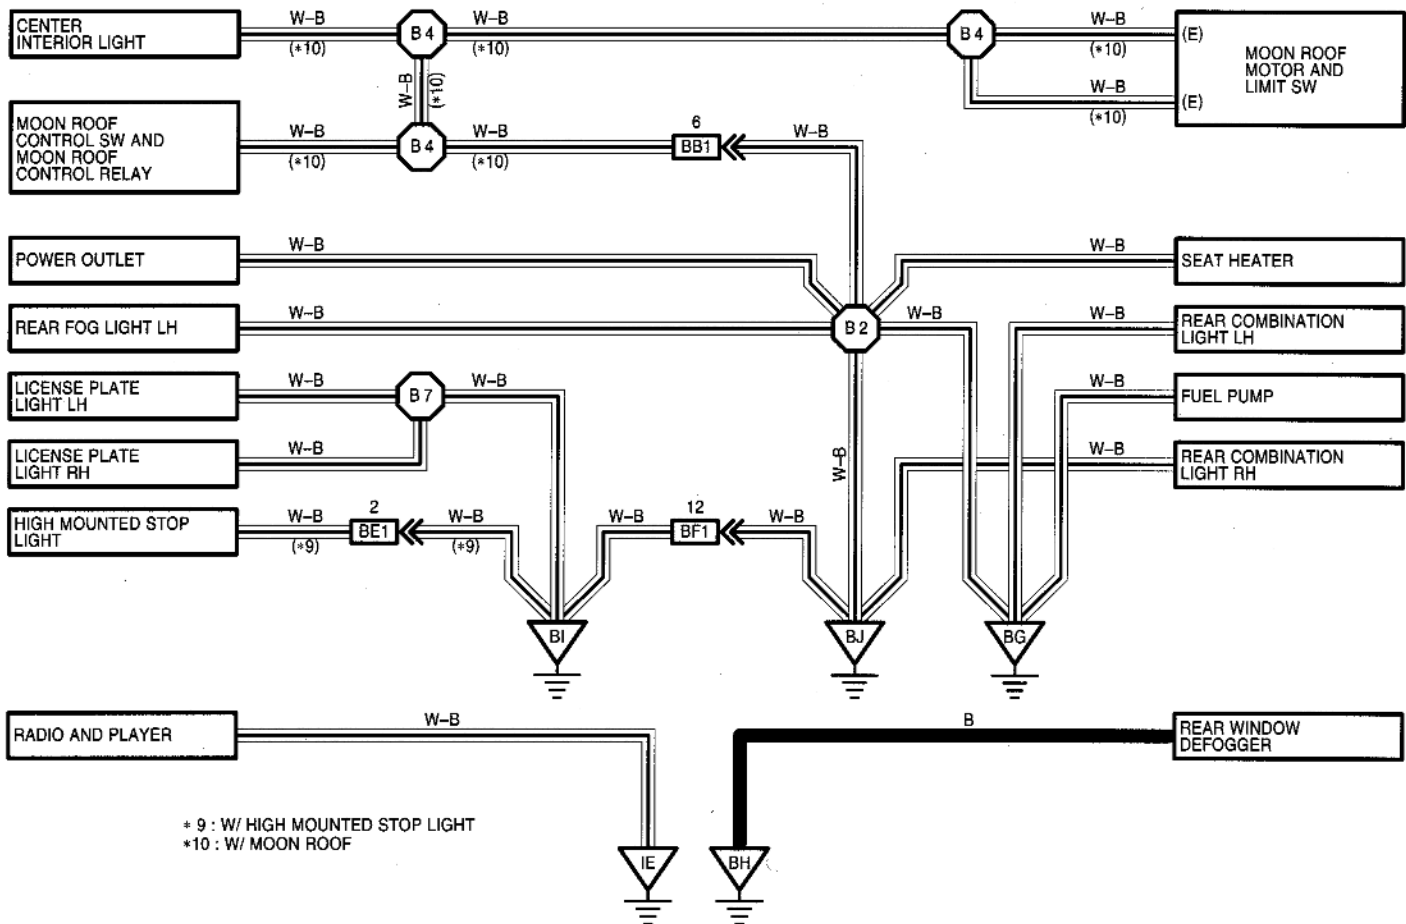

 : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
J4	87 (LHD)	S6	A 87 (LHD)	S7	B 87 (LHD)

 : RELAY BLOCKS

Code	See Page	Relay Blocks (Relay Block Location)
1	78	Engine Room R/B No.1 (Engine Compartment Left)

 : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1D	81	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
1E		
1F		
1G		
1J		
1K		
1M		
1N		
1O		
1P		
1Q		
1R		

 : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EC1	96 (LHD)	Engine Wire and Engine Room Main Wire (Inside of Engine Room R/B No.1)
IA2	98 (LHD)	Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)
ID2	100 (LHD)	Engine Room Main Wire and Instrument Panel Wire (Left Side of Instrument Panel)
ID3		
IE1	100 (LHD)	Engine Wire and Instrument Panel Wire (Behind the Glove Box)
IF1	100 (LHD)	Front Door RH Wire and Instrument Panel Wire (Right Kick Panel)
IF2		
BB1	102 (LHD)	Roof Wire and Floor Wire (Left Rear Side Quarter Panel)
BE1	102 (LHD)	Back Door No.2 Wire and Back Door No.1 Wire (Right Side of Back Door)
BF1	102 (LHD)	Back Door No.1 Wire and Floor Wire (Right Side of Back Door)

 : GROUND POINTS

Code	See Page	Ground Points Location
EA	96 (LHD)	Front Right Fender Apron
EB	96 (LHD)	Engine Block
EC	96 (LHD)	Front Left Fender Apron
ID	98 (LHD)	Left Kick Panel
IE	98 (LHD)	Instrument Panel Brace LH
IF	98 (LHD)	Right Kick Panel
BG	102 (LHD)	Left Rear Side Quarter Panel
BH	102 (LHD)	Left Side of Back Door
BI	102 (LHD)	Right Side of Back Door
BJ	102 (LHD)	Right Rear Side Quarter Panel


I GROUND POINT (LHD)



: SPLICE POINTS


Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
E1	96 (LHD)	Engine Room Main Wire	B1	102 (LHD)	Front Door LH Wire
E2	96 (LHD)	Engine Wire	B2	102 (LHD)	Floor Wire
E3	96 (LHD)	Engine Room Main Wire	B4	102 (LHD)	Roof Wire
I1	100 (LHD)	Instrument Panel Wire	B6	102 (LHD)	Front Door RH Wire
I3			B7	102 (LHD)	Back Door No.1 Wire
I4	100 (LHD)	Engine Wire			

I GROUND POINT (RHD)

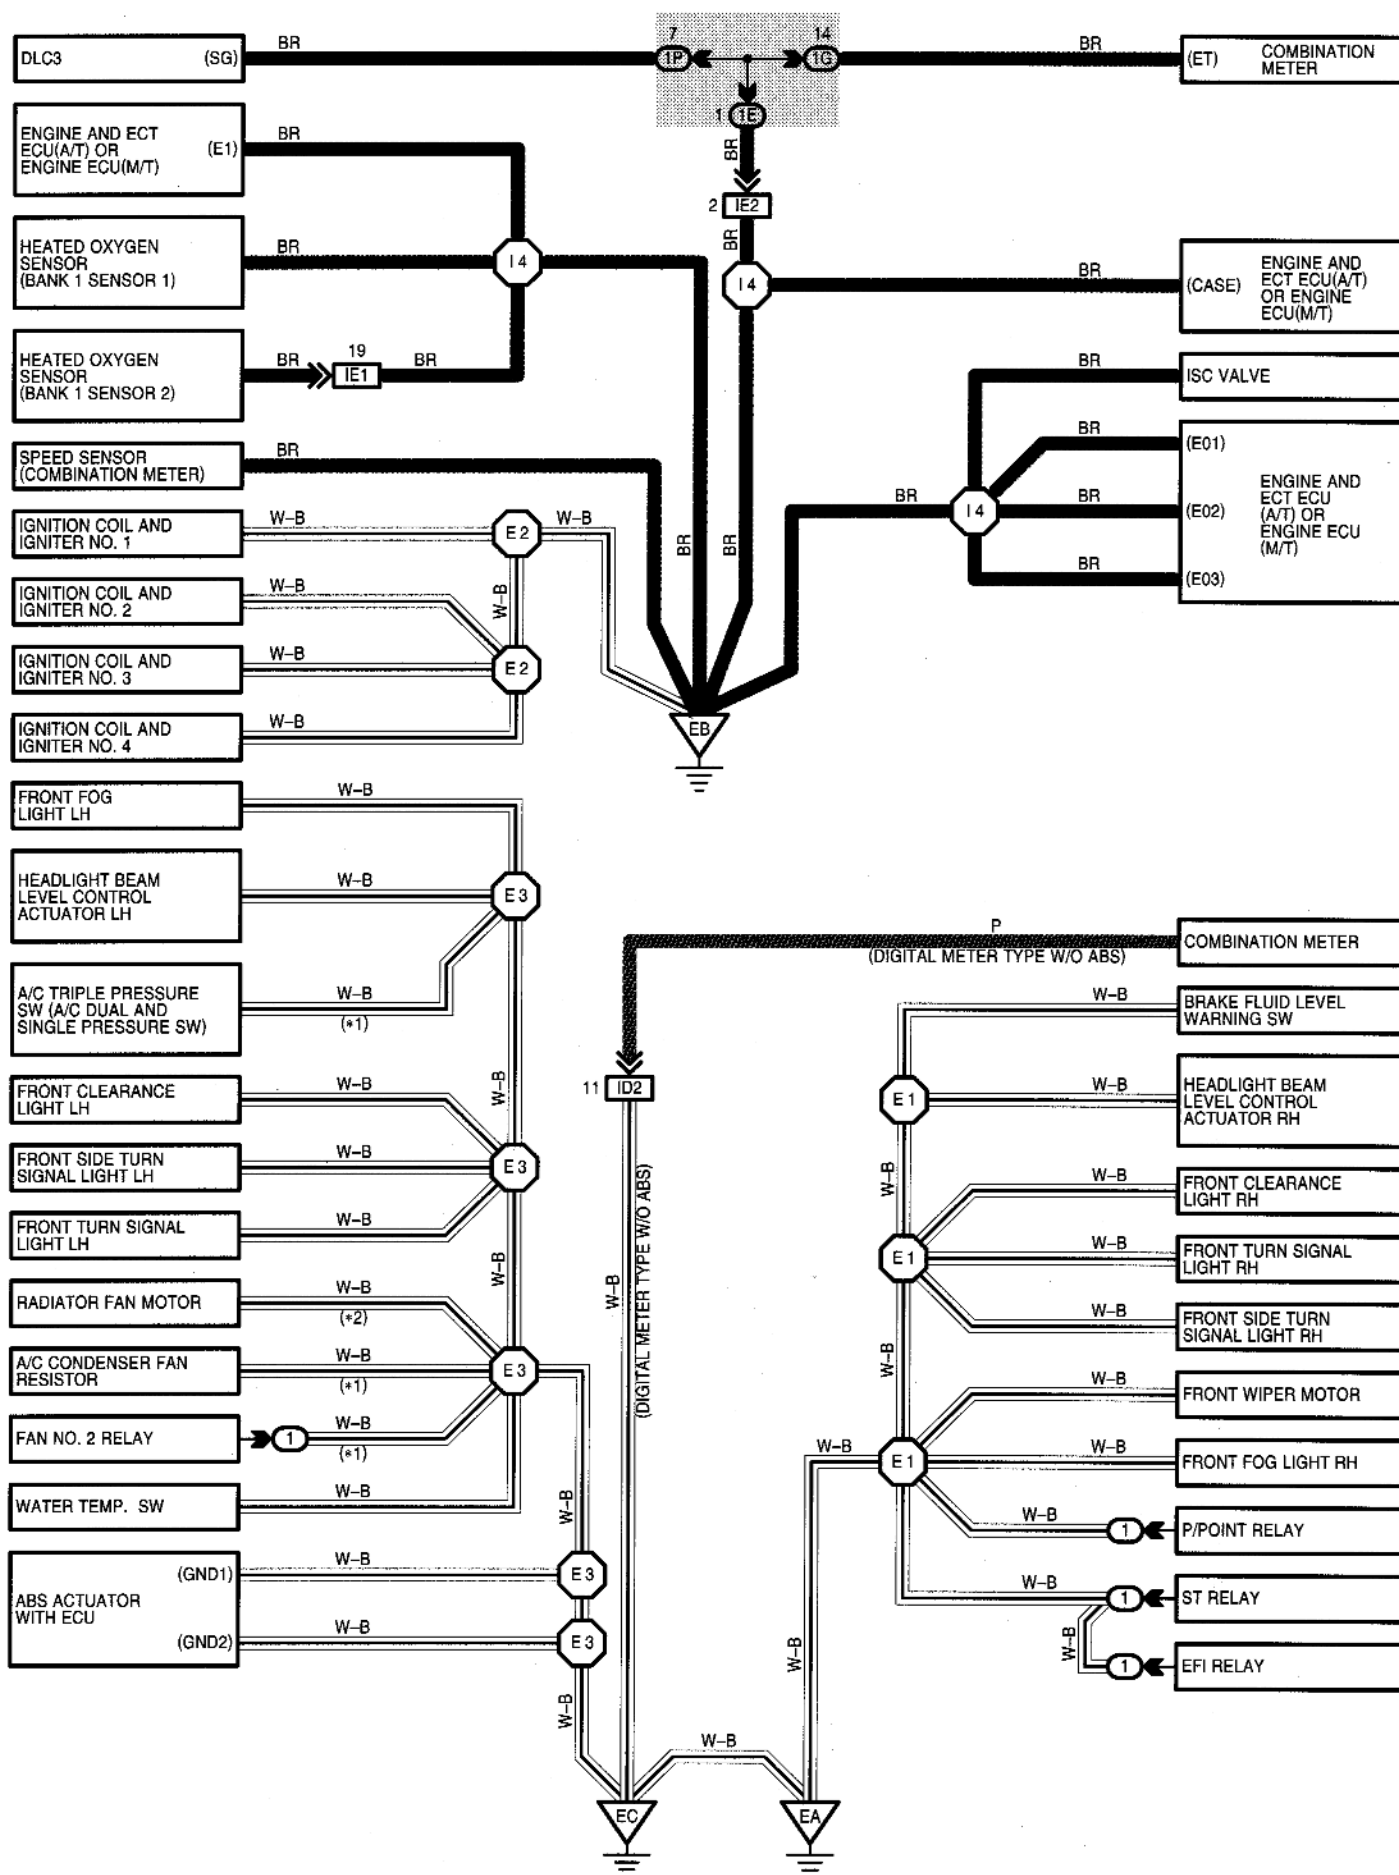


* 1 : W/ A/C
 * 2 : W/O A/C
 * 3 : W/ MULTI DISPLAY
 * 4 : W/O MULTI DISPLAY

* 5 : W/ SHORT CONNECTOR
 * 6 : W/O SHORT CONNECTOR
 * 7 : W/ POWER WINDOW
 * 8 : W/O POWER WINDOW

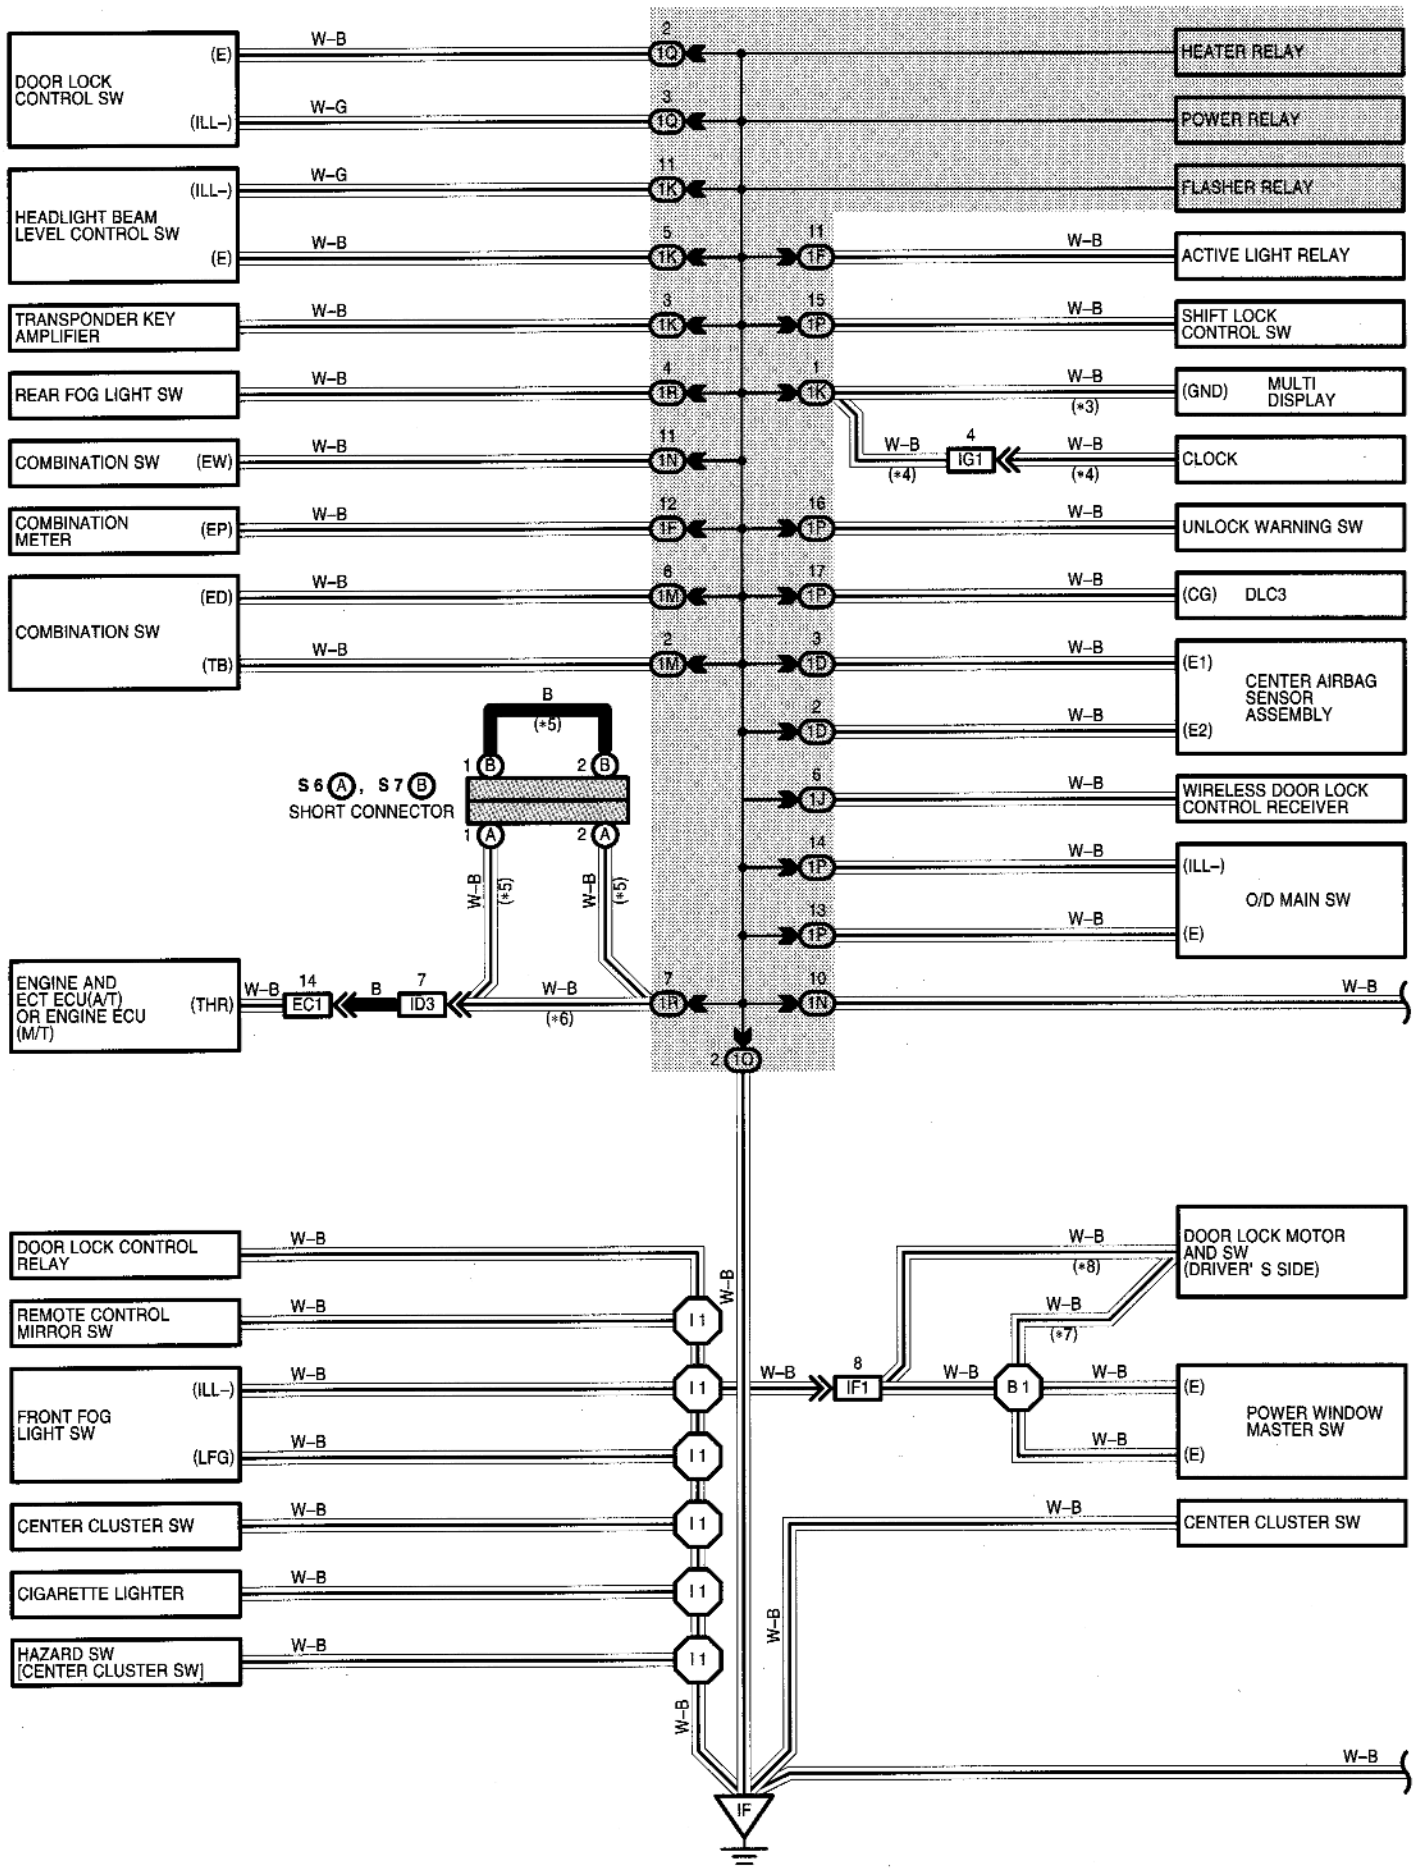

I GROUND POINT (RHD)

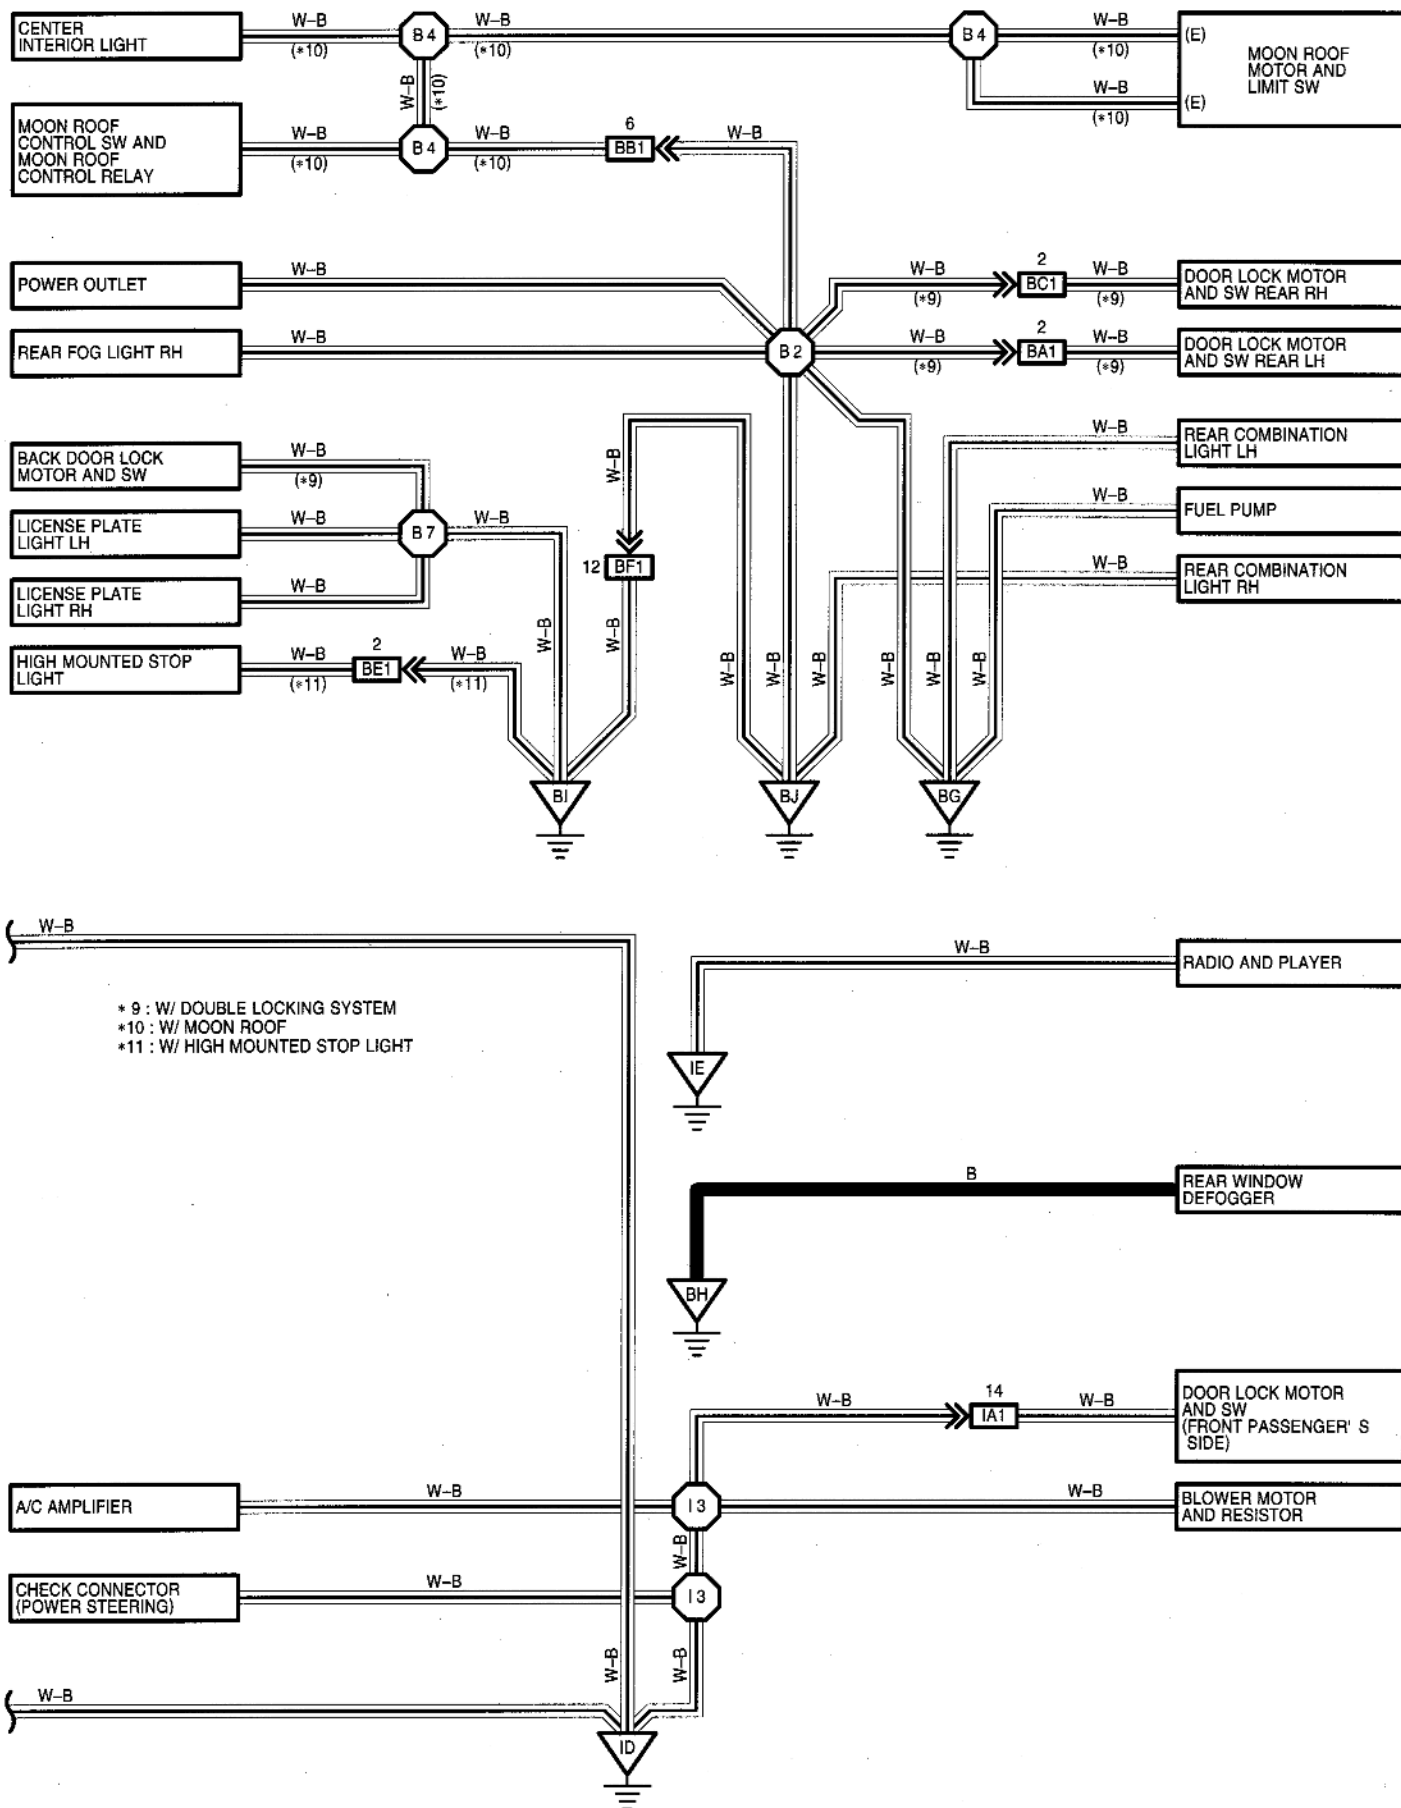

 : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
S6	A	93 (RHD)	S7	B	93 (RHD)

 : RELAY BLOCKS

Code	See Page	Relay Blocks (Relay Block Location)
1	78	Engine Room R/B No.1 (Engine Compartment Left)

 : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1D	81	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
1E		
1F		
1G		
1J		
1K		
1M		
1N		
1O		
1P		
1Q		
1R		

 : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EC1	104 (RHD)	Engine Wire and Engine Room Main Wire (Inside of Engine Room R/B No.1)
IA1	106 (RHD)	Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)
IA2		
ID2	108 (RHD)	Engine Room Main Wire and Instrument Panel Wire (Right Side of Instrument Panel)
ID3		
IE1	108 (RHD)	Engine Wire and Instrument Panel Wire (Behind the Glove Box)
IF1	108 (RHD)	Front Door RH Wire and Instrument Panel Wire (Right Kick Panel)
IF2		
BA1	110 (RHD)	Rear Door LH Wire and Floor Wire (Under the Left Center Pillar)
BB1	110 (RHD)	Roof Wire and Floor Wire (Right Rear Side Quarter Panel)
BC1	110 (RHD)	Rear Door RH Wire and Floor Wire (Under the Right Center Pillar)
BE1	110 (RHD)	Back Door No.2 Wire and Back Door No.1 Wire (Right Side of Back Door)
BF1	110 (RHD)	Back Door No.1 Wire and Floor Wire (Right Side of Back Door)
BF2		

 : GROUND POINTS

Code	See Page	Ground Points Location
EA	104 (RHD)	Front Right Fender Apron
EB	104 (RHD)	Engine Block
EC	104 (RHD)	Front Left Fender Apron
ID	106 (RHD)	Left Kick Panel
IE	106 (RHD)	Instrument Panel Brace RH
IF	106 (RHD)	Right Kick Panel
BG	110 (RHD)	Left Rear Side Quarter Panel
BH	110 (RHD)	Left Side of Back Door
BI	110 (RHD)	Right Side of Back Door
BJ	110 (RHD)	Right Rear Side Quarter Panel

I GROUND POINT (RHD)



: SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
E1	104 (RHD)	Engine Room Main Wire	I4	108 (RHD)	Engine Wire
E2	104 (RHD)	Engine Wire	B1	110 (RHD)	Front Door RH Wire
E3	104 (RHD)	Engine Room Main Wire	B2	110 (RHD)	Floor Wire
I1	108 (RHD)	Instrument Panel Wire	B4	110 (RHD)	Roof Wire
I3			B7	110 (RHD)	Back Door No.1 Wire

