

Wiring Diagram Type 928 S Model 90

Coordinates

Sheet 1	1 - 10	Lights Row
Sheet 2	1 - 10	Lights USA
Sheet 3	11 - 20	Body
Sheet 4	21 - 30	Instrument Cluster and Senders
Sheet 5	31 - 40	Engine Cooling, Heater, Air Conditioner
Sheet 6	41 - 50	Outside Mirror, Power Seat
Sheet 7	51 - 60	Seat and Mirror Memory
Sheet 8	61 - 70	Radio, Alarm System
Sheet 9	71 - 80	Antilock System, Tire Pressure Control, Airbag, Porsche Lock Differential, Trallor Coupling, Brake Pad Wear Indicator
Sheet 10	81 - 90	Motor, Fuel and Ignition, Cruise Control
Sheet 11	91 - 100	Central Electric
Sheet 12		Legend, M-Numbers
Sheet 13		Constr. Components, Plug Connections, Ground Points

Wiring Diagram Type 928 S Model 90

The wiring diagram comprises of 11 individual wiring diagrams and 1 sheet construction components, plug connections and ground points and 1 sheet legend. They are subdivided into coordinate fields.

Each individual wiring diagram comprises a part of the central-electrical system within a dash-dot frame.

This part of the central-electrical system shows all the lines and relays required for the individual wiring diagram.

The ground-connecting points are designated with "MP" and their location is shown in a vehicle diagram.

The 10-pole plugs on central electrical system are clipped together from 3 parts.

Part 1, with the cast-on fastening pin, is the "initial element".

 
Parts 2, is the "module element".

Both parts are identified by the digits 1.....5.

Part 3 is a "coding element".

The designations of the plug connections in the wiring diagram for central electrical system refer e.g. from A 11.....15, to the "initial element", from A 21.....25 to module element.

LIGHTS ROW



BK - BLACK

WT = WT


RE • REU

EN - GREEN

YE • 101


ER & GREY


RRTWQ

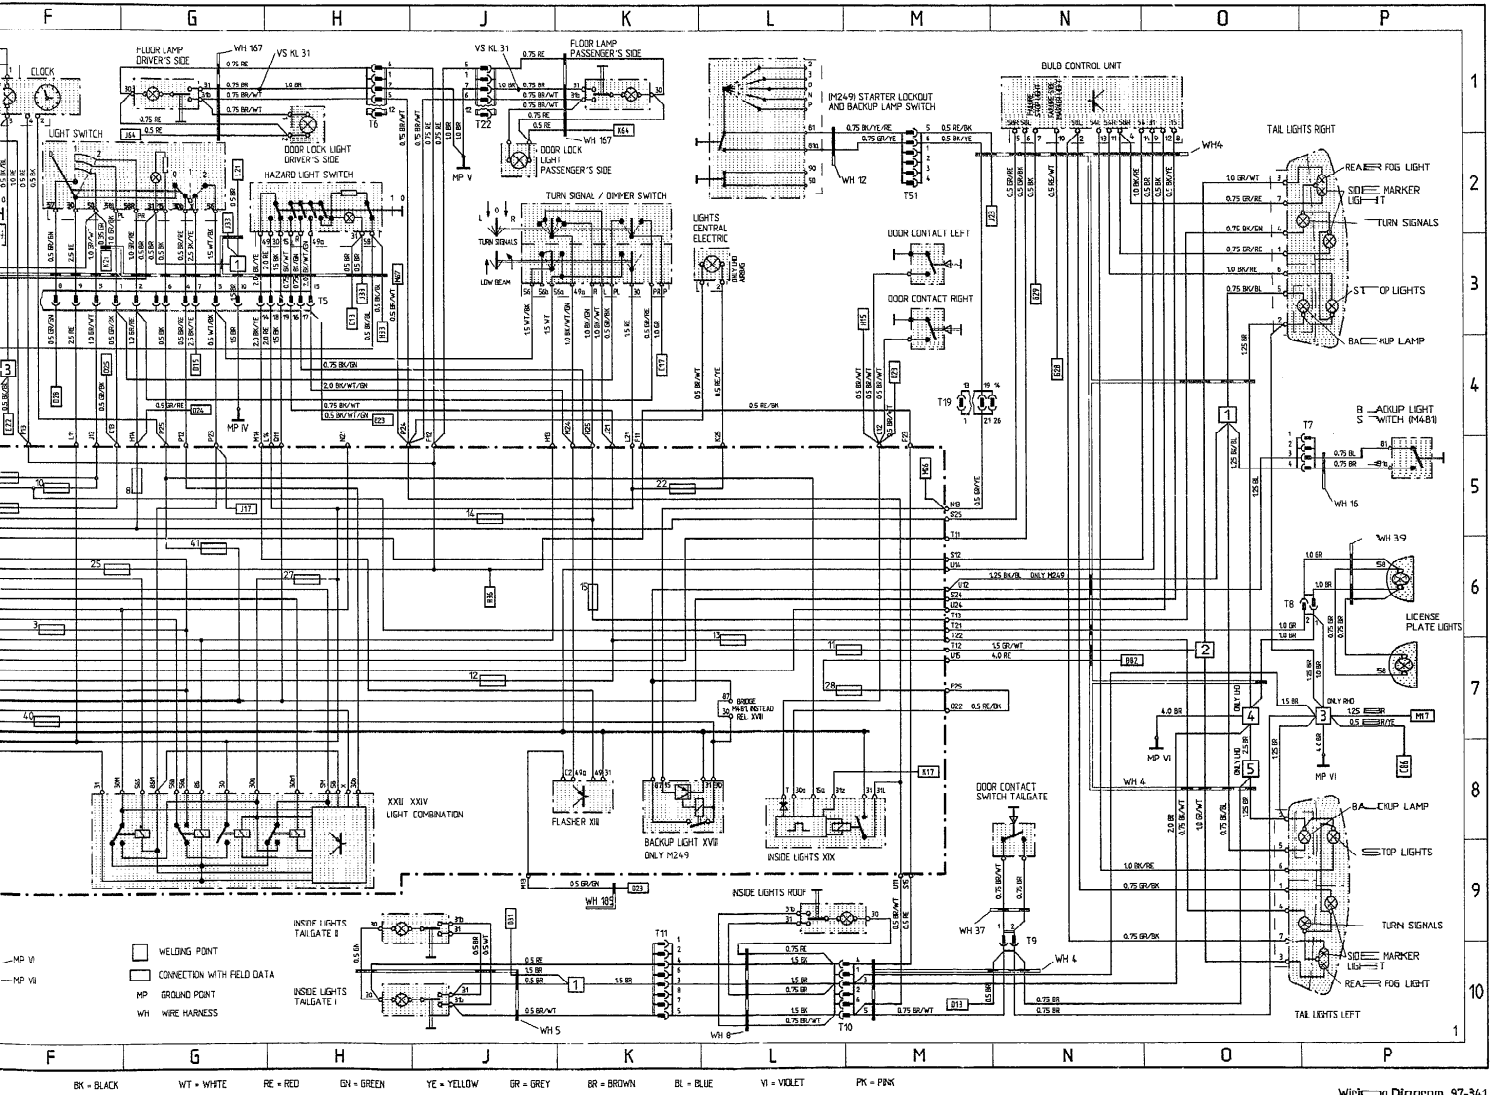

928 S Model 90 Sheet 2


LIGHTS USA

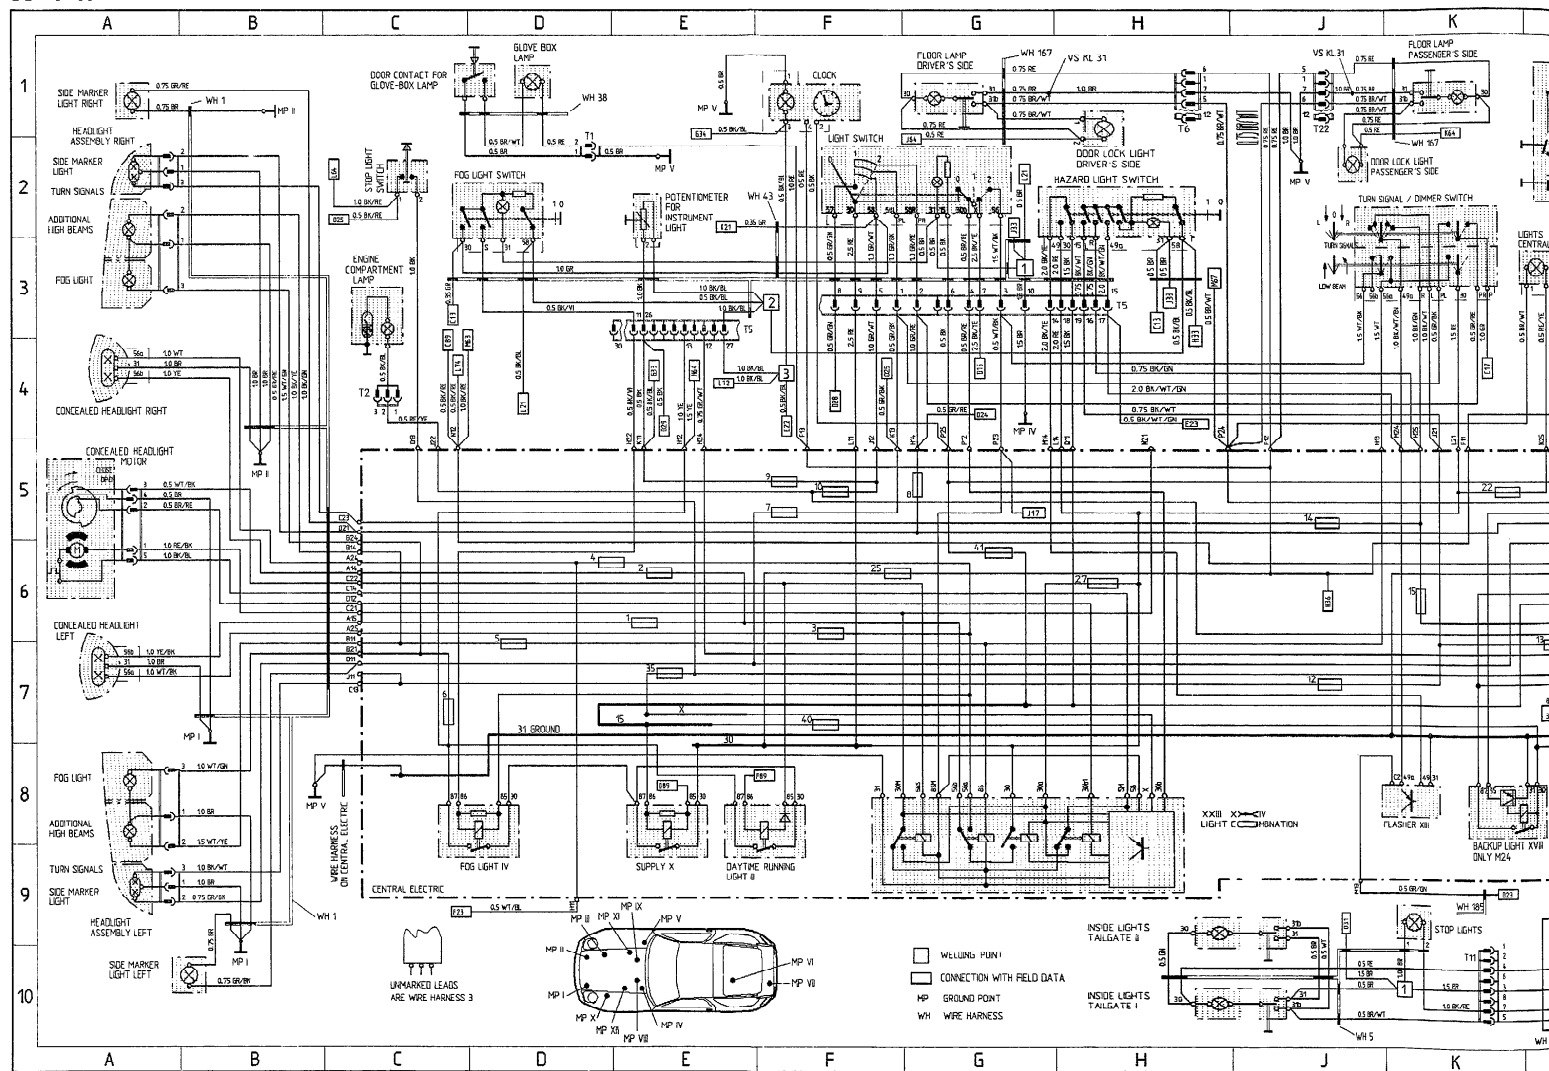

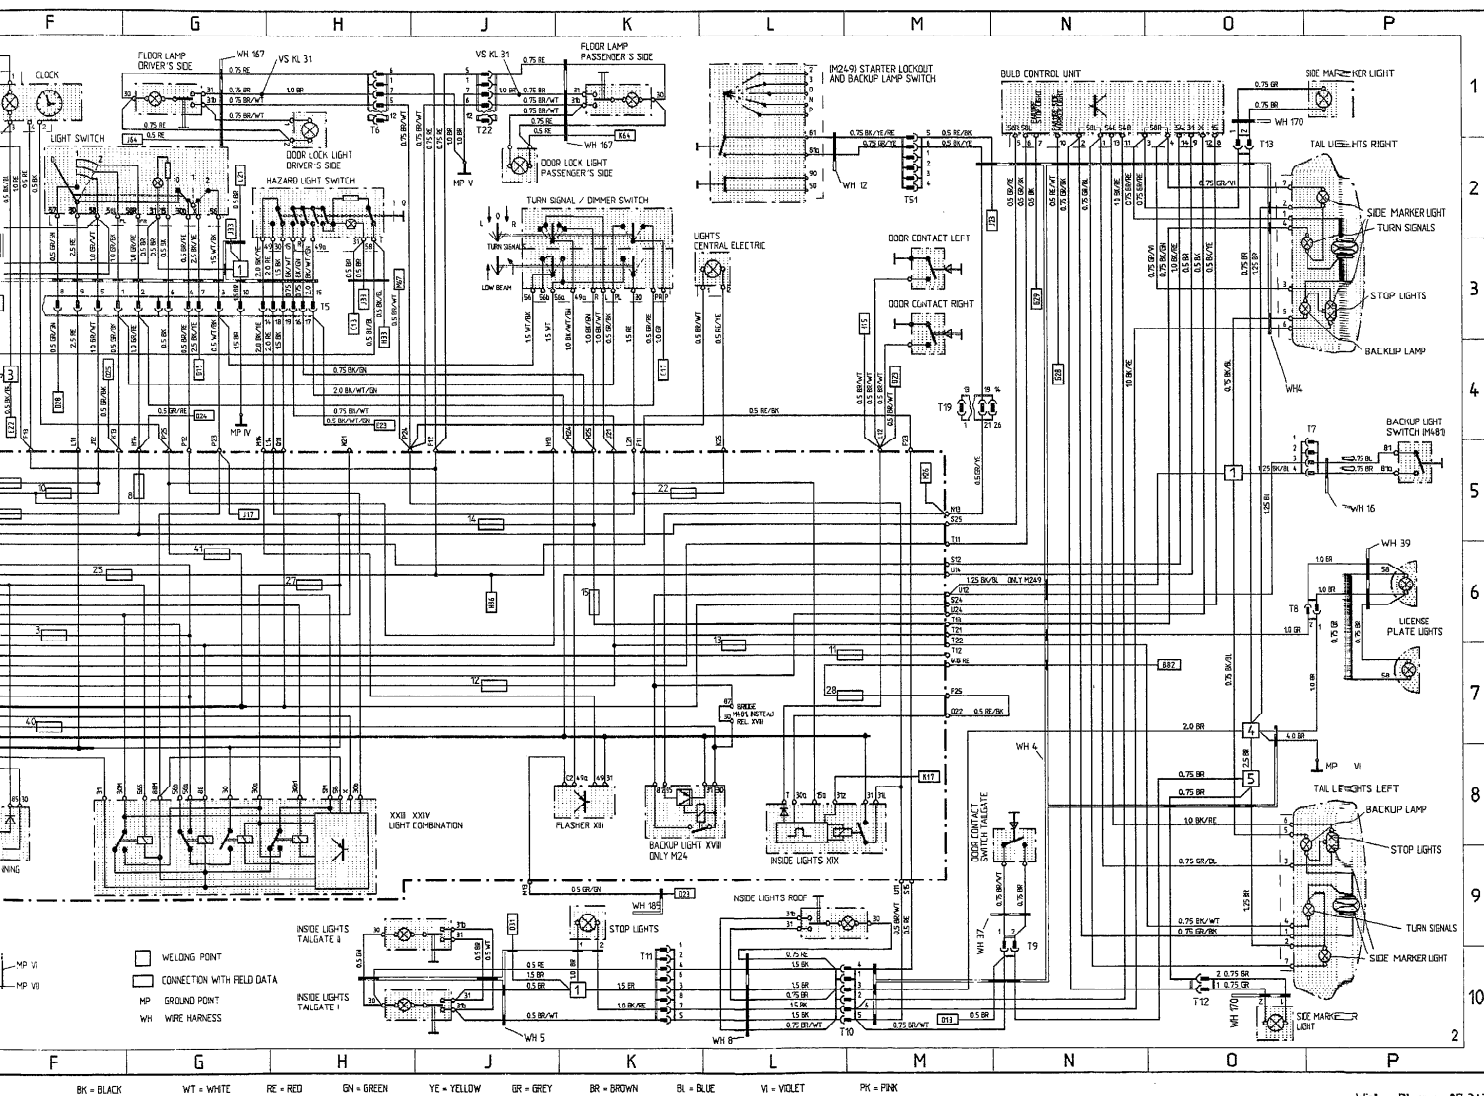

Wiring Diagram 97-343


928 S Model 90 Sheet 3 BODY

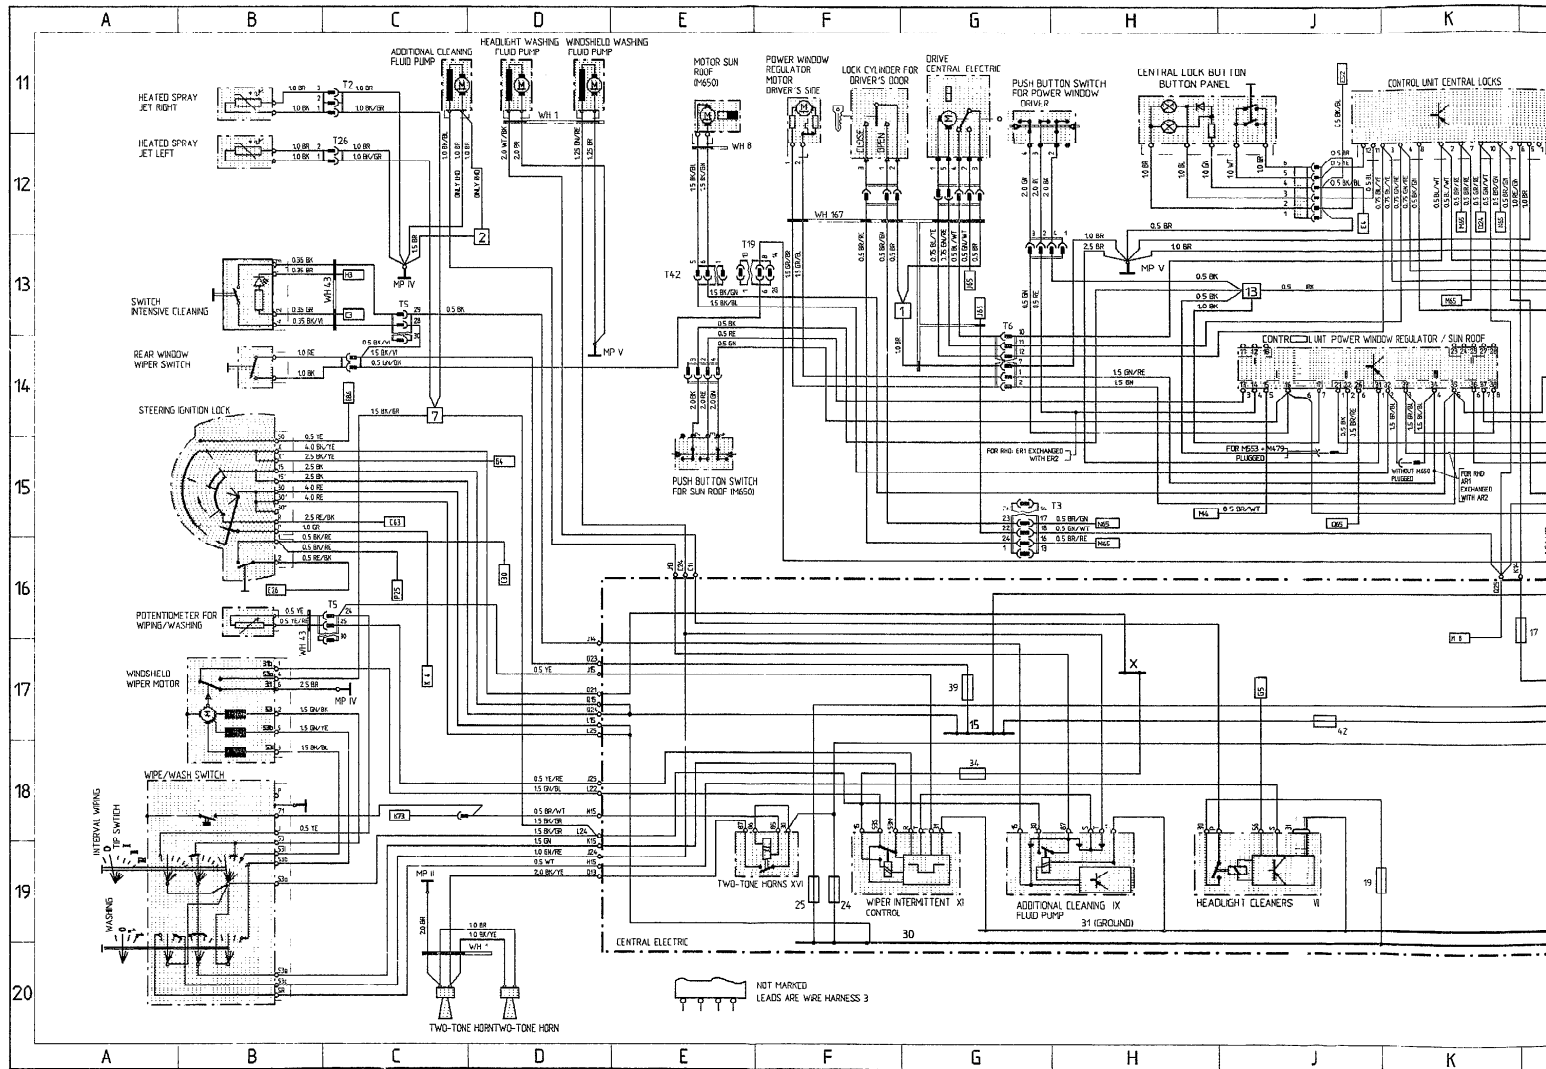



928 S Model 90 Sheet 4

INSTRUMENT CLUSTER AND SENDERS

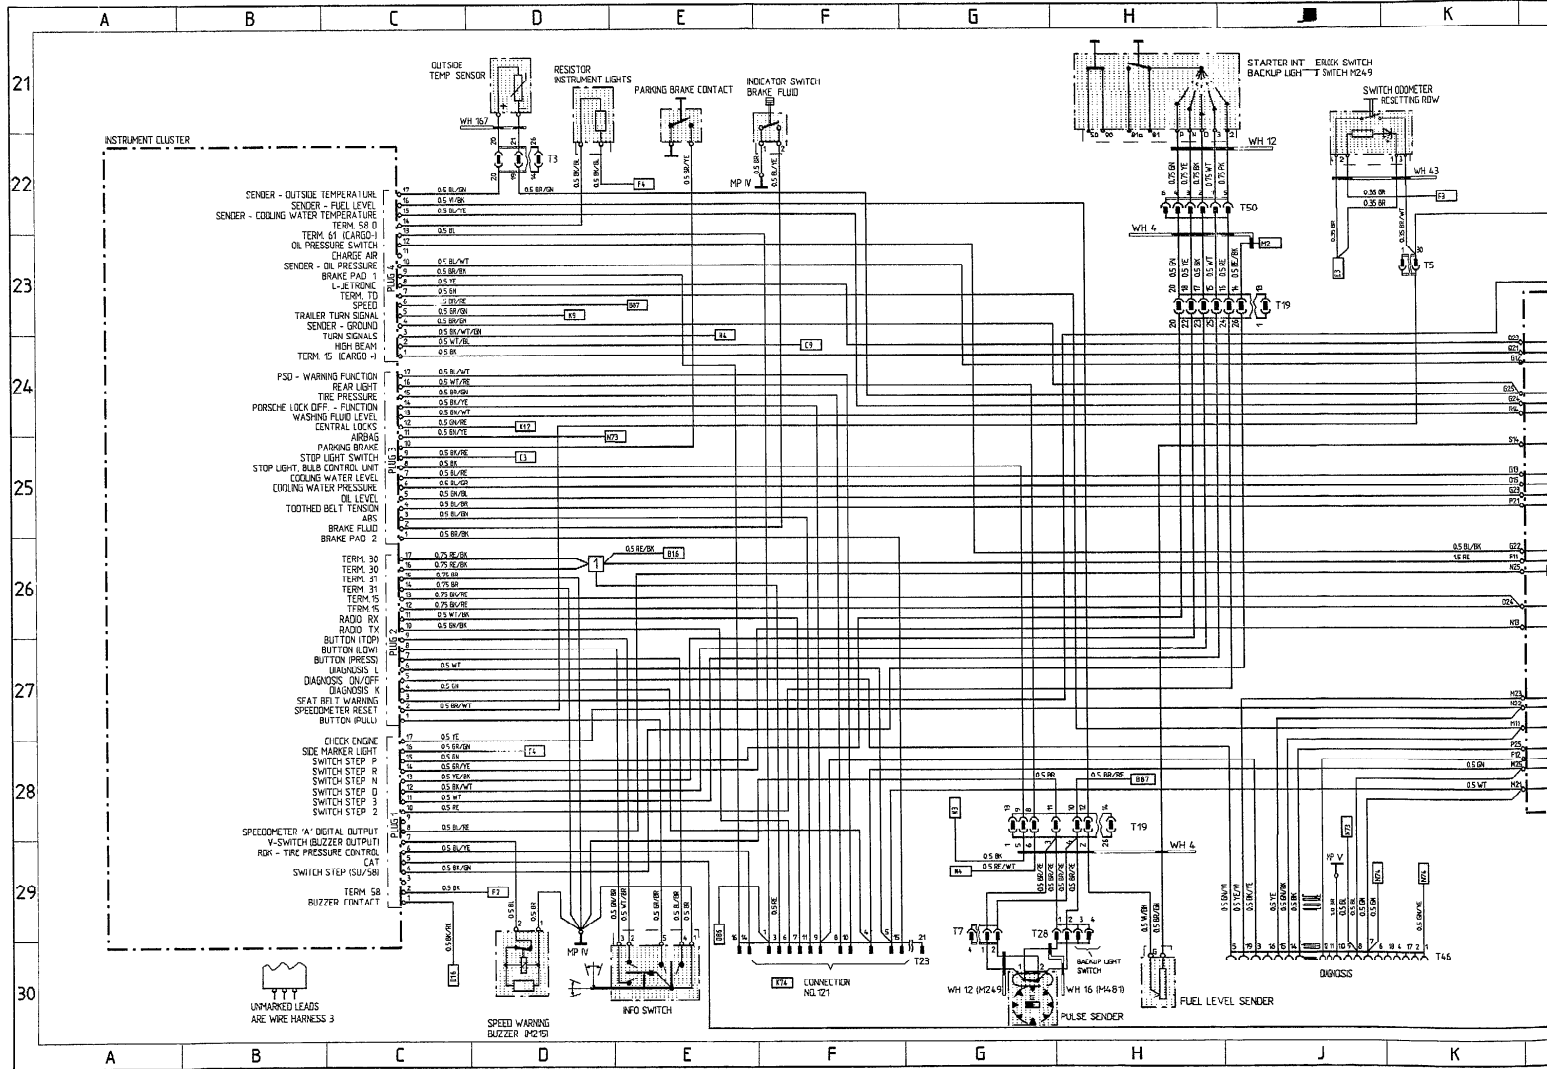

Printed in Germany - XXIII, 1989


97-34/7


928 S Model 90 Sheet 4



ENGINE COOLING, HEATER, AIR CONDITIONER


ENGINE COOLING, HEATER, AIR CONDITIONER

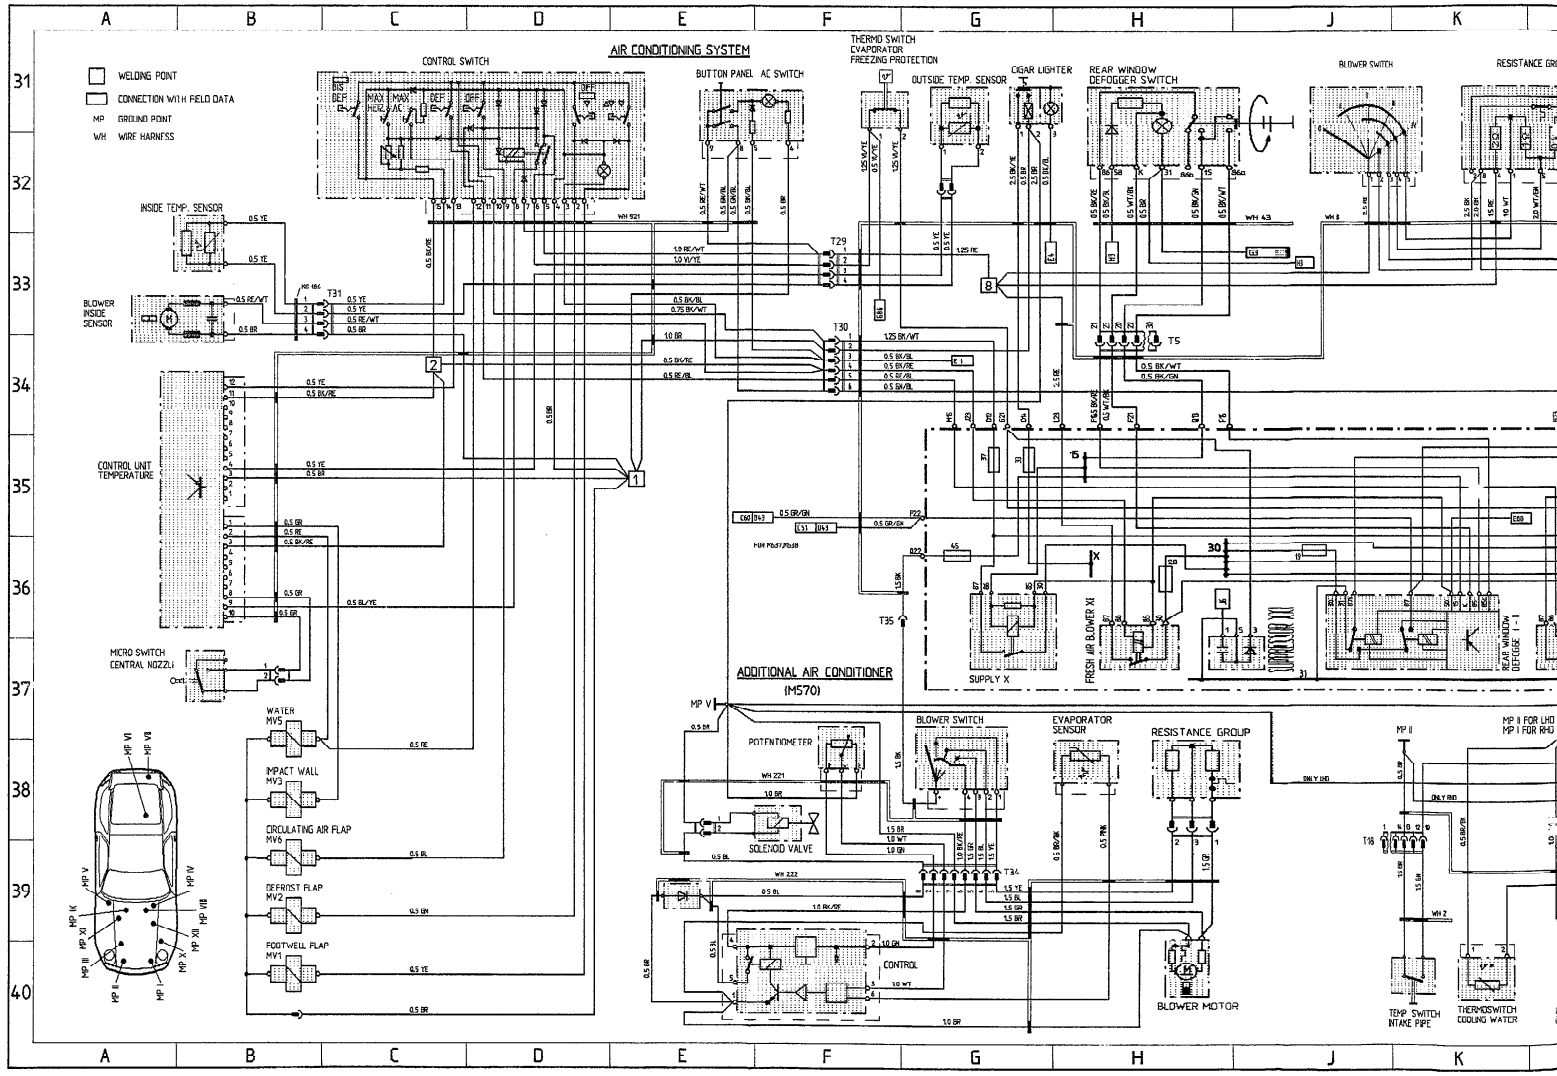


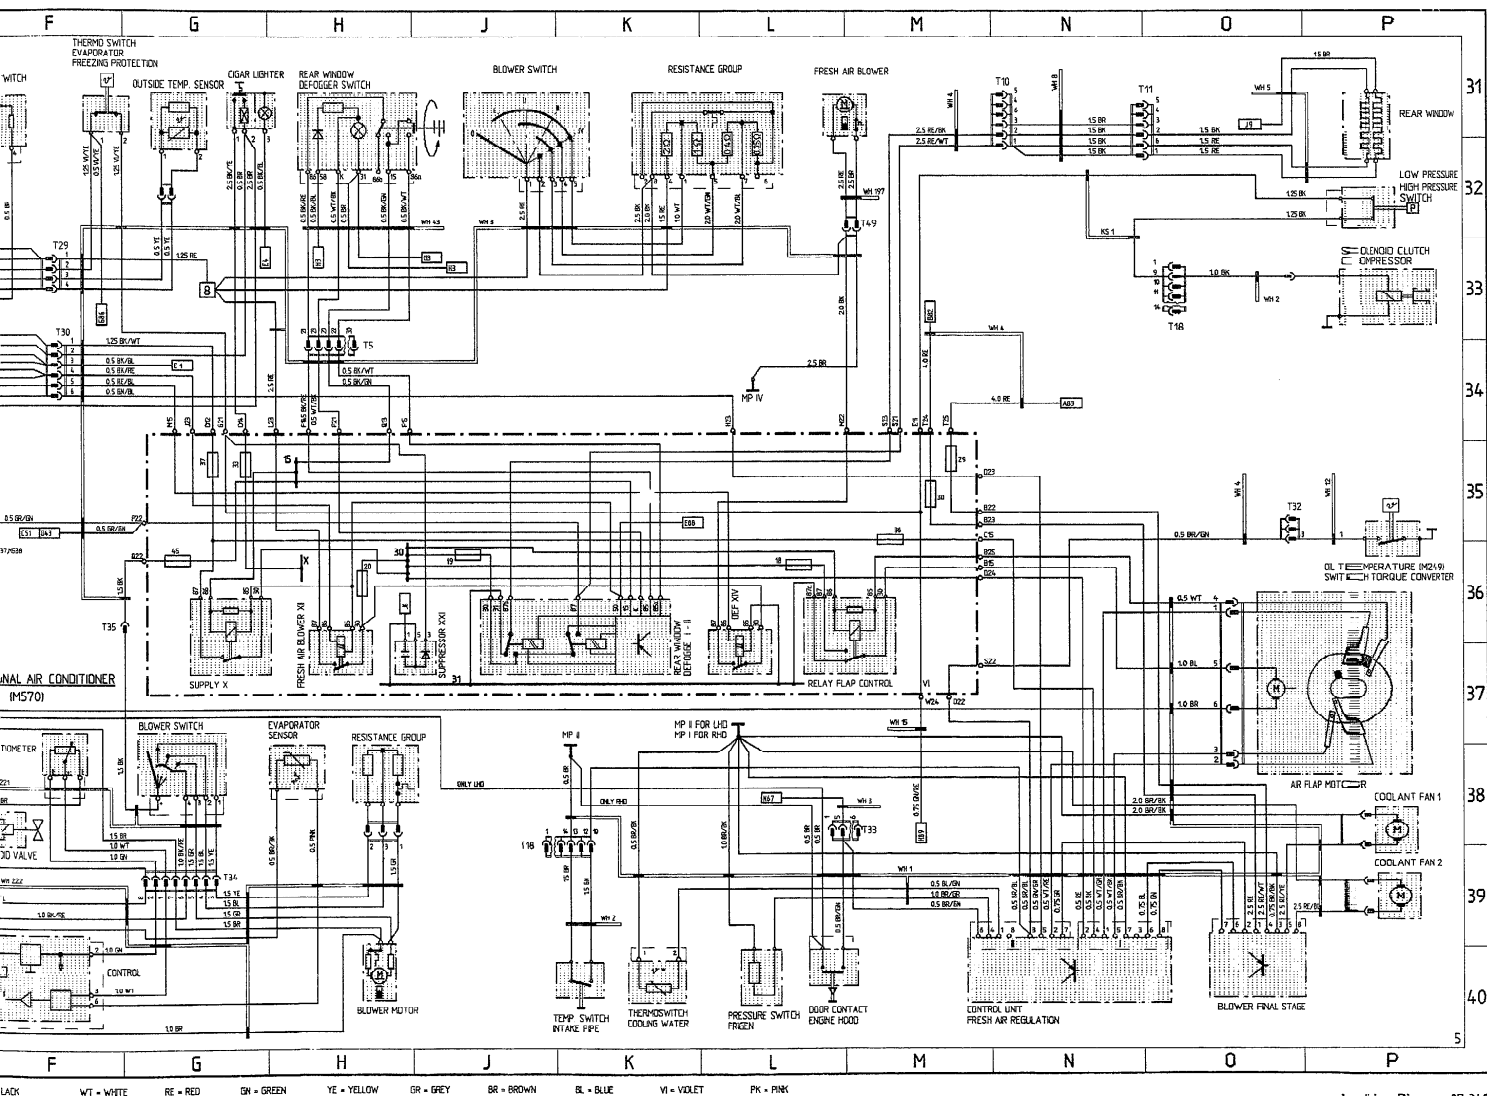


928 S Model 90 Sheet 6


OUTSIDE MIRROR, POWER SEAT

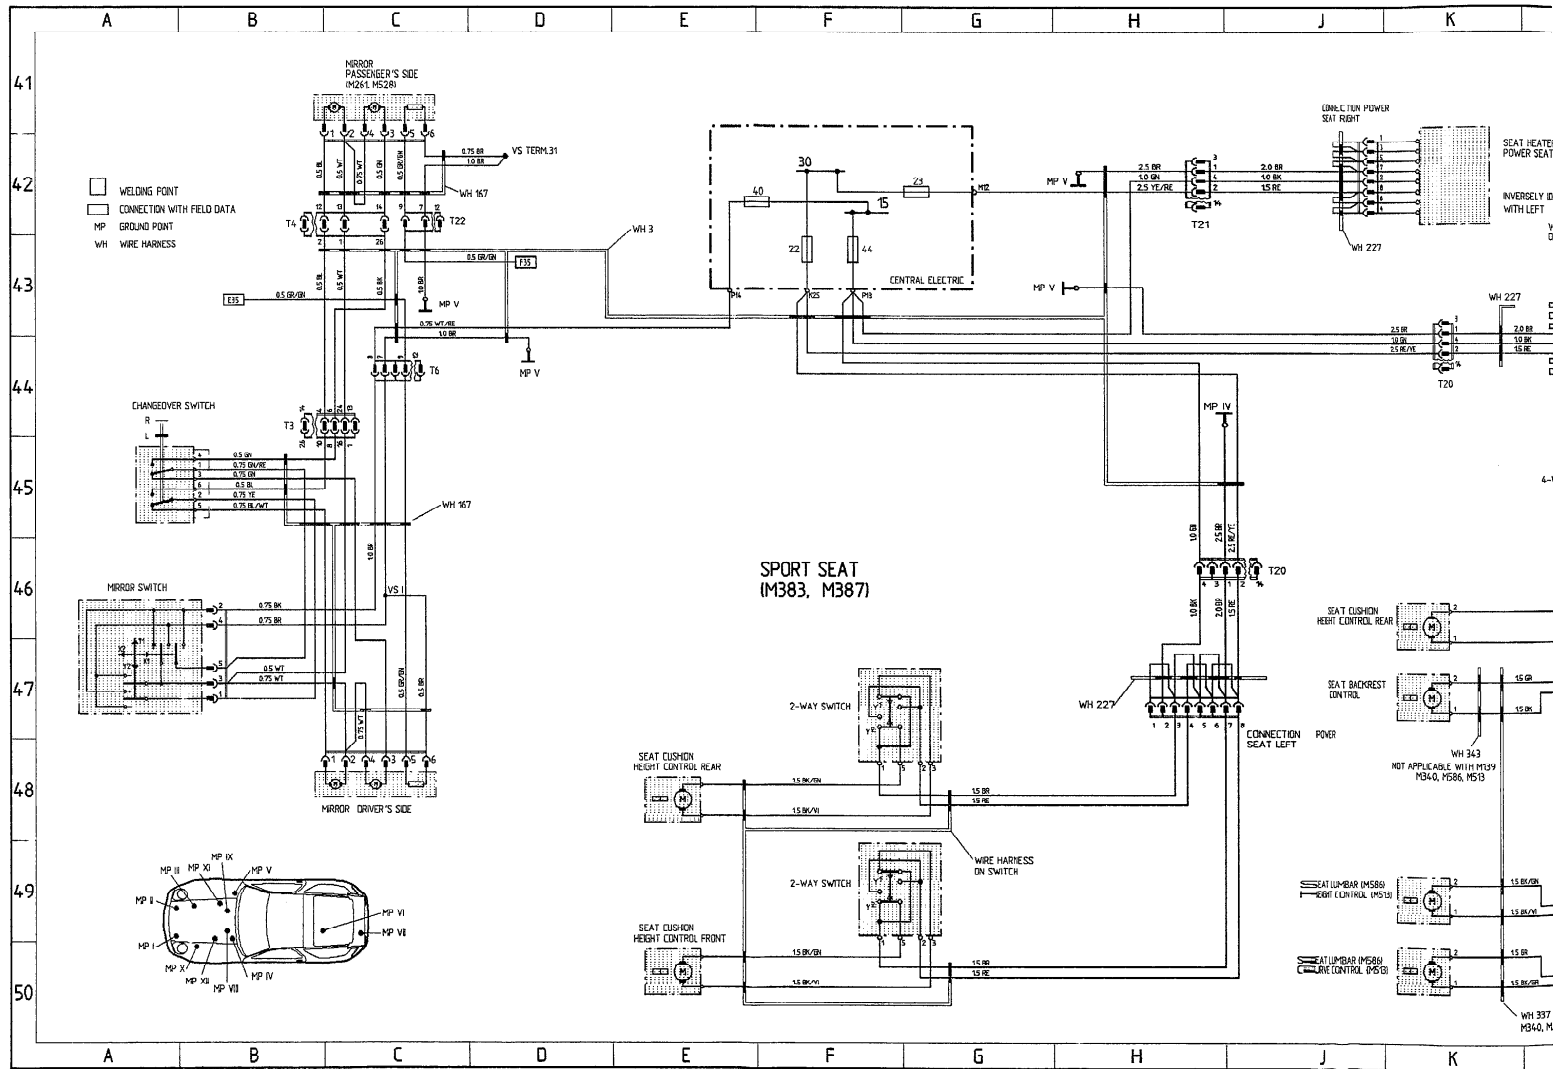

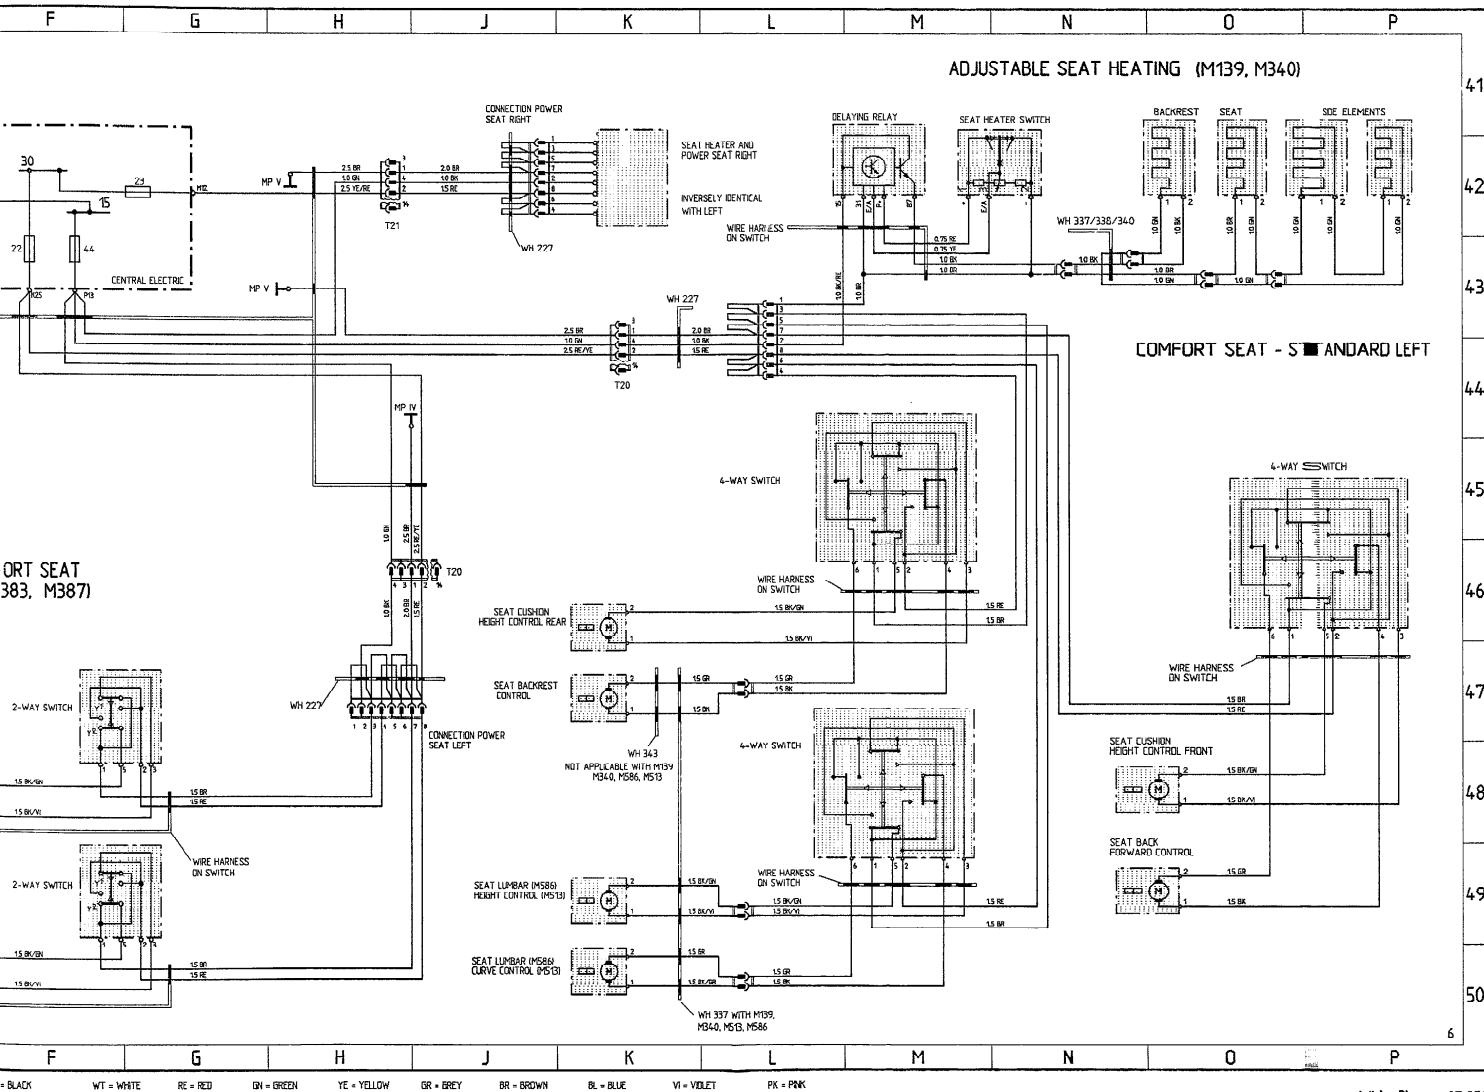


928 S Model 90 Sheet 7 (M537, M538) SEAT AND MIRROR MEMORY

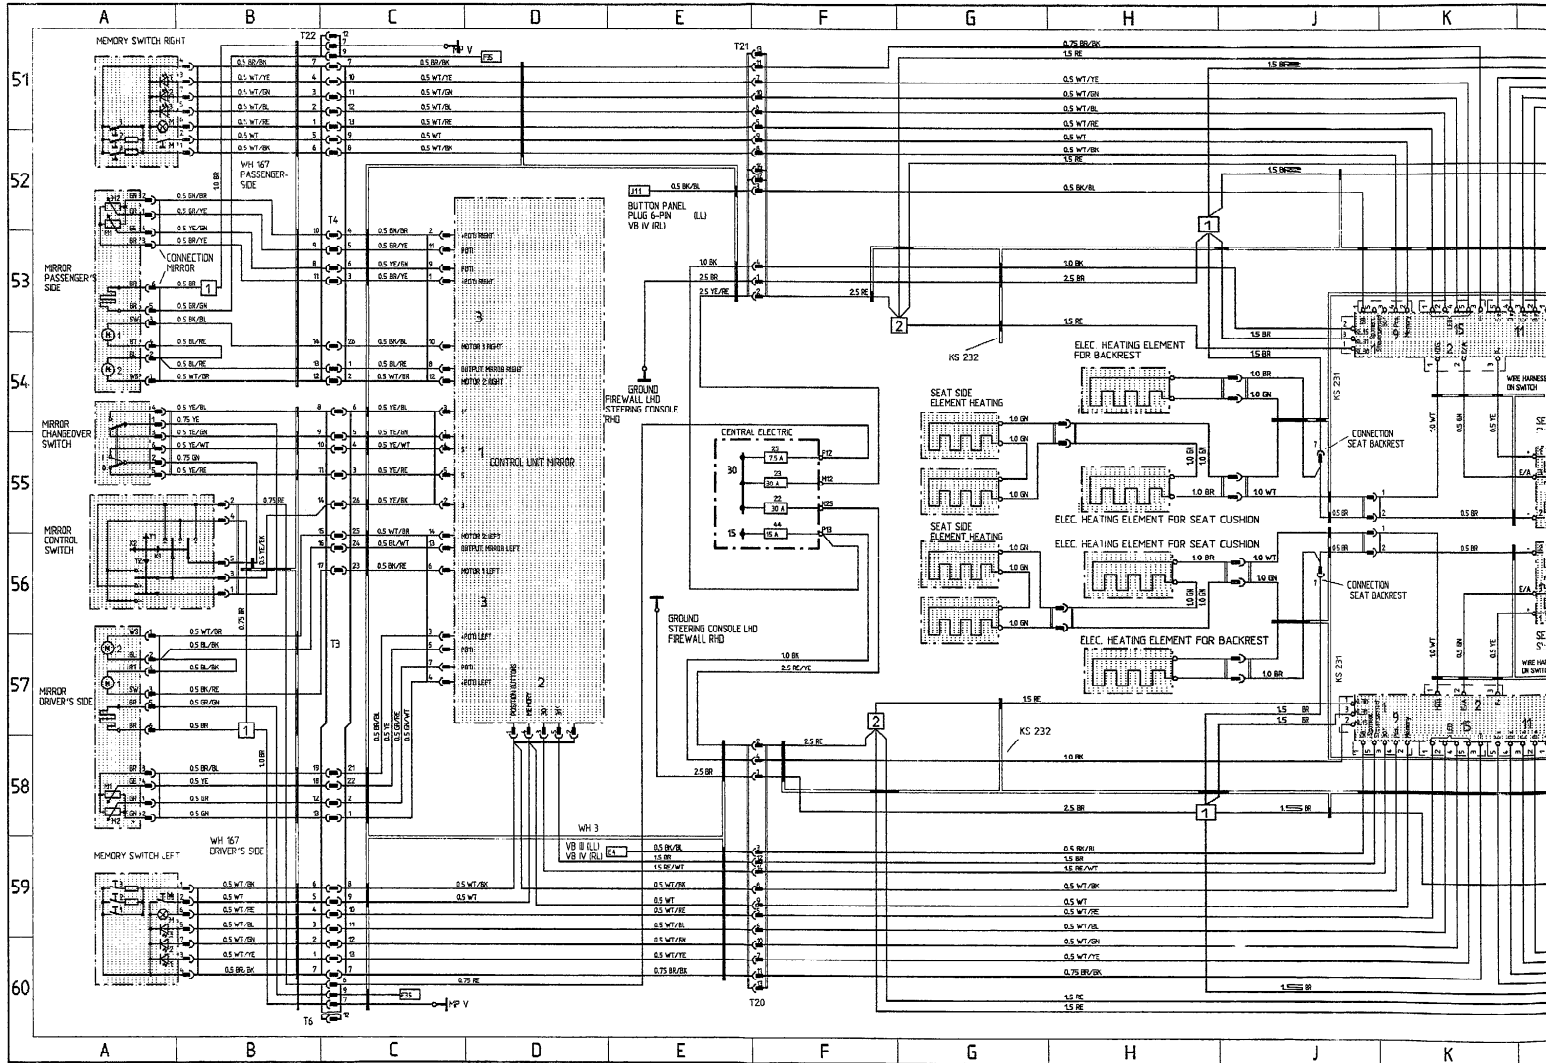


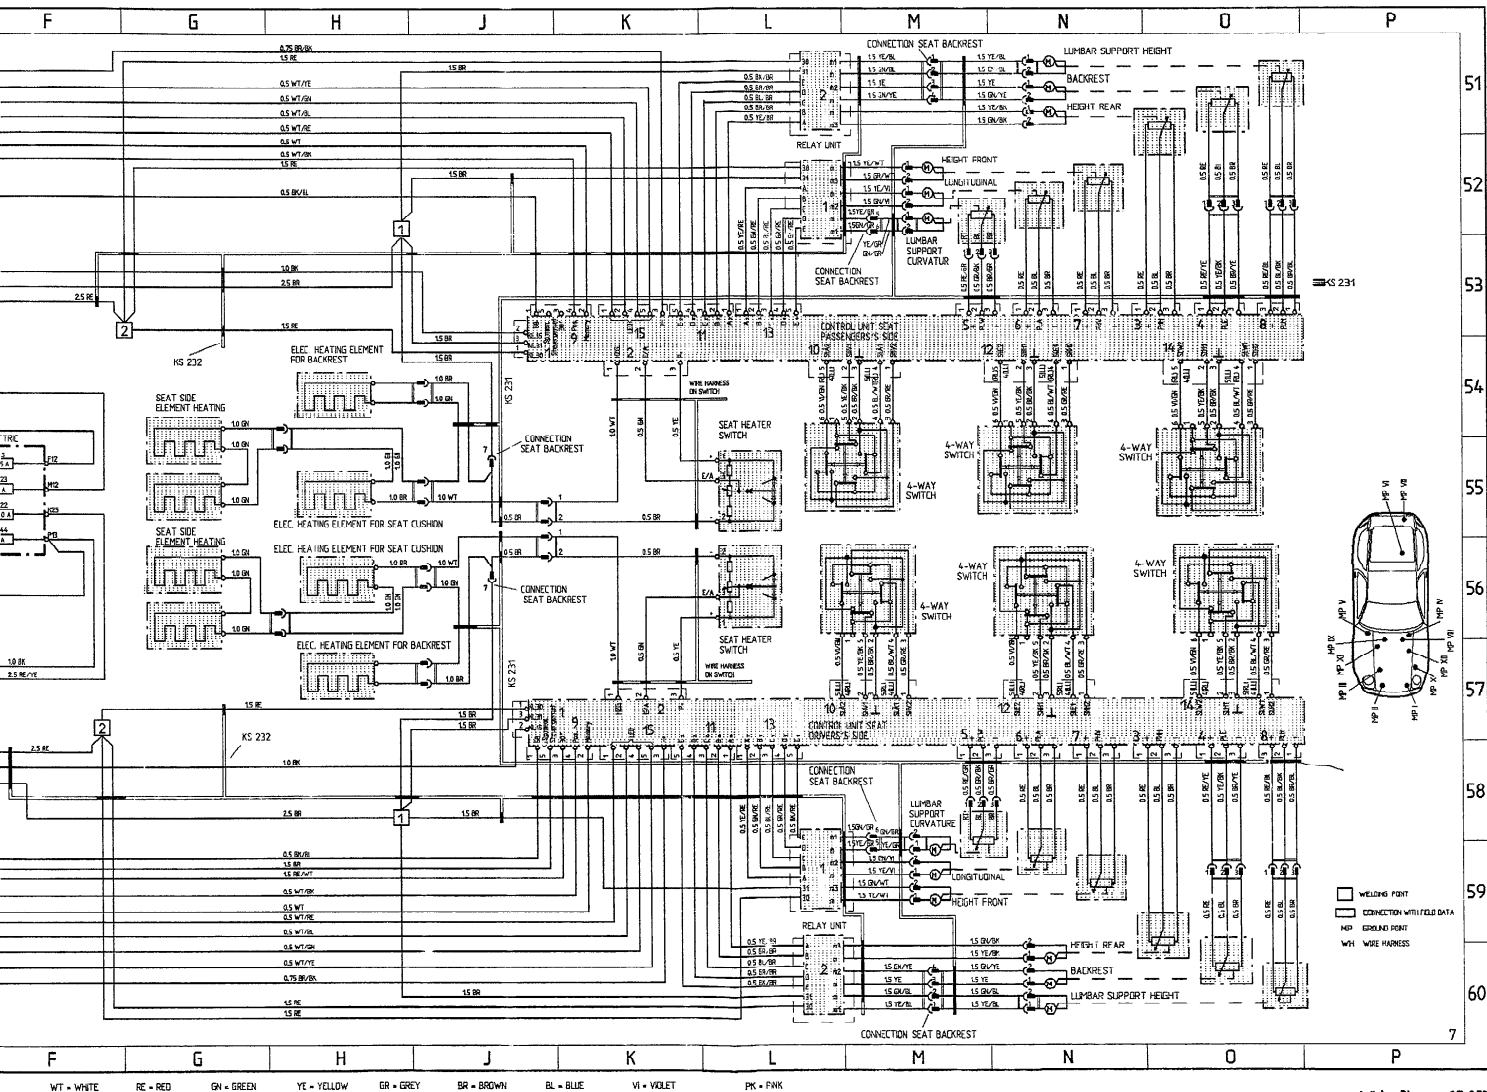

Wiring Diagram 97-353


928 S Model 90 Sheet 8
RADIO, ALARM SYSTEM

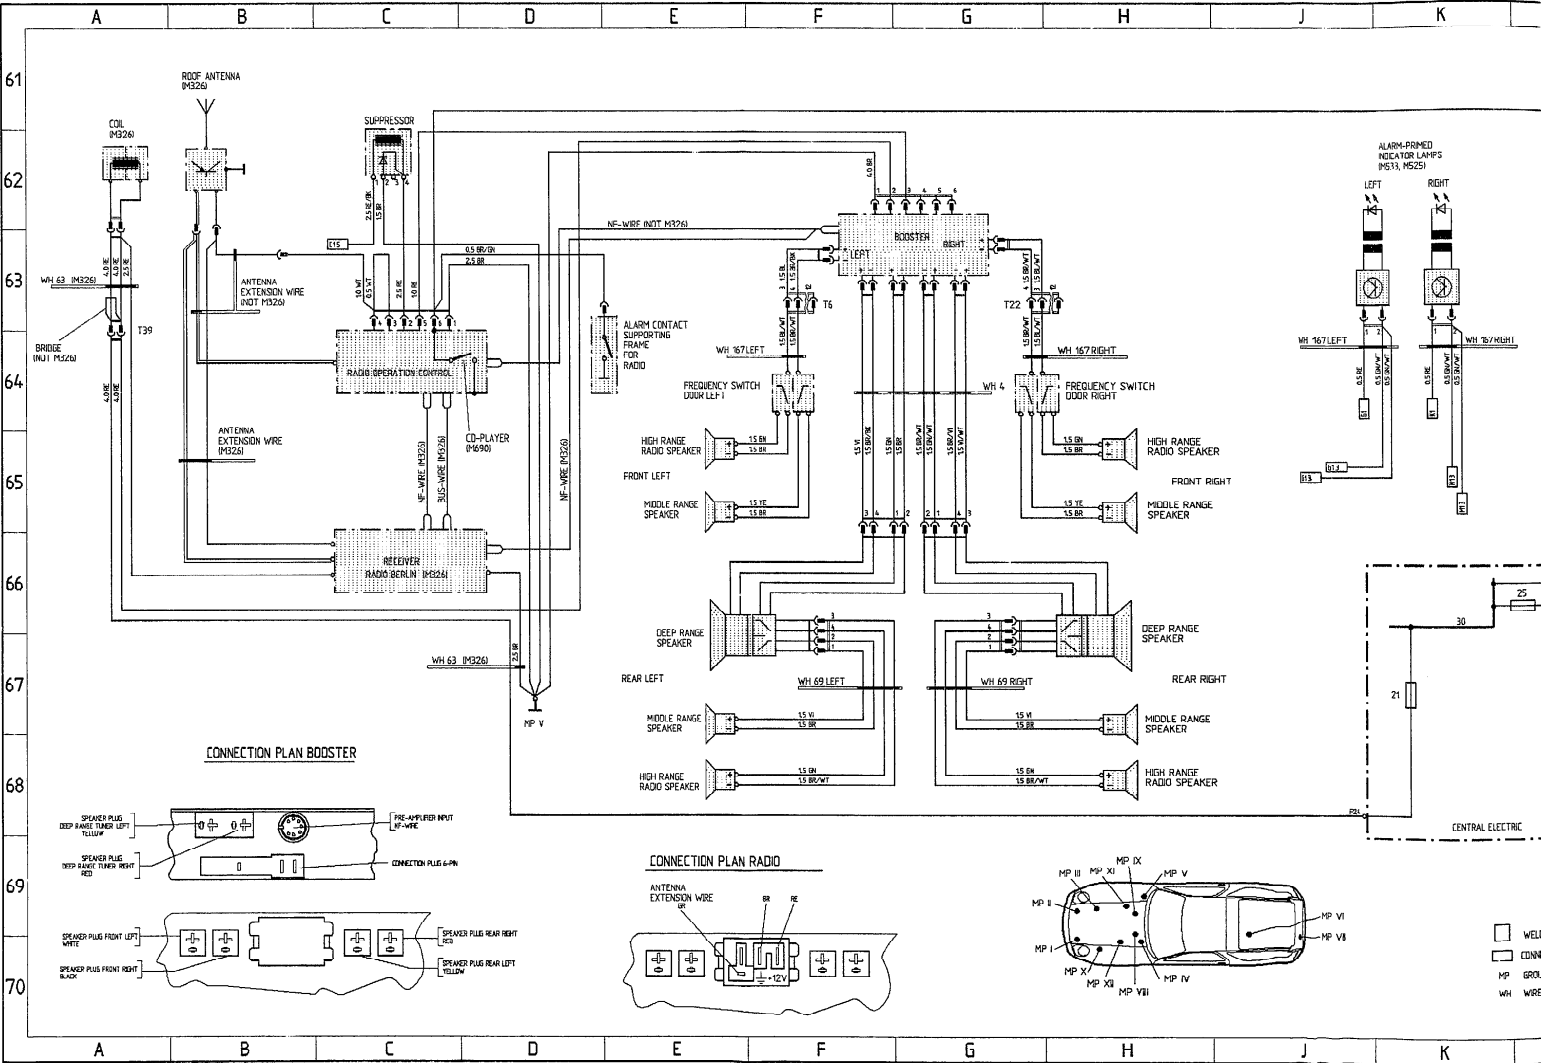


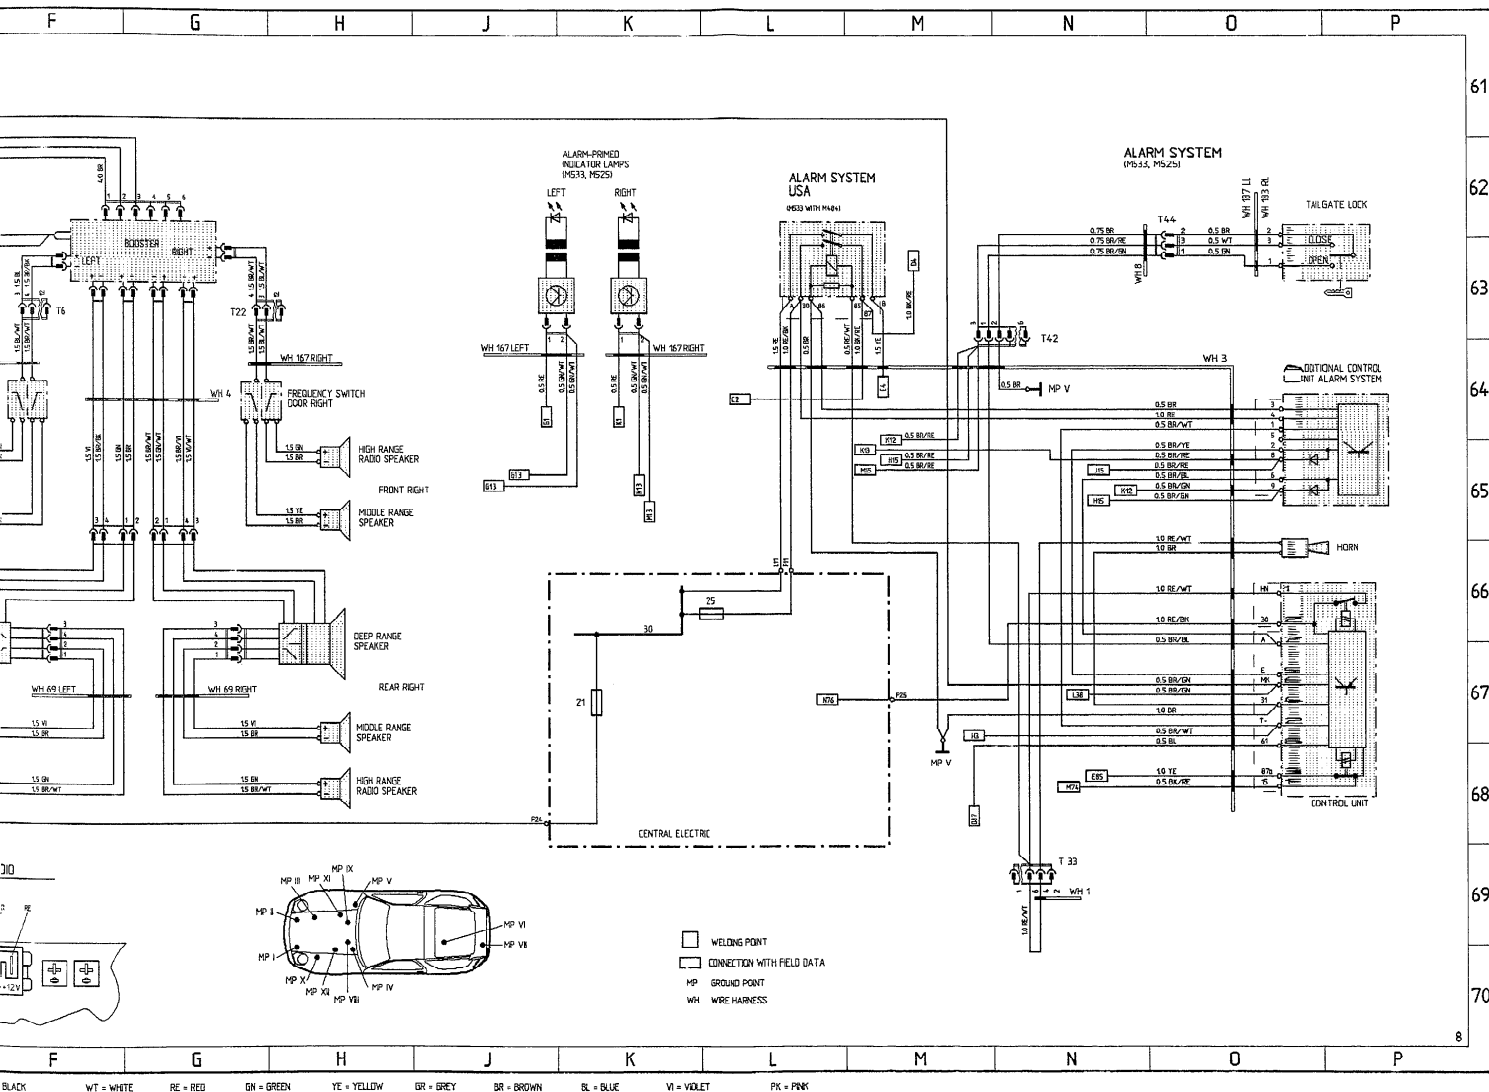


928 S Model 90 Sheet 9

ABS, TIRE PRESSURE CONTROL, AIRBAG, PORSCHE LOCK DIFFERENTIAL, BRAKE PAD WEAR INDICATOR TRAILER COUPLING

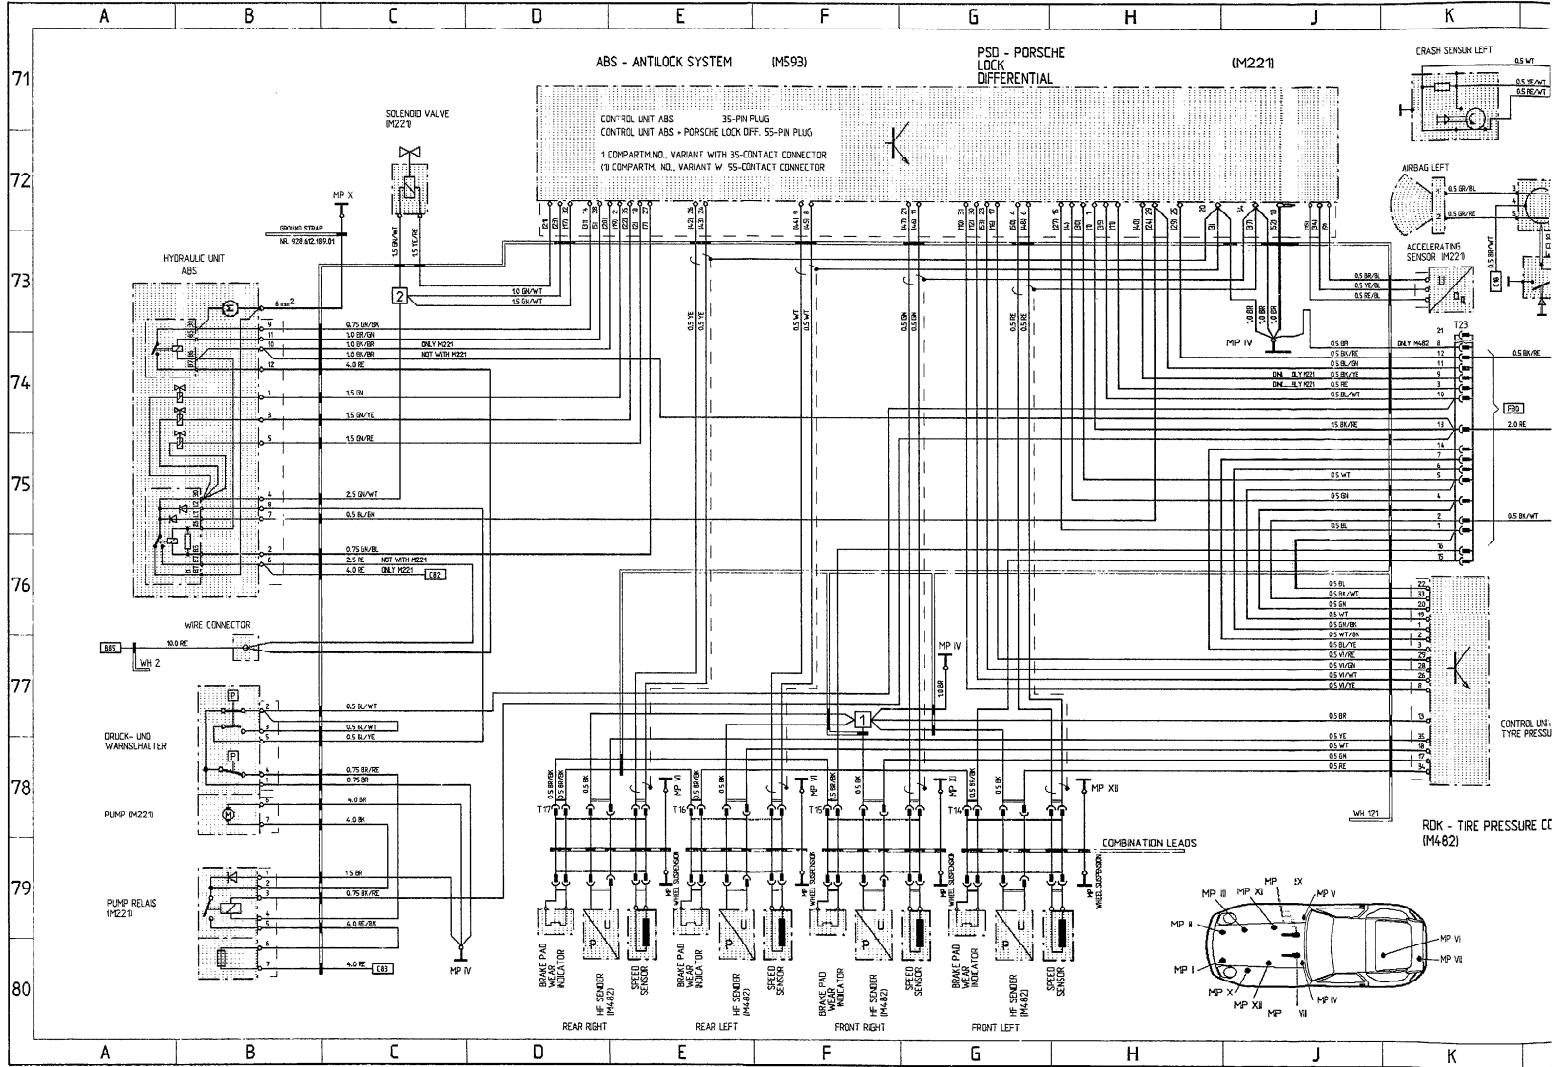

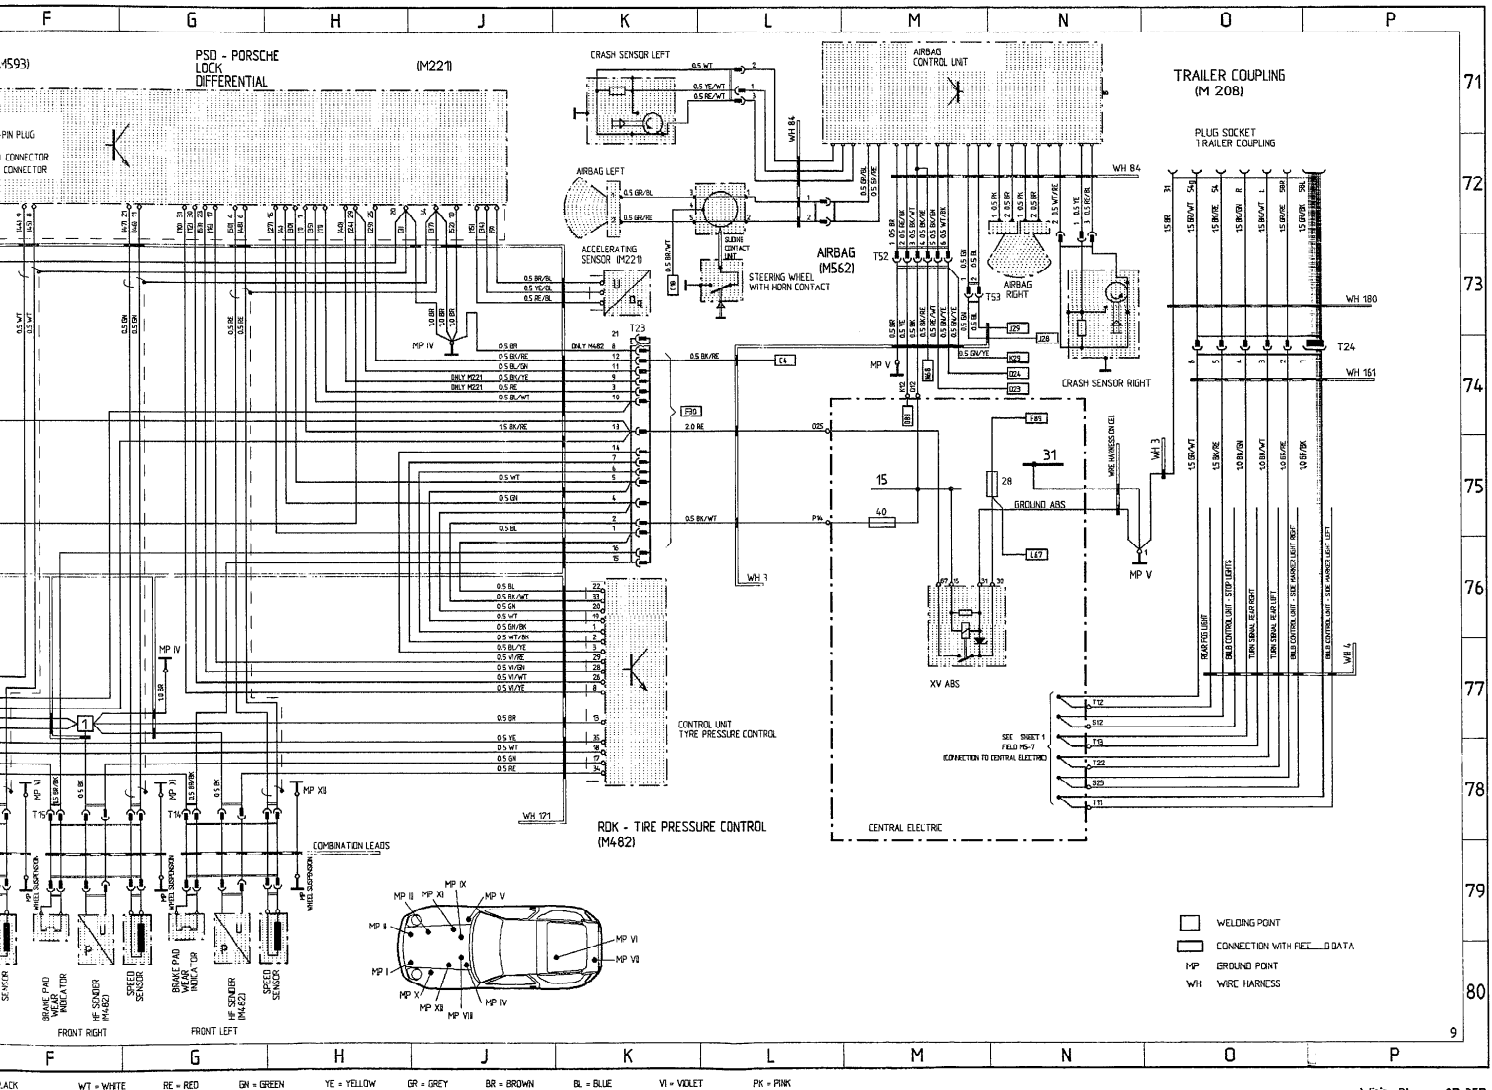


928 S Model 90 Sheet 10 MOTOR, FUEL AND IGNITION, CRUISE CONTROL

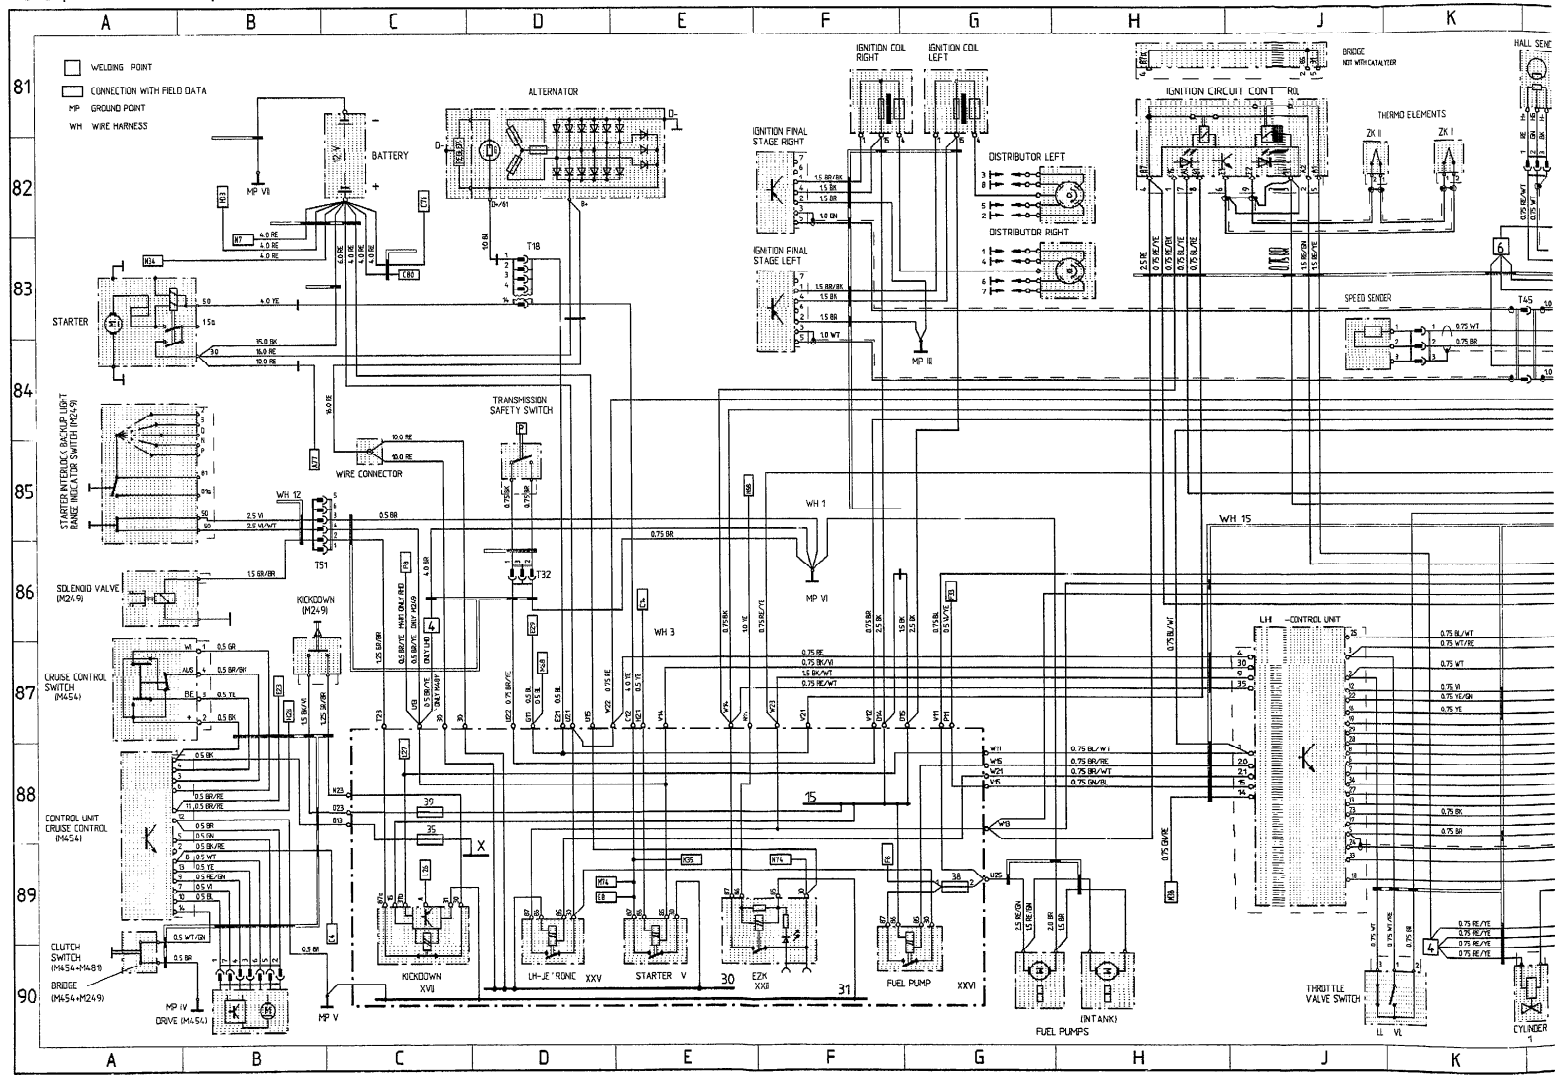


Printed in Germany - XXIII, 1989


BK = BLACK
97-359

 WT = WHITE RE = RED GN = GREEN YE = YELLOW GR = GREY BR = BROWN BL = BLUE VI = VIOLET PK = PINK



928 S Model 90 Sheet 11 CENTRAL ELECTRIC

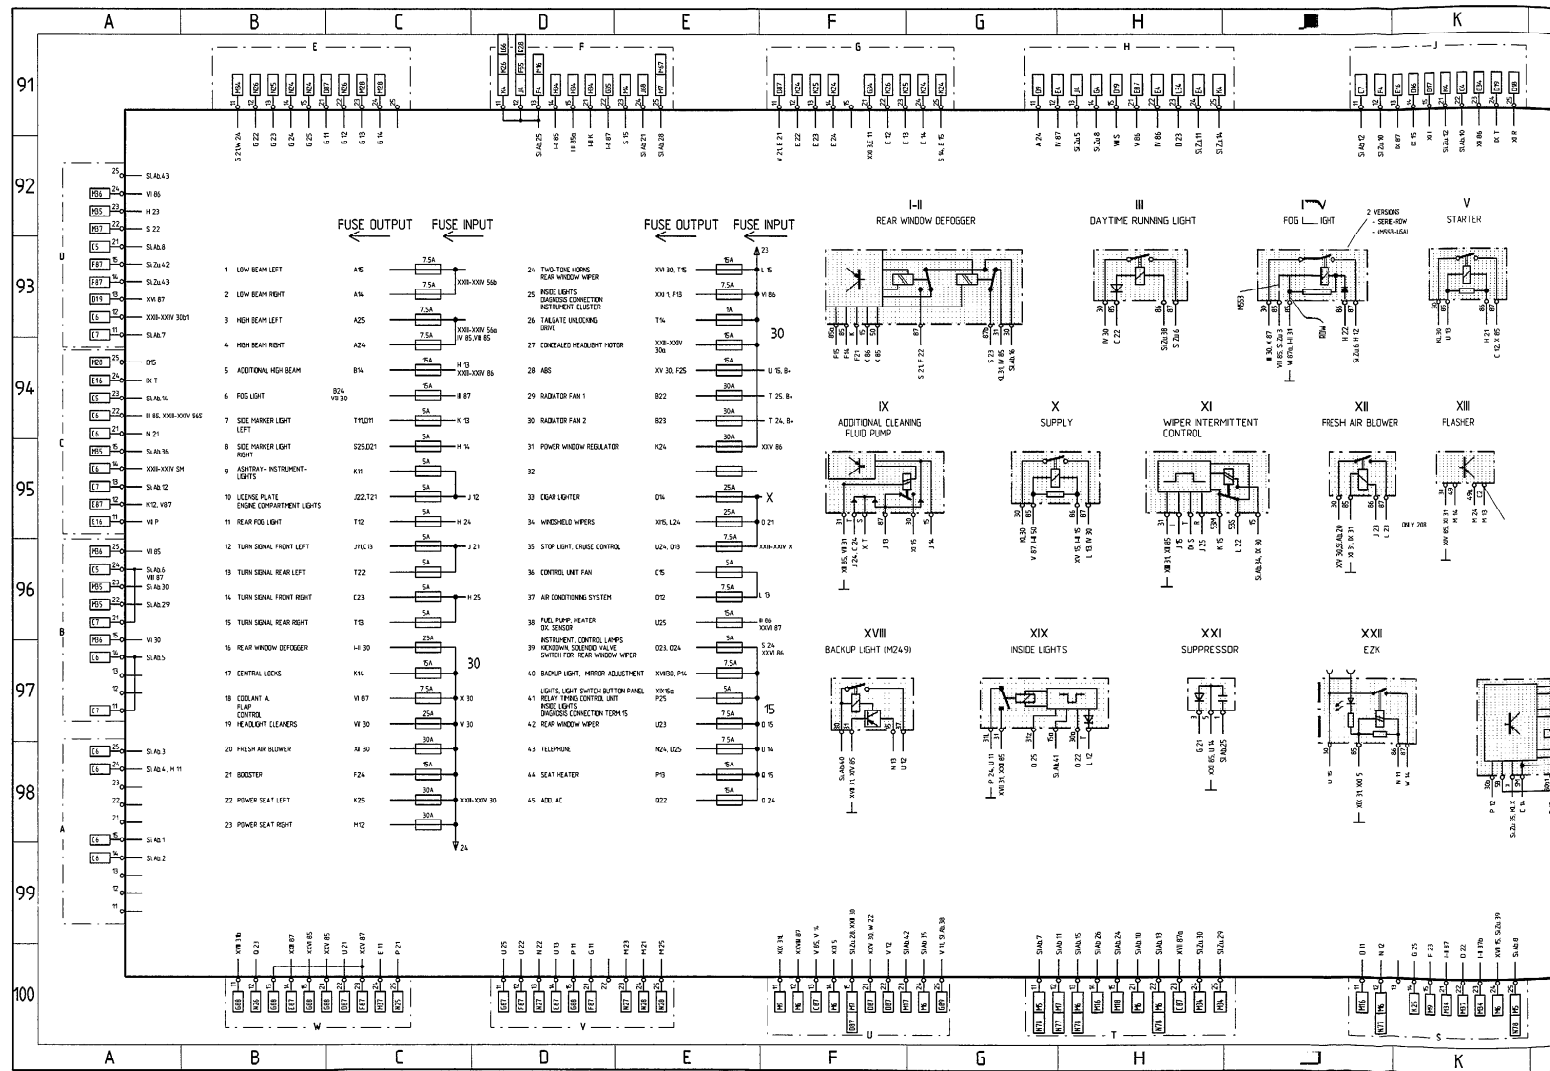

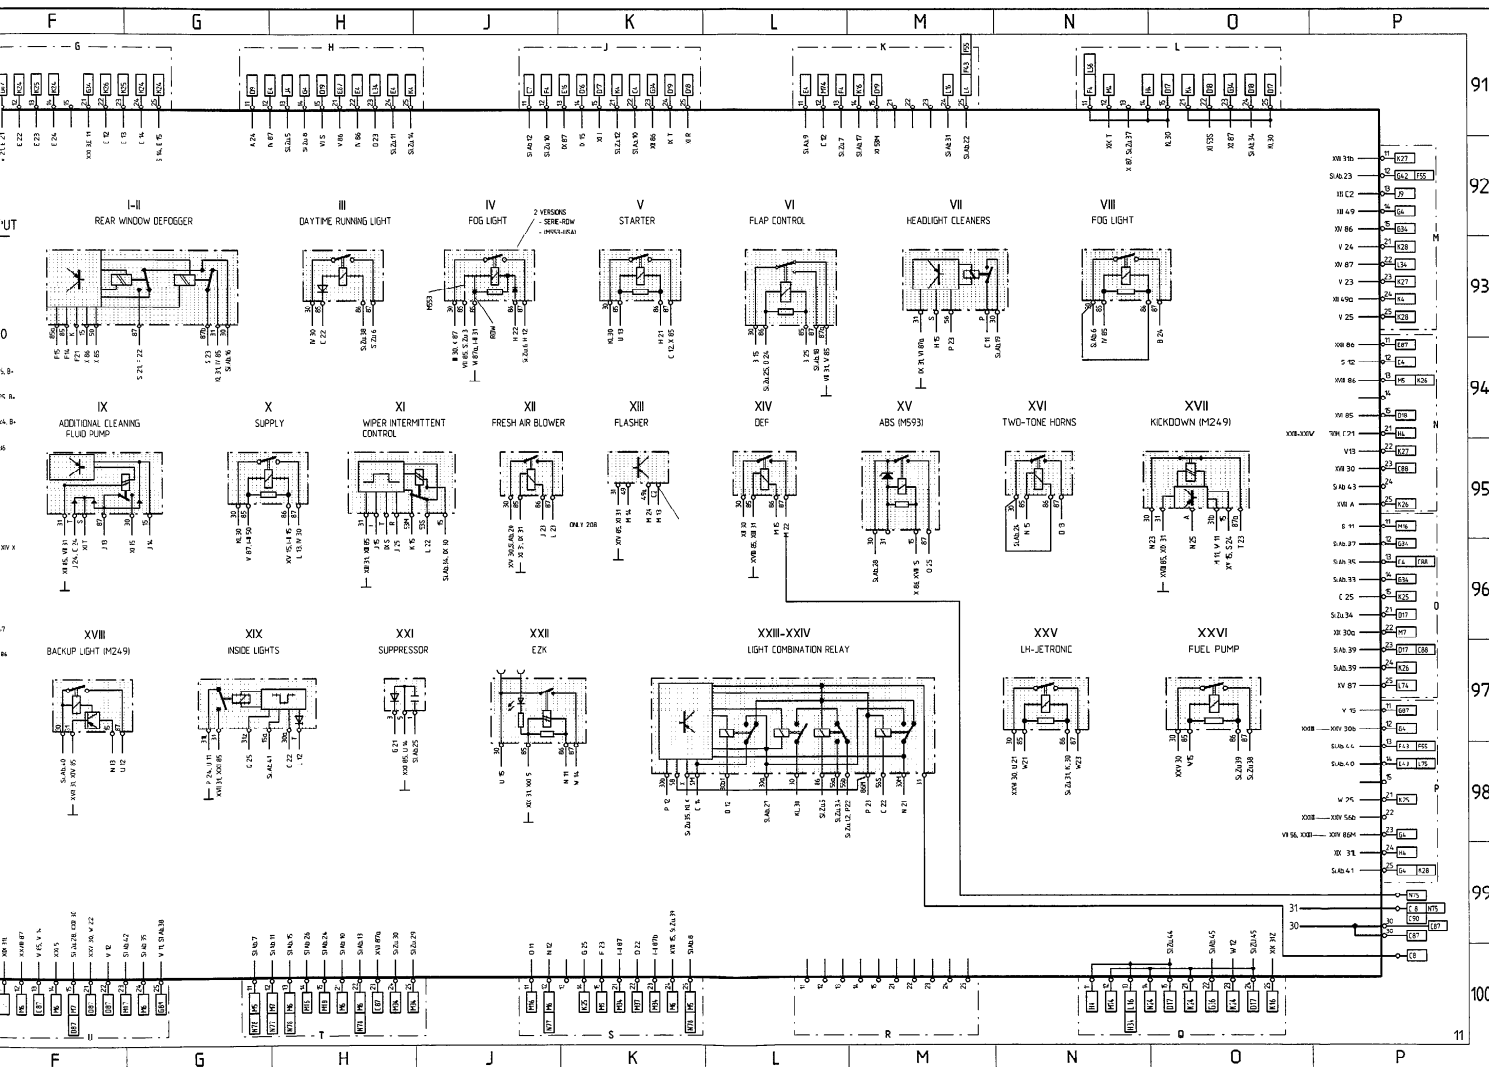

Wiring Diagram 97-361

LEGEND

Printed in Germany - XXIII, 1989

12


928 S Model 90 Sheet 13

CONSTR. COMPONENTS, PLUG CONNECT., GROUND POINTS

CONSTRUCTION COMPONENTS					PLUG CONNECTIONS					
DESIGNATION, FUNCTION	POSITION IN VEHICLE LHD	RHD	NOTE	FIELD IN WIRING DIAGRAM	CODE	NUMBER OF PINS	DESIGNATION, FUNCTION	POSITION IN VEHICLE LHD	RHD	NOTE
ABS/PORSCHE OFFER, LOCK CONTROL UNIT	71Q		IN DRIVER'S FOOTWELL ON SIDE	DJ 71-72	T1	2	ENGINE OIL LAMP	71L	71Q	ABOVE ECK LH CONTROL UNIT
ABS/PORSCHE OFFER, LOCK CONTROL UNIT	71Q		ABOVE CENTRAL ELECTRICS	DJ 71-72	T2	3	ENGINE COMPARTMENT LAMP, HEATED SPRAY, JET RIGHT	61Q	6CQ	UNDER THE WIPER SYSTEM COVER
ALARM SYSTEM CONTROL UNIT	70M	76P	BEHIND GLOVE COMPARTMENT	DP 54-58	T3	26	DOOR DRIVER'S SIDE	71Q	71L	ON DRIVER'S DOOR
ALARM SYSTEM RELAY	80N		IN CENTRE CONSOLE BELOW RADIO	LM 62-63	T4	26	DOOR PASSENGER'S SIDE	71L	71Q	IN PASSENGER'S DOOR
ALARM SYSTEM ADDITIONAL CONTROL UNIT	80N	80N	IN CENTRE CONSOLE BELOW RADIO	DP 64-65	T5	30	INSTRUMENT SCUTTLE	71Q	71L	AT SUPPORTING TUBE STEERING CONSOLE
OUTSIDE TEMP. SENSOR	2-50Q	2-50Q	IN AIR DUCT TO GENERATOR	G 31	T6	12	DOOR DRIVER'S SIDE	71Q	71L	ON DRIVER'S DOOR
ACCELERATING SENSOR	10M0	10M0	UNDER THE LEFT SEAT	K 73	T7	4	TRANSMISSION	16QD	16QD	UNDER THE SPARE WHEEL COVER
BOOSTER	11M	11M	UNDER THE COVER ON PASSENGER'S SIDE SILL	FG 62-63	T8	2	LICENSE PLATE LIGHTS	18CN	18CQ	UNDER THE TOOL KIT COVER
RECEIVER FOR RADIO BERLIN	71L		IN FRONT PASSENGER'S TRAY	C66	T9	2	DOOR CONTACT SWITCH TAILGATE	18CQ	18CQ	UNDER CARPET IN FRONT OF TOOL KIT
SUPPRESSOR FOR RADIO BERLIN	11M		UNDER THE COVER ON PASSENGER'S SIDE SILL	A62	T10	6	REAR WIRE HARNESS / B-PILLAR	13QD	13QD	UNDER THE PASSENGER SIDE REAR TRIM PANEL
SUPPRESSOR FOR RADIO	80Q	80Q	IN CENTRE CONSOLE IN FRONT OF RADIO	C 62	T11	8	B-PILLAR / TAILGATE	13QD	13QD	UNDER THE TAILGATE TRIM PANEL CLOSE TO SUN VISOR
SWITCHING UNIT EX (M193)	80N		IN CENTRE CONSOLE BELOW RADIO	P 28-30	T12	2	SIDE MARKER LIGHT LEFT REAR	18CQ	18CQ	UNDER THE TOOL KIT COVER
ECK CONTROL UNIT	71L	71Q	IN PASSENGER'S FOOTWELL ON CONTROL UNIT CONSOLE	L 82-84	T13	2	SIDE MARKER LIGHT RIGHT REAR	18CN	18CN	UNDER THE TOOL KIT COVER
REAR WINDOW WIPER RELAY	18Q	18Q	UNDER THE TOOL KIT COVER	O 17	T14	3-2	BRAKE PAD WEAR CONTACT, SPEED SENSOR LEFT FRONT	5CP	5CP	IN ENGINE COMPARTMENT AT SUSPENSION STRUT MOUNT
HIGH PRESSURE AND LOW PRESSURE SWITCH	20M	20M	IN FRONT OF AIR CONDITIONING COMPRESSOR RIGHT	P 32	T15	3-2	BRAKE PAD WEAR CONTACT, SPEED SENSOR RIGHT FRONT	5CM	5CM	IN ENGINE COMPARTMENT AT SUSPENSION STRUT MOUNT
AIR CONDITIONING SYSTEM CONTROL UNIT	81M0	81M0	IN HEATER BOX	AB 34-36	T16	3-2	BRAKE PAD WEAR CONTACT, SPEED SENSOR LEFT REAR	16QD	16QD	UNDER THE SPARE WHEEL COVER
COOLANT FAN FINAL STAGE	11M	11M	IN ENGINE COMPARTMENT ON FRONT RIGHT END PANEL	O 39-40	T17	3-2	BRAKE PAD WEAR CONTACT, SPEED SENSOR RIGHT REAR	16QD	16QD	UNDER THE SPARE WHEEL COVER
COOLANT FAN CONTROL UNIT	10M	10M	UNDER THE COVER ON PASSENGER'S SIDE SILL	MI 39-40	T18	4	FRONT END / ENGINE WIRE HARNESS	3CM	3CM	IN ENGINE COMPARTMENT AT RIGHT WHEEL HOUSING
COOLING WATER PRESSURE SWITCH	5CP	5CP	IN COOLANT HOSE BEHIND EXPANSION TANK	MI 29-30	T19	26	INSTRUMENT PANEL - / REAR WIRE HARNESS	71L	71L	NEAR CENTRAL ELECTRICS
COOLING WATER FLOW SWITCH	61M	61M	ON EXPANSION TANK	MI 29	T20	4	SEAT DRIVER'S SIDE	10CQ	10CQ	UNDER THE SEAT, ADVANCE SEAT
BULB CONTROL UNIT	71L	71Q	ON PASSENGER'S PARCEL TRAY	NO 1	T21	4	SEAT PASSENGER'S SIDE	10L	10CQ	UNDER THE SEAT, ADVANCE SEAT
IDLE SPEED CO ADJUSTMENT POTENTIOMETER	71L	71Q	IN PASSENGER'S FOOTWELL ON CONTROL UNIT CONSOLE	O 90	T22	12	DOOR PASSENGER'S SIDE	71L	71Q	IN PASSENGER'S DOOR
LH JETRONIC CONTROL UNIT	71Q	71Q	IN PASSENGER'S FOOTWELL ON CONTROL UNIT CONSOLE	J 87-89	T23	21	ABS	71Q	71Q	FOOTWELL AT LEFT SIDE PANEL
SOLENOID VALVE LOCK DIFFERENTIAL	71Q	71Q	BEHIND THE LH REAR WHEEL	C 72	T24	6	TRAILER COUPLING	61L	61Q	UNDER THE CENTRAL ELECTRIC
SOLENOID VALVE (ADDITIONAL AIR CONDITIONER)	10M	10M	UNDER THE RIGHT SEAT	F 36	T25					
OIL LEVEL SWITCH	36N 0	36N 0	ON OIL PAN FRONT	P 26	T26	2	HEATED SPRAY, JET LEFT	6CQ	6CQ	UNDER THE WIPER SYSTEM COVER
OIL TEMPERATURE SWITCH (M24-9)	10M	10M	ON TORQUE CONVERTER LEFT SIDE	P 35-36	T27					
PUMP LOCK DIFFERENTIAL	10M	10M	BEHIND THE LH REAR WHEEL	B 77-78	T28	4	PULSE SENDER	16QD	16QD	UNDER THE SPARE WHEEL COVER
PUMP RELAY LOCK DIFFERENTIAL	10M	10M	UNDER THE SPARE WHEEL COVER	B 79-80	T29	4	AIR CONDITIONING SYSTEM	8CN	8CN	IN CENTRE CONSOLE
CONTROL FOR ADDITIONAL AIR CONDITIONER	12M	12M	ON SUPPLEMENTARY AIR CONDITIONING, RIGHT	DF 39-40	T30	6	AIR CONDITIONING SYSTEM	8CN	8CN	IN CENTRE CONSOLE
CONTROL, TIRE PRESSURE CONTROL UNIT	76P	76P	ON INSTRUMENT PANEL	K 76-78	T31	4	INSIDE TEMP. SENSOR FOR AIR CONDITIONER	8CN	8CN	IN CENTRE CONSOLE
SEAT MEMORY CONTROL UNIT LEFT	10M	10M	IN SEAT	K-0 57	T32	3	AUTOMATIC TRANSMISSION	16QD	16QD	UNDER THE SPARE WHEEL COVER
SEAT MEMORY CONTROL UNIT RIGHT	10M	10M	IN SEAT	K-0 54	T33	6	FRONT END / INSTRUMENT PANEL WIRE HARNESS	61L	61Q	UNDER THE CENTRAL ELECTRIC
MIRROR MEMORY CONTROL UNIT	71Q	71Q	IN DRIVER'S FOOTWELL ON SIDE	O 52-57	T34	8	ADDITIONAL AIR CONDITIONER	12CN	12CN	ON SUPPLEMENTARY AIR CONDITIONING, RIGHT
CRUISE CONTROL CONTROL UNIT	71M0	71M0	IN CENTRE CONSOLE AT FRONT	A 88-89	T35	1	ADDITIONAL AIR CONDITIONER	61L	61Q	UNDER THE CENTRAL ELECTRIC
FREEZING PROTECTION SWITCH AIR CONDITIONER	71M	71M	UNDER THE WINDSHIELD WIPER COVER	PG 31	T36					
RESISTOR INSTRUMENT LIGHTS	76P	76P	UNDER THE STEERING CO-AXLE	DE 2 122	T37					
WARNING BUZZER	8CP	8CP	ON STEERING PROTECTIVE TUBE	O 30	T38					
WASHING FLUID LEVEL SWITCH	61L	61L	ON WINDSHIELD WASHER TANK	H 20	T39	2	PLUG BRIDGE INSTEAD RADIO BERLIN	11M	11M	UNDER THE BOOSTER COVER ON RIGHT SILL
RESISTANCE GROUP FOR BLOWER	71M	71M	ON BLOWER HOUSING	HL 31-32	T40					
RESISTANCE GROUP FOR ADD. AIR CONDITIONER	12M	12M	ON SUPPLEMENTARY AIR CONDITIONING, LEFT	HL 37-38	T41					
TIME RELAY	91M	91M	IN CENTRE CONSOLE BELOW RADIO	P 23-25	T42	6	WH INSTRUMENT PANEL / WH B-PILLAR	13QD	13QD	UNDER THE PASSENGER SIDE REAR TRIM PANEL
CENTRAL ELECTRIC	71M	71P	IN PASSENGER'S FOOTWELL ON FIREWALL	HJ 37-38	T43					
IGNITION CIRCUIT CONTROL CONTROL UNIT	71L	71Q	ON CONTROL UNIT CONSOLE	HJ 81-82	T44	3	WIRE HARNESS B-PILLAR / TAILGATE LOCK	13CN	13CQ	UNDER THE TAILGATE TRIM PANEL CLOSE TO SUN VISOR
					T45	2	IGNITION FINAL STAGE / CONTROL UNIT	61L	61Q	UNDER THE CENTRAL ELECTRIC
					T46	19	DIAGNOSIS CONNECTION	11M	11M	UNDER THE COVER ON PASSENGER'S SIDE SILL
					T47	8	COING ELEMENT FOR IGNITION SYSTEM AND LH-JETRONIC	71L	71Q	ON CONTROL UNIT CONSOLE
					T48	3	OX. SENSOR	61L	61Q	UNDER THE CENTRAL ELECTRIC
					T49	2	FRESH AIR BLOWER	71L	71L	ON BLOWER HOUSING
					T50	6	AUTOM. TRANSM. COUPLING TO GEARBOX WIRE HARNESS	16QD	16QD	UNDER THE SPARE WHEEL COVER
					T51	6	AUTOM. TRANSMISSION COUPLING TO REAR WIRE HARNESS	16QD	16QD	UNDER THE SPARE WHEEL COVER
					T52	6	AIRBAG	81N	81N	IN CENTRE CONSOLE
					T53	2	AIRBAG	81N	81N	IN CENTRE CONSOLE

F			G			H			J			K			L			M			N			O			P		
PLUG CONNECTIONS																													
CODE	NUMBER OF PINS	DESIGNATION, FUNCTION	POSITION IN VEHICLE LHD RHD	NOTE	FIELD IN WIRING DIAGRAM	CODE	DESIGNATION, FUNCTION	POSITION IN VEHICLE LHD RHD	NOTE																				
T1	2	GLOWE BOX LAMP	7L	7R	ABOVE EZK LH CONTROL UNIT	C0/P3	MP I	BODY FRONT LEFT	1L	1R	IN ENGINE COMPARTMENT AT FRONT END PANEL																		
T2	3	ENGINE COMPARTMENT LAMP, HEATED SPRAY JET RIGHT	6L	6R	UNDER THE WIPER SYSTEM COVER	C4/C11	MP II	BODY FRONT RIGHT	2L	2R	IN ENGINE COMPART. NEAR AIR CONDITIONING CONDENSER																		
T3	26	DOOR DRIVER'S SIDE	7L	7R	ON DRIVER'S DOOR	C44/C35-60,022,016/P3	MP III	WHEEL HOUSING WALL FRONT RIGHT	3L	3R	IN ENGINE COMPART. RIGHT SIDE ABOVE IGNITION COIL																		
T4	26	DOOR PASSENGER'S SIDE	7L	7R	IN PASSENGER'S DOOR	C42/C52-54, M16	MP IV	STEERING CONSOLE	8L	8R	ON STEERING CONSOLE ELBOW LEFT																		
T5	30	INSTRUMENT SCUTTLE	7L	7R	AT SUPPORTING TUBE STEERING CONSOLE	C4-44,F3-10,13-16,A23/H3	MP V	FIREWALL	8R	8R	ABOVE CENTRAL ELECTRIC: ICS																		
T6	12	DOOR DRIVER'S SIDE	7L	7R	ON DRIVER'S DOOR	C4-160/03,016,M1	MP VI	DOOT REAR	10L	10R	UNDER THE SPARE WHEEL COVER																		
T7	4	TRANSMISSION	16L	16R	UNDER THE SPARE WHEEL COVER	P5,029	MP VII	GROUND STRAP BATTERY	18L	18R	UNDER THE TOOL KIT COVER																		
T8	2	LICENSE PLATE LIGHTS	18L	18R	UNDER THE TOOL KIT COVER	P6	MP VIII	ENGINE POWER	6L	6R	ON UPPER CRANKCASE, REAR LEFT																		
T9	2	DOOR CONTACT SWITCH TAILGATE	18L	18R	UNDER CARPET IN FRONT OF TOOL KIT	N9	MP IX	ENGINE ELECTRONICS	6L	6R	ON UPPER CRANKCASE, REAR RIGHT																		
T10	6	REAR WIRE HARNESS / B-PILLAR	19L	19R	UNDER THE PASSENGER SIDE REAR TRIM PANEL	U10,M31 32	MP X	WHEEL HOUSING LEFT OUTER	3L	3R	BEHIND ABS HYDRAULIC UNIT																		
T11	8	B-PILLAR / TAILGATE	19L	19R	UNDER THE TAILGATE TRIM PANEL CLOSE TO SUN VISOR	X10,M31	MP XI	WHEEL HOUSING RIGHT INNER	5L	5R	IN ENGINE COMPART. ON RIGHT SUSPENSION STRUT MOUNT																		
T12	2	SIDE MARKER LIGHT LEFT REAR	18L	18R	UNDER THE TOOL KIT COVER	O10	MP XII	WHEEL HOUSING LEFT INNER	5L	5R	IN ENGINE COMPART. ON LEFT SUSPENSION STRUT MOUNT																		
T13	2	SIDE MARKER LIGHT RIGHT REAR	10L	10R	UNDER THE TOOL KIT COVER	O2																							
T14	3-2	BRAKE PAD WEAR CONTACT, SPEED SENSOR LEFT FRONT	5L	5R	IN ENGINE COMPARTMENT AT SUSPENSION STRUT MOUNT	S78																							
T15	3-2	BRAKE PAD WEAR CONTACT, SPEED SENSOR RIGHT FRONT	5L	5R	IN ENGINE COMPARTMENT AT SUSPENSION STRUT MOUNT	F78																							
T16	3-2	BRAKE PAD WEAR CONTACT, SPEED SENSOR LEFT REAR	16L	16R	UNDER THE SPARE WHEEL COVER	E78																							
T17	3-2	BRAKE PAD WEAR CONTACT, SPEED SENSOR RIGHT REAR	16L	16R	UNDER THE SPARE WHEEL COVER	E78																							
T18	14	FRONT END / ENGINE WIRE HARNESS	3L	3R	IN ENGINE COMPARTMENT AT RIGHT WHEEL HOUSING	O26,033,K39,D83																							
T19	28	INSTRUMENT PANEL / REAR WIRE HARNESS	7L	7R	NEAR CENTRAL FUEL INJECT	E13,028,P33,314																							
T20	14	SEAT DRIVER'S SIDE	10L	10R	UNDER THE SEAT, ADVANCE SEAT	P9,030,K44,K45,K46																							
T21	14	SEAT PASSENGER'S SIDE	10L	10R	UNDER THE SEAT, ADVANCE SEAT	H4,2F53-53,063																							
T22	12	DOOR PASSENGER'S SIDE	7L	7R	IN PASSENGER'S DOOR	C42,E51663,M14																							
T23	21	ABS	7L	7R	FOOTWELL AT LEFT SIDE PANEL	K74-76,F30																							
T24	6	TRAILER COUPLING	6L	6R	UNDER THE CENTRAL ELECTRIC	O74																							
T25																													
T26	2	HEATED SPRAY JET LEFT	6L	6R	UNDER THE WIPER SYSTEM COVER	C12																							
T27																													
T28	4	PULSE SENSOR	16L	16R	UNDER THE SPARE WHEEL COVER	G29																							
T29	4	AIR CONDITIONING SYSTEM	8L	8R	IN CENTRE CONSOLE	F33																							
T30	6	AIR CONDITIONING SYSTEM	8L	8R	IN CENTRE CONSOLE	F33-34																							
T31	4	INSIDE TEMP. SENSOR FOR AIR CONDITIONER	8L	8R	IN CENTRE CONSOLE	E33																							
T32	3	AUTOMATIC TRANSMISSION	16L	16R	UNDER THE SPARE WHEEL COVER	O35,D86																							
T33	6	FRONT END / INSTRUMENT PANEL WIRE HARNESS	6L	6R	UNDER THE CENTRAL ELECTRIC	C7,M38,M69																							
T34	8	ADDITIONAL AIR CONDITIONER	12L	12R	ON SUPPLEMENTARY AIR CONDITIONING RIGHT	G39																							
T35	1	ADDITIONAL AIR CONDITIONER	6L	6R	UNDER THE CENTRAL ELECTRIC	F36																							
T36																													
T37																													
T38																													
T39	2	PLUG BRIDGE INST/SEAT RADIO BERLIN	11L	11R	UNDER THE BOOSTER COVER ON RIGHT SILL	A62-63																							
T40																													
T41																													
T42	6	WH INSTRUMENT PANEL / WH B-PILLAR	13L	13R	UNDER THE PASSENGER SIDE REAR TRIM PANEL	C13,M63																							
T43																													
T44	3	WHL HARNESS B-PILLAR / TAILGATE LOCK	13L	13R	UNDER THE TAILGATE TRIM PANEL CLOSE TO SUN VISOR	O63																							
T45	2	IGNITION FUEL STABLE / LUN/VAL UNIT	6L	6R	UNDER THE CENTRAL ELECTRIC	M63-64																							
T46	10	DIAGNOSIS CONNECTION	11L	11R	UNDER THE COVER ON PASSENGER'S SIDE SILL	J30																							
T47	8	CODING ELEMENT FOR IGNITION SYSTEM AND LH-JETRONIC	7L	7R	ON CONTROL UNIT CONSOLE	N84																							
T48	3	OX. SENSOR	6L	6R	UNDER THE CENTRAL ELECTRIC	O89																							
T49	2	FRESH AIR BLOWER	7L	7R	ON BLOWER HOUSING	M92																							
T50	6	AUTOM. TRANSM. COUPLING TO GEARBOX WIRE HARNESS	16L	16R	UNDER THE SPARE WHEEL COVER	M92																							
T51	6	AUTOM. TRANSMISSION, COUPLING TO REAR WIRE HARNESS	16L	16R	UNDER THE SPARE WHEEL COVER	SC65,M2																							
T52	6	ARBAG	8L	8R	IN CENTRE CONSOLE	M73																							
T53	2	ARBAG	8L	8R	IN CENTRE CONSOLE	M73																							

	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	
a																			a
b																			b
c																			c
d																			d
e																			e

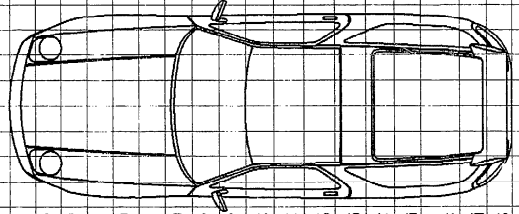K																			K
L																			L
M																			M
N																			N
O																			O
P																			P
Q																			Q
R																			R
	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	

B

GROUND POINTS

CODE	DESIGNATION, FUNCTION	POSITION IN VEHICLE LHD	RHD	NOTE
MP I	BODY FRONT LEFT	1L	1R	IN ENGINE COMPARTMENT AT FRONT END PANEL
MP II	BODY FRONT RIGHT	2L	2R	IN ENGINE COMPART. NEAR AIR CONDITIONING CONDENSER
MP III	WHEEL HOUSING WALL FRONT RIGHT	3L	3R	IN ENGINE COMPART. RIGHT SIDE ABOVE IGNITION COIL
MP IV	STEERING CONSOLE	8L	8R	ON STEERING CONSOLE ELBOW LEFT
MP V	FIREWALL	8R	8R	ABOVE CENTRAL ELECTRIC: ICS
MP VI	DOOT REAR	10L	10R	UNDER THE SPARE WHEEL COVER
MP VII	GROUND STRAP BATTERY	18R	18R	UNDER THE TOOL KIT COVER
MP VIII	ENGINE POWER	6L	6R	ON UPPER CRANKCASE, REAR LEFT
MP IX	ENGINE ELECTRONICS	6L	6R	ON UPPER CRANKCASE, REAR RIGHT
MP X	WHEEL HOUSING LEFT OUTER	3L	3R	BEHIND ABS HYDRAULIC UNIT
MP XI	WHEEL HOUSING RIGHT INNER	5L	5R	IN ENGINE COMPART. ON RIGHT SUSPENSION STRUT MOUNT
MP XII	WHEEL HOUSING LEFT INNER	5L	5R	IN ENGINE COMPART. ON LEFT SUSPENSION STRUT MOUNT

