

CABIN AIR FILTER

Toyota - Sienna

REMOVAL & INSTALLATION

NOTE: Manufacturer's terminology for this filter is air refiner filter or air conditioning filter.

CABIN AIR FILTER

Removal & Installation

1. Turn the engine switch (vehicles without a smart key system) or "ENGINE START STOP" switch (vehicles with a smart key system) off.
2. Open glove box door. Slide off the damper.

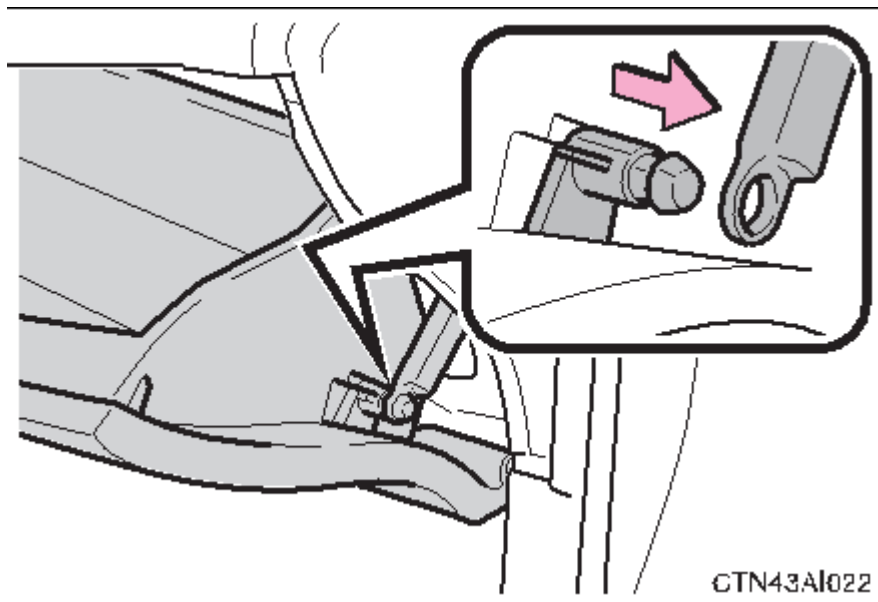


Fig. 1: Locating Glove Box Damper
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

3. Push each side of the glove box to disconnect the claws .

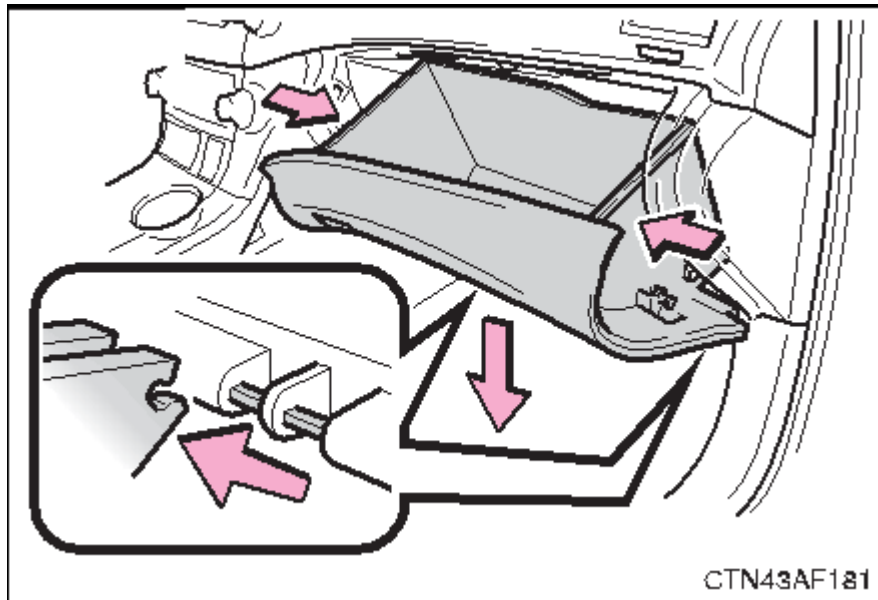


Fig. 2: Glove Box And Claws

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

4. Remove the filter cover.

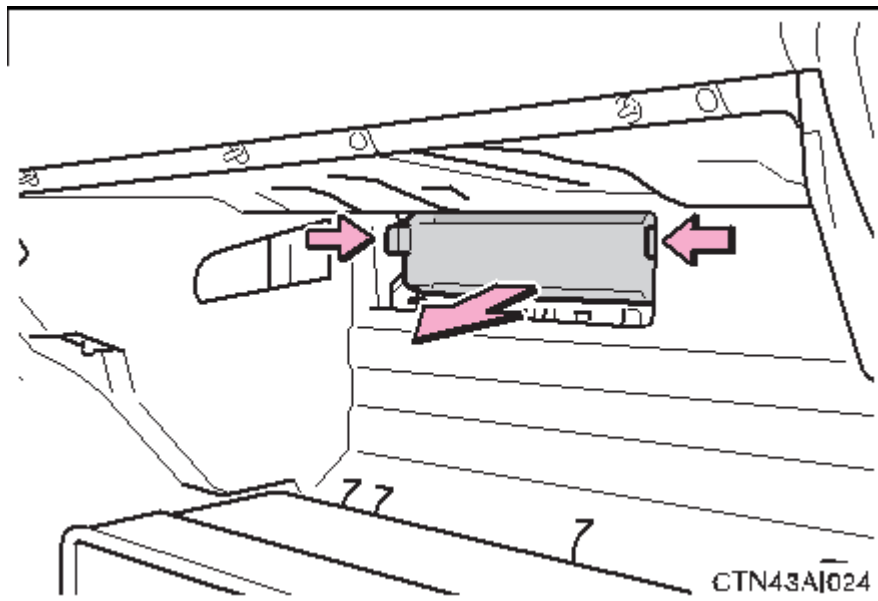


Fig. 3: Removing A/C Filter Case

Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

5. Remove the filter from the filter case.

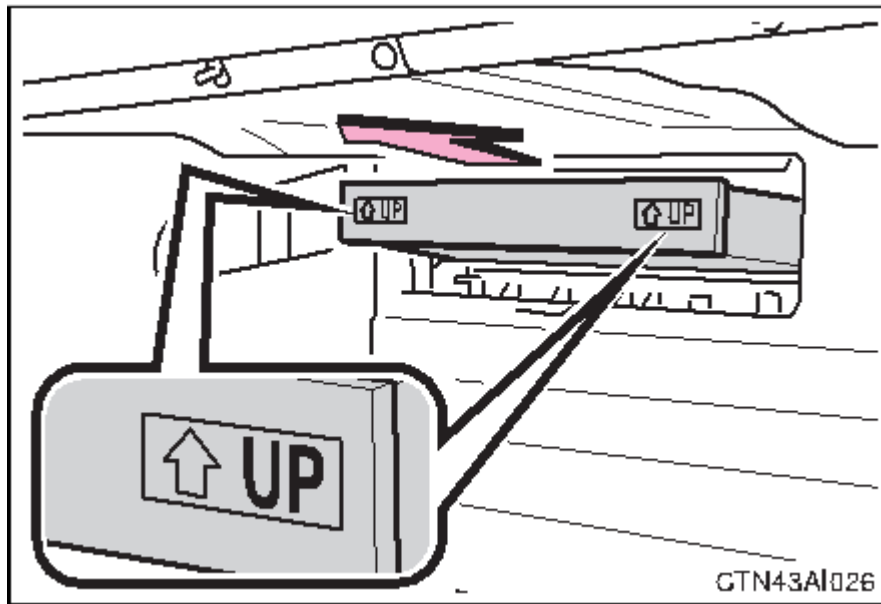


Fig. 4: Removing A/C Filter From Case
Courtesy of TOYOTA MOTOR SALES, U.S.A., INC.

Checking interval

Inspect and replace the air conditioning filter according to the maintenance schedule. In dusty areas or areas with heavy traffic flow, early replacement may be required. (For scheduled maintenance information, please refer to the "Scheduled Maintenance Guide" or "Owner's Manual Supplement".)

If air flow from the vents decreases dramatical

The filter may be clogged. Check the filter and replace if necessary.

WARNING: To prevent damage to the system

- When using the air conditioning system, make sure that a filter is always installed.
- When cleaning the filter, do not clean the filter with water.