


Chevrolet S-10 2003 – 2004 fuse box diagram

Instrument panel

The fuse block is in the instrument panel on the driver's side.

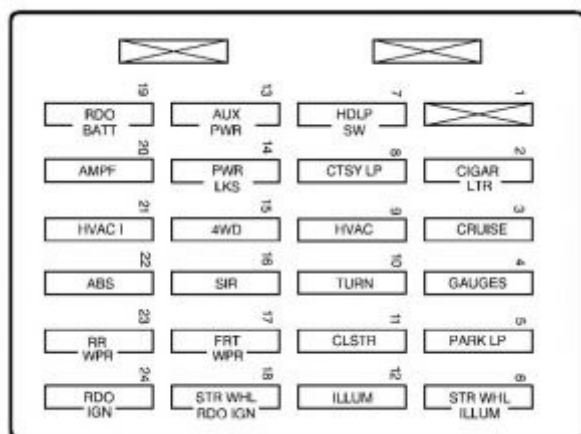


Chevrolet S-10 – fuse box – instrument panel

Fuses/Circuit Breaker	Circuit protected
A	Not Used
B	Not Used
1	Not Used
2	Cigarette Lighter, Data Link Connector
3	Cruise Control Module and Switch, Body Control Module, Heated Seats
4	Gages, Body Control Module, Instrument Panel Cluster
5	Parking Lamps, Power Window Switch, Body Control Module, Ashtray Lamp
6	Steering Wheel Radio Controls
7	Headlamps Switch, Body Control Module, Headlamp Relay
8	Courtesy Lamps, Battery Run-Down Protection
9	Heating, Ventilation, Air Cooling Control Head (Manual)
10	Turn Signal
11	Cluster, Engine Control Module
12	Interior Lights
13	Auxiliary Power
14	Power Locks Motor
15	4WD Switch, Engine Controls (VCM, PCM, Transmission)
16	Supplemental Inflatable Restraint
17	Front Wiper
18	Steering Wheel Radio Controls
19	Radio Battery
20	Amplifier
21	Heating, Ventilation, Air Cooling (Manual), Heating, Ventilation, Air Cooling (Automatic), Heating, Ventilation, Air Cooling Sensors (Automatic)
22	Air-Bag Brakes
23	Rear Wiper

Engine Compartment Fuse Block

The fuse block under the hood at the driver's de of the engine compartment.

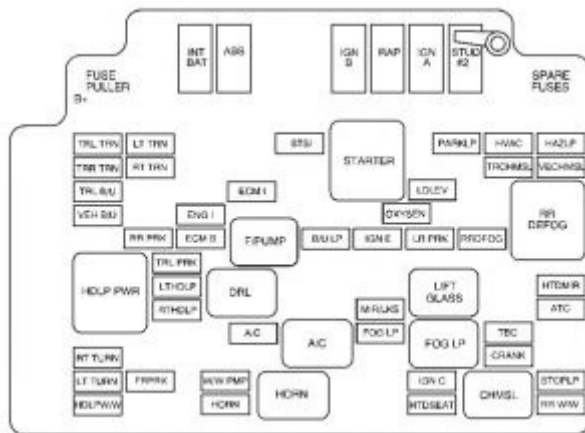

Chevrolet S-10 – fuse box –

engine compartment

Name	Usage
TRL TRN	Trailer Left Tur
TRR TRN	Trailer Right Turn
TRL B/U	Trailer Back Up Lamps
VEH B/U	Vehicle Back-Up Lamps
HDLP PWR	Headlamp Power
RT TURN	Right Turn Signal Front
LT TURN	Left Turn Signal Front
HDLP W/W	Not Used
LT TRN	Left Turn Signal Rear
RT TRN	Right Turn Signal Rear
RR PRK	Right Rear Parking Lamps
TRL PRK	Trailer Park Lamps
LT HDLP	Left Headlamp
RT HDLP	Right Headlamp
F PRK	Front Parking Lamp
INT BAT	Instrument Panel Fuse Block Feed
ENG 1	Engine Sensor/Solenoid, MAP, CAM, PURGE, VENT
ECM B	Engine Control Module Fuel Pump, Module, Oil Pressure
ABS	Anti-Lock Brake System
ECM I	Engine Control Module Injector
F/PUMP	Fuel Pump
DRL	Daytime Running Lamps
A/C	Air Conditioning
HORN	Horn
W/W PMP	Not Used
HORN	Horn
BTSI	Automatic Transmission Shift Lock Control System

B/U LP	Back Up Lamps
IGN B	Column Feed, IGN 2, 3, 4
STARTER	Starter
RAP	Retained Accessory Power
LD LEV	Not Used
OXYGEN	Oxygen Sensor
IGN E	Engine
MIR/LKS	Mirrors, Door Locks
FOG LP	Fog Lamps
IGN A	Starting and Charging Ignition 1
STUD #2	Accessory Feeds, Electric Brake
PARKLP	Parking Lamps
LR PRK	Left Rear Parking Lamps
IGN C	Starter Solenoid, Fuel Pump, PRNDL
HTDSEAT	Heated Seat
HVAC	Heating, Ventilation, Air Cooling System
TRCHMSL	Trailer Center High Mount Stop Light
RRDFOG	Rear Defogger
TBC	Truck Body Computer
CRANK	Clutch Switch, NSBU Switch
CHMSL	Center High Mounted Stoplamp
HAZLP	Hazard Lamps
VECHMSL	Vehicle Center High-Mounted Stoplamp
RR DEFOG	Rear Defogger
HTDMIR	Heated Mirrors
ATC	Transfer Case (Four-Wheel Drive)
STOPLP	Stoplamps
RR W/W	Rear Window Wiper