


Pontiac Boneville 1997 – 1999 fuse box diagram

Driver's Side Fuse Block

The driver's side fuse block is to the left of the steering wheel, under the instrument panel.

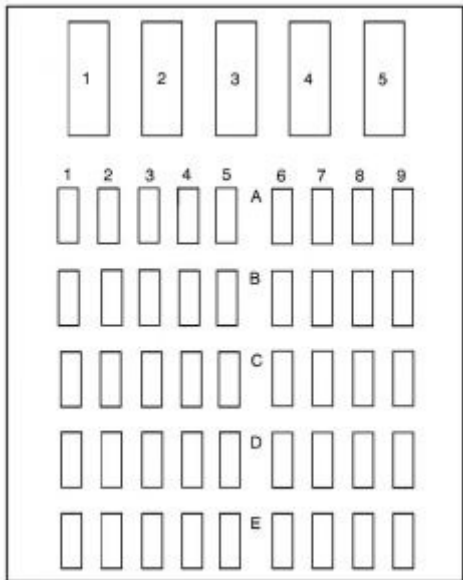


Pontiac Boneville – fuse box – driver's side

Fuse	Usage
1	Circuit Breaker-Power Sunroof
2	Not Used
3	Circuit Breaker-Power Seats
4	Not Used
5	Not Used
1A	PASS-Key
2A	Spare
3A	Not Used
4A	Not Used
5A	Automatic A/C Control, Base Cluster, Cruise Control
6A	Courtesy Lamps, Power Mirrors
7A	Not Used
8A	Not Used
9A	Not Used
1B	Turn Signal, Back-Up Lamps, Brake-Transaxle Shift Interlock
2B	Spare
3B	Not Used

4B	Not Used
5B	Anti-Lock Brake System, Computer Command Ride
6B	Brake and Hazard Lamps
7B	Not Used
8B	Interior Lighting
9B	Cigarette Lighter
1C	Air Bag System
2C	Spare
3C	Not Used
4C	Not Used
5C	Cooling Fans, Transaxle
6C	Parking Lamps/Interior Lamps
7C	Not Used
8C	Not Used
9C	(Battery), Radio, Cluster
1D	Ignition (Run/Crank), Chime, Cluster
2D	Spare
3D	Heated Mirror
4D	Not Used
5D	Base A/C
6D	Fog Lamps
7D	Transaxle
8D	Radio
9D	Not Used
1E	Not Used
2E	Air Bag System, PASS-Key
3E	Not Used
4E	Not Used
5E	Rear Defog
6E	Not Used
7E	Miscellaneous Engine Controls (Non-OBD II)
8E	Wipers, Washer
9E	Not Used

Passenger's Side Fuse Block

Additional fuses are located in the relay center, on the passenger's side, below the instrument panel.

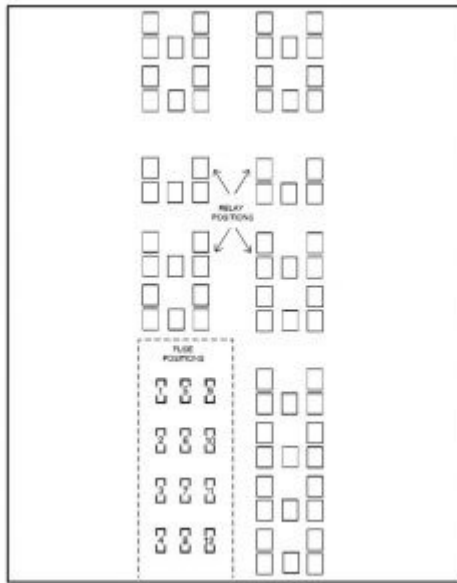

Pontiac Boneville – fuse box – passenger's side

Fuse	Usage
1	Door Locks
2	Trunk Release, RAC
3	Horns
4	Not Used
5	Miscellaneous Engines Controls (OBD II)
6	Fuel Pump
7	Injectors
8	Powertrain Control Module
9	Not Used
10	Not Used
11	A/C Programmer
12	Not Used